

- To turn off the alarm without setting it for the following day, switch the Mode Switch to Alarm OFF. The Alarm ON Indicator Icon will disappear.
- To operate the snooze feature, press the Snooze/Light Button. The alarm will shut off approx. nine minutes before sounding again. You may repeat this several times during the one-hour snooze cycle.

Demo Operation

The Alarm Clock feature funny sound effects that can be set as alarm wake sounds or played as a demo. The alarm instructions are in the Operating the Alarm section.

- Set the Mode Switch to Demo then press the Snooze/Light Button. Depending the setting of Volume Switch, if it sets at HI both special sound and shaking effects will activate; if it sets at LO, only sound effects will activate.

Back Light Operation

- Set the Mode Switch to Alarm ON or Alarm OFF then press the Snooze/Light Button then the display back light will turn on for approx. 30 seconds.

Maintenance

- Protect your furniture when placing the clock on natural wood or a lacquered wood finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents may damage the surface of the case.
- If the clock is not to be used for a prolonged period, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the batteries.

Questions or Comments

For questions or comments regarding this or other SDI products, please call our toll-free number: 1-800-888-4491.

Please also visit our website: www.timexaudio.com.

90-Day Limited Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

- Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
- Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
- Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
- Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse, or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes or compact discs (if applicable); (iv) the cost of shipping this product to the Consumer Repair Department and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX and TIMEX Kids are registered trademarks of Timex Corporation the United States and other countries.


T156-041119-0

Printed in China

TIMEX

Model T156

“Shake N’ Wake”
Alarm Clock

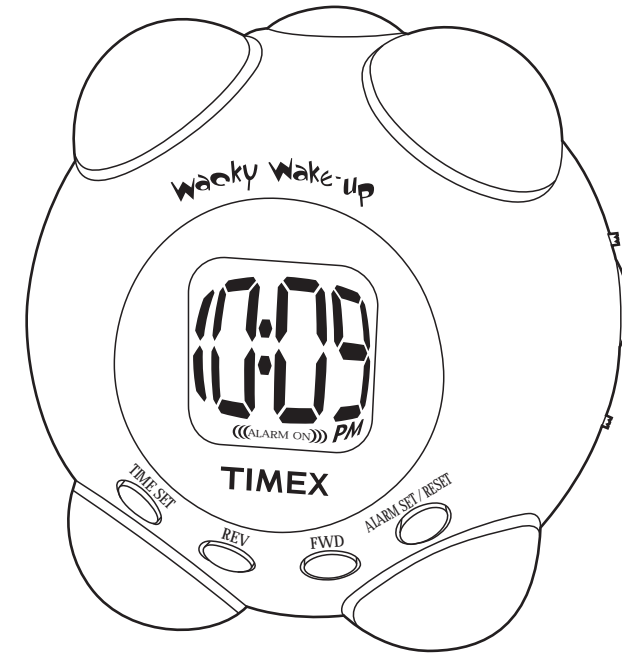

For additional information, online registration, and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.

Important Message to Parents

Thank you for purchasing one of the TIMEX brand's many top-quality products. We would appreciate it if you would take a few moments to read through these instructions. This will help you explain the safe and proper way to use this product, and to help give it the long-lasting life that TIMEX branded products have been designed for. Please keep these instructions for future reference as they contain important information.

Installing the Batteries

The Alarm Clock operates on 3 "AA" (R6) batteries, which are included is for demo purpose only. To replace or install the batteries, follow these instructions:
Install The Battery:

1. The battery compartment is located on the back of the cabinet. Open the battery compartment door by screw driver then take out the battery box.
2. Install 3 "AA" (R6) batteries, making sure that the positive and negative polarities match up with the diagram inside the battery box.
3. Put back the battery box into battery compartment gently and in correct direction.
4. Close the battery compartment door by screw driver. Do not over-tighten.


For the Best Possible Performance:

- We recommend using alkaline batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the clock before being charged (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Remove exhausted batteries from the clock.
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are only to be recharged under adult supervision. (if removable)
- Batteries are to be inserted with correct polarity.

Setting Clock Time and Alarm Time

All of the clock and alarm functions are controlled using the buttons in the front of cabinet (see graphic)
Setting Clock Time

1. Press and hold the Time Button for several seconds until the display flashes. If no time-set buttons are pressed within approx. ten seconds, the display will stop flashing and return to normal mode.
2. Press and hold the FWD Button to rapidly advance the time forward, or the REV Button to rapidly change the time backward. Release button when the approximate correct time is displayed. PM Indicator is on the lower right of the display.

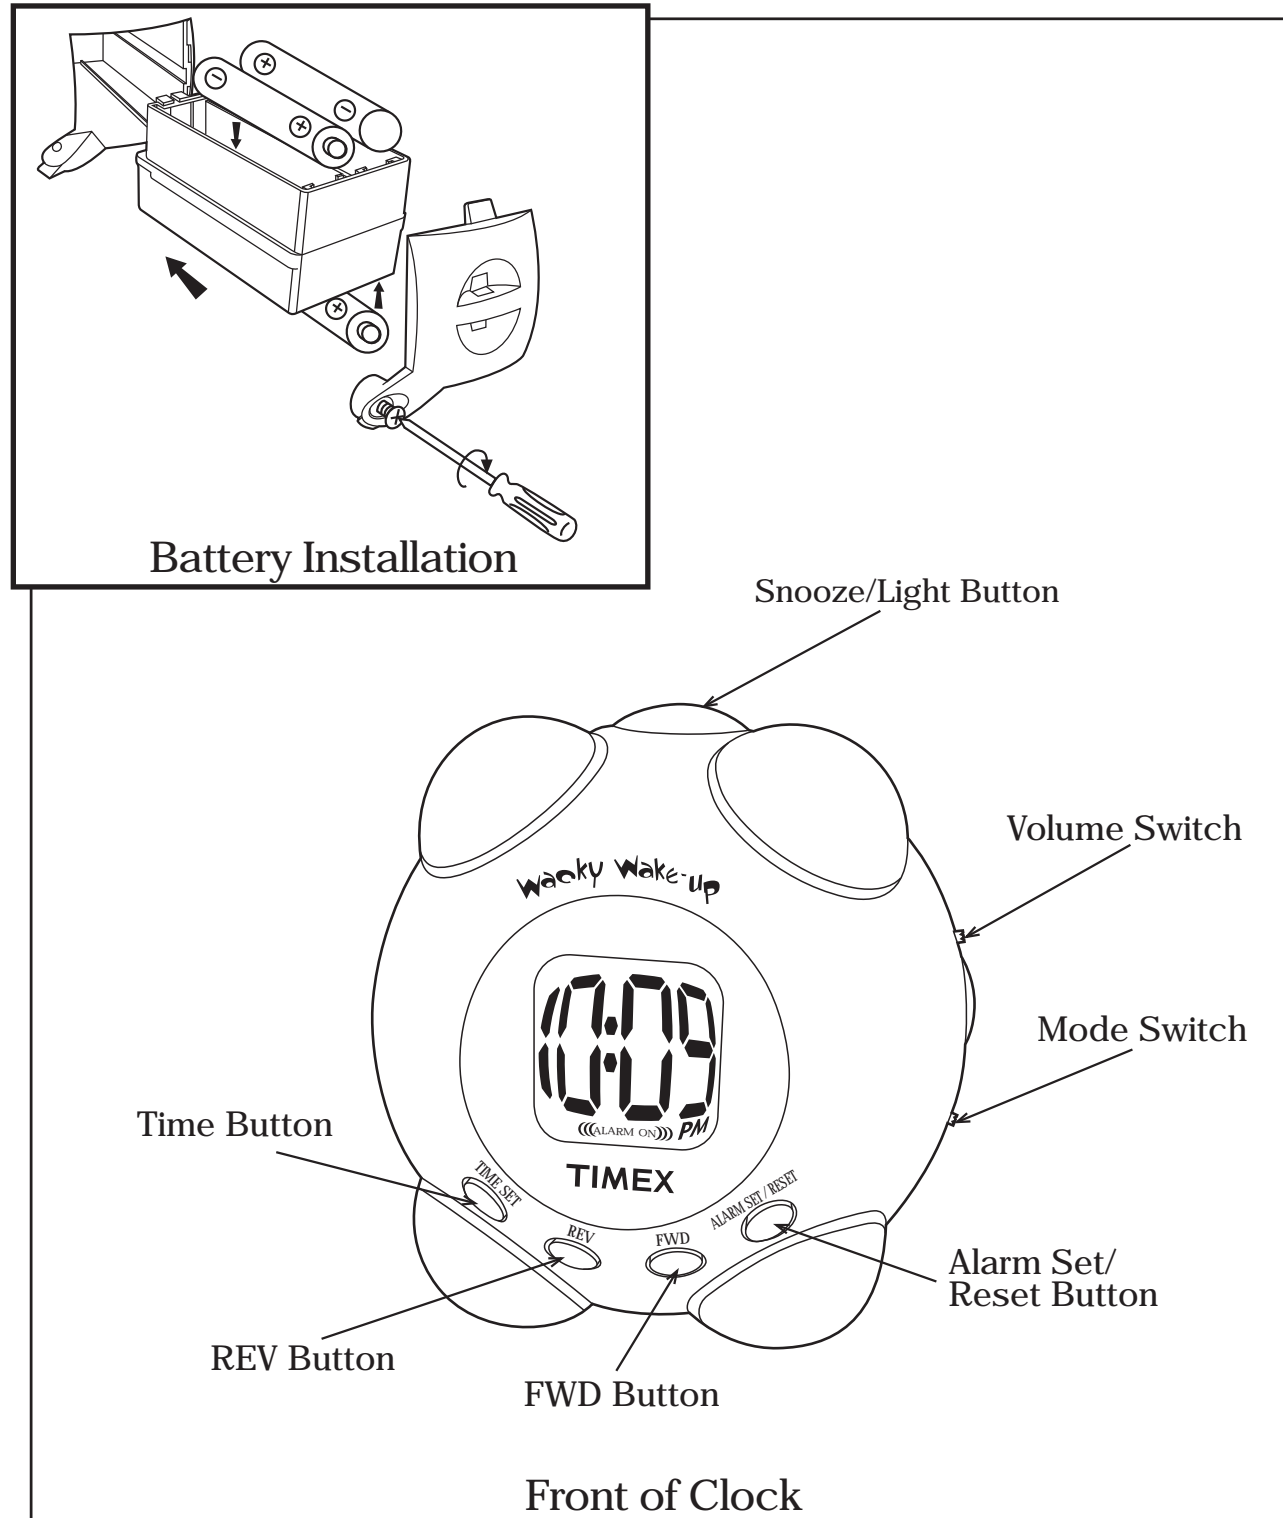

Note: While pressing either FWD or REV Button the minutes will begin at a moderate pace, then get faster. This will assist you in setting the time both fast and exact.

3. Press either the FWD or REV Button repeatedly until the correct time is displayed.

Setting Alarm Time

1. Press and hold the Alarm Set/Reset Button for several seconds until the display flashes. If no alarm-set buttons are pressed within approx. ten seconds, the display will stop flashing and return to normal mode.
2. Press and hold the FWD Button to rapidly advance the alarm time forward, or the REV Button to rapidly change the alarm time backward. Release button when the approximate alarm time is displayed. PM Indicator is on the lower right of the display. Again, be sure to set the proper AM or PM wake time as shown by PM Indicator.
3. Press either the FWD or REV Button repeatedly until the desired alarm time is displayed.
4. When the alarm time has been set, press the Alarm Set/Reset Button again to return to the default clock display.

Operating the Alarm

Turning On the Alarm

1. After setting the alarm time, set the Mode Switch to Alarm ON to turn on the alarm. The Alarm ON Indicator Icon will appear on the display, showing that the alarm is turning on.
2. Set the Volume Switch to Hi for louder alarm sound and shaking effect during alarm sounding. Set to Low for lower alarm sound and no shaking effect.

Turning Off the Alarm

1. After the alarm sounds, press the Alarm Set/Reset Button to turn it off and automatically reset it for the same time the following day.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>