

TIMEX[®]

Model T331

Bluetooth Dual Alarm AM/FM Clock Radio



For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.

Download from Www.Somanuals.com. All Manuals Search And Download.



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL SOUS LA PLUIE ET L'HUMIDITÉ



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

A Consumer Guide to Product Safety

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of apparatus.
Les précautions d'emploi sont inscrites en bas de l'appareil.
- The marking information is located at the bottom of apparatus.
Les marquages sont inscrits en bas de l'appareil.

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. **Water and Moisture** - Do not use this apparatus near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
6. **Ventilation** - Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **Heat** - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
9. **Grounding or Polarization** - Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Power-Cord Protection** - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
11. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
12. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
13. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
14. **Attachments** - Only use attachments/accessories specified by the manufacturer.
15. **Lightning** - Unplug this apparatus during lightning storms or when unused for long periods of time.
16. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. **Damage Require Service** - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
19. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. **Antenna** - Do not connect to an external antenna.

Questions? Service? Warranty? Visit www.timexaudio.com

Table of Contents

Preparation for Use	1
Controls And Indicators	2-3
Operating Instructions	4-8
Care and Maintenance	8
Limited 90-day Warranty Information	9

FCC/IC Information

FCC ID: EMOT331
IC: 986B-T331

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 
 
Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Preparation For Use

Battery Back-up System

Your new Timex Bluetooth Clock Radio has a battery back up system that will maintain the time and alarm settings during a temporary power interruption. The battery back up system requires two "AAA" batteries (not included). We recommend you use a well-known brand of alkaline batteries for longest life and best performance. If you experience a power failure while batteries are installed, the display will turn 'off' but the clock will continue to run and maintain your alarm settings. When power is restored the display will turn 'on' again and the time and alarm settings will be correct.

Installing The Batteries

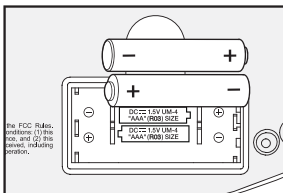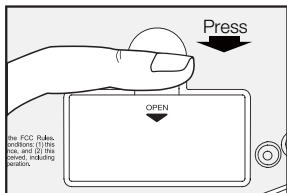


- Press on the battery door locking tab to open and remove the battery door.
- Install two "AAA" batteries in the battery compartment. Observe the polarity (+/-) markings in the battery compartment to make sure the batteries are inserted correctly.
- Close the battery door.

Protect Your Furniture

This clock radio has two silicon rubber feet on the bottom cabinet to prevent the radio from sliding and to avoid scratching your furniture. These rubber feet are designed not to leave marks on furniture. However the use of certain furniture polishes could cause the rubber feet to soften and stick to your furniture. If this radio is going to be placed on fine, highly polished wooden furniture, you should place small self-adhesive felt pads on the rubber feet, or place a cloth between the radio and the surface of the furniture.

AC Power Plug

 This model is equipped with a polarized AC power plug that has one wide blade and one narrow blade. This plug will only fit in a polarized AC outlet. This is a safety feature designed to prevent electric shock. Do not try to defeat this safety feature by filing the wider blade or using an adapter to make this plug fit in a non-polarized outlet. If this plug will not fit in your outlet you should have your outlet changed by a qualified electrician.

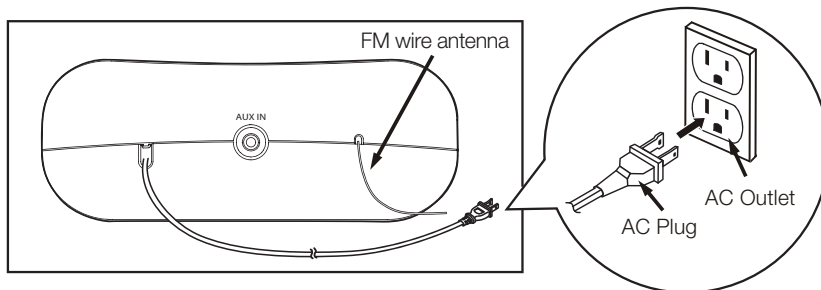


FM Antenna


Unwind the FM wire antenna, located on the back cabinet, and extend it to its full length for best FM reception.

Controls and Indicators

 Front Panel

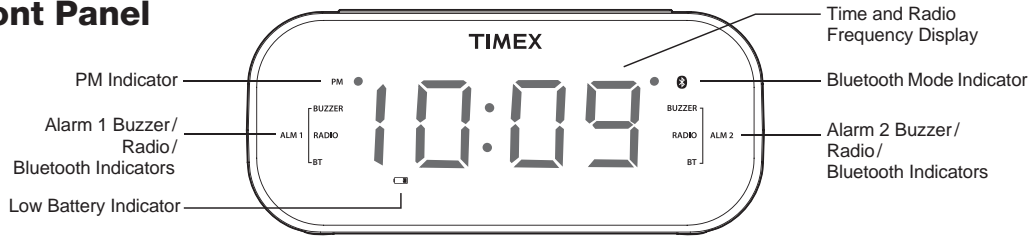

Top Panel

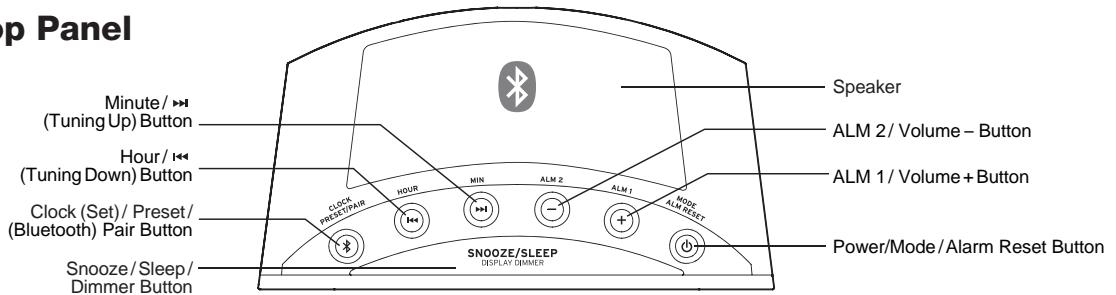 

Controls and Their Functions

CLOCK / PRESET / PAIR Button – When the unit is OFF press & hold to enter the clock setting mode. When the FM/AM radio is active press & hold to store or recall a preset memory stations. When the BT mode is selected press & hold to activate BT pairing mode. When the BT music is played press to PAUSE / PLAY the sound.

HOUR / ◀◀ (Tune Down) Button – When the FM/AM radio is active press to tune the radio to the lower frequency. When the unit is OFF press to adjust hours of the time or hours of the alarm adjustment.

MIN / ▶▶ (Tune Up) Button – When the FM/AM radio is active press to tune the radio to the higher frequency. When the unit is OFF press to adjust minutes of the time or minutes of the alarm adjustment.

ALM. 2 (VOL -) Button – When unit is OFF press & hold to enter the Alarm 2 setting mode. When playing music, press this button to lower the volume level.

 
ALM. 1 (VOL +) Button – When unit is OFF press & hold to enter the Alarm 1 setting mode. When playing music press this button to raise the volume level.

POWER/MODE/ALM RESET Button – Press & hold to turn the unit OFF. Pressing this button cycles through the following modes: FM radio > AM radio > Aux > BT mode. When Alarm 1 or Alarm 2 is sounding press to stop alarm and reset it for following day. When the unit is OFF, press this button to activate the unit at last selected mode.


SNOOZE/SLEEP/DIMMER Button – When Alarm 1 or 2 is sounding press to stop alarm temporary for 9 min. After 9 minutes the alarm turns on again. When the unit is playing music (FM, AM Radio, BT or Aux), press this button to activate SLEEP time. You can select between 90 min and 10 min SLEEP timer, before unit auto shuts OFF. Press / hold this button for 2 sec to adjust HIGH or LOW display brightness.

Controls and Indicators

Back Panel

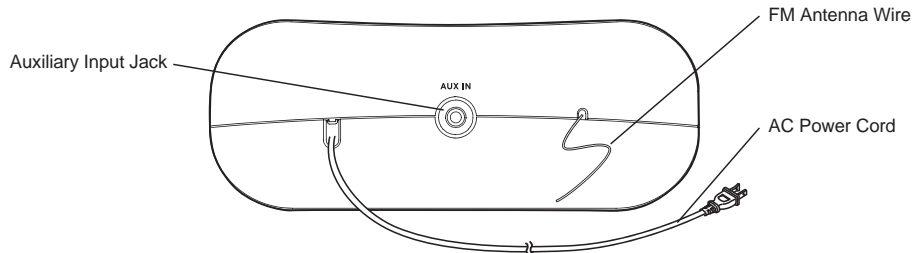

Bottom Cabinet

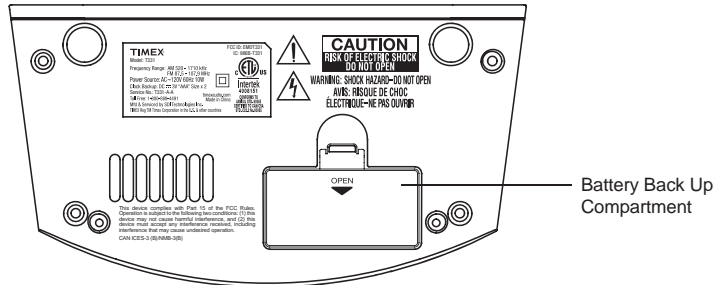 

Operating Instructions

Unwind the FM wire antenna and extend it to its full length.

Unwind the AC power cord completely and insert the plug into a 120V/60Hz AC outlet. Use an outlet that is always 'live'. Do not use an outlet that is controlled by a wall switch.

When the clock is connected to the AC outlet for the first time the display will turn on and begin flashing "12:00 (PM)". If you have not installed the back up batteries the Low Battery indicator will also appear in the display.

Setting The Current Time

NOTE: The time can only be set when the clock radio is in the OFF mode. If the radio is playing, press and hold the POWER/MODE/ALM RESET button until the display briefly shows 'OFF' and then reverts to the time.

1. If the display is flashing, press the HOUR / **⏸** button to advance the display to the correct hour. If the display is not flashing press and hold the CLOCK button until the display begins to flash, then press the HOUR / **⏸** button to advance the display to the correct hour. Observe the PM indicator to confirm that you have set the hour correctly. If the PM indicator is 'On' the hour on the display is PM. If the PM indicator does not appear the hour on the display is AM.
2. Press the MIN / **▶▶** button to advance the display to the correct minute.
3. When the correct time is flashing on the display press the CLOCK / PRESET / PAIR button once more. The display stops flashing and the clock begins to run.

Setting The Alarm Time

This Timex clock radio has dual alarms that can be set and used independently. The initial default alarm settings are 6:00 AM for Alarm 1 and 7:00 AM for Alarm 2. The procedure for setting both alarms is the same.

NOTE: The alarm times can only be adjusted when the clock radio is in the OFF mode. If the radio is playing, press and hold the POWER/MODE/ALM RESET button until the display briefly shows 'OFF' and then reverts to the time.

1. Press and hold the ALM 1 button until the Alarm 1 time and the Alarm 1 Buzzer indicator begin flashing in the display, then release the button.
2. Press the HOUR / **⏸** button to advance the display to the desired wake-up hour. Observe the PM indicator to confirm that you have set the wake-up hour correctly. If the PM indicator is 'On' the wake-up hour on the display is PM. If the PM indicator does not appear the wake-up hour on the display is AM.
3. Press the MIN / **▶▶** button to advance the display to the correct wake-up minute, and then release the button.
4. Press the ALM 1 button once more to confirm the wake-up time setting or after 10 seconds the display will stop flashing and the new wake-up time will be entered automatically. The display will return to the correct time of day but the Buzzer indicator will remain 'on' in the display indicating that the Alarm 1 is now set to wake you to the buzzer.
5. Repeatedly pressing the Alarm button will cycle through "wake to" sources; Buzzer > Radio > Bluetooth > OFF. The Buzzer indicator and the alarm time will display. Press the ALM 1 button once more to select the Radio alarm. The Radio indicator remains 'on' together with the alarm time. Press the ALM 1 button once more to select the Wake to Bluetooth mode. The BT indicator remains 'on' together with the alarm time. Press the ALM 1 button once more to cancel the alarm function. The alarm indicators disappear and the display returns to the correct time.
6. Follow the same procedure to set the Alarm 2 wake-up time.

Operating Instructions

NOTE: You must make the time and alarm time adjustments while the display is flashing. If no adjustments are made for approximately 8 seconds the display will stop flashing and cannot be adjusted. If this occurs you must start the time and alarm setting procedure again and make sure that you complete the adjustments while the display is flashing.

Radio Operation

POWER/MODE/ALM RESET Button – When the unit is 'off', pressing this button will cycle through available modes: FM Radio > AM Radio > AUX > BT to select the following operating modes:

First Press – FM Radio band. The initial default display is 87.5 mHz.

Second Press – AM Radio band. The initial default display is 520 kHz.

Third Press – AUX (AUH) mode. To listen to an external audio source.

Fourth Press – Bluetooth Mode.

1. Press the POWER/MODE/ALM RESET button to turn the radio 'on' and select the FM band. The initial FM frequency display is 87.5 mHz. Press the POWER/MODE/ALM RESET button again to select the AM band. The initial AM frequency display is 520 kHz.
2. After selecting the desired band tune to a radio station by either the automatic or manual tuning method:
 - Automatic Tuning – Press and hold the HOUR / ⏪ or MIN / ⏩ button until the frequency display begins to move, then release the button. The tuner will search up or down for the next strong station and stop on that station. Repeat this procedure until the tuner stops on the desired station. After a few seconds the display will change from the radio frequency back to the correct time.
 - Manual Tuning – Repeatedly press the HOUR / ⏪ or MIN / ⏩ button until the display shows the frequency of your desired station. Use the Manual Tuning method to tune to weaker stations that could be bypassed during automatic tuning. After a few seconds the display will change from the radio frequency back to the correct time.
3. Press the ALM 1 (VOL +) or ALM 2 (VOL -) button to adjust the radio volume level. The display changes to show the volume level indication (00 to 20) during volume adjustments, then changes back to the radio station frequency, and then the current time.
4. When you are finished listening press and hold the POWER/MODE/ALM RESET button until the display shows OFF, then release the button. The display will then return to the correct time.

Last Station Memory

The tuner remembers the last FM and AM stations that you were listening to and automatically returns to those stations the next time you select the FM or AM mode.

Preset Station Memory

The tuner can store up to 10 FM and 10 AM station in memory for easy recall. To store a station in memory:

1. Tune to the first station that you wish to store using either the Automatic or Manual Tuning methods described above.
2. When the display is showing the frequency of the desired station, press and hold the CLOCK / PRESET / PAIR button until the "P 01" indicator begins flashing in the display.
3. Press the CLOCK / PRESET / PAIR button once more to store your station in Preset Memory number 1. The preset indicator will automatically advance to "P 02".
4. Repeat steps 1 thru 3 until you have stored up to 10 stations of one band, then change bands and follow the same procedure to store up to 10 stations of the remaining band.

Operating Instructions

To Recall A Preset Station

Tune to the desired band and then press the CLOCK / PRESET / PAIR button to scroll through the 10 preset memories to find your desired station.

To Change A Preset Station

 
1. Tune to the new station that you want to store.
2. Press and hold the CLOCK / PRESET / PAIR button until the Preset Number indicator begins flashing.
3. Press the HOUR / ◀◀ or MIN / ▶▶ button until the preset number that you want to change is flashing in the display.
4. Press the CLOCK / PRESET / PAIR button once more. The new station is entered into the preset memory number that you selected and the previous station is deleted.

Bluetooth Feature

This Timex clock radio includes a Bluetooth receiver that allows you to wirelessly stream music to the radio from your Bluetooth enabled smartphone, tablet or music player from up to 10 meters (approximately 33 feet) away. You may also wake up to the music stored on your Bluetooth enabled device as long as your device has been properly paired with this Timex clock radio and is within the 10 meter transmission range. You may also use the Sleep Timer on this Timex clock radio to fall asleep to music from your Bluetooth enabled device for up to 90 minutes and then the unit will shut off automatically.

Pairing and Playing Your Bluetooth Enabled Device

1. Make sure that your Bluetooth enabled device is turned 'on' and placed in the Pairing Mode. The screen on your phone may show any previously paired devices as well as any new devices that are 'in-range' and 'discoverable'.
2. Press POWER/MODE/ALM RESET button and select the BT mode on your Timex clock radio until the display briefly shows "bt", two 'beeps' are heard and the Bluetooth indicator begins slowly flashing in the upper right corner of the display. This indicates that your radio is in Bluetooth mode.

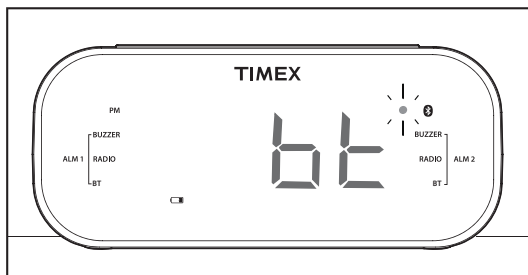

3. Press and hold the CLOCK / PRESET / PAIR button until the Bluetooth indicator begins to flash rapidly. "Timex T331" should appear on your device's display along with the words "Not Paired" or similar message. Tap on that message to complete the pairing process. The screen on your device will now show "Timex T331 Connected" and you will hear a single 'beep'. The Bluetooth indicator stops flashing and remains 'On'. This indicates that your device and your clock radio are properly paired and you can begin streaming music wirelessly from your device to your clock radio.
4. Use the controls on your Bluetooth device to select the music you wish to hear and to control the volume as usual. It may be necessary to adjust the volume level on your clock radio as well. Press the CLOCK / PRESET / PAIR button to play/pause Bluetooth music. The music from your Bluetooth device will play through the speaker of the clock radio.

Operating Instructions

5. When you are finished listening press and hold the POWER/MODE/ALM RESET button until the display shows “OFF” and then return to the current time. If necessary turn off your Bluetooth enabled device as well.

Note: If you move your Bluetooth enabled device out of range the signal will be lost and the music will stop playing through your clock radio. It may continue playing through the speakers of the device.

Auto Linking

Whenever you turn on your radio and select the Bluetooth mode it will automatically search for the previously paired device and try to re-link with that device. If the device is within the 10 meter operating range it will be re-linked automatically. It will not be necessary to go through the pairing process again.

Pairing With A Different Device

In order to pair your Timex Clock Radio with a different Bluetooth enabled device while your original device is still within range, you may need to go to the Bluetooth screen on your phone, select the original device and then select “Forget This Device”, “Disconnect”, “Cancel” etc to un-pair the original device. Refer to the instruction manual for your specific Bluetooth enabled device.

Alarm Operation

1. Press the ALM 1 or ALM 2 button once to reconfirm the wake-up time settings. Follow the “Setting The Alarm Times” procedure above to adjust the wake-up times if necessary.
2. Continue pressing the ALM 1 or ALM 2 buttons to select Buzzer, Radio, or Bluetooth as the wake-up source. The appropriate indicator will remain in the display to confirm your selection. If you selected Radio as the wake-up source the alarm will turn on to the last station you were listening to before turning the unit off. If you selected Bluetooth as the wake up source, make sure that your Bluetooth enabled device is within the 10 meter Bluetooth transmission range. When the alarm turns on it will start playing the last track on your Bluetooth device that you were listening to before shutting the device off.
3. At the selected wake up time, the buzzer, the radio, or your Bluetooth enabled device will turn on. The Radio or the Bluetooth alarms will start softly and gradually increase in volume to wake you gently. The alarms will continue for one hour and then shut off and reset for the following day.
4. To stop the alarm sooner, press the ALM 1, ALM 2 or POWER/MODE/ALM RESET button. The alarm stops immediately and resets itself for the following day.
5. To cancel one or both alarms so that they do not turn on the following day, continue pressing the ALM 1 or ALM 2 buttons until the Buzzer, Radio or Bluetooth indicators no longer appear in the display.

Snooze/Sleep/Dimmer Button

When the alarm is sounding press the SNOOZE/SLEEP/DIMMER button to stop the alarm temporarily for a few minutes extra sleep. The alarm will turn on again after 9 minutes. You may repeat the Snooze operation several times within one hour, but after one hour the alarm will not turn on again and will reset itself for the following day.

When the alarm is not sounding press the SNOOZE/SLEEP/DIMMER button to activate the Sleep timer. If you were listening to the radio the radio will turn on to the last tuned station and the display will show “90” indicating that the radio will play for 90 minutes before auto shutoff. If you were listening to Bluetooth you will hear the music from your Bluetooth enabled device. To adjust the amount of sleep time, continue pressing the SNOOZE/SLEEP/DIMMER button to reduce the amount of time by 10 minutes with each press. When the Sleep timer counts down to “00” the radio or your Bluetooth device shuts off automatically. To shut the radio or your Bluetooth device off at any time press and hold the POWER/MODE/ALM RESET button.

You may adjust the radio or Bluetooth volume level during sleep timer operation but remember that the volume level you select for Sleep timer operation is the same level you will hear when waking to radio or Bluetooth in the morning.

Operating Instructions

Dimmer (Display Brightness) Control

By default the display brightness is set to the Hi level at our factory. Press and hold the DIMMER button once to reduce the display brightness to a low level. Press and hold again to return to full brightness.

Auxiliary Input (AUX IN) Jack (on back panel)

You can listen to music from an external source such as an iPod, MP3 player, CD player, etc, through the speaker of your Timex clock radio. Use a 3.5mm stereo audio cable (not included) to connect the headphone jack of your external source to the AUX IN jack on the back panel of your Timex clock radio.

Press the POWER/MODE/ALM RESET button on the radio until the display shows "AUH". Begin playback on your external device. Adjust the volume level of the clock radio as desired. You may need to adjust the volume level on your external device as well.

When you are finished listening press and hold the POWER/MODE/ALM RESET button to shut the radio 'Off'. Don't forget to turn off your external device as well.

Care and Maintenance

Replacing The Back Up Batteries / Power Failure

Good quality alkaline batteries should last for at least one year under normal conditions. When the back up batteries start to lose power the Low Battery indicator will appear in the bottom of the display. Leave the clock radio connected to the AC outlet while replacing the exhausted batteries to avoid having to reset the time, alarm times, and radio preset station memories.

If you experience a power failure and the back up batteries are exhausted, the display will begin flashing when the power is restored. If you notice the flashing display you should first remove the exhausted batteries, install fresh batteries, and then reset the time, alarm times, and preset station memories as described in this manual.

Cleaning The Cabinet

If the cabinet becomes dusty wipe with a soft, dry dust cloth. Never spray the cabinet with furniture dusting sprays. If the cabinet becomes dirty or smudged with fingerprints, wipe it with a soft cloth slightly dampened with a mild soap and water solution. Never use chemicals or abrasive cleaners. Never allow water or any other liquid to enter the cabinet.

There are no user serviceable parts inside this unit. To avoid the potential for electric shock never open the cabinet yourself. Refer all service problems to a qualified service technician at a factory authorized service center. Consult your warranty for more details.

Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-800-888-4491 for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2014 SDI Technologies, Inc. All rights reserved.

Questions? Visit www.timexaudio.com

or call 1-800-888-4491 Toll Free

TIMEX®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>