 


TIMEX®

Model T020

Alarm Clock with Month / Date / Day Display

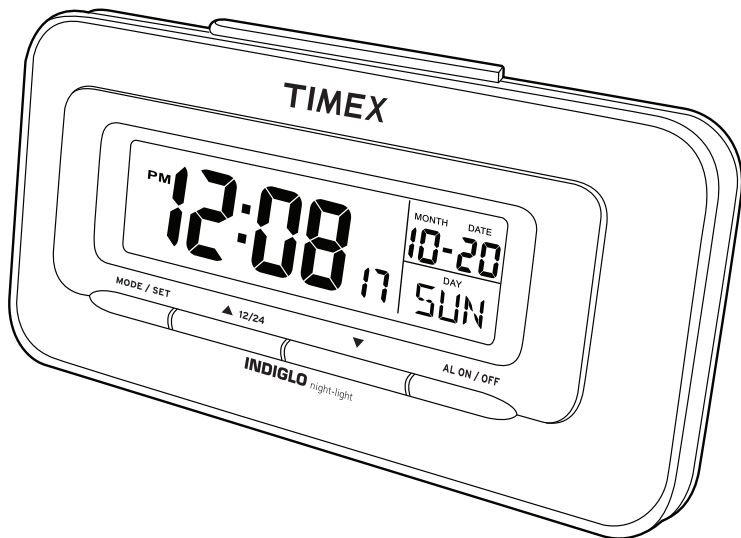

Thank you for purchasing this Timex model T020 Alarm Clock. Please read this instruction manual carefully and completely to insure that you understand the proper operation of your new alarm clock, and that you get the maximum benefit from all the advanced features included in this model.

**For additional information, online registration,
and exclusive special offers visit our website:**

www.timexaudio.com

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

Download from www.timexaudio.com and download. And Download.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department

SDI Technologies Inc.

Timex Audio Products Division

1330 Goodyear Dr.

El Paso, TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TIMEX is a registered trademark of Timex Corporation the United States and other countries.

T020-042209-A

Printed in China

 
Care and Maintenance

If you notice that the time display is beginning to fade, or if it has completely disappeared, replace the batteries. Replace both batteries at the same time and do not mix different types of batteries. Do not leave exhausted batteries in the clock for a long period of time. They may eventually leak and cause damage to the clock itself or to the surface the clock is placed on.

Please dispose of the exhausted batteries properly.

Note: After replacing the batteries the clock will return to its original default settings. It will be necessary to reset the time and alarm settings.

Controls

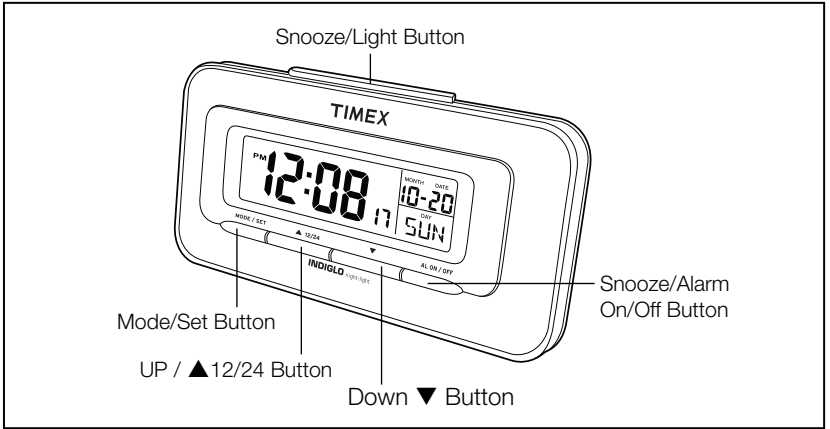

Controls and Their Functions

Snooze Bar – When Snooze function is activated, press to stop alarm temporarily. After 5 minutes alarm turns 'On' again. Snooze operation can be repeated up to 8 times. If snooze is not activated, pressing Snooze Bar resets alarm to following day. During normal operation, pressing the Snooze Bar also turns on the display backlighting momentarily for nighttime viewing. After 5 seconds the lighting turns off automatically.

 
MODE Button – Used to switch between time and alarm time display modes, and to enter manual time and alarm setting modes.

▲ **/12/24 Button** - Used to switch the time display between 12-hour and 24-hour formats. Also used to manually advance the time, year, month, and date displays.

▼ **Button** – Used to manually 'back-up' the time, year, month, and date displays.

Snooze/Alarm On/Off Button – Use to activate or deactivate the alarm and activate or deactivate the Snooze function.


Time Display

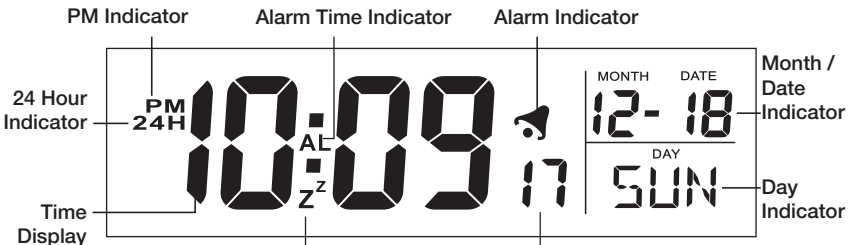

Preparation for Use

Installing the Batteries

 Open the Battery Compartment cover by pressing down on the locking tab. Insert 2 "AA" batteries (not included) in the battery compartment. Be sure to insert the batteries according to the polarity markings ("+" / "-") inside the battery compartment. If the batteries are inserted incorrectly the unit will not work. We recommend you use a well-known brand of alkaline batteries for longest life and best performance.

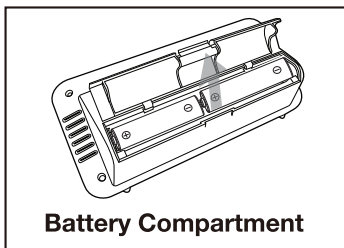

Operating Instructions

Setting the Clock

Selecting 12-Hour or 24-Hour Display Mode

Press the ▲ button momentarily to switch the display between the 12-Hour and 24-Hour format. If you select the 24-Hour format the "24H" indicator will appear in the display. In the 24-Hour format midnight is displayed as "0:00", 1 PM is displayed as "13:00", 6 PM is displayed as "18:00", etc. The 24-Hour format is often referred to as Military Time. In the 12-Hour format midnight is displayed as "12:00". Noon is displayed as "PM 12:00". If the "PM" indicator does not appear, the time displayed is AM. There is no AM indicator.

Setting The Time / Year / Month and Date

After you have selected the 12 or 24-Hour display format, proceed as follows:

1. Press and hold the **MODE** button for two seconds until the Hour digits begin flashing, then press either the ▲ or ▼ buttons to set the display to the correct hour, **AM** or **PM**. If the **PM** indicator does not appear the hour displayed is **AM**.
2. When the correct hour appears press the **MODE** button once to start the Minute digits flashing, then press either the ▲ or ▼ buttons to set the display to the correct minute.
3. When the correct minutes appear press the **MODE** button once to start the Seconds digits flashing. If you want to set the seconds counter to "00" press either the ▲ or ▼ button once. If you do not wish to 'zero' the seconds, proceed to step 4.
4. Press the **MODE** button once more to start the Year display flashing. The default year is 2004. Press the ▲ button to set the display to the correct year.
5. Press the **MODE** button once more to start the Month display flashing, then press either the ▲ or ▼ buttons to set the display to the correct month.
6. Press the **MODE** button once more to start the Date display flashing, then press either the ▲ or ▼ buttons to set the display to the correct date. Note that the Day of the Week indicator changes automatically as you adjust the Date display.
7. After you have completed these adjustments you may press the **MODE** button once more to exit the setting mode and return to the current time display. Or if you do nothing the display will return to the current time automatically after 15 seconds.

Note: You must complete each of the above steps and move to the next step within 15 seconds. If you do not make any adjustment within 15 seconds the clock will exit the setting mode and return to the previously displayed information. You must then start with Step 1 again and make sure you complete each step within 15 seconds, while the display is flashing.

Setting the Alarm Time

1. When the correct time, month, and date are showing on the display press the **MODE** button once to change the display from current time to alarm time. The initial default alarm setting is 12:00 (AM). The “**AL**” indicator appears between the Hour and Minute digits to confirm that you are in the alarm-setting mode.
2. While the display is in the alarm-setting mode press and hold the **MODE** button for two seconds until the Alarm Hour digits begin flashing, then press either the ▲ or ▼ buttons to set the display to the desired wake-up hour, **AM** or **PM**. If the **PM** indicator does not appear the hour displayed is **AM**.
3. When the desired wake up hour appears press the **MODE** button once to start the Minute digits flashing, then press either the ▲ or ▼ buttons to set the display to the desired wake-up minute.
4. When the desired wake-up time appears on the display you may press the **MODE** button once more to return to the current time display. After 15 seconds the display returns to the current time mode automatically.
5. If you wish to reconfirm the wake-up time just press the **MODE** button once. The display will change from current time to alarm time. After 15 seconds the display changes back to current time automatically.

Activating The Alarm and Snooze Functions

To turn the alarm ‘On’ press the **Snooze/Alarm On/Off** button on the front panel once. The Alarm On indicator  appears in the display.

To activate the Snooze function press the **Snooze/Alarm On/Off** button once more. The Snooze indicator **Z^Z** appears in the center of the display.

At the selected wake-up time the alarm turns on automatically. The alarm begins with a single ‘beep’ and then the frequency of the ‘beeps’ increases. The alarm continues for two minutes, then shuts off automatically and resets itself for the same time on the following day.

To stop the alarm sooner, press any button on the front panel. The alarm stops immediately and resets itself for the same time on the following day.

Snooze Function

If you activated the Snooze function and the Snooze indicator appears in the display after the alarm turns on you may press the Snooze Bar for an extra 5 minutes sleep. The alarm will stop and then start again 5 minutes later. You may repeat the Snooze operation up to 8 times, but after 8 times the alarm resets itself for the following day. The Snooze indicator flashes in the display during Snooze operation.

Deactivating The Alarm and Snooze Functions

To deactivate the Alarm and Snooze functions, press the **Snooze/Alarm On/Off** button until both the Alarm indicator and Snooze indicator disappear from the display.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>