

# TIMEX®

Model T025

## Time Ball Alarm Clock



For additional information, online registration,  
and exclusive special offers visit our website:


[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other  
products, please call our toll-free number 1-800-888-4491.  
Para instrucciones en Español, llame al 1-800-888-4491.


Thank you for purchasing this Timex model T025 Alarm Clock. Please read this instruction manual carefully and completely to insure that you understand the proper operation of your new alarm clock, and that you get the maximum benefit from all the advanced features included in this model.

Download from [www.Sonmanuals.com](http://www.Sonmanuals.com)! All Manuals Search And Download

## Controls and Indicators

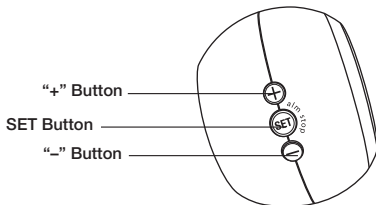


Snooze/Backlight

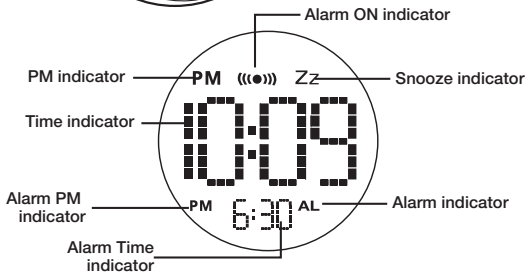

## Installing The Batteries

This Timex alarm clock requires 3 "AAA" batteries (not included). We recommend using a well-known brand of alkaline batteries for longer life and best performance.

Press the battery door locking tab in the direction of the arrow to remove the battery door. Install 3 "AAA" batteries as shown in the illustration, making sure the polarity (+ or -) matches the diagram.

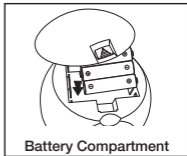

The clock will 'beep' 4 times and the display will show "12:00 AM" as the time and 6:00 AM as the default alarm time.

Replace the battery door.

### Replacing The Batteries

Three fresh alkaline AAA batteries should operate the clock for up to 1 year. When the time display begins to fade and the alarm sound becomes weak it is time to replace the batteries. Be sure to replace all 3 batteries at the same time and do not mix different types of batteries in the battery compartment.

This alarm clock includes a special memory circuit that will maintain your time and alarm settings for several minutes even when the 3 batteries are removed during battery replacement. If you have 3 new batteries ready to install you should not have to re-enter all of your settings after replacing the batteries. However if the batteries are removed for a long period of time the internal memory will be lost and it will be necessary to reset the time, alarm time, snooze duration, backlight color, etc., after the new batteries are installed.

**IMPORTANT:** Do not leave exhausted batteries in the clock for an extended period of time. Exhausted batteries may eventually leak and cause damage to the clock itself and possible corrosion damage to the surface beneath the clock.

### Battery Performance

- Do not mix with used or other battery types/brands,
- Replace all cells at the same time
- Do not open batteries
- Do not dispose of in fire
- Do not heat above 75°C (167°F)
- Do not expose contents to water
- Do not charge or recharge
- Do not install backwards

## Care/Maintenance

---

- Protect your furniture when placing the unit on natural wood or wood with a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzine, thinner, or similar materials are not recommended, as they may damage the surface of the case.
- If the unit is not to be used for a prolonged period, such as a month or longer, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the battery.

## Setting The Time

---

1. Press and hold the **SET button** for two seconds. The time display will begin flashing.
2. Press the “+” or “-” buttons to adjust the time display. If you hold the “+” or “-” buttons the display will change rapidly. When the display approaches the correct time press the “+” or “-” buttons repeatedly to set the display to the desired minute. Be sure to set the time correctly for AM or PM. If the PM indicator does not appear the time displayed is AM.
3. When the correct time is flashing on the display simply wait 5 seconds until the display stops flashing and the clock will begin to run.

**NOTE:** You must adjust the time while the display is flashing. If no adjustments are made within 5 seconds after you press the **SET button** the display will stop flashing and no time adjustments can be made. If this occurs depress the **SET button** again for 2 seconds to start the display flashing and complete your time adjustments while the display is flashing.

## Setting The Alarm Time

---

Depress and hold either the “+” or “-” buttons to move the alarm time display rapidly forward or back. When the display approaches the desired alarm time repeatedly press the “+” or “-” buttons to set the display to the desired wake-up minute. Be sure to set the alarm time correctly for AM or PM. If the PM indicator does not appear the alarm time displayed is AM.

## Selecting The Backlight Color

---

This Timex alarm clock features a 7-color momentary display backlight that illuminates the clock display for easy viewing in a darkened room. To turn on the backlight simply press down on the top of the cabinet. The default backlight color is blue. The backlight will remain ‘On’ for 5 seconds and then shut off automatically.

To select a different backlight color, continue pressing the top cabinet to cycle through the 7 color options. When you see the color that you prefer stop pressing the cabinet. After 5 seconds the backlight will shut off. The next time you press the top cabinet the new backlight color that you selected will appear.

### Continuous Backlight Operation

If you wish to have the color changing backlight remain ‘on’, press down on the top cabinet for 2 seconds until the display backlight begins to cycle through the 7 available color options, then release the cabinet. The color changing operation will continue indefinitely until you stop it by pressing on the top cabinet once more. The color changing will stop and after 5 seconds the backlighting will shut off.

**IMPORTANT: Continuous Backlight Operation will drain the batteries after approximately 40 hours. To minimize the battery drain do not leave the unit in the Continuous Backlight Mode for more than a few minutes.**

## Activating / Deactivating The Alarm

---

Depress the **SET button** for 2 seconds until the time display begins flashing, then press the SET button 2 more times. The word "OFF" begins flashing in the display indicating that the alarm is 'Off' (deactivated). Press either the "+" or " - " button once until the word "ON" is flashing in the display, indicating that the alarm is 'On' (activated). After 5 seconds the display stops flashing and returns to the correct time. However the alarm indicator **(●)** remains in the display.

To deactivate the alarm repeat this procedure until the word "OFF" is again flashing in the display. After 5 seconds the display returns to the correct time and the alarm indicator **(●)** disappears. The alarm is now deactivated. When the alarm is activated it will turn on every day at the same time until it is deactivated. The alarm indicator **(●)** flashes, the alarm sound will continue for 60 seconds and then the alarm shuts off automatically and resets itself for the following day. During the 60 seconds that the alarm is sounding the display backlighting will be cycling through the 7 different color options. To stop the alarm sound sooner, press the **SET button**. The alarm sound stops and the alarm resets for the following day.

## Snooze Operation

---

When the alarm turns on you may press the top of the cabinet to activate the snooze function. The snooze indicator **(Z z)** flashes in the display. The alarm sound stops for 5 minutes and then turns on again.

## Adjusting The Snooze Time

---

This Timex alarm clock allows you to adjust the length of the snooze operation from 1 minute to 60 minutes. The default snooze time is 5 minutes.

To adjust the amount of Snooze time:

1. Depress the **SET button** for 2 seconds until the time display begins flashing, then press the **SET button** an additional 3 times. The Snooze indicator (**Z z**) and the default snooze time (**05**) begin flashing in the display.
2. Press either the “+” or “-” buttons to adjust the snooze time setting up or down to a maximum of 60 minutes or a minimum of 1 minute.
3. When the desired snooze time appears on the display you may either press the **SET button** once more to save the new setting as the default and return to the correct time, or simply wait 5 seconds for the display to stop flashing and return to the correct time. The new setting is now saved as the snooze default time and will remain in the memory until you change it again.

## 12 Hour / 24 Hour Time/Alarm Display Option

---

This Timex alarm clock gives you the option of having the time and alarm time displayed in either the 12-hour format with PM indicator or the 24-hour format, sometimes referred to as ‘military time’. The default display setting is the 12-hour format with PM indicator.

If you wish to change to the 24-hour display format, depress the **SET button** for 2 seconds until the time display begins flashing, then press the **SET button** once more. The “**12hr**” indicator begins flashing below the time display. Press either the “+” or “-” buttons once to change the indicator from **12hr** to **24hr**. After 5 seconds the display returns to the correct time but the time and alarm time will now appear in the 24-hour format. For example, 6:00 PM will be displayed as “18:00”.

Repeat this procedure to change back to the 12-hour format at any time.

## Limited 90-Day Warranty Information

---

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of SDI Technologies, Inc., for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department  
SDI Technologies Inc.  
Timex Audio Products Division  
1330 Goodyear Drive  
El Paso TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**If you have questions or comments regarding this or other SDI Technologies products, please call our toll-free number: 1-800-888-4491.**

©2009 SDI Technologies, Inc. All rights reserved

**TIMEX is a registered trademark of Timex Corporation the United States and other countries.**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>