

THANK YOU FOR PURCHASING YOUR TIMEX WATCH.

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Please read instructions carefully to understand how to operate your Timex watch.

Your model may not have all of the features described in this booklet.



FEATURES

- Date and time display • Daily alarm • 24-hour countdown timer • Chronograph

BASIC OPERATIONS



Press **MODE** to cycle through CHRONO, ALARM, and TIMER modes. Press **INDIGLO** to illuminate watch face. In any mode, press **MODE** to view time display. Press any button to stop alarm or timer beeps.

TIME AND DATE

- Press and hold **SET**. HOURS digits will flash.
 - Press **START/STOP** or **DATE** to change hour digits. Go through 12 hours for AM or PM.
 - Press **MODE** to select MINUTES.
 - Press **START/STOP** or **DATE** to change.
 - Repeat to set MONTH, DATE, DAY, 12- or 24-hour time display, DAY-MONTH or MONTH-DAY date display.
 - Press **SET** when done.
- Press **DATE** to display date. Press again to display time.

CHRONOGRAPH

- Press **MODE** until CHRONO appears.
- Press **START/STOP** to start. indicates chrono is on.
- Press **DATE** to view lap or split time. Display pauses for 7 seconds.
- Press **START/STOP** to pause.
- Press **START/STOP** to resume.
- When timing is stopped, press and hold **DATE** to reset chrono.

ALARM

- Press **MODE** until ALARM appears.
- Press and hold **SET** to select HOURS. Digits will flash.
- Press **START/STOP** or **DATE** to change hour digits. Go through 12 hours for AM or PM.
- Press **MODE** to select MINUTES.
- Press **START/STOP** or **DATE** to change. Press **SET** when done.
- Press **START/STOP** to turn alarm on or off. indicates alarm is on.

When alarm time is reached, watch will beep and INDIGLO® display will flash for 20 seconds, or until a watch button is pushed. Alarm will repeat every 24 hours until deactivated.

TIMER

- Press **MODE** until TIMER appears.
- Press and hold **SET** to select HOURS. Digits will flash.
- Press **START/STOP** or **DATE** to change digits.
- Press **MODE** to select MINUTES. Press **START/STOP** or **DATE** to change.
- Repeat to set SECONDS.
- Press **SET** when done.
- Press **START/STOP** to start timer. indicates timer is running.
- Press **START/STOP** to pause, press again to resume.
- When timer is stopped, press **DATE** to reset timer to the beginning.
- Press and hold **SET** to set new countdown time.

Watch will beep when countdown ends.

INDIGLO® NIGHT-LIGHT WITH NIGHT-MODE® FEATURE

- Press **INDIGLO** to activate light. Electroluminescent technology used in the INDIGLO® night-light illuminates watch face at night and in low light conditions.
- Press and hold **INDIGLO** for three seconds (beep will sound) to activate or de-activate NIGHT-MODE® feature.
- While in NIGHT-MODE® feature, press any button to illuminate watch face for 3 seconds.

WATER RESISTANCE

If your watch is water-resistant, meter marking or () is indicated.


Water-Resistance Depth	p.s.i.a.* Water Pressure Below Surface
30m/98ft	60

*pounds per square inch absolute

WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.

- Watch is water-resistant only as long as lens, push buttons and case remain intact.
- Watch is not a diver watch and should not be used for diving.
- Rinse watch with fresh water after exposure to salt water.

ELASTIC STRAP

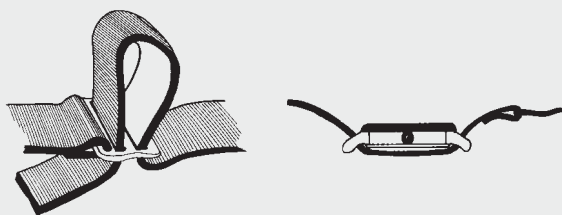

Each Timex Kids watch has an adjustable, stretch fabric, washable strap. To adjust the strap:

1. Place end of elastic strap through first buckle opening and then down through second buckle opening.
2. Adjust strap to desired length.

BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

TIMEX KIDS LOSS PROTECTION PLAN™ (US, UK, CANADA)

TIMEX understands that kids often lose things, even their most prized possessions. That is why your new watch is covered by the exclusive TIMEX KIDS LOSS PROTECTION PLAN™. If your new watch is lost, TIMEX will replace it with the same style (or similar if your style is not available) at the price below for up to one year from the original date of purchase, with no questions asked. Simply send (1) a check or money order for the replacement price below made payable to TIMEX CORPORATION (residents of AR, CA, CT, FL, IL, MA, MN, NY, VA, and WA, also add applicable sales tax), (2) proof of purchase, and (3) the five digit style number or a complete description of the watch to:

TIMEX CORPORATION
P.O. BOX 1676
Little Rock, AR 72203
Attention: Ann Rice

Replacement price: \$10 for Timex Kids watches.

Timex understands that kids often lose things, even their most prized possessions. That is why your new watch is covered by the exclusive TIMEX KIDS LOSS PROTECTION PLAN™. If your new watch is lost, TIMEX will replace it with the same style (or similar if your style is not available) at the price below for up to one year from the original date of purchase, with no questions asked. Simply send (1) a check or money order for the replacement price below made payable to TIMEX CANADA INC (please include 7% GST, applicable provincial sales tax and \$3.00 shipping and handling), (2) proof of purchase, and (3) the five digit style number or a complete description of the watch to:

TIMEX CANADA INC.
TIMEX KIDS LOSS PROTECTION PLAN
445 Hood Road
Markham, Ontario
L3R 8H1

Replacement price: \$10 for Timex Kids watches.

TIMEX INTERNATIONAL WARRANTY

(U.S. – LIMITED WARRANTY – PLEASE SEE FRONT OF INSTRUCTION BOOKLET FOR TERMS OF EXTENDED WARRANTY OFFER)

Your TIMEX watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty.

Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model. **IMPORTANT — PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:**

- 1) after the warranty period expires;
- 2) if the watch was not originally purchased from an authorized Timex retailer;
- 3) from repair services not performed by Timex;
- 4) from accidents, tampering or abuse; and
- 5) lens or crystal, strap or band, watch case, attachments or battery. Timex may charge you for replacing any of these parts.

THIS WARRANTY AND THE REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. TIMEX IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some countries and states do not allow limitations on implied warranties and do not allow exclusions or limitations on damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country and state to state.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. Please include the following with your watch to cover postage and handling (this is not a repair charge): a US\$ 7.00 check or money order in the U.S.; a CANS6.00 cheque or money order in Canada; and a UK£2.50 cheque or money order in the U.K. In other countries, Timex will charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For the U.S., please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 01-800-01-060-00. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 208 687 9620. For Portugal, call 351 212 946 017. For France, call 33 3 81 63 42 00. For Germany, call +43 662 88 92130. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>