

# TIMEX®

www.timex.com

W-107-US 559-095002

## THANK YOU FOR PURCHASING YOUR TIMEX WATCH.

### EXTENDED WARRANTY

**Available in U.S. only.** Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Please read instructions carefully to understand how to operate your Timex watch.

**Your model may not have all of the features described in this booklet.**



### FUNCTIONS

Real-time calendar clock, Second time zone clock, Daily alarm/hourly chime, Stopwatch with split functions, Countdown timer, Memo with alarm, INDIGLO® night-light and flashing INDIGLO® alarm light.

### BASIC OPERATIONS



NOTE: Watch automatically exits set mode if left idle for 2 minutes.

### SET TIME-DATE

1. Press FORWARD to change display from month-date to day-of-week-date.
2. Press and hold ADJUST for 2 seconds to set. Second digits blink.
3. Press FORWARD or REVERSE to reset digits to 00.
4. Press MODE. Minute digits blink.
5. Press FORWARD or REVERSE to set digits.
6. Press MODE. Hour digits blink.
7. Press FORWARD or REVERSE to set digits.
8. Press MODE. Time format blinks. Press FORWARD or REVERSE to select 12- or 24-hour display.
9. Follow same steps to set: year, month, and date.
10. Press ADJUST at any time to retain set values and exit procedure.
11. Press MODE to select TIME2. Hold ADJUST for 2 seconds and repeat steps to set second time zone (TIME2). Because there are time zones that change by 15- or 30-minute intervals (instead of hours), the minutes can only be set in 15-minute intervals in TIME2.

### DAILY ALARM/HOURLY CHIME

1. Press MODE repeatedly to select DAILY alarm mode.
2. Press and hold ADJUST for 2 seconds to set. Minute digits blink.
3. Press FORWARD or REVERSE to set minutes.
4. Press MODE. Hour digits blink.
5. Press FORWARD or REVERSE to set hours.
6. Press ADJUST to confirm and exit.

7. Press FORWARD once to turn alarm on (ALARM will appear), twice to turn chime on (🔔 will appear); three times to turn both on, four times to turn both off.
  8. Press any button to silence alarm or chime.
- To enable/disable INDIGLO® night-light to flash when alarm beeps, in any mode:
9. Press and hold INDIGLO for 2 seconds. Indicator will appear/ disappear respectively.

#### COUNTDOWN TIMER

##### To set timer:

1. Press MODE repeatedly to select TIMER mode.
  2. Press and hold ADJUST for 2 seconds to set. Minute digits blink.
  3. Press FORWARD or REVERSE to set digits.
  4. Press MODE. Hour digits blink.
  5. Press FORWARD or REVERSE to set digits.
  6. Press ADJUST to confirm and exit.
- Press FORWARD to start countdown. Press again to stop or resume countdown.  
Press REVERSE to reload the pre-set value (1 hour at time of purchase).

#### STOPWATCH

1. Press MODE repeatedly to select STOPWATCH mode.
2. Press FORWARD once to start stopwatch.
3. Press FORWARD at any time to stop counting. Press again to resume.
4. To clear, press FORWARD to stop counting. Press REVERSE to clear.

##### To use split function:

1. Press REVERSE while stopwatch is running to view lap time. The minute/hour symbols (e.g., 2'33") flashing indicates stopwatch is still running in background.
2. Press REVERSE again to display accumulated time. Stopwatch will count up to 1 hour before starting from zero again.

#### MEMO MODE

You can set a memo to appear when the alarm goes off. Set up to seven messages with alarm times. Each message can be a maximum of 20 characters.

##### To enter memo:

1. Press MODE repeatedly to enter MEMO mode.
2. Press FORWARD to view next memo (-1, -2, -3 ...-7)
3. Press and hold ADJUST for 2 seconds to set.
4. Press FORWARD or REVERSE to select letter and start to spell your message.
5. Press MODE to proceed to next letter.
6. When the message is complete, press MODE repeatedly until the hour digit blinks (you must toggle through 20 characters). Set alarm as you did in the above section.
7. Press ADJUST to confirm and exit.
8. Press REVERSE to turn alarm on/off for current memo (ALARM will appear/disappear).

#### INDIGLO® NIGHT-LIGHT

Press INDIGLO® to activate night-light. Patented (U.S. pat 4,527,096 and 4,775,964) electroluminescent technology used in INDIGLO® night-light illuminates entire watch face at night and in low light conditions. While the night-light is on pressing any button keeps it on for three seconds. See alarm section to turn Flashing INDIGLO® on/off.

#### WATER RESISTANCE

If your watch is water-resistant, meter marking or (☞) is indicated.


Water-Resistance Depth	p.s.i.a. * Water Pressure Below Surface
30m/98ft	60
50m/164ft	86

\*pounds per square inch absolute

##### WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.

1. Watch is water-resistant only as long as lens, push buttons and case remain intact.
2. Watch is not a diver watch and should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water.

## FASTWRAP STRAP

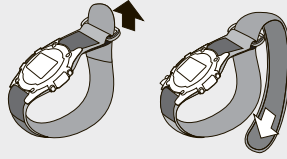

## BATTERY

**Timex strongly recommends that a retailer or jeweler replace battery.** If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

**DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.**

### TIMEX INTERNATIONAL WARRANTY

(U.S. – LIMITED WARRANTY – PLEASE SEE FRONT OF INSTRUCTION BOOKLET  
FOR TERMS OF EXTENDED WARRANTY OFFER)

Your TIMEX watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty.

Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model. **IMPORTANT — PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:**

- 1) after the warranty period expires;
- 2) if the watch was not originally purchased from an authorized Timex retailer;
- 3) from repair services not performed by Timex;
- 4) from accidents, tampering or abuse; and
- 5) lens or crystal, strap or band, watch case, attachments or battery. Timex may charge you for replacing any of these parts.

THIS WARRANTY AND THE REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. TIMEX IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some countries and states do not allow limitations on implied warranties and do not allow exclusions or limitations on damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country and state to state.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. Please include the following with your watch to cover postage and handling (this is not a repair charge): a US\$ 7.50 check or money order in the U.S.; a CAN\$6.00 cheque or money order in Canada; and a UKE2.50 cheque or money order in the U.K. In other countries, Timex will charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For the U.S., please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 01-800-01-060-00. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 208 687 9620. For Portugal, call 351 212 946 017. For France, call 33 3 81 63 42 00. For Germany, call +43 662 88 92130. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>