

# TIMEX®

www.timex.com

W-38 789-095000

## Extended Warranty

**Available in U.S. only.** Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.



Features – Revolutionary Timex i-Control™ System simplifies watch operation. Rotate ring or crown and pull crown to change functions and set the display. Return crown to initial position after setting display.

## 1 General Operation-Features

The watch has only two controls.

- Crown:** *Turn* to select features; *push in* to activate INDIGLO backlight; *pull out and turn* to change setting for feature you are using.
- START/STOP** button: *Push* to start or stop features; *push and hold* to reset Stopwatch or Timer



## 2 Setting Time, Date, Timer, Alarm/

Once you know how to set one feature, you can set any of the others. To set time:

- Turn crown to Time Mode.
- Pull crown. "Set time" message appears.
- Turn crown forward or backward to correct time.
- Push crown in to complete setting.

To set other features, turn crown until appropriate mode appears, then follow steps above.

### Notes:

- Watch includes setting reminder messages and arrows to help you remember which buttons to push.
- When setting time, press **START/STOP** to change between 12 HR and 24 HR display.

## 3 Using Pulse Calculator

- Turn Crown to Pulse Mode.
- Press **START/STOP** to begin.
- FIND PULSE display appears (you have 3 seconds to do so).
- Watch beeps and reminds you to count 10 pulse beats. On tenth beat, press **START/STOP** to show heart rate in beats per minute.

## 4 Using the Stopwatch and Timer

Stopwatch counts up from zero; Timer counts down from a preset value and alerts you when it reaches zero.

- Press **START/STOP** to start or stop Timer and Stopwatch
- While Timer or Stopwatch is stopped, press and hold **START/STOP** to reset back to their starting times.

### Notes:

- The Timer is a "preset" Timer, which allows you to choose from a list of pre-determined settings. To select preset time, *pull crown and turn* to desired time. *Push crown in* to complete setting.
- Press any button to silence Timer alert melody.
- If counting down from 30 minutes or more, watch beeps at halfway point.
- When Timer is running, bar graph displays how much time is left until zero.
- Stopwatch and Timer can both run at the same time and will continue running even while using other features of the watch.

## 5 Using the Alarm

See Section 2 for Alarm setting instructions.

- Press **START/STOP** to turn Alarm on and off.
- When Alarm is ON, clock symbol appears to right of date in Time Mode.
- Alarm sounds for 20 seconds. Press any button to silence. Backup alarm sounds in 5 minutes if alarm sounds for full 20 seconds.

## 6 INDIGLO® night light

Press crown to activate light. Patented (U.S. Patent Numbers 4,527,096 and 4,775,964) electroluminescent technology used in the INDIGLO night-light illuminates entire watch face at night and in low light conditions.

INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries.

## 7 Water Resistance

Water-Resistance Depth	p.s.i.a. * Water Pressure Below Surface
<b>30m/98ft</b>	<b>60</b>
<b>50m/164ft</b>	<b>86</b>

\*pounds per square inch absolute

Fig. 1

**WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.**

- Watch is water-resistant only as long as lens, push buttons and case remain intact.
- Watch is not a diver watch and should not be used for diving.
- Rinse watch with fresh water after exposure to salt water.

## 8 Battery

**Timex strongly recommends that a retailer or jeweler replace battery.** If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage. **DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.**

i-Control is a trademark of Indiglo Corporation.

INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries. NIGHT-MODE is a registered trademark of Indiglo Corporation.

For more information please visit [rush.timex.com](http://rush.timex.com).

### TIMEX INTERNATIONAL WARRANTY

(U.S. – LIMITED WARRANTY – PLEASE SEE FRONT OF INSTRUCTION BOOKLET FOR TERMS OF EXTENDED WARRANTY OFFER)

Your TIMEX watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty.

Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model. **IMPORTANT — PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:**

- 1) after the warranty period expires;
- 2) if the watch was not originally purchased from an authorized Timex retailer;
- 3) from repair services not performed by Timex;
- 4) from accidents, tampering or abuse; and
- 5) lens or crystal, strap or band, watch case, attachments or battery. Timex may charge you for replacing any of these parts.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM COUNTRY TO COUNTRY AND STATE TO STATE. IN THE U.K., NOTHING IN THIS WARRANTY WILL AFFECT YOUR STATUTORY RIGHTS.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. To cover Timex' cost of returning the watch to you (this is not a repair charge), please include with your watch a US\$ 7.00 check or money order in the U.S., a \$6.00 cheque or money order in Canada and a UK£ 2.50 cheque or money order in the U.K. In other areas, Timex may charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For the U.S., please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 91-800-01-060. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 181 754 9494. For Portugal, call 35 1 295 22 57. For France, call 33 3 81 63 42 00. For Germany, call 49 7 231 494140. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

### TIMEX INTERNATIONAL WARRANTY WATCH REPAIR COUPON

**Original Purchase Date:**

(Attach copy of sales receipt, if available)

**Purchased By:**

(Name, address and telephone number)

**Place of Purchase:**

(Name and address)

**Reason For Return:**

THIS IS YOUR WATCH REPAIR COUPON. PLEASE KEEP IT IN A SECURE PLACE.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>