

TOASTLESS®

CORDLESS ELECTRIC JUG KETTLE



Instruction Booklet

Model: TJK-471

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Toastess for examination, repair or adjustment. See "Warranty" section.
7. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
8. **DO NOT** use outdoors.
9. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
10. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. **DO NOT** use appliance for other than intended use.
13. **DO NOT** leave unit unattended while in use.
14. Extreme caution must be used when moving an appliance containing hot liquids.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Water boiled for the first time should be discarded.

INSTRUCTION FOR USE

1. The Filter has been installed on the Kettle before shipping. If it has been removed, hold the Kettle so that the spout is facing away from you. Hold the Filter by the widest part, and slide the Filter down into the bottom filter holder slot. The top of the filter fits in between the grooves on either side of the filter holder. **DO NOT** use the Kettle without the Filter in position as water may spill out when boiling. **DO NOT REMOVE THE FILTER WHEN THE KETTLE IS HOT.**
2. Fill Kettle between the minimum and maximum levels shown on the Water Level Window.
NOTE: DO NOT attempt to fill while the Kettle is on the Power Base.
DO NOT use for other than boiling water. Other liquids will contaminate the interior of the Kettle.
DO NOT fill past the MAX level indicated on the Water Level Window. Overfilling may cause water to spill out when boiling.
3. Place Kettle on Base making sure it is correctly engaged on its Base.
4. Plug Power Base cord into a 120V AC wall outlet.
NOTE: Never plug Power Base with empty Kettle into the electrical outlet.
5. Depress the On/Off Switch to the 'On' position. The Indicator Light will illuminate to indicate that the Kettle is in the boil cycle. Once the water has boiled, the On/Off Switch will automatically switch to the 'Off' position and the Indicator Light will go out.

6. If you want to use the Kettle again, allow the thermal safety switch to cool down for 15 – 20 seconds then depress the On/Off Switch to the 'On' position. If the On/Off Switch does not remain in the 'On' position, the Water is hot enough to use without reheating.
7. Unplug cord from wall outlet before lifting Kettle from Power Base. Grip the Kettle by the Handle only, as the surface and lid will be hot.
8. Return the Kettle to the Power Base or place on a heat resistant surface after use.
9. If the Kettle is accidently switched on when empty, the thermostat will automatically shut it off to prevent the Kettle from overheating. If this situation occurs, unplug the Power Base and let the Kettle cool before refilling.
10. It is recommended that the power cord be disconnected from the wall outlet when not in use. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

CARE AND CLEANING

1. Unplug power cord from wall outlet. Empty out remaining water and allow Kettle to cool before cleaning.
2. If necessary, remove and clean the Aquascreen® Filter by rinsing under running water. The Filter can be removed by grasping the top of the Filter firmly between thumb and forefinger and gently pulling up and away from spout.
3. Under normal use, a deposit of scale may form on the inside of the Kettle and cause some discolouration. Scale, which has accumulated inside the Kettle, can be removed by boiling equal parts of white vinegar and water (500 ml / 2 cups of each is recommended). Once the water has boiled, allow mixture to stand several hours or overnight. Empty out mixture and fill Kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, repeat this process.

NOTE: This build-up can be delayed by pouring out old water and refilling before each use.

4. **DO NOT USE ABRASIVE CLEANERS.**
5. **DO NOT ALLOW WATER TO ENTER THE POWER BASE.**
6. **DO NOT IMMERSE KETTLE OR POWER BASE IN WATER OR OTHER LIQUID.**

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be of a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Toastess International warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Toastess International. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.toastess.com" for the service centre nearest you or you may contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service, securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and zip/postal code.

For repairs not covered by the warranty, please contact us for assistance.

TOASTESS®

TOASTESS INTERNATIONAL

Customer Service Department

81A Brunswick

Dollard-des-Ormeaux

Québec, Canada H9B 2J5

E-mail: info@toastess.com

Fax: 514-685-8300

Tel: 514-685-2820

* Return/exchange policies at each retailer vary and may differ from the Toastess International 1 year limited warranty period.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>