 


READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

Fast Brew Cordless Percolator

USE AND CARE GUIDE FOR
MODEL MEP10C AND MEP10CCAN

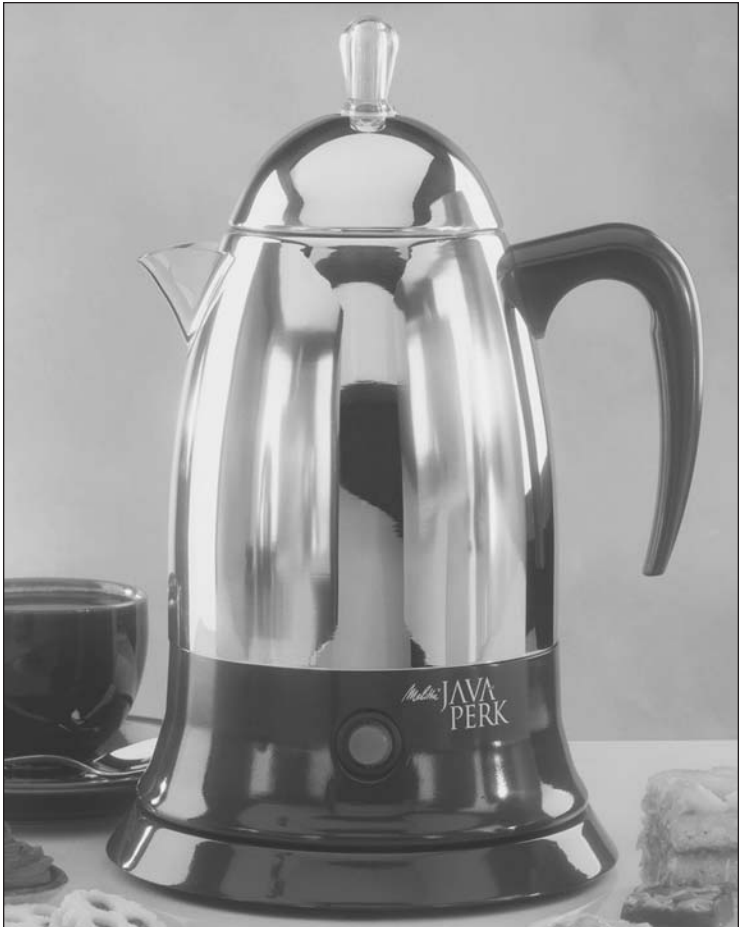

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using percolator.
- Do not touch hot surfaces. Use handle.
- Do not immerse cord, plug, power base, or percolator in water or other liquid. See instructions for cleaning.
- This percolator is not for use by children.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use. Unplug and allow to cool before cleaning and attaching parts. Use oven mitts when removing parts.
- Do not operate a damaged percolator. Do not operate with a damaged cord or plug or after the percolator malfunctions, or has been dropped or damaged in any manner. Return percolator to the nearest authorized service center for examination, repair, electrical, or mechanical adjustment.
- Use attachments only if recommended by manufacturer.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press power switch to OFF position and remove plug from wall outlet.
- In replacing the cover, make sure that it is seated all around the rim of the body. To remove, use oven mitt to grasp knob and lift off.
- Scalding may occur if the cover is removed during the brewing cycles.
- Do not operate without water in percolator.
- Use percolator only as indicated in these instructions.

SAVE THESE INSTRUCTIONS

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is

 
necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A, 1625 W, and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER: If the electric circuit is overloaded with other appliances your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

This product is for household use only.

GETTING TO KNOW YOUR PERCOLATOR

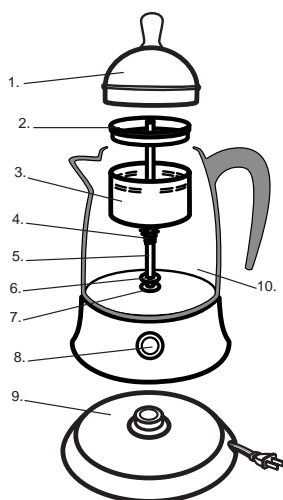

- | | |
|--------------|----------------------------|
| 1. Cover | 7. Center Well |
| 2. Spreader | 8. Power ON/OFF Switch |
| 3. Basket | 9. Power Base w/Power Cord |
| 4. Spring | 10. Body |
| 5. Pump Tube | |
| 6. Washer | |

The illustration in this Use and Care Guide is for informational purposes only. You may find your percolator and parts look different, however, the steps for operation are the same.

USING YOUR PERCOLATOR

CAUTION: DO NOT IMMERSE PERCOLATOR, POWER BASE, OR CORD IN WATER OR ANY OTHER LIQUID OR PUT IN DISHWASHER TO CLEAN.

1. Wash the inside of the percolator and basket assembly thoroughly before using for the first time. Do not wash power base. See CLEANING INSTRUCTIONS.
2. Place power base on a level countertop. The base must be dry before placing percolator on base. Make sure switch is positioned to left (off position).
3. Remove Cover, Basket, Spreader and Pump Tube. Use cold, fresh tap water to fill Percolator. The automatic brewing cycle is timed to begin with a cold water start. Fill according to markings on inside of Percolator for number of cups desired.
NOTE: The bottom of the Pump Tube Spring marks the maximum capacity of the Percolator.
4. Wet Coffee Basket to help keep small particles of coffee from sifting through. Place Basket on Pump Tube. Add desired amount of coffee to Basket.

The following chart suggests amount of coffee for different brew strengths; amounts can be varied to suit personal taste and particular coffees.

CUPS TO BE BREWED	STANDARD COFFEE MEASURES TO USE		
	1 standard coffee measure = 2 level tablespoons		
	MILD	MEDIUM	STRONG
10	5	7	9
8	4	6	8
6	3	4	6
4	2-1/4	3	4
1 cup brewed coffee = 5 fluid ounces			

5. Place Pump Tube into Percolator. Place spreader on top of basket and snap cover onto Percolator. Place Percolator on power base and plug into 120 V ~60 Hz outlet. Place switch to right (on position). Light will come on. Rapid Brewing begins within seconds and continues at approximately one cup-a-minute speed.
6. When coffee brewing is complete, percolating will stop. The Percolator automatically switches to KEEP WARM setting to preserve fresh-tasting coffee at hot, ready-to-serve temperature. Power light remains on. For best flavor, using oven mitts carefully remove Coffee Basket, Spreader and Pump Tube when brewing is completed. Remove Percolator from power base to serve coffee, light will go off. Replace on base to keep warm and light will come back on.

7. When finished, press switch to left (off position), unplug and allow to cool, see CLEANING INSTRUCTIONS.

REMOVE PARTS CAREFULLY: PERCOLATOR AND PARTS WILL BE HOT!

CAUTION: DO NOT IMMERGE PERCOLATOR, POWER BASE OR CORD IN WATER OR ANY OTHER LIQUID OR PUT IN DISHWASHER TO CLEAN.

CLEANING INSTRUCTIONS

 
After Each Use: Always make sure switch is in the off position. Unplug from wall outlet, allow to cool. Unless previously removed prior to serving, remove Coffee Basket, Spreader and Pump Tube carefully. Grounds and remaining coffee may still be warm.

Do not immerse power base or Percolator in water or other liquid.

Wash inside of Percolator with water and detergent.

The Cover, Basket, Spreader, and Pump Tube (with spring) may be placed in the dishwasher.

Rinse all parts thoroughly and dry. Store with Cover off. Make sure the Washer at bottom of Pump Tube remains loose. If coffee grounds lodge in this area, remove by placing it under running water or with a wooden pick.

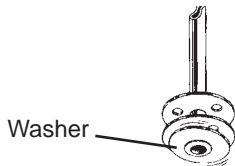

Clean stainless steel exterior with a damp soapy cloth, wipe clean and dry thoroughly. You may also use an all purpose glass cleaner to polish the exterior.

After Repeated Use: Remove accumulation of oil and coffee stains that may cause a bitter taste with a special cleanser, such as "Dip-It". Follow package directions, filling with water to 1-1/2 inches from top. Be sure to rinse well.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

IMPORTANT NOTICE

If any parts are missing or defective,

DO NOT return this product.

Please call our Customer Service Department for assistance.

800-233-9054 Monday - Friday 9:00 am - 5:00 pm CST

Thank You

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:
consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>