

READ AND SAVE THESE INSTRUCTIONS



**MOMENTUM™
High-Speed Brewer**

**USE AND CARE GUIDE FOR
MODEL MERB10B**



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The Carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot Carafe on a wet or cold surface.
- Do not use a cracked Carafe or a Carafe having a loose or weakened handle.
- Do not clean Carafe with cleansers, steel wool pads, or other abrasive material.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

- All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
- The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
- DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
- Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
- If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
- Do not leave this appliance unattended during use.
- The appliance must be left to cool down sufficiently before adding more water to avoid splattering.
- Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in the “Care and Cleaning” section, may cause damage to the appliance.
- DO NOT put Carafe into a microwave.
- DO NOT leave empty Carafe on Warming Plate when appliance is turned ON, as the Carafe may crack or become otherwise damaged.

POLARIZED PLUG: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS: A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not use an extension cord with this product.

ELECTRIC POWER: If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

CAUTION: To prevent plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

Your product may vary slightly from illustration.

Parts Identification

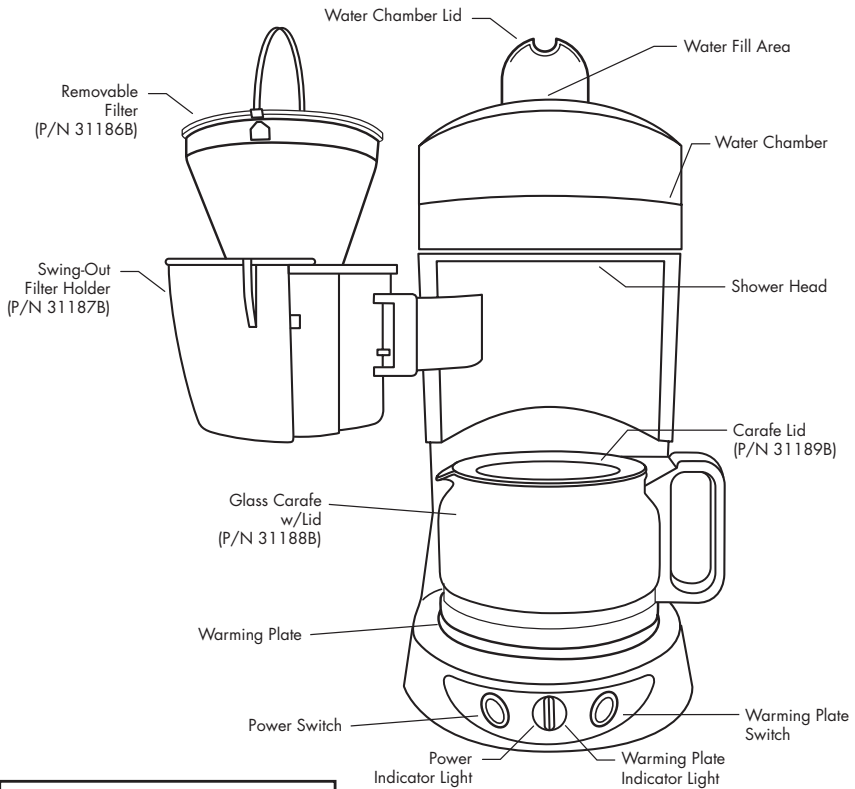


FIGURE A

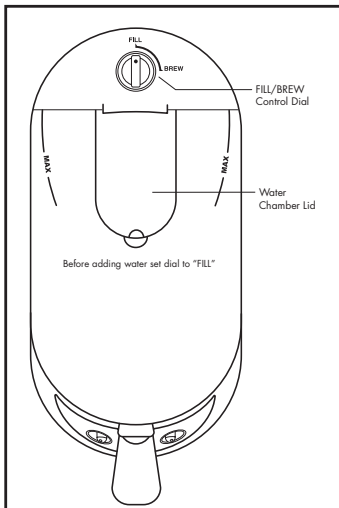


FIGURE B

Coffee Maker Features and Benefits

The one-time initial set-up of the coffee maker (see “Before Using Your Momentum Coffee Maker,” page 7) prepares the coffee maker by filling the Water Chamber completely full of water and allowing time for the water to heat to proper brewing temperature. After this one-time set-up is completed, each time you brew a pot of coffee the cold water you pour into the coffee maker pushes out an equal amount of pre-heated hot water from the Water Chamber. The hot water flows over the coffee grounds and produces a fresh, hot pot of coffee. The cold water you just poured in remains in the Water Chamber where it is heated in preparation to brew the next pot!

10-Cup Brewing Capacity - The coffee maker is designed to brew 6 to 10 cups of coffee at a time.

Removable Filter - The Removable Filter pulls out for fast and easy cleaning and filling.

Non-Stick Warming Plate - This feature allows you to keep your coffee hot after brewing. The non-stick coating prevents the Carafe from sticking to the surface of the Warming Plate.

To avoid damaging the Carafe, the Warming Plate On Switch must be turned Off when the Carafe is empty or when the coffee maker is not in use.

ON/OFF Power Switch - Allows you to turn off the power to the Water Chamber if the coffee maker will not be used for a few days.

NOTE: The coffee maker is designed to remain plugged in with the Power Switch turned On except during those times when your coffee maker is emptied for transport or storage or during times when it will not be used for several days.

If the coffee maker has been unplugged or the Power Switch turned Off for longer than a few hours it will take approximately 20 minutes after the unit is plugged back in and the Power Switch turned On to reheat the water supply to the proper temperature for brewing.

If the coffee maker has not been used for 3 or more days, it is recommended that the Water Chamber be emptied and replaced with fresh water.

Before Using Your Momentum Coffee Maker

Before using your Momentum Coffee Maker for the first time, we suggest you become familiar with all of its parts. Read all instructions and cautions carefully.

This initial set-up procedure prepares the coffee maker for use by filling the Water Chamber completely full of water and allowing time for the water to reach proper brewing temperature. This procedure is only required the first time the coffee maker has not been used, if your coffee maker has not been used for several days and has been emptied, or after the coffee maker has been drained for transport or long term storage (see “Draining Your Coffee Maker For Transport or Storage,” page 10.)

CAUTION: To avoid damage to the coffee maker, do not connect the power cord to a power outlet until the following steps have been completed.

NOTE: The coffee maker will be heavy after the initial set-up steps are completed. For that reason it is recommended you place your coffee maker where you intend to use it before following the initial set-up procedure.

1. Make sure the coffee maker is unplugged. Wash the Carafe, Carafe Lid and the Removable Filter in warm water and mild detergent. Rinse thoroughly then dry with a clean cloth. Place the Removable Filter in the Swing-Out Filter Holder.
2. For this initial set-up, set the Control Dial to “Brew.”
3. Fill the Carafe with fresh, cold water to the “10 cup” line.
4. Slowly empty the water into the Water Fill Area on top of the coffee maker. Allow a few minutes for the water to drain into the Water Chamber.
5. Fill the Carafe a second time with fresh, cold water to the “10 cup” line.
6. Slowly empty the water into the Water Fill Area on the top of the coffee maker. Allow a few minutes for the water to drain into the Water Chamber.
7. Fill the Carafe a third (final) time with fresh, cold water to the “2 cup” line corresponding to the top of the metal band.
8. Slowly empty the water into the Water Fill Area on top of the coffee maker and close the Water Chamber Lid.

NOTE: Adding more water than the amount specified may cause water to flow from the Removable Filter. If this occurs, replace the Carafe under the Swing-Out Filter Holder or use a separate container to collect the excess water. Make sure all excess water has been collected and carafe has been emptied before moving on to the next step.

9. Plug the power cord into a working 120 Volt AC power outlet and press the Power Switch. The Power Indicator Light will illuminate while appliance is On.

NOTE: The coffee maker is designed to remain plugged in with the Power Switch turned On except during those times when your coffee maker is emptied for transport or storage or during times when it will not be used for several days.

10. Wait 20 minutes to allow the water in the Water Chamber to reach the proper brewing temperature.

You have completed the one-time set-up procedure and are ready to use your coffee maker to brew fresh, hot, delicious tasting coffee.

For step-by-step instructions please read the “Brewing” section below.

Brewing

Make sure that you have completed the initial set-up before brewing.

1. Set the Control Dial to “FILL.” This setting prevents the water from entering the Water Chamber and allows time for the Carafe to be placed in position before starting the brew cycle.

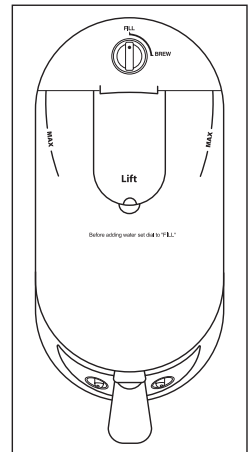


FIGURE B

2. With the Removable Filter in position in the Swing-Out Filter Holder, place a #4 Melitta Cone Filter into the Removable Filter.
3. Add the appropriate amount of ground coffee to the filter (See Suggested Coffee Measurement Chart below.) Move the Swing-Out Filter Holder in position on the coffee maker, it will snap when it is secure.

WARNING: To avoid risk of personal injury or damage to property, be sure that the Swing-Out Filter Holder is securely in place. Failure to secure the Swing-Out Filter Holder may result in hot water overflowing and spilling out of the machine.

Suggested Coffee Measurement Chart

For best results, use a level tablespoon for ground coffee measurement. Make sure you use medium grind coffee for perfect brew.

Number of Cups	Level Tablespoons
10	7.5
8	6
6	4.5

1 cup = 5-oz. brewed coffee

Use more or less coffee to adjust to your taste.

4. Fill the Carafe with 6 to 10 cups of cold water.

NOTE: The coffee maker is designed to brew 6 to 10 cups of coffee at a time. Attempting to brew less than 6 cups may provide unsatisfactory results.
5. Carefully pour the water into the Water Fill Area on top of the coffee maker.
6. Place the Carafe on the Warming Plate.
7. To start the brew cycle, set the Control Dial to "BREW."
8. Press the Warming Plate Switch to On. The Warming Plate Indicator Light will illuminate to indicate that the Warming Plate is on.

NOTE: To avoid damaging the Carafe, the Warming Plate Switch must be turned Off when the Carafe is empty or when the coffee maker is not in use.
9. When the brew cycle is complete set the Control Dial to "FILL" to prepare machine for the next pot of coffee. You can now enjoy your freshly brewed pot of delicious coffee.

10. After allowing the coffee grounds to cool, carefully remove and discard the used coffee grounds and filter.

WARNING: Brewed coffee and grounds, both in the Removable Filter and Carafe are very hot! Handle with care to avoid scalding. If Removable Filter overflows, or if the Removable Filter fails to drain the coffee into the Carafe during the brew cycle, do not open or handle the Swing-Out Filter Holder and Removable Filter. Turn the Control Dial to "FILL", unplug the coffee maker and wait for the contents to cool before opening.

Draining Your Coffee Maker for Transport or Storage

The Water Chamber in your coffee maker should be emptied whenever the coffee maker will be transported, or stored for extended lengths of time.

WARNING: The coffee maker is very heavy. Use caution when draining the chamber.

1. Turn the Power Switch to Off and unplug the coffee maker power cord from the power outlet.

CAUTION: TO PREVENT INJURY DO NOT ATTEMPT TO DRAIN THE UNIT UNTIL THE WATER IN THE WATER CHAMBER HAS COOLED. THIS WILL TAKE SEVERAL HOURS.

NOTE: To shorten the length of time required for the water to cool, the hot water in the Water Chamber can be flushed out and replaced with cold water. To do this:

- a. Turn the Power Switch Off and unplug the unit from the power outlet.
 - b. Using 10 cups of cold water follow the instructions for "Brewing" section. While performing this procedure do not use a filter or coffee grounds.
 - c. Repeat the 10 cup brewing process at least three times to ensure that the hot water in the chamber has been replaced with cold water.
2. Turn the Control Dial to "FILL."
3. Remove the Removable Filter and Swing-Out Filter Holder.

4. Grasp the back of the coffee maker and tip the unit forward over a sink at a 45 degree angle until the water begins to flow out of the Shower Head.
5. Slowly top the coffee maker to a 90 degree angle, hold until the flow of water stops.

NOTE: To ensure that your coffee maker will function properly in the future do not tip the coffee maker beyond 90°. The small amount of water remaining in the coffee maker following this procedure will evaporate in a few days time.

Care and Cleaning

Routine Cleaning

The Carafe, Carafe Lid and the Removable Filter should be rinsed with water after each use.

Top rack dishwasher safe parts: the Carafe and Lid, the Removable Filter and the Swing-Out Filter Holder.

A small amount of dishwashing liquid and water will remove most fingerprints, grease, dirt and grime.

Occasionally, window cleaners, vinegar and water solutions, standard non-abrasive kitchen cleaning fluids, or commercially available cleaning products for stainless steel surfaces can be used. After cleaning, use a soft, dry cloth to dry and buff the surface to a brilliant shine.

Descaling

We recommend that you descale your coffee maker once a month because mineral deposits can form a coating in the coffee maker, causing slower brewing time and possibly an off flavor in the coffee. Use a cleaner recommended for coffee makers or the solution described below. To descale your unit:

1. Turn the Power Switch to "Off". Unplug the coffee maker power cord from the power outlet.
2. Place the Swing-Out Filter Holder in position on the coffee maker.
3. Place the Carafe on the Warming Plate.
4. Slowly pour 1 quart (32 fluid ounces) of undiluted white household vinegar into the top of the coffee maker.

NOTE: As the vinegar is poured in, hot water will be pushed from the Water Chamber and flow through the Removable Filter into the Carafe.

5. When the flow of water stops, empty the Carafe then replace it on the Warming Plate.
6. Wait 2 hours before proceeding. This will allow the vinegar time to break down the lime and mineral deposits.
7. After 2 hours, the vinegar may be rinsed from the coffee maker.
 - a. Using 10 cups of cold water follow the instructions for "Brewing," page 8. While performing this procedure do not use a filter or coffee grounds.
 - b. Repeat the 10 cup brewing process at least eight times to ensure that the vinegar in the Water Chamber has been replaced with cold water.

NOTE: An easy way to determine if all the vinegar has been rinsed out is to sprinkle a small amount of baking soda into the water in the Carafe after it has completed the brewing cycle. The baking soda will react with the vinegar. A gentle fizzing indicates that there is still vinegar in the water and the procedure should be repeated. If there is no reaction then it means that all of the vinegar has been rinsed clean.

Cleaning the Carafe

Hard water can leave a whitish mineral deposit inside the Carafe. Coffee can discolor these deposits, sometimes leaving a brownish stain. To remove these stains, follow these simple steps:

1. Use a solution of equal parts: white household vinegar and hot water.
2. Let solution stand in Carafe for about 20 minutes and then discard.
3. Wash and rinse the Carafe thoroughly using a soft cloth. Do not use harsh abrasive cleaners. These may cause scratches which can lead to breakage.

NEVER IMMERSER THE COFFEE MAKER IN WATER OR OTHER LIQUIDS.

IMPORTANT NOTICE

If any parts are missing or defective,

DO NOT return this product.

Please call our Customer Service Department for assistance.

800-233-9054 Monday - Friday 9:00 am - 5:00 pm CST

Thank You

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return appliance, ship to: To contact us, please write to, call, or email:

Attn: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

Consumer Relations Department
P.O. Box 7366
Columbia, MO 65205-7366 USA
1-800-233-9054
E-mail: consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website:
www.maxim-toastmaster.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>