

Juiceman[®]

Model JM300CAN



INSTRUCTION MANUAL



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Always make sure the Lid is locked securely in place before the motor is turned on. Do not release Lid-Locking Lever while Juicer is in operation.
12. Be sure to slide the Control Switch to "0"(OFF) and unplug the Juicer from the electrical outlet after each use. Make sure the Motor stops completely before disassembling.



13. Do not put your fingers or other objects into the Juicer opening while it is in operation. If food becomes lodged in opening, use Food Pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off, unplug Juicer from electrical outlet, and disassemble Juicer to remove remaining food.
14. Do not use the appliance if the Filter Basket is damaged.

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY



ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately slide the Control Switch to "0"(OFF) and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.



POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken. Permanent blemishes may occur or stains can appear.

 
ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.



GETTING TO KNOW YOUR JUICER


PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

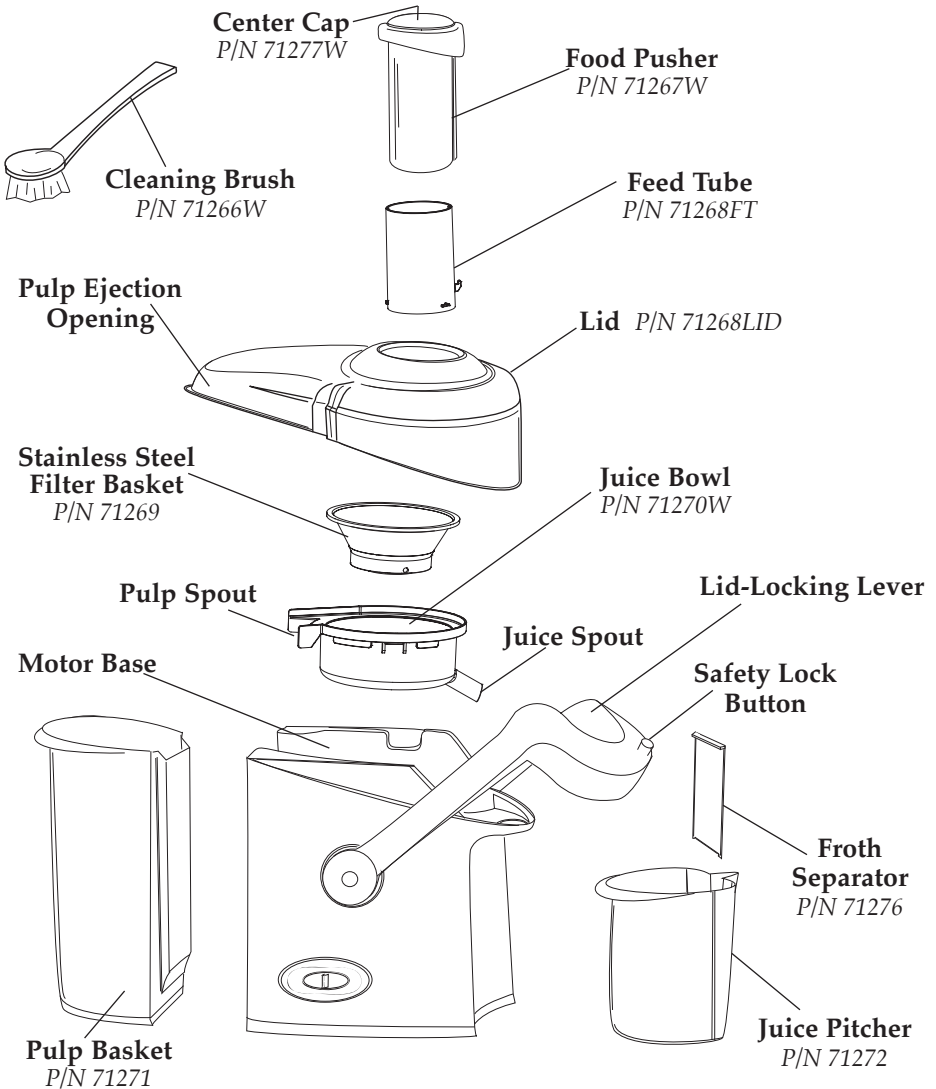



SPEED SELECTION

 This Juicer has two speeds options: 1=LOW and 2=HIGH. These two speeds ensure optimal rpm for maximum juicing efficiency (efficiency describes the amount of juice extracted from your produce). Speeds are selected by simply sliding the Control Switch to the desired setting.

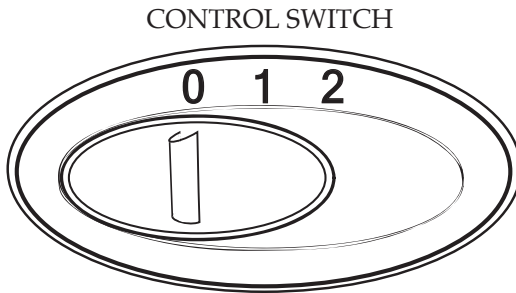

-2- HIGH SPEED:

Best for **harder produce:** carrots, ginger-root, beets, and pineapple (with rind).

-1- LOW SPEED:

Best for **softer produce:** citrus, apples, grapes (with stems), melons, peaches (remove pit), and tomatoes. This speed setting is also recommended for ripe produce that has become soft.

-0- OFF:

To turn off the Juicer.



BEFORE FIRST USE

The Juicer comes partly assembled in the box. We suggest taking it apart and washing the removable parts in warm water with a biodegradable, non-abrasive liquid detergent before the first use. This will eliminate any traces of dust or residue from manufacturing or shipping.

NOTE: Be sure to remove all protective packaging before using the Juicer.

CAUTION: *Never rinse or immerse the Motor Base in water or any other liquid.*

Refer to the ASSEMBLY and DISASSEMBLY INSTRUCTIONS. Make sure the Juicer is properly and completely assembled before use. **The Juicer will not turn on unless properly assembled.**



PREPARATION

Preparing Fruits & Vegetables for Juicing...

- Clean all produce thoroughly, using a natural bristle brush. If you are not using organic produce, we recommend using a biodegradable cleaner to help remove pesticide residue.
- Remove and discard the outer leaves of non-organic produce and peel any waxed fruit or vegetable.
- Trim away any discolored or bruised sections.
- The skin may be left on all produce (including pineapple and melons) except for oranges, grapefruit, and tangerines. The oil found in these skins tastes bitter and difficult to digest.
- Remove melon seeds when possible, as they may escape through the top of the Feed Tube while juicing. The pits of fruits such as cherries, pears, and peaches should also be removed.
- The Juicer is designed to make juicing easier with an over-sized Feed Tube to accommodate larger produce -- so feed most whole apples and oranges, tangerines, ginger, beets, pineapple or melons. Make sure produce can be fed comfortably into the Feed Tube. Use the Food Pusher to gently direct produce through the Feed Tube.
CAUTION: Never push produce into the Feed Tube with your fingers.
- Leafy greens, parsley, wheat grass, and sprouts should be bunched up into a small, tight ball and pushed through with the Food Pusher.
- Bananas are not suitable for juicing; a clear juice cannot be obtained from them and residue left in the machine can clog the micro-mesh filter screen.
- Produce such as apricots, plums, pears, peaches, and tomatoes should be firm for best results when juicing.



OPERATING INSTRUCTIONS

- Make sure that the Juicer is completely and properly assembled. (See ASSEMBLY INSTRUCTIONS.) The Filter Basket should be securely seated and the Pulp Basket at the rear of the Juicer, ready to catch pulp.

~ Helpful Tip ~

To reduce cleaning time, line the Pulp Basket with a plastic produce bag (the kind you put your produce in at the grocery store).

- Place the Juice Pitcher underneath the Juice Spout.
- Plug the Juicer into a 120V AC electrical outlet.
- **TO TURN THE JUICER ON:**

Slide the Control Switch to the desired speed setting (“1” or “2”) and begin juicing. *The Juicer will not operate if the Lid-Locking Lever is not properly engaged.*

NOTE: You may alternate between speeds while juicing depending on the appropriate settings for the various produce being juiced. (Refer to Page 6 for suggested speed settings).

- Remove the Food Pusher from the Feed Tube.
- With the motor running, place produce into the Feed Tube.
- To re-insert the Food Pusher into the Feed Tube, the groove in the Food Pusher must be aligned with the rib in the Feed Tube. Use the Food Pusher to gently direct food down the Feed Tube.

NOTE: To extract the maximum amount of juice, push the Food Pusher down slowly.

~ Helpful Tip ~

Try alternating the types of produce being juiced to ensure maximum efficiency.

- **TO TURN THE JUICER OFF:**

Slide the Control Switch to “0”(OFF). Be sure to unplug the Juicer from the outlet when not in use.



OPERATING INSTRUCTIONS

Tips for Optimum Juicing...

To avoid excessive pulp build-up in the back of the Lid...

Try juicing slower, as wet produce is more likely to build up in the Lid. To release pulp, lightly tap on the side of the Lid. Always empty the Pulp Basket when it becomes full. This will also help prevent pulp from leaking into the juice.

If excessive noise or vibrations occur after Juicer is turned on...

Pulp may have built up on the Filter Basket. Clean the Filter Basket and try alternating different types of produce while juicing. *Note:* Because of the Juicer's powerful motor, a small amount of noise and/or vibration is normal when the Juicer is turned on and as it comes to a complete stop. All Juicers will sound slightly different.

To manage the amount of spray as juice pours out of the Spout...

Juice the produce as slowly as possible to avoid excessive pulp buildup inside the Lid and Juice Bowl. Keep the Pulp Basket emptied for good air flow through machine.

 


ASSEMBLY INSTRUCTIONS

ALWAYS MAKE SURE THE JUICER IS UNPLUGGED
BEFORE STARTING TO ASSEMBLE.


STEP ONE: Place Juice Bowl

Position the Juice Bowl on top of the Motor Base so that the Juice Spout is to the right. Lower the Juice Bowl onto the Motor Base so that the Juice Spout slides through the oval ring in the Motor Base.

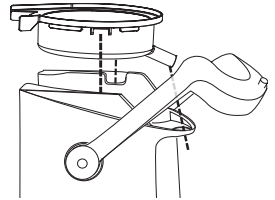

STEP TWO: Place Filter Basket

 
With both hands, grasp the rim of the Filter Basket and center it over the Motor Base Hub inside the Juice Bowl. Carefully lower the Filter Basket onto the Hub, rotating slightly until it drops into the proper position; then press firmly down on the rim of the Filter Basket to secure. (Be sure to apply pressure the both sides of the Filter Basket evenly to ensure proper seating.) When seated properly, the Filter Basket will spin freely and will not lift out of the Juice Bowl.

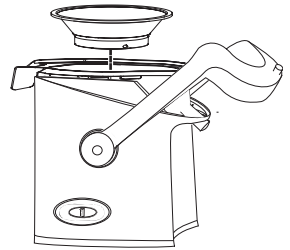

CAUTION: Use care when handling the Filter Basket; the Cutting Blades are very sharp!


STEP THREE: Place Lid

 Place the Lid onto the Juice Bowl so that the Pulp Ejection Opening is positioned over the Pulp Spout.

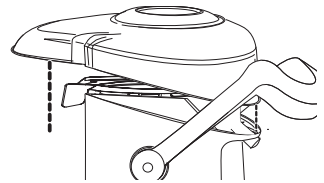

STEP FOUR: Attach Feed Tube

 Center the Feed Tube over the Lid opening so that the safety-lock hook on the Feed Tube is slightly clockwise from the arrow on the Lid. Insert the three tabs located around the bottom of the Feed Tube into the three corresponding slots in the Lid opening, then rotate the Feed Tube counter-clockwise until the safety-lock tab on the Feed Tube aligns with the arrow on the Lid.

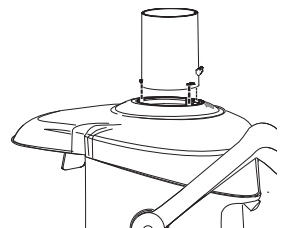




STEP FIVE: Secure Lid-Locking Lever


While pressing down on the Safety Lock Button, swing the Lid-Locking Lever upward until the safety-lock hook on the Feed Tube is engaged. Once the Lid-Locking Lever is fastened into place, release the Safety Lock Button.

 IMPORTANT: The Juicer will not operate if the Lid-Locking Lever is not properly secured.

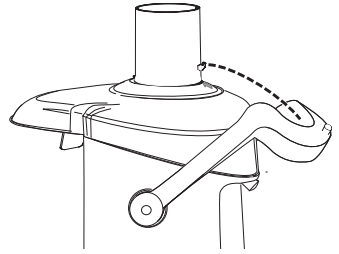


STEP SIX: Position Pulp Basket

 Slightly tilt the the Pulp Basket toward the Juicer and place it directly beneath the Pulp Ejection Opening. Push the bottom of the Pulp Basket inward so the the top edge slides up, behind the Pulp Spout. Continue to press firmly on the bottom of the Pulp Basket until it fits snugly against the the Motor Base. When correctly positioned, the Pulp Basket will be completely covered by the Lid.

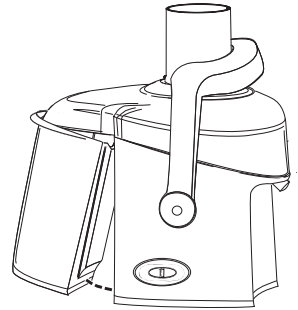

STEP SEVEN: Juice Pitcher

 Slide the Froth Separator into the Juice Pitcher, then position the Pitcher beneath the Juice Spout. Be sure that the Juice Spout empties into the larger section of the Pitcher.

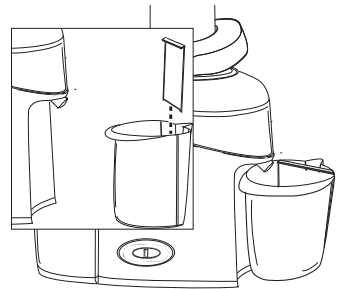

Storing the Food Pusher

Store the Food Pusher in the Feed Tube until you are ready to juice. To insert, rotate the Food Pusher until the groove in the Food Pusher is properly aligned with the rib in the Feed Tube.

 


DISASSEMBLY INSTRUCTIONS

ALWAYS MAKE SURE THE JUICER IS UNPLUGGED
BEFORE STARTING TO DISASSEMBLE.

STEP ONE: Release Lid-Locking Lever


While pressing down on the Safety Lock Button, swing the Lid-Locking Lever away from the Feed Tube. Release the Safety Lock Button.

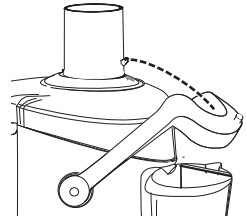

STEP TWO: Remove Lid


Grasp the Lid by the Feed Tube; lift and remove from the Juice Bowl. *Make sure to hold the Food Pusher in place if it is being stored inside the Feed Tube.*

 For easier cleaning, unlock the Feed Tube by rotating it counter-clockwise; then remove it from the Lid.

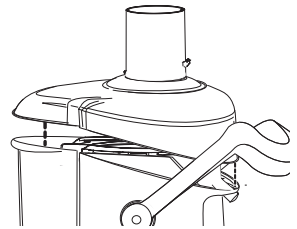

STEP THREE: Remove Pulp Basket

 
Grasp the bottom of the Pulp Basket and pull it away from the Juicer, tilting slightly to release it from behind the Pulp Spout.

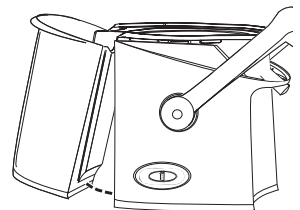

STEP FOUR: Remove Juice Bowl

Grasp the sides of the Juice Bowl with both hands. With the Filter Basket still inside, carefully lift the Juice Bowl off of the Motor Base -- rotating slightly if necessary. The Filter Basket can then be removed from the Juice Bowl for cleaning.

 CAUTION: Use care when handling Filter Basket; the Cutting Blades are very sharp!

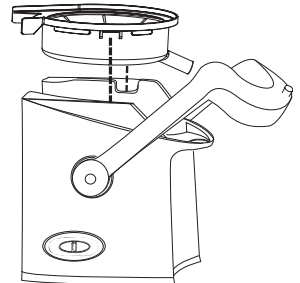



USER MAINTENANCE INSTRUCTIONS

ALWAYS UNPLUG THE JUICER FROM THE OUTLET BEFORE ASSEMBLING OR REMOVING PARTS AND BEFORE CLEANING.

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

CLEANING YOUR JUICER

THE JUICER SHOULD BE CLEANED AFTER EVERY USE...

Make sure that the Juicer is unplugged from the outlet; then follow the DISASSEMBLY INSTRUCTIONS.

- **TO CLEAN THE MOTOR BASE:**

Do not immerse the Motor Base in water or spray it with water. Clean only by wiping with a damp sponge, cloth, or paper towel.

Using a sponge, wipe off the Motor Base, rubber feet and the underside of the Juicer. Use a damp toothbrush or cloth to clean juice from inside the Motor Base Hub (on top of the Motor Base).

- All Juicer parts (except the Motor Base) are washable in warm, soapy water, using any liquid dishwashing detergent. DO NOT USE ANY PRODUCTS CONTAINING AMMONIA OR SCOURING POWDERS -- These products will dull, scratch or mar the plastic surface.

- **TO CLEAN THE LID & JUICE BOWL:**

Use the Cleaning Brush provided for scrubbing the Lid and Juice Bowl. *Do not use a metal brush or pad.*

- **TO CLEAN THE FOOD PUSHER:**

For proper cleaning, remove the circular cap in the cover of the Food Pusher. To remove, grasp the cap and lift it directly out of the Food Pusher using the notches on either side for leverage. Once parts are dry, replace the cap.



- **TO CLEAN THE FILTER BASKET:**

Use the Cleaning Brush to make sure the tiny holes in the mesh filter are not clogged. This can be accomplished by holding the Filter Basket under a running faucet while brushing the mesh filter screen from both inside and outside the Filter Basket.

NOTE: Occasionally, the removable parts may be washed in a dishwasher, only if they are placed on the top shelf of the dishwasher. However, washing with warm (not hot) tap water on a daily basis should be sufficient.

~ Helpful Tip ~

The pulp from the Pulp Basket can be used in many different ways: baking breads, muffins, cakes, soup stocks, compressed facial packs and garden compost material.

REMOVING TOUGH STAINS

Due to the powerful staining properties of the carotenoids that are found in many vegetables, especially carrots, we suggest soaking the stained parts overnight in one of the following solutions:

- Biodegradable soap in enough warm water to cover Juicer parts.
- 1/4 cup bleach added to a sink full of warm water.
- 1 part warm water to 1 part cider vinegar.
- 1/2 small box baking soda in enough warm water to cover parts.

NEVER USE AMMONIA OR ABRASIVES!

After soaking overnight, lightly scrub with soft bristle brush and liquid detergent. NEVER SUBMERGE THE MOTOR BASE IN WATER OR OTHER LIQUID!



STORAGE

Store the Juicer in its box or in a clean, dry place. Never store the Juicer while it is still plugged in.

Never wrap cord tightly around appliance. Do not put any stress on cord where it enters the unit, as this could cause cord to fray and break.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia, MO 65205-7366 USA
1-800-233-9054
E-mail: consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>