

**Juiceman<sup>®</sup>**

*Model JM419SS*



**INSTRUCTION MANUAL**



---

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Always make sure Juicer Lid is clamped securely in place before Motor is turned ON. Do not unfasten Clamps while Juicer is in operation.
12. Be sure to press the OFF Button and unplug the Juicer from electrical outlet after each use. Make sure the Motor is completely stopped before disassembling.
13. Do not put your fingers or other objects into the Juicer opening while it is in operation. If food becomes lodged in opening, use Food Pusher or another piece of fruit or vegetable to push it down. When this method is not possible turn the Motor OFF, unplug Juicer from electrical outlet, and disassemble Juicer to remove remaining food.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**



## Additional Important Safeguards

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately press the OFF Button and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. IF this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.



## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## ELECTRIC POWER

 
If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.



# YOUR JUICEMAN® JM419SS


PRODUCT MAY VARY SLIGHTLY  
FROM ILLUSTRATIONS

- **Food Pusher** (P/N 71174)



Feed Tube

- **Clear Lid** (P/N 71175)

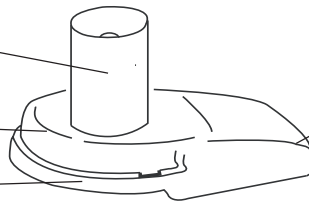

Pulp Ejection  
Opening

 
- **Stainless Steel  
Blade Basket** (P/N 70458)



Cutter Blade


**Blade Holder**  
(P/N 70457)

Pulp Spout



- **Stainless Steel  
Juice Bowl** (P/N 70459)

Juice Spout


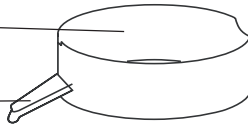


Clamps

Motor Base Hub

- **Stainless Steel  
Motor Base**

Control Panel

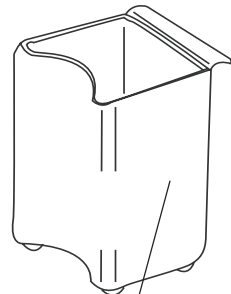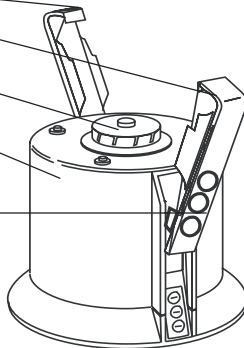


- **Pulp Basket**  
(P/N 70461)

Replacement parts available  
(except Motor Base).  
Call (800) 233-9054



## CONTROL PANEL

Your Juiceman® JM419SS has a unique control panel, offering two speed options: HIGH or LOW. These two speeds ensure optimal rpm to provide maximum juicing efficiency (efficiency describes the amount of juice extracted from your produce).

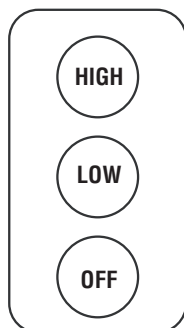

### HIGH SPEED

Best for **harder produce**, such as carrots, beets, and pineapple (with rind). Also recommended for leafy or stringy produce such as celery and greens.

### LOW SPEED

Best for **softer produce** such as citrus, apples, grapes (with stems), melons, peaches (remove pit), and tomatoes. Also recommended for ripe produce that has become soft.

### OFF

Press this Button to pause or turn your Juiceman® JM419SS **OFF**.

## BEFORE USING THE JUICEMAN® JM419SS

The Juiceman® JM419SS comes almost completely assembled in the box. We suggest taking it apart and washing the removable parts in warm water with a biodegradable, non-abrasive liquid detergent before the first use. This will eliminate any traces of dust or residue from manufacturing or shipping.

**NOTE:** Your Juicer may be shipped with a protective cardboard insert between the Feed Tube and Cutter Blade (on the Blade Basket). Remove this and any other protective packaging before using your Juicer.

**CAUTION: Never rinse or immerse the Motor Base in water or any other liquid.**

**NOTE:** Refer to the Fresh Juice Recipes & Menu Planner for juice recipes, pulp recipes, sample menus, and tips on buying, cleaning and storing.

- Make sure the Blade Basket is securely seated and the Pulp Basket is at the rear of the Juicer, ready to catch pulp. To save cleaning time, line the Pulp Basket with a plastic produce bag (the kind you put your produce in at the grocery store).
- Place a glass underneath the Juice Spout.
- Read assembly and disassembly directions. **Make sure the Juicer is properly and completely assembled. The Juicer will not turn on unless properly assembled.**



## PREPARING FRUITS AND VEGETABLES FOR YOUR JUICER


- Clean all produce thoroughly, using a natural bristle brush. If you are not using organic produce, we recommend using a biodegradable cleaner to help remove pesticide residue.
- Remove and discard the outer leaves of non-organic produce and peel any waxed fruit or vegetable.
- Trim away any discolored or bruised sections.
- The skin may be left on all produce (including pineapple and melons) except oranges, grapefruit, and tangerines. The oil found in these skins tastes bitter and is difficult to digest.
- Remove melon seeds when possible, as they may escape through the top of the Feed Tube while juicing. The pits of fruits such as cherries, pears, and peaches should also be removed.
- The Juiceman® JM419SS is designed to make juicing easier with an oversized Feed Tube to accommodate larger produce -- feed most whole apples and oranges, tangerines, ginger, beets, pineapple or melons. Make sure produce can be fed comfortably into the Feed Tube. Use the Food Pusher to gently direct produce through the Feed Tube. ***Never push produce into the Feed Tube with your fingers.***
- Leafy greens, parsley, wheat grass, and sprouts should be bunched up into a small, tight ball and pushed through with the Food Pusher.
- Bananas are not suitable for juicing; a clear juice cannot be obtained from them and residue left in the machine can clog the micro-mesh screen. Produce such as apricots, plums, pears, peaches, and tomatoes should be firm for best results when juicing.



## USING THE JUICEMAN® JM419SS

### TO TURN YOUR JUICEMAN® JM419SS ON:

- Make sure that your Juicer is completely and properly assembled. See ASSEMBLY INSTRUCTIONS.
- Plug the Juicer into a 120V AC electrical outlet.
- Remove the Food Pusher from the Feed Tube.
- Place produce into the Feed Tube.
- To insert the Food Pusher into the Feed Tube, it is necessary turn the Food Pusher to align the rib on the Food Pusher with the groove in the Feed Tube. The Food Pusher's grooved bottom edge directs food through the Feed Tube and Blade Basket.
- Press HIGH Speed Button for harder produce.
- Press LOW Speed Button for softer produce.
- When juicing a combination of hard and soft produce, such as carrots and apples, you will want to use HIGH speed for the carrots and LOW speed for the apples. You do not have to turn the machine OFF to change speeds. Simply press the appropriate Speed Button for each type of produce being juiced.

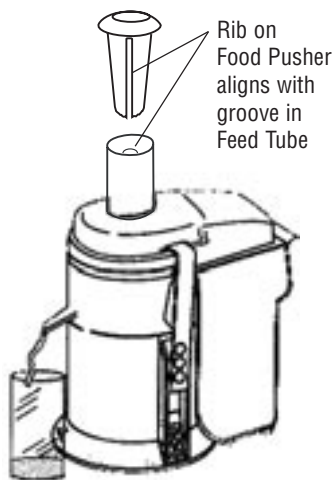

**Tip: Try alternating types of produce to ensure maximum efficiency.**

### TO TURN YOUR JUICEMAN® JM419SS OFF:

- Press the OFF Button. Unplug the Juicer from the outlet when not in use.






## DISASSEMBLY INSTRUCTIONS

### Step One: Remove Clamps

Place thumb onto center dot on Clamp and place fingers under bottom of Clamp. Pull bottom of Clamp out and push Clamp up. Allow top of Clamp to swing out. Repeat for opposite Clamp.

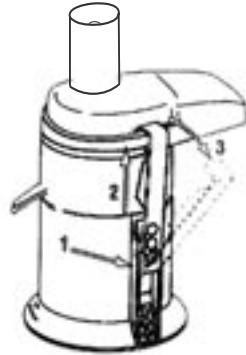

### Step Two: Remove Juice Bowl Assembly

Grasp the sides of the Stainless Steel Juice Bowl. Carefully lift off the Stainless Steel Juice Bowl, Blade Holder, Blade Basket, and Lid as one piece. These pieces will then come apart for easy cleaning. (See CLEANING YOUR JUICER for cleaning instructions.)

**CAUTION:** Use care when handling Blade Basket; the Cutter Blades are very sharp!







## ASSEMBLY INSTRUCTIONS

**ALWAYS MAKE SURE JUICER IS UNPLUGGED BEFORE STARTING ASSEMBLY.**

**NOTE:** For your juicing convenience, your Juiceman® JM419SS can be assembled for right-hand or left-hand use. Right hand use allows the user to place produce into the Feed Tube with the left hand while operating the Food Pusher with the right hand. If you are left-handed, or feel the juicing operation is uncomfortable, you can reverse the assembly instructions below so the Juice Spout is to the rear of the unit (and all subsequent parts will face the opposite way).

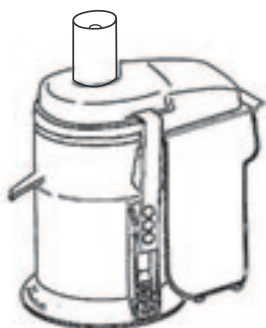

*Right Hand Assembly*

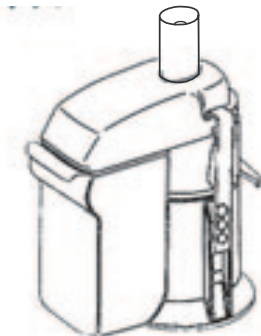

*Left Hand Assembly*

### Step One: Place Juice Bowl

Place Juice Bowl on top of the Motor Base so that the Juice Spout is to the front (over the Juiceman® logo). Align four tabs on underside of Juice Bowl with four Buttons on the Motor Base. Lower Juice Bowl onto Base and rotate slightly to fit Tabs over the Buttons.



### Step Two: Place Blade Holder

Place Blade Holder on top of the Juice Bowl so the Pulp Spout is opposite the Juice Spout. Align square tab on underside rim of Blade Holder with bend in rim of Juice Bowl. When seated properly, the Blade Holder will turn only slightly.





## ASSEMBLY INSTRUCTIONS *(Continued)*

### **Step Three: Place Blade Basket**

Grasp Blade Basket around top rim with both hands and center Basket over Motor Base Hub. Carefully lower Blade Basket onto Hub and rotate slightly until it drops into position and is seated properly. When seated properly, the Blade Basket will not lift out of the Blade Holder and will spin freely.)

**CAUTION:** Use care when handling the Blade Basket; the Cutter Blades are very sharp!




### **Step Four: Place Clear Lid**

Align Clear Lid so Pulp Ejection Opening is over the Pulp Spout. Place cut-outs in the Lid over the matching cut-outs in the rim of the Blade Holder.



### **Step Five: Attach Clamps**

While holding Clamp from the bottom, push Clamp up and in until top of Clamp rests in slot on the Lid. Place thumb onto center dot on Clamp and firmly press in until the bottom of the Clamp snaps into place. Repeat for the opposite Clamp.

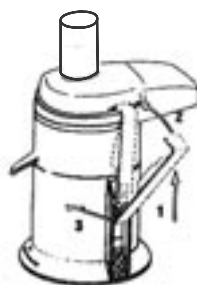

### **Step Six: Place Pulp Collector**

Place the Pulp Basket under the Pulp Ejection Opening on the Clear Lid. The Pulp Basket will fit snugly against the edge of the Juicer.



### **Step Seven: Store Food Pusher in Feed Tube**

Turn the Food Pusher to align with the groove in the Feed Tube. Store Food Pusher in the Feed Tube of the Lid until you are ready to juice.



## CLEANING YOUR JUICER

- Unplug from outlet before assembling or removing parts and before cleaning.

**Do not immerse the Motor Base in water or spray it with water. Clean only by wiping with a damp sponge, cloth, or paper towel. Use any liquid dishwashing detergent but do not use any products containing ammonia or scouring powders. These products will dull, scratch or mar the plastic surface.**

- All parts (except the Motor Base) are washable in warm, soapy water. Follow DISASSEMBLY INSTRUCTIONS. To clean the Juicer Lid and Juice Bowl, we recommend using a fruit and vegetable brush with natural fibers.

**DO NOT USE A METAL BRUSH OR PAD.**

- When cleaning the Blade Basket, use the brush to make sure the tiny holes in the Basket are not clogged. This can be accomplished by holding the Blade Basket under a running faucet while brushing the Basket holes from both inside and outside the Blade Basket.

**PLEASE NOTE:**

- Occasionally, the Juice Bowl, Juicer Lid, and Blade Basket may be washed in a dishwasher, **only if** they are placed on the **top shelf** of the dishwasher. However, washing with ordinary warm (not hot) tap water on a daily basis should be sufficient.
- Sponge off the Motor Base and the legs underneath if any juice has spilled under the Juicer. Use a damp toothbrush or cloth to clean juice from inside the Hub on top of the Motor Base.

**Juicer should be air-dried only!**

**Clean Your Juicer Thoroughly Before Retiring For The Day**

Due to the powerful staining properties of the carotenoids that are found in many vegetables, especially carrots, we suggest the following cleaning procedures:

- Stained parts may be soaked overnight in any of these solutions: (1) biodegradable soap in enough warm water to cover Juicer parts, (2) 1/4 cup bleach added to a sink full of warm water, (3) 1 part warm water to 1 part cider vinegar or (4) 1/2 small box baking soda in enough warm water to cover parts.
- Never use ammonia or abrasives.
- Lightly scrub with soft bristle brush and liquid detergent after soaking.
- **NEVER SUBMERGE THE MOTOR BASE IN WATER OR OTHER LIQUID!**



## CLEANING YOUR JUICER *(Continued)*

**Any other servicing should be performed by authorized personnel only**

After cleaning and reassembly is complete, your new Juicer is ready to go to work! Before starting, make sure the Blade Basket is securely seated and the Pulp Basket is at the rear of the Juicer to receive pulp. The pulp from your Juicer can be used in many different applications such as breads, muffins, cakes, soup stocks, compressed facial packs and garden compost material.

Unplug unit and allow to cool. Clean the Juicer following the procedures described in this Instruction Manual.

## STORAGE

Store the Juicer in its box or in a clean, dry place. Never store the Juicer while it is hot or still plugged in. Never wrap cord tightly around appliance. Do not put any stress on cord where it enters the unit, as this could cause cord to fray and break.



---

---

## TROUBLESHOOTING

<b>Symptom</b>	<b>Possible Correction</b>
Pulp builds up excessively in the back of the Juicer Lid.	Try juicing slower, as wet produce is more likely to build up in Lid. To release pulp, lightly tap on the side of the Lid. Empty Pulp Basket if full.
Bottom of Feed Tube is damaged.	Blade Basket may not have been seated correctly, causing it to become unseated during use. Should this be the case, check the gear teeth of the Blade Basket and the Motor Base for damage. If any teeth are damaged, call Consumer Service at (800) 233-9054.
Blade Basket is difficult to: <ul style="list-style-type: none"><li>• insert onto the Hub;</li><li>• remove from the Hub.</li></ul>	Snug seating is desirable. To insert, try seating the Blade Basket on a different Hub position. To remove, turn Juice Bowl in a clockwise direction.
Too much pulp builds up on Blade Basket.	This may be an isolated situation resulting from the varied texture and moisture content of the produce. Stop juicing, scrape off pulp and begin again, alternating types of produce.
Excessive noise or vibrations occur after Juicer is turned on.	Pulp may have built up on the Blade Basket. Clean the Blade Basket and try alternating different types of produce while juicing. <b>Note:</b> Because of the Juiceman's powerful motor, a small amount of noise and/or vibration is normal when the Juicer is turned on and as it comes to a complete stop. All Juicers will sound slightly different.
Juice sprays out of the Spout.	Juice the produce as slowly as possible. Keep the Pulp Basket emptied for good air flow through machine.
Juice leaks between Juice Bowl and Lid.	Juice slowly so that the Blade Basket does not fill up too quickly with juice. Keep Pulp Basket emptied to allow good air flow through the machine.
Pulp in juice.	Juice slowly to avoid excessive pulp buildup inside the Lid and Juice Bowl.



## TROUBLESHOOTING *(Continued)*

<b>Symptom</b>	<b>Possible Correction</b>
<b>Inside rim of Juice Bowl is worn or chipped (inside lower rim or inside upper rim).</b>	Improper fit between the Blade Basket and Hub can cause parts of the Juice Bowl to rub against the Blade Basket. If this is the case, call Consumer Service at (800) 233-9054.
<b>Wet pulp.</b>	Juice at LOW Speed Setting. Certain produce (pineapples and overripe produce) may build up on Blade Basket, causing pulp to eject before juice is completely extracted. Fruit tends to produce wetter pulp than vegetables. If problem persists, rinse Blade Basket.
<b>Juicer stopped while juicing.</b>	Try a different wall outlet. Also let Juicer sit for about an hour without turning it on; moisture may have collected on the circuit board, causing machine to shut OFF. If situation is not resolved, call Consumer Service at (800) 233-9054.
<b>Juicer does not turn ON.</b>	Try a different wall outlet. Also, try using both the HIGH and LOW Speed Buttons. Check the Juicer Lid, Blade Basket, and Juice Bowl to see if they are properly seated, making sure that the column is completely aligned and the safety switch is engaged.

## LIMITED ONE-YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

**To return** the appliance, ship to:

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

**To contact us,** please write to, call, or email:

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail:consumer\_relations@toastmaster.com

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website:  
[www.maxim-toastmaster.com](http://www.maxim-toastmaster.com).

©2005 All rights reserved.  
Made in China

P/N 61724CAN  
7/05



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>