 


## READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

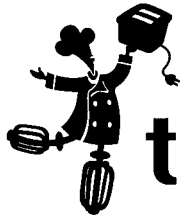

**toastmaster**<sup>®</sup>  
c o o k i n ' i n s t y l e



## Electric Knife

Use and Care Guide

Model 6116S

- STORAGE CASE
- SLIM DESIGN KNIFE WITH 8" STAINLESS SERRATED BLADES
- COMFORT GRIP HANDLE
- FINGERTIP POWER SWITCH
- BLADE RELEASE BUTTON

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this knife.
- Do not immerse knife, cord or plug in water or other liquid. Do not operate knife in water or under running water.
- Extreme caution is necessary when any appliance is used near children.
- This appliance is not for use by children
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Disconnect when changing blades.
- Avoid contacting moving parts.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
- Blades are sharp. Handle carefully. Always handles blades with hand away from cutting edge. Always store blades with cutting edge away from you and covered with protective sleeve.
- Do not insert knife blades in any way other than recommended in this manual.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Use knife only as indicated in this manual.

## SAVE THESE INSTRUCTIONS

 
FOR HOUSEHOLD USE ONLY

**CAUTION: NEVER IMMERSE APPLIANCE IN WATER OR OTHER LIQUIDS.**


**POLARIZED PLUG:** This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## USING YOUR KNIFE

1. Always unplug unit before inserting blades.
2. Keep the protective sleeve on the blades. Carefully grasp the blades (serrated side down) at the plastic bumper grips, and push into position until you hear a click.

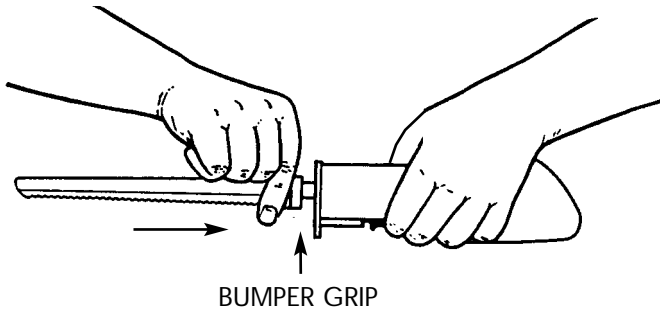


 3. Remove the protective sleeve from blades. Save sleeve for storage of blades.
4. Plug cord into an electrical outlet, 120 volt, AC.
5. To slice, depress the operating lever so that the appliance will continue to operate. Knife will stop when button is released.

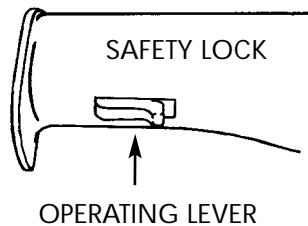

## REMOVING THE BLADES

 1. Always unplug unit from outlet before removing blades.
2. Carefully grasp unserrated side of blades at plastic bumper grips.
3. Press blade release button and carefully remove blades from base of unit.

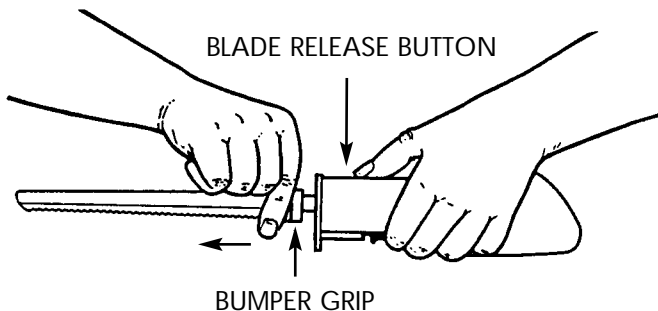

## HINTS

- Use a carving board to avoid damage to blades and counter tops. As with any sharp knife, the blades will scratch most surfaces.
- When the meat contains a bone, cut right down to the bone, but do not attempt to cut through it.
- When slicing, gently guide the knife through the food. Excessive sawing or pressure is unnecessary.
- Do not use knife to cut frozen food packages or any other hard surfaces.

## CARE AND CLEANING

**CAUTION: ALWAYS UNPLUG UNIT BEFORE CLEANING. NEVER IMMERSE BASE OF UNIT IN WATER OR OTHER LIQUIDS.**

Clean unit exterior by wiping with a soft damp cloth. Before washing, the knife blades should be separated. Slide the knob down to the keyhole and lift apart. Wash stainless steel blades in hot soapy water. Rinse well and dry thoroughly. Replace the protective sleeve.

**Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.**

## SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the U.S. and Canada, 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

## KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

## LIMITED ONE-YEAR GUARANTEE

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 1409 E. Morgan Street, Boonville, Mo. 65233, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

**EVERYBODY EATS. It's a fact of life.**

**But sometimes preparing  
meals can become a chore.**

**That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>