


## READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

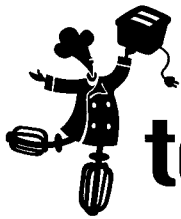

**toastmaster®**  
cookin' in style



## Electric Food Slicer

Use and Care Guide

Model 6122S

- 6½" SOLINGEN STAINLESS STEEL BLADE
- ADJUSTS FOR THICK TO THIN SLICING
- CONVENIENT FOLD-UP DESIGN FOR COMPACT STORAGE
- PARTS DISASSEMBLE FOR EASY CLEAN-UP

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this food slicer.
- Do not immerse power unit, cord or plug in water or other liquid. See instructions for cleaning.
- Extreme caution is necessary when any appliance is used near children.
- Do not allow children to use this appliance.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Never feed food by hand. Always use completely-assembled slicer with food tray and food pusher.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors, or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Use food slicer only as indicated in this manual.
- Blade is sharp. Handle carefully when cleaning.
- Do not install blade in any way other than recommended in this manual.
- Do not place on or near a hot gas or electric burner or in a heated oven.


## SAVE THESE INSTRUCTIONS

**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 13 A, 1625 W, and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

**POLARIZED PLUG:** This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**ELECTRIC POWER:** If the electric circuit is overloaded with other appliances, your toaster may not operate properly. It should be operated on a separate electrical circuit from other appliances.

This product is for household use only.

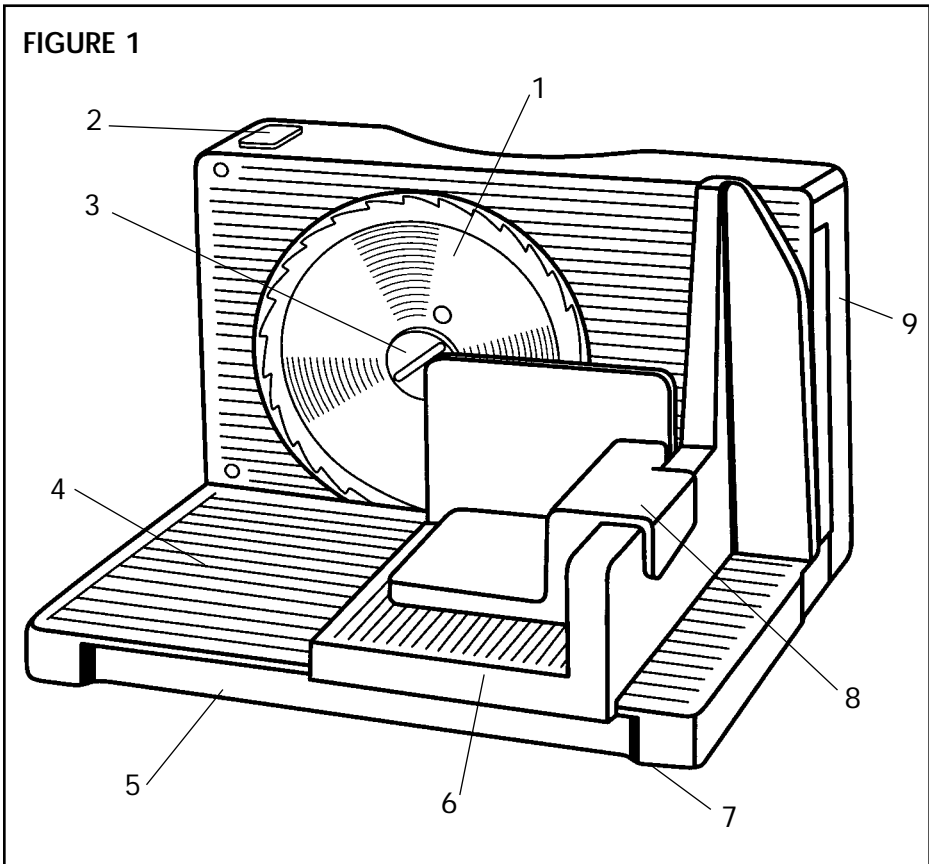

### GETTING TO KNOW YOUR FOOD SLICER

1. **SERRATED BLADE.** Tempered for fine cutting and long lasting sharpness.
2. **SAFETY SWITCH.** Must be depressed to start slicer.
3. **BLADE RELEASE KNOB.** Holds the blade securely in place.
4. **FOOD PLATFORM.** A stabilizing base and a protective cover when stored away.

5. PLATFORM GROOVE. Interlocks with lip of food tray when unit is assembled.
6. FOOD TRAY. Fits into platform groove.
7. PADS. Add stability and cutting safety.
8. FOOD PUSHER. Interlocks with food tray for safe cutting.
9. THICKNESS REGULATOR WITH DIAL CONTROL. Adjustable dial provides a range of thicknesses.
10. SERVING TRAY. (Not pictured)

## USING YOUR FOOD SLICER

**CAUTION: Blade is sharp. Unplug unit before cleaning. Never use slicer unless completely assembled.**

**IMPORTANT: BEFORE USING YOUR FOOD SLICER FOR THE FIRST TIME DISASSEMBLE AND WASH. SEE CARE AND CLEANING.**


1. Unwrap cord and push firmly into slot on bottom of slicer.
2. Place slicer on a clean, dry smooth surface with the food platform down. Attach the food tray to the food platform. Lip of tray should fit into the platform groove.
3. Position slicer perpendicular to you on countertop so the switch is to the back.  
**NOTE:** Check "BLADE RELEASE KNOB" to make sure blade is tightly in place. Food tray should slide smoothly in the track.
4. Slide food pusher over the food tray. Pull food tray towards you and open food pusher to allow room for food placement.  
**NOTE:** Foods must be cut to fit against both the food pusher and the thickness guide.
5. Turn dial counter-clockwise for thin slices and clockwise for thick slices.

## TO SLICE

**IMPORTANT: BE SURE MEATS ARE BONELESS BEFORE ATTEMPTING TO SLICE**

1. Plug into 120 V ~ 60 Hz outlet.
2. Pull food tray towards you. Place food on food tray between food pusher and thickness guide. Press the "SAFETY SWITCH" and "ON/OFF" switch to start the motor. For additional safety, motor stops when "ON/OFF" switch is released.
3. Hold food pusher with one hand, keeping thumb protected behind thumb guard as shown (Figure 2).

**FIGURE 2**

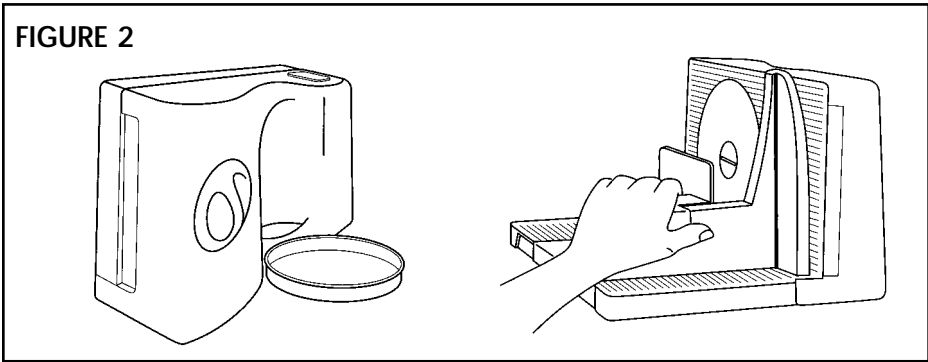

4. With one hand controlling the "ON/OFF" switch, use your other hand to slide food tray towards blade. Move tray steadily back and forth, pressing food gently with the food pusher against the thickness guide for even slices.
5. When finished slicing, unplug unit. Turn "THICKNESS REGULATOR DIAL" to align with blade for safety and blade protection.

### **CARE AND CLEANING**

1. Unplug slicer from outlet.  
**CAUTION: Blade is sharp. Handle carefully.**  
**NOTE:** Blade should not be left to soak in soapy water. Trying to locate blade under water is potentially dangerous. We suggest that you wash, rinse, and dry the blade immediately.
2. Remove food tray and food pusher.
3. Turn "BLADE RELEASE KNOB" and remove blade by pulling forward.
4. Fold platform up and swing out from slicer.
5. Turn dial counter clockwise until thickness regulator releases.
6. Wash, rinse and dry removable parts.
7. Wipe power unit exterior with a soft cloth and soapy water. Rinse with a wet cloth and dry.

**IMPORTANT. DO NOT WASH IN DISHWASHER. DO NOT IMMERSE POWER UNIT IN LIQUID.**

**Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.**

### **TO RE-ASSEMBLE**

1. Replace platform by inserting pins in slot and swinging platform toward slicer body. Fold down.
2. Replace thickness guide by turning dial clockwise.
3. Carefully align blade and turn "BLADE RELEASE KNOB" to lock securely in place. Align thickness guide with blade for safety and blade protection. Fold up for storage.

## HINTS FOR USING YOUR FOOD SLICER

**Roasts: Beef, Pork, Poultry, and Lamb** — IMPORTANT: Allow roasts to stand for 15 to 20 minutes after removing from oven.

**Bulk Bacon** — With a sharp knife, remove rind from “thoroughly chilled” bacon. Trim bacon to fit securely on food tray, fat side down.

**CAUTION: Blade is sharp. Handle carefully.**

**NOTE:** When you are fine slicing, unplug unit and moisten the blade with a damp cloth, this helps to prevent sticking. If cheese builds up on blade or under blade cover, unplug the slicer and wipe blade clean with a damp cloth.

**Cheese and Cold Cuts** — Slice as needed to retain flavor. Remove the plastic or hard casing from “well chilled” food before slicing. Use gentle pressure for uniform slices.

**Vegetables and Fruits** — Slice potatoes, tomatoes, carrots, cucumbers, cabbage, eggplant, squash, and zucchini in a matter of minutes.

**Breads** — Don't use excessive pressure or squeeze the loaf. Trim or cut bread to fit comfortably on food tray between food pusher and thickness guide. Move the loaf of bread smoothly through the blade with continuous “gentle” pressure on the food pusher.

## SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

## LIMITED ONE YEAR WARRANTY

**Warranty:** This Toastmaster® product is warranted to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 947-3744 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number 6122S when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 947-3744).

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$ 10.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

Attn: Repair Center  
708 South Missouri Street  
Macon, MO 63552

Email: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)  
[www.Toastmaster.com](http://www.Toastmaster.com)

**To contact us, please write to or call:**

P.O. Box 6916  
Columbia, MO 65205-6916  
1(800) 947-3744

**Limitation of Remedies:** No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall we be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



**KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.**

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

**EVERYBODY EATS. It's a fact of life.**

**But sometimes preparing  
meals can become a chore.**

**That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>