

MAXIM®



6-Speed Hand Mixer

Use and Care Guide

MAXHM5CAN

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surface, including the stove.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from Beaters during operation to reduce the risk of injury to persons, and/or damage to the Mixer.
- Remove Beaters from Mixer before washing.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

- All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
- The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- Do not leave this appliance unattended during use.
- If this appliance begins to malfunction during use, immediately turn the Speed Lever Control to the (O) OFF position and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water.
- To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
- Do not use this appliance for other than its intended use.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Electric Power

If the electric circuit is overloaded with other appliances, your appliance may not operate. It should be operated on a separate electrical circuit.



Using Your 6-Speed Hand Mixer

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

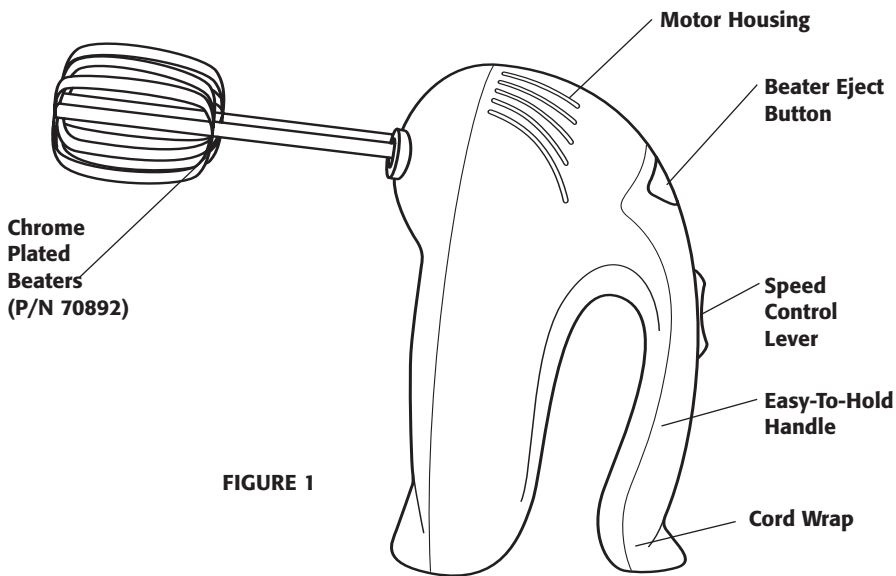


FIGURE 1

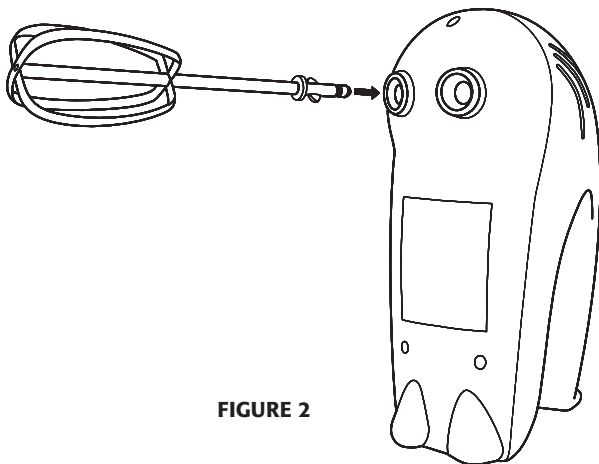


FIGURE 2

Before Using For The First Time

Carefully unpack Hand Mixer. Wash Beaters in warm, soapy water. Rinse well and dry thoroughly. Wipe Mixer with a soft, clean cloth or sponge. Never immerse your Hand Mixer in water or any other liquid.

Instructions For Use

1. Make sure Hand Blender is unplugged from electrical outlet.
2. Position the Speed Control Lever to the OFF position.
3. Attach Beaters following the instructions outlined below.
4. Plug into 120 V AC household outlet.
5. Place Beaters in container holding ingredients,. Slide the Speed Control Lever to the desired Speed Setting.

Attaching Beaters

1. Make sure Hand Blender is unplugged from electrical outlet.
2. Align notches on Beaters with slots on the unit, and push until they click and lock into place.
3. Insert plug into any standard 120V AC household outlet.
4. Place Beaters directly into container holding ingredients to be mixed. Set the Speed Control Lever to the desired setting.

CAUTION: Always unplug Mixer from outlet before installing or removing Attachments.

Removing Beaters

1. Make sure Hand Blender is unplugged from electrical outlet.
2. Slide Speed Control Lever to the OFF position.
3. Push down on the Beater Eject Button to eject Beaters.

CAUTION: UNPLUG APPLIANCE FROM ELECTRICAL OUTLET BEFORE ASSEMBLING, REMOVING PARTS OR CLEANING. NEVER PLACE MOTOR HOUSING OR CORD IN WATER OR OTHER LIQUIDS.



Mixing Guide

Use this Guide to help you determine the proper Speed Control Setting for various mixing tasks.

| Speed Control | Procedure |
|----------------------|--|
| 1 | Best for mixing dry ingredients and folding in liquid ingredients, egg whites and whipped cream. |
| 2 | Ideal for creaming, stirring, making sauces, gravies, puddings and quick breads. |
| 3 | All purpose mixing. Preparing packaged cake mixes, creaming sugar & butter together. |
| 4 - 5 | Great for smooth batters. |
| 5 - 6 | Best for whipping cream, beating egg whites or mashing potatoes. |

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to a qualified appliance repair technician if servicing is needed.

Cleaning Instructions

NEVER IMMERSE MOTOR HOUSING IN WATER.

First, be sure unit is unplugged. Eject Beaters from unit and wash them in warm, soapy water, rinse well and dry thoroughly. Wipe Motor Housing with a damp cloth or sponge.

Storage Instructions

Unplug unit; store in its box or in a clean, dry place. Never store it while it is hot or still plugged in. Cord may be loosely wrapped using the Cord Wrap on Mixer. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website:
www.maxim-toastmaster.com.

©2005 All rights reserved.
Made in China

P/N 61676CAN
5/05

MAXIM®

6-Speed Hand Mixer

- **6 Speeds**
- **Prepare cake batter, make pies, whipped toppings, mashed potatoes and much more**
- **Chrome Plated Beaters**
- **Cord Wrap for easy storage**



Questions

Call toll free 1-800-233-9054

Monday–Friday, 8:00 a.m. - 5:30 p.m. CST

www.maxim-toastmaster.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>