

# 4-Slice Toaster-Oven-Broiler with Removable Liner

USE AND CARE GUIDE  
MODELS 357S/357SCAN



# READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- ◆ Read all instructions before using appliance.
- ◆ Close supervision is necessary when any appliance is used near children.
- ◆ This appliance is not for use by children.
- ◆ Do not touch hot surfaces. Use handles or knobs and oven mitts.
- ◆ Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Service for examination, repair, electrical or mechanical adjustment.
- ◆ Before using this appliance, move it four to six inches from the wall or any object on the countertop. Do not store any item on top of the appliance. Do not use on surfaces where heat may cause a problem.
- ◆ A fire may occur if this appliance touches or is covered by flammable material, including curtains, draperies, walls, etc., when in operation.
- ◆ Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- ◆ Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- ◆ Extreme caution should be exercised when using containers constructed of materials other than metal.
- ◆ Do not place any flammable material such as paper, cardboard, plastic, etc. in the oven.
- ◆ When broiling, the bake/broil tray and broil insert rack must be used.



- ◆ Do not use outdoors or while standing in a damp area.
- ◆ Do not clean with metal scouring pads. Pieces of the pad may break off and touch electrical parts.
- ◆ Unplug from outlet when not in use and before cleaning. Allow to cool before attaching or removing parts and before cleaning the appliance.
- ◆ **CAUTION:** Never leave toaster-oven-broiler unattended when broiling or toasting.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ◆ The toaster-oven-broiler is off when the temperature knob and the timer are in the off position.
- ◆ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ◆ Use extreme caution when removing broiling tray or disposing of hot grease.
- ◆ Do not place on or near a hot gas or electric burner or in a heated oven.
- ◆ Use attachments only if recommended by Toastmaster Inc.
- ◆ Only use appliance as indicated in these instructions.

## SAVE THESE INSTRUCTIONS

**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 13A, 1625 W, and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.


**POLARIZED PLUG:** This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**ELECTRIC POWER:** If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.


This product is for household use only.

Remove all packaging materials including the piece of paper that has been placed between the top of the oven door and oven for protection during shipping. Also remove the piece of cardboard that has also been placed between the bottom of the oven door and the oven.

Your product may vary slightly from illustration.

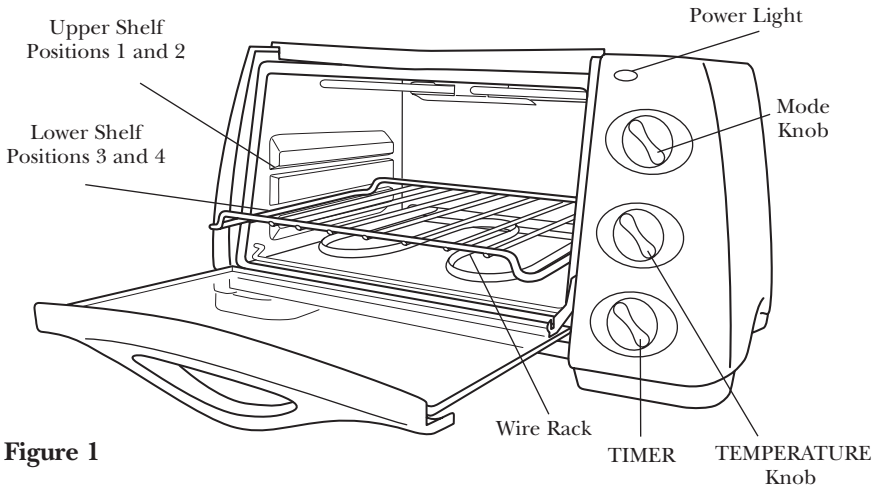  


 
**Figure 1**

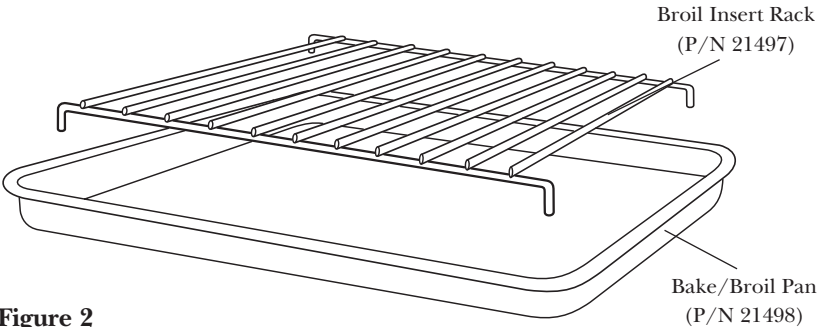


**Figure 2**

 

**Figure 3**

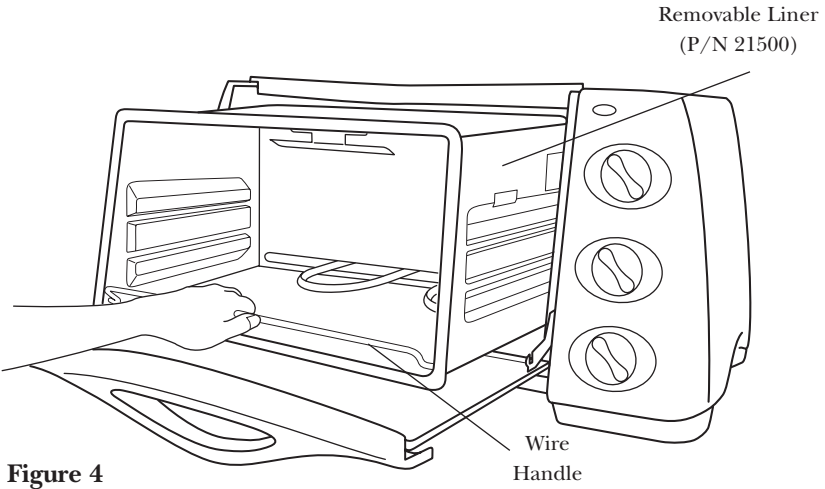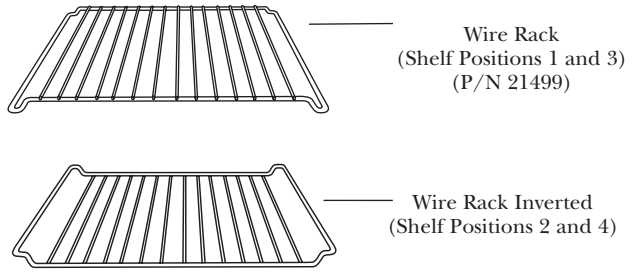

**Figure 4**

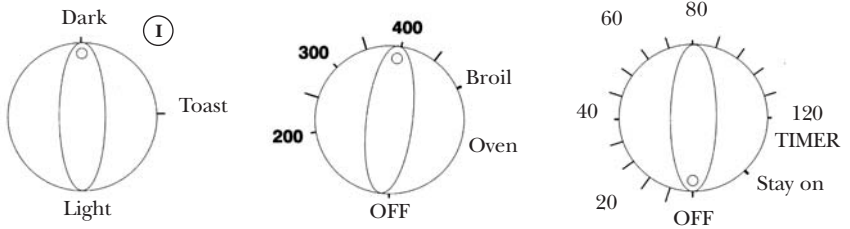 

**Figure 5**

# Getting To Know Your Toaster-Oven-Broiler

Your new Toastmaster toaster-oven-broiler has the versatility to bake, broil, defrost, toast, top brown and keep foods warm. The adjustable thermostat allows you to prepare recipes according to package or recipe directions. The Power Light will be on any time the unit is operating. Both upper and lower heating elements will be on when toasting, baking, defrosting, top browning and keeping foods warm. Only the upper elements will be on when broiling.

**CAUTION: APPLIANCE SURFACES ARE HOT DURING AND AFTER USE.**

**CAUTION: ALWAYS WEAR PROTECTIVE, INSULATED OVEN MITTS ON HANDS WHEN TOUCHING HOT OVEN OR HOT DISHES AND FOOD OR WHEN INSERTING OR REMOVING RACK, PAN OR BAKING DISH.**

Ovenware manufacturers do not recommend using see-through glass baking containers or lids in this oven. Glass-ceramic baking containers may be used. Do not use oven roasting bags in this oven, as they may come in contact with the heating elements.

## Bake/Broil Pan, Toast Rack And Broil Insert

For best results use pan to bake, defrost, top brown, keep warm and to minimize clean-up due to spills.

For toasting, place bread directly on rack.

When broiling, both the bake/broil pan and the broil insert rack must be used.

## Timer

The TIMER control dial also acts as the oven's ON and OFF switch. Turn the timer clockwise to select the appropriate cooking time up to 2 hours. When timer is complete, a signal will sound and the unit will turn off automatically. If cooking for less than 10 minutes, using the timer is not recommended.



If you do not wish to use the timer feature, turn the dial to STAY ON to turn the oven on and watch food for doneness. Turn dial to OFF position when cooking is complete.

## Wire Rack

The wire rack must be used for all cooking functions. It may be inserted in either the upper or lower rack position as shown in Figure 1.

The wire rack may also be inverted for two additional positions (see Figure 3). Each section of instructions suggest a rack specific position. However, the rack may be adjusted to accommodate the different thickness of foods.

## Instructions For Toast

1. Remove bake/broil pan and rack.
2. Plug into 120 V ~ 60 Hz outlet.
3. Center food on rack. Place in shelf position 2 or 3 of oven and close the door.
4. Turn TOAST control to the desired shade.
5. Press the TOAST button. The power light will come on. Condensation may build up on door glass, but will evaporate during toasting.
6. The unit shuts off automatically when the cycle is complete. The power light will go off. **Note:** Watch toast until desired color is achieved and shut off unit manually by opening the oven door. This will shut the unit off without damaging the oven. To restart, push TOAST button again.

## Hints For Toast

- ◆ Follow toaster food directions.
- ◆ Frozen and heavy bread require a darker setting (e.g. bagels and English muffins.)
- ◆ One slice requires a lighter setting than several slices.

# Instructions For Top Brown

1. Remove bake/broil pan and rack.
2. Plug into 120 V ~ 60 Hz outlet.
3. Adjust TOAST control to desired shade.
4. Center a baking container or food on rack, or use bake pan. Place on shelf position 2 or 3 of oven and close door.
5. Press TOAST button. The power light will come on.
6. The unit shuts off automatically when the cycle is complete. The power light will go off. Watch food to avoid over-browning. To stop cycle manually, open the oven door.
7. Unplug and allow to cool before cleaning.

## Hints For Top Brown

- ◆ For a darker color set the toast control to a darker shade and restart the cycle by pressing the TOAST button; watch until desired color is achieved and shut unit off manually by opening the oven door.
- ◆ Top Brown may be used to top brown bagels, English muffins or melt cheese on sandwiches or casseroles.

## Instructions For Keep Warm

1. Remove bake/broil pan and rack.
2. Plug into 120 V ~ 60 Hz outlet.
3. Turn OVEN control to 200° and TIMER to desired time or to Stay On. The power light will come on.
4. Center a baking container or food on the rack, or use bake pan; place in shelf position 2 or 3 and close door.
5. When finished open the door and remove food. Turn the OVEN and TIMER controls to the OFF position. The power light will go off.
6. Unplug and allow to cool completely before cleaning.





## Hints For Keep Warm

- ◆ Use for short periods of time after food is cooked.
- ◆ To heat frozen or cold foods, see instructions for defrost.

## Instructions For Bake

1. Remove bake/broil pan and rack.
2. Plug into 120 V ~ 60 Hz outlet.
3. Turn OVEN control to desired setting. Turn TIMER to desired time or to Stay On. If utilizing timed baking, allow approximately 10 minutes for preheat. The power light will come on.
4. Center a baking container or food directly on rack or use bake pan. Place in shelf position 2 or 3 of oven and close door.
5. Bake according to package or recipe directions.
6. When finished turn OVEN and TIMER controls to the OFF position. The power light will go off.
7. Unplug and allow to cool before cleaning.

## Hints For Bake

- ◆ To prevent heat loss, avoid opening door excessively.
- ◆ Foil may be used to cover glass-ceramic baking container if ends are tucked closely against edge of pan.
- ◆ For best results, foods that contain a leavening agent should be baked on shelf position #4.

## Instructions For Defrost

1. Remove bake/broil pan and rack.
2. Plug into 120 V ~ 60 Hz outlet.
3. Turn OVEN control to 200° and TIMER to desired time or to Stay On. The power light will come on.

# Instructions For Defrost (cont.)

4. Place rack in shelf position 2 or 3 of oven.
5. Center a baking container or food on rack or use bake pan. **Note:** Defrost will take approximately 1/3 of the time recommended on the package for defrosting at room temperature.
6. When finished turn the OVEN and TIMER controls to the OFF position. The power light will go off.
7. Unplug and allow to cool completely before cleaning.

## Hints For Defrost

- ◆ Do not use this method for meat, poultry or fish.
- ◆ Do not cover food.
- ◆ Brush frozen dough with vegetable oil to prevent drying out and remove food to preheat oven before baking.

## Instructions For Broil

1. Remove bake/broil pan and rack.
2. Place broil insert in bake pan and position food on broil insert.
3. Place rack in shelf position 1 or 2.
4. Plug into 120 V ~ 60 Hz outlet.
5. Turn OVEN control to broil and TIMER to desired time or to Stay On.
6. Broil according to package or recipe instructions.
7. When finished turn OVEN and TIMER controls to the OFF position. The power light will go off.
8. Unplug and allow to cool completely before cleaning.



# Hints For Broil

- ◆ Always use bake/broil pan with the broil insert; this allows juices and fat to drip into tray and decreases spattering while broiling.
- ◆ Do not place aluminum foil on top of broil insert; this traps grease and can cause a fire.
- ◆ Trim excess fat from meat and score edges to reduce curling and smoke.
- ◆ Always thaw meats before broiling.
- ◆ Remove grease from tray and wash after each use.

# User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to a qualified appliance repair technician if servicing is needed.

# Clean-Up Of Interior

Your toaster-oven-broiler features a removable interior that is dishwasher safe.

1. Always unplug and allow to cool completely before cleaning or moving.
2. Remove bake/broil pan and rack. Wash with a non-abrasive cleaner, rinse and dry thoroughly or clean in a dishwasher.
3. Carefully remove the interior by grasping the wire handle and by pulling straight out, see Figure 3.
4. Clean with a mild non-abrasive cleaner and rinse and dry thoroughly. The interior may also be placed in the dishwasher for cleaning.
5. Slide interior back into the oven and close oven door.

# Clean-Up Of Oven Door And Exterior

1. Always unplug and allow to cool completely before cleaning or moving.
2. Clean with glass cleaner or mild detergent and damp cloth or plastic scouring pad. Do not use an abrasive cleaner or pad as they might scratch the finish.
3. Dry thoroughly with a clean cloth. Allow to dry before closing door.

## To Store

Unplug unit; store in its box or in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.



## LIMITED ONE YEAR WARRANTY

**Warranty:** This Toastmaster® product is warranted to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 947-3744 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to models number 357S/357SCAN when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 947-3744).

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$ 15.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

### To return the appliance, ship to:

Attn: Repair Center  
Toastmaster Inc.  
708 South Missouri Street  
Macon, MO 63552  
Email: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)  
[www.toastmaster.com](http://www.toastmaster.com)

### To contact us, please write to or call:

Toastmaster Inc.  
P.O. Box 6916  
Columbia, MO 65205-6916  
1 (800) 947-3744

**Limitation of Remedies:** No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall we be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

**EVERYBODY EATS. It's a fact of life.**

**But sometimes preparing  
meals can become a chore.**

**That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.**





**toastmaster®**

- Dishwasher safe removable stainless steel liner
- Large capacity handles 4 slices of toast, 5 lb. chicken, 8" pie pan
- 2-hour timer
- Cool wall exterior
- Auto shut-off when cooking time is reached
- Electronic toast control
- Includes wire rack, bake/broil pan and broil insert
- Adjustable thermostat



## **Questions**

Call toll free 1-800-947-3744

Monday–Friday, 8:00 a.m.-5:30 p.m. CST

[www.toastmaster.com](http://www.toastmaster.com)

**357S/357SCAN**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>