

# Toaster-Oven

USE AND CARE GUIDE  
MODEL TOV2WMX/TOV2RMX





# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- ◆ Read all instructions.
- ◆ Do not touch hot surfaces. Use handles or knobs.
- ◆ To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- ◆ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
- ◆ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ◆ Do not use outdoors.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ◆ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ◆ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ◆ To disconnect turn the Timer Control to the OFF position, then remove plug from wall outlet.
- ◆ Do not use appliance for other than intended use.
- ◆ Oversize foods or metal utensils must not be inserted in a Toaster Oven as they may create a fire or risk of electric shock.
- ◆ A fire may occur if the Toaster Oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- ◆ Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- ◆ Extreme caution should be exercised when using containers constructed of other than metal or glass.



# IMPORTANT SAFEGUARDS (Con't.)

- ◆ Do not store any materials, other than manufacturers recommended accessories, in this Oven when not in use.
- ◆ Do not place any of the following materials in the Oven: paper, cardboard, plastic, and the like.
- ◆ Do not cover Crumb Tray or any part of the Oven with metal foil. This will cause overheating of the Oven.
- ◆ To turn unit OFF, turn Timer Control to the OFF position.

# SAVE THESE INSTRUCTIONS

For Household Use Only

# ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

- ◆ A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
- ◆ If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
- ◆ When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
- ◆ To reduce the risk of fire, do not leave this appliance unattended during use.
- ◆ If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
- ◆ The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
- ◆ Do not use this appliance in an unstable position.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.



# Operating Instructions

## BEFORE FIRST USE

1. Carefully unpack your Toaster-Oven and remove all packaging materials.
2. Place your Toaster-Oven on a level surface such as a countertop or tabletop. Be sure the sides, back, and top of the Toaster-Oven are at least 4 inches away from any walls, cabinets, or objects on the counter or table.
3. Remove all stickers from the Toaster-Oven except the rating label located on the back.
4. Remove any dust that may have accumulated during packaging by simply wiping the Toaster-Oven exterior with a clean, damp cloth.
5. Do not use abrasive cleansers.
6. Do not immerse the Toaster-Oven, cord or plug in water.
7. When you are ready to use the Toaster-Oven, plug the cord into a 120V AC outlet.
8. To eliminate any protective substance or oil that may have been used for packing and shipping, turn the Timer Control Dial to 15 minutes. A small amount of smoke and odor may be detected. This is normal.
9. To avoid scratching, marring, or discoloration, do not store anything on top of the Toaster-Oven during operation.

**CAUTION: Appliance surfaces are hot during and after use.**

**CAUTION: Always wear protective, insulated oven mitts on hands when touching hot Toaster-Oven or hot dishes and food or when inserting or removing Wire Rack, baking dish and food.**

**IT IS REQUIRED THAT THIS PRODUCT NOT BE LEFT UNATTENDED DURING USE. THE UNIT IS NOT TO BE OPERATED IN THE STAY ON SETTING FOR MORE THAN 30 MINUTES.**


# Cooking Containers

- ◆ Any enamel bake/broil pan is suitable for items such as cookies, rolls, biscuits, nachos and pork chops.
- ◆ Choose bakeware made of either metal or glass/ceramic without lids.
- ◆ Dark or dull pans absorb heat faster; foods will bake more rapidly and crust will brown more easily than in shiny bake pans.
- ◆ Always check package directions on the container or contact the ovenware manufacturer to determine the container's suitability for use in a Toaster-Oven.
- ◆ Do not use oven roasting bags in this Toaster-Oven, as they may come in contact with the Heating Elements.

**CAUTION:** Allow at least 1" air space between the top of the container and the Upper Heating Elements. Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with heavy-duty aluminum foil.

# Timer Control Dial

The Timer Control Dial also acts as the Toaster-Oven's ON and OFF switch. Turn the Timer Control Dial clockwise to select the appropriate cooking time, up to 15 minutes. If cooking less than 15 minutes, turn the Timer Control Dial to 15 minutes and then back to desired cooking time.

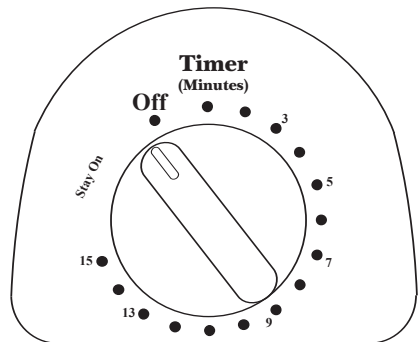

When cooking time is complete, a signal will sound and the unit will turn off automatically.

If you are cooking for more than 15 minutes, or do not wish to use the Timer feature, simply turn the Timer Control Dial counter-clockwise to STAY ON position to turn the Toaster-Oven ON. Return to the OFF position when cooking is complete.




# Wire Rack

The Wire Rack must be used for all cooking functions. After cooking is complete, wear protective oven mitts to open the Glass Door and remove the food.

## Getting to Know Your **Toastmaster®** Toaster-Oven

Your product may vary slightly from illustration.

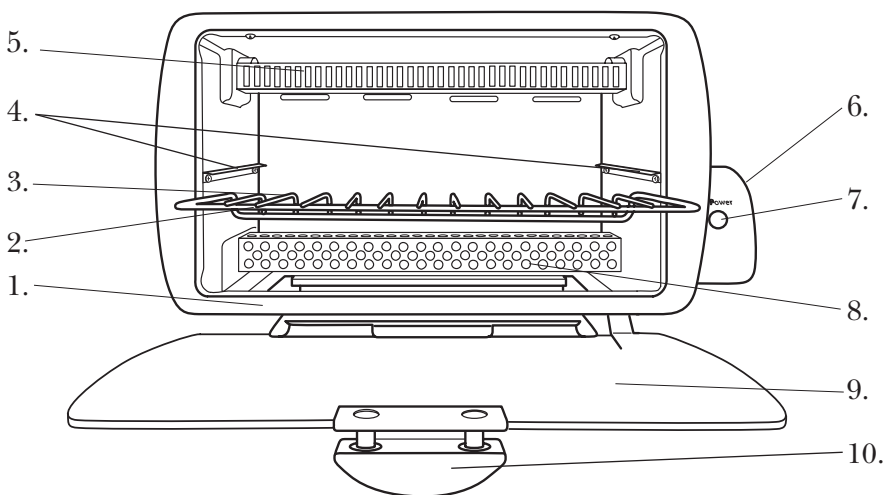

- |                                |                                   |
|--------------------------------|-----------------------------------|
| 1. Crumb Tray (P/N 22668)      | 6. Timer Control Dial (not shown) |
| 2. Lower Shelf Rail            | 7. Power ON Light                 |
| 3. Wire Rack (P/N 22669)       | 8. Lower Heating Element Guard    |
| 4. Upper Shelf Rail            | 9. Glass Door                     |
| 5. Upper Heating Element Guard | 10. Door Handle                   |

**NOTE: The Heating Elements will remain ON as long as the Timer Control Dial is set.**



# Instructions For Toast

1. Plug into 120 V ~ 60 Hz outlet.
2. Make sure the Crumb Tray is firmly in place in the bottom of the Toaster-Oven.
3. Open the Glass Door. Remove all protective wrappings from food before placing in Toaster-Oven. Place Wire Rack on the Upper Shelf Rail. Center food on Wire Rack.
4. Medium colored toast takes approximately 5 to 7 minutes. Turn the Timer Control Dial to 15 minutes, then back to desired toast color/time.

**NOTE: Do not set the Timer Control Dial to the STAY ON position when toasting.**

**CAUTION: As soon as the Timer Control Dial is engaged, both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster-Oven. Do not touch the Toaster-Oven or any part of the Toaster-Oven without wearing oven mitts.**

**IMPORTANT: Watch toast until desired color is achieved.**

5. If toasting is completed before the Timer Control shuts the Toaster-Oven OFF, you may shut the Toaster-Oven OFF manually by turning the Timer Control Dial to the OFF position. The Power Light will turn OFF.
6. When the toasting time is complete, a signal will sound and the Toaster-Oven will automatically shut OFF. The Power Light will turn OFF.
7. Open the Glass Door. Wear protective oven mitts to remove toast or toaster food from Toaster-Oven. Be careful when removing food from the back of the Wire Rack. The inside of the Toaster-Oven is very hot. Close the Glass Door.
8. Unplug unit and allow to cool before cleaning.

**CAUTION: DO NOT LEAVE TOASTER-OVEN UNATTENDED.**

**NOTE: Additional toast cycles may require less time since the Toaster-Oven cavity is already warm.**

See User Maintenance Instructions. Unplug when not in use.



# Hints For Toast

- ◆ Remove all protective wrappings from food before placing in Toaster-Oven. Follow toaster food directions.
- ◆ Frozen and heavy bread require a longer time setting (e.g. bagels and English muffins).

**NOTE: Use extra caution when using this Toaster-Oven for toasting pastry items with runny-type frosting or open fillings.**

- ◆ When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- ◆ One slice of bread requires a lighter setting than 2 slices of bread.
- ◆ Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted for less time.
- ◆ Different breads require different toasting times. Turn Timer Control Dial to the OFF position and open the Glass Door to check toast color. Close Glass Door and reset Timer Control if more toasting time is needed.
- ◆ For best results, clean Crumb Tray frequently.

# Instructions For Bake

Temperature selection is not necessary since most foods cook within package time. Place food in a cold oven and set timer for package or recipe bake time. Watch food closely.

1. Plug into 120 V ~ 60 Hz outlet.
2. Make sure the Crumb Tray is firmly in place in the bottom of the Toaster-Oven.
3. Open the Glass Door. Remove all protective wrappings from food before placing in Toaster-Oven. No preheat is necessary for most foods.
4. Place Wire Rack on the Lower Shelf Rail. Center a baking container, bake pan, baking tray or place food directly onto the Wire Rack. Close the Glass Door.
5. Turn the Timer Control Dial to desired time or turn counter-clockwise to the STAY ON position. The Power Light will illuminate.

**CAUTION: As soon as the Timer Control Dial is engaged, both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster-Oven. Do not touch the Toaster-Oven or any part of the Toaster-Oven without wearing oven mitts.**

**NOTE: If baking is completed before the Timer Control shuts the Toaster-Oven OFF, you may shut the Toaster-Oven OFF manually by turning the Timer Control Dial to the OFF position. The Power Light will turn OFF.**

6. When the bake time is complete, a signal will sound and the Toaster-Oven will automatically shut itself OFF. The Power Light will turn OFF.
7. Open the Glass Door. Wear protective oven mitts to remove toast or toaster food from Toaster-Oven. Be careful when removing food from the back of the Wire Rack. The inside of the Toaster-Oven is very hot. Close Glass Door.
8. Unplug unit and allow to cool before cleaning.

**CAUTION: DO NOT LEAVE TOASTER-OVEN UNATTENDED.**



## Hints For Bake

- ◆ To prevent heat loss, avoid opening door excessively.
- ◆ Place food toward the back of the oven for better browning.
- ◆ Food may cook faster than recipe or package time. Check for doneness prior to end of cook time.
- ◆ Rotate and turn food over (if applicable) for more even browning halfway through the cooking process.

## User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning, must be performed by a qualified appliance repair technician.

## Interior Cleaning

1. Always unplug and allow to cool completely before cleaning or moving.
2. Remove Wire Rack. Wash with a non-abrasive cleaner, rinse and dry thoroughly or place in the dishwasher.
3. Lift the Crumb Tray up and out of the Toaster-Oven for easy cleaning. If crumbs and spills have accumulated on the Crumb Tray, wipe with a damp cloth. Always dry the Crumb Tray thoroughly before replacing.
4. Clean interior with a mild or non-abrasive cleaner and plastic scouring pad after each use to avoid buildup. Do not rub too hard as surface can be scratched.
5. Rinse and dry thoroughly before closing oven door.

# Oven Door and Exterior Cleaning

1. Always unplug and allow to cool completely before cleaning or moving.
2. Clean with glass cleaner or mild detergent and damp cloth or plastic scouring pad. Do not use an abrasive cleaner or pad as they might scratch the finish.
3. Rinse and dry thoroughly with a clean cloth. Allow to dry before closing door.



## LIMITED ONE-YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

**To return** the appliance, ship to:

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

**To contact us**, please write to, call, or email:

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail:consumer\_relations@toastmaster.com

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website:  
[www.maxim-toastmaster.com](http://www.maxim-toastmaster.com).

©2005 All rights reserved.  
Made in China

P/N 61697MEX  
8/05

## Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

EVERYBODY EATS. It's a fact of life.

But sometimes preparing  
meals can become a chore.

That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.

The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.





**toastmaster®**

- Bakes, Toasts and Top Browns
- 2-Slice capacity
- 15-Minute Timer



## Questions

Call toll free 1-800-233-9054

Monday–Friday, 8:00 a.m.-5:30 p.m. CST

[www.maxim-toastmaster.com](http://www.maxim-toastmaster.com)

**TOV2WMX/TOV2RMX**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>