

B1035, 1036S, B1015, D1070 and D1073 READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.



Toastmaster®

Toaster Use and Care Guide

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To reduce the risk of electric shock, do not place any part of this toaster under water or other liquid. See instructions for cleaning.
- Close supervision is necessary when this appliance is used near children.
- Do not use appliance unattended.
- To reduce the risk of fire or electrical shock, do not insert oversized foods, metal foil packages, or metal utensils into the toaster.
- Use toaster in an open area with 4-6 inches air space above and on all sides for air circulation. A fire may occur if toaster is covered or touching flammable materials including curtains, draperies, towels, walls and toaster covers, etc., while in operation.
- Do not attempt to dislodge food when toaster is plugged into an outlet. Should it be necessary to dislodge food, unplug the toaster and use only a wooden utensil.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating a risk of electrical shock.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- To reduce the risk of injury, use accessory attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near hot gas or electric burner, or in a heated oven.
- Do not use appliance except as intended.
- Failure to clean crumb tray may result in a risk of fire. (Refer to cleaning instructions, page 2.)

SAVE THESE INSTRUCTIONS THIS PRODUCT FOR HOUSEHOLD USE ONLY.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of at least 13 A., 125 V ~, 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

WARNING—TO REDUCE RISK OF ELECTRICAL SHOCK, UNPLUG BEFORE CLEANING AND WHEN NOT IN USE. DO NOT IMMERSER IN WATER OR OTHER LIQUID.

CAUTION:

 
1. DO NOT insert fork, knife, or any other metal object into the toaster.
2. DO NOT place foil-wrapped articles in toaster. Remove all protective wrappings prior to placing in toaster.
3. Avoid using items with "runny" frostings, fillings, icings or cheese. This includes pre-buttered foods. When these substances melt, they cause a sticky build-up and may result in a risk of fire.
4. DO NOT physically hold down the toast lever. This could cause damage to the toaster requiring repair by an authorized service center.

TOASTER SENSING MECHANISM

Your toaster is equipped with a unique toasting mechanism which senses bread temperatures and allows better toast control.

Breads have various moisture contents requiring different settings. Raise front lever at any time to check toast color. The best toast is made with bread a day or two old.

TOASTING INSTRUCTIONS

 
1. Plug cord into any 120 V ~ 50-60 Hz outlet. The unit may emit an odor and/or smoke during first few uses from oils used in manufacturing. This is normal for a new appliance.
2. Set Toast Color Control to the color of toast desired. For first use, set color mid-way between Light and Dark toast color settings. Toast thin-sliced bread on the lighter toast color settings.
3. Insert bread or toaster food into slots and push down toast lever.
Note: Use slot marked  when toasting single slice or portion. Use bread slices that fit freely into toaster slots.
4. When toast is done, it will pop up and the current will shut off automatically.
5. After constant repeated use, or changing to a lighter setting, the lever may not lock down in toasting position. Pause briefly to allow toasting mechanism to cool. It should automatically reset and you may continue toasting.

BAGEL TOASTING INSTRUCTIONS

Your toaster is equipped with a "Bagel Perfect Switch" that reduces the wattage of the outside heating elements. The result is a perfectly toasted bagel or English muffin, the cut side toasted and the bottom side warm and moist.

BAGEL AND ENGLISH MUFFIN TOASTING INSTRUCTIONS:

1. Plug cord into any 120 V ~ 50-60 Hz outlet. The unit may emit an odor and/or smoke during first few uses from oils used in manufacturing. This is normal for a new appliance.
2. Set Toast Color Control to the color desired. For first use, set color mid-way between Light and Dark.
3. Slice your bagel or English muffin in half. Place one half into each toaster slot with the cut edge sides facing the center of the toaster. **PUSH DOWN ON THE TOAST LEVER FIRST AND THEN LOWER THE BAGEL SWITCH.**

NOTES: Use slot marked  when toasting only half a bagel or English muffin. Use slices that fit freely into toaster slots.

4. When the bagel or muffin is done, the toast lever and bagel switch will pop up and the current will shut off automatically. The Bagel Perfect Toaster's automatic reset feature returns the toaster to normal operation (full wattage) after each bagel toasting cycle.
5. After constant repeated use, or changing to a lighter setting, the toast lever may not lock down in a toasting position. Pause briefly to allow toasting mechanism to cool. It should automatically reset and you may continue toasting.

ELECTRIC POWER: If electric circuit is overloaded with other appliances, your toaster may not operate properly. When possible, toaster should be operated on a separate electrical circuit than other operating appliances.

CONVENIENCE FOODS TOASTING

Today there are many varieties of packaged convenience food available, both frozen and non-frozen (shelf pastry), which can be toasted in your toaster.

Since individual's tastes vary, it is difficult to recommend exact toasting settings, however, after a little experimentation you will discover the best setting for your needs. You may also wish to refer to the heating instructions on the food package.

NON-FROZEN SHELF PASTRY

Move color control to a lighter color setting. It may be necessary to vary the position of the color control to compensate for thick foods or those which contain fillings.

FROZEN FOODS

Move the color control to a darker color setting. Due to variation in shape, some items will require different settings. Moving the color control to the right will provide a longer toasting cycle. Thawing frozen foods before toasting will help ensure that the inside of the food is adequately cooked and will prevent the outside from burning. Again, it may be necessary to experiment to accommodate individual tastes.

CLEANING INSTRUCTIONS

1. Unplug toaster.
2. Wipe outside with soft, damp cloth when toaster is cool. Polish with soft, dry cloth.
3. Open crumb tray in bottom of toaster and brush out crumbs.

Any servicing requiring disassembly other than the above cleaning should be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies.

This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the U.S. and Canada, or 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown in the warranty statement.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a note explaining the problem you have experienced. We recommend insuring your package. No C.O.D. shipments accepted.

ONE YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon, MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Boonville address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____ Model number _____
Code number (stamped on crumb tray) _____

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>