

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.



Bagel Perfect™ Toaster

Use and Care Guide - Model T2070W

- PATENTED, RESETTABLE BAGEL BUTTON
- COOL TOUCH CASE
- SOFT TOUCH CONTROLS
- SLIDE-OUT CRUMB TRAY
- WIDEST, LONGEST, DEEPEST SLOTS AVAILABLE
- AUTO ADJUSTABLE SLOT WIDTH; AUTO HI-LIFT
- COMPENSATING ELECTRONIC TIMER

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using toaster.
- Do not touch hot surfaces. Use handles or knobs.
- Do not immerse cord, plug, or toaster in water or other liquid. See instructions for cleaning.
- This toaster is not for use by children.
- Close supervision is necessary when this appliance is used near children.
- Do not use toaster unattended.
- Oversized foods, metal foil packages, or metal utensils must not be inserted in this toaster. Remove all protective wrappings prior to placing in toaster.
- Avoid using items with "runny" frostings, fillings, icings or cheese. This includes pre-buttered foods.
- Use toaster in an open area with 4-6 inches air space above and on all sides for air circulation. Do not allow toaster to touch or be covered by flammable materials including curtains, draperies, towels, walls and toaster covers, etc., while in operation.
- Do not force food into toaster slots.
- Do not attempt to dislodge food when toaster is plugged into an outlet. Should it be necessary to dislodge food, unplug the toaster and use only a wooden utensil.
- Unplug from outlet when not in use. Unplug and allow to cool before cleaning.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Keep crumb tray clean. See instructions for cleaning.
- Use appliance only as indicated in these instructions.

SAVE THESE INSTRUCTIONS


CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 15 A and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


ELECTRIC POWER: If the electric circuit is overloaded with other appliances, your toaster may not operate properly. It should be operated on a separate electrical circuit from other appliances.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

Breads vary in density and moisture content requiring different settings. The best toast is made with bread a day or two old.

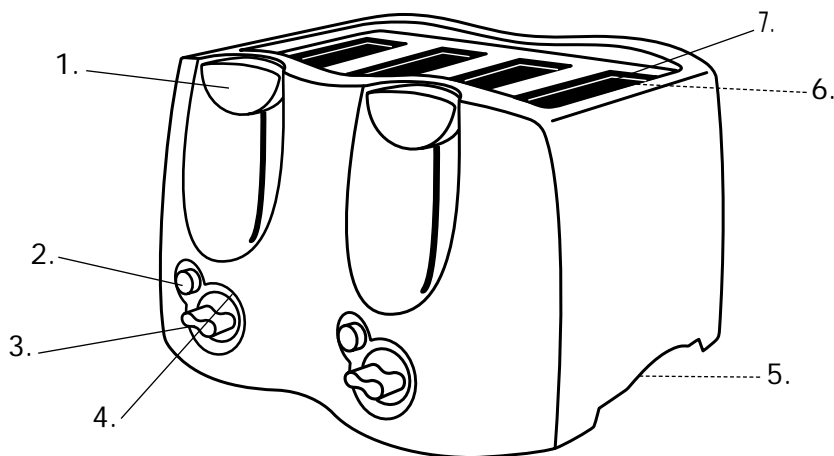

- | | |
|----------------------------------|-------------------------------|
| 1. Toast Lever with Auto Hi-Lift | 6. Self-Adjusting Bread Slots |
| 2. Bagel Perfect Button | 7. Bread Slots |
| 3. Toast Color Control | |
| 4. Cancel Toasting Position | |
| 5. Slide-Out Crumb Tray | |

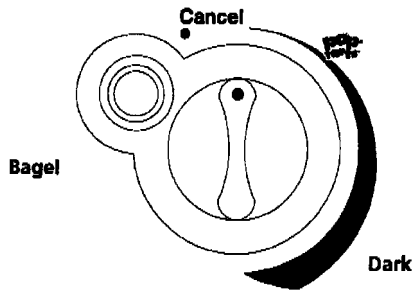

TOASTING INSTRUCTIONS

1. Plug cord into any 120 V ~ 60 Hz outlet. The unit may emit an odor and/or smoke during first few uses from oils used in manufacturing. This is normal for a new appliance.
2. Set Toast Color Control to the color of toast desired. For first use, set control mid-way between Light and Dark settings. Toast thin breads on the lighter toast color settings.
3. Insert bread or toaster food into Bread Slots and push down Toast Lever.
Note: Use any slot when toasting single slice or portion. Use bread slices that fit freely into toaster slots. The Self-Adjusting Bread Slots hold food upright for uniform side to side toasting.
4. When toast is done, the Toast Lever with Auto Hi-Lift will pop up and the power will shut off automatically.
5. To interrupt toasting, turn Toast Color Control counter clockwise to the Cancel Toasting Position.

BAGEL TOASTING INSTRUCTIONS

Your toaster is equipped with a "Bagel Perfect® Button" that reduces the wattage of the outside heating elements. The result is a perfectly toasted bagel or English muffin, because the cut side toasts while the bottom side is gently warmed and retains moisture.

BAGEL AND ENGLISH MUFFIN TOASTING INSTRUCTIONS

1. Plug cord into any 120 V ~ 60 Hz outlet. The unit may emit an odor and/or smoke during first few uses from oils used in manufacturing. This is normal for a new appliance.
2. Set Toast Color Control to the color desired. For first use, set Toast Color Control mid-way between Light and Dark settings.
3. Slice your bagel or English muffin in half. Place one half in each toaster slot with the cut sides facing in towards the center of the toaster. **PUSH DOWN ON THE TOAST LEVER FIRST AND THEN PRESS THE BAGEL PERFECT BUTTON.**

NOTES: Use any slot when toasting only half a bagel or English muffin. Use slices that fit freely into toaster slots. The Self-Adjusting Bread Slots hold food upright for uniform side to side toasting.

4. When the bagel or muffin is done, the Toast Lever with Auto Hi-Lift will pop up and the Bagel Perfect Button will pop out. The power will shut off automatically. The Bagel Perfect Toaster's automatic reset feature returns the toaster to normal operation (full wattage) after each bagel toasting cycle.
5. To interrupt toasting, turn Toast Color Control counter-clockwise to Cancel Toasting Position.

CONVENIENCE FOODS TOASTING

Today there are many varieties of packaged convenience foods available, both frozen and non-frozen (shelf pastry), that can be toasted in your toaster.

Since toaster foods and individual tastes vary, it is difficult to recommend exact Toast Color Control settings, however, after a little experimentation you will discover the best setting for your needs. You may also wish to refer to the heating instructions on food packaging.

NON-FROZEN SHELF PASTRY

Move Toast Color Control to the Pop Tarts® Toaster Pastry setting. For thicker convenience foods, it may be necessary to adjust control clockwise for a longer toasting cycle.

FROZEN FOODS

Move the Toast Color Control to a darker color setting. Due to variations in size and density, frozen items will require different settings. Moving the Toast Color Control clockwise will provide a longer toasting cycle. Thawing frozen foods before toasting will help ensure that the inside of the food is heated and will prevent the outside from burning. Again, experimentation is the best way to accommodate individual tastes and food choices.

CLEANING INSTRUCTIONS

CAUTION: Do not immerse in water or other liquid.

1. Unplug toaster and allow to cool.
2. Wipe outside with soft, damp cloth. Polish with soft, dry cloth.
3. Remove Slide-Out Crumb Tray using recessed handle in rear of toaster. Shake out crumbs over sink. Wash in top rack of dishwasher or by hand with warm, sudsy water, then rinse and dry. Slide crumb tray back into position.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the U.S. and Canada, 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Date code (stamped on bottom) _____

LIMITED ONE-YEAR GUARANTEE

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon, MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

EVERYBODY EATS. It's a fact of life.

**But sometimes preparing
meals can become a chore.**

**That's why TOASTMASTER has been invited
into millions of kitchens just like yours
so we can HELP YOU MASTER your
mixing, baking, grilling, toasting,
brewing, heating and serving
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a
CELEBRATION of INNOVATION designed
to serve your life and keep you
COOKIN' IN STYLE.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>