

OWNER'S MANUAL  
Model No. TMT2CMW

# Toastmaster®

**BREAKFAST DUET**



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn the Browning Selector Control to "Cancel" and make sure the Power Switch is OFF, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when the appliance is plugged in.
16. Be certain Lid is securely in place before operating appliance.
17. Scalding may occur if the Lid is removed during the brewing cycle.
18. Do not use a cracked Mug.
19. Do not set a hot Mug on a wet or cold surface.

# SAVE THESE INSTRUCTIONS

For Household Use Only

# ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120 V AC electrical outlet only.
3. **Use water only in this appliance!** Do not put any other liquids or food products into the Water Reservoir. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. **DO NOT** attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, make sure the Power Switch is OFF (Indicator Light will not be illuminated) and turn the Browning Selector Control to "Cancel" and immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
8. To reduce the risk of fire, do not leave this appliance unattended during use.
9. The appliance must be left to cool down sufficiently before adding more water in the Water Reservoir to avoid spattering.
10. Always use fresh, cool water in the Water Reservoir. Warm water or other liquids, except as listed in the cleaning section, may cause damage to the appliance. **DO NOT** lift Lid until brewing is complete and all parts have cooled.

11. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
12. Do not use this appliance in an unstable position.
13. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.

**WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.**

**CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.**

## **CAUTION:**

**DO NOT** toast pastries with runny fillings or frosting.

**DO NOT** toast torn slices of bread.

**DO NOT** place buttered bread or wrapped food into the Toaster.

**DO NOT** toast small-size breads, mini-baguettes, breadsticks, etc.

## Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Plasticizer Warning


**CAUTION:** To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or placemats between the appliance and the finish of the counter top or table top.

**Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.**

## Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances

# Getting to Know Your **Toastmaster®** Breakfast Duet

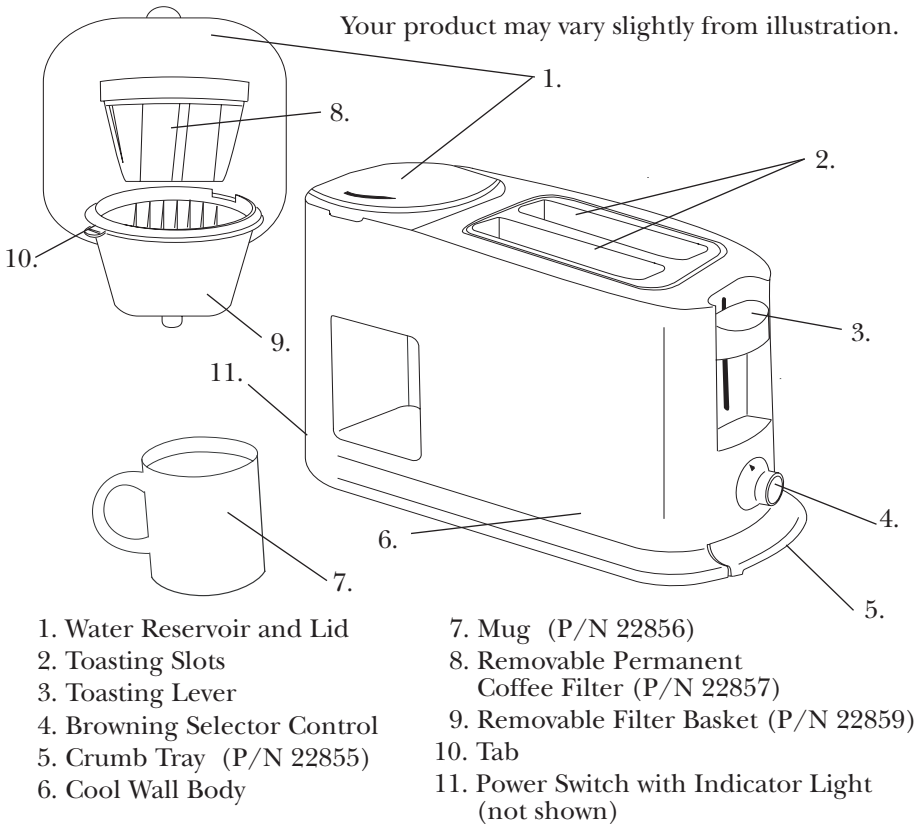

## Before Using the Toaster for the First Time

1. Remove all packaging materials including those which may be inside the Toasting Slots or Toasting Lever slot.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not put the Toaster, cord or plug in water.
4. Be sure the Crumb Tray is fully inserted into the bottom of the Toaster and the Toasting Lever is in the UP position.
5. Plug into a 120V AC outlet.
6. Turn the Browning Selector Control to the lightest setting (see "Operating Instructions").
7. Lower the Toasting Lever until it locks in place. Operate without bread once or twice to burn off any manufacturing residue. You may notice a slight amount of smoke; this is normal and will stop as the heating elements continue to heat.

## Before Using the Coffeemaker for the First Time

Before preparing coffee in your new Coffeemaker, thoroughly clean the Mug, Removable Permanent Coffee Filter and Removable Filter Basket in hot, sudsy water. Rinse and dry. Replace disassembled parts. Clean the inside of the Coffeemaker by brewing one full Mug of tap water (see "Brewing Coffee"). Repeat this step. Do not place coffee in Removable Permanent Coffee Filter for this initial cleaning.

**NOTE: At the end of first cycle, turn Coffeemaker off and wait ten minutes. Turn unit on and brew second Mug of water.**

## Removable Permanent Coffee Filter

The Removable Permanent Coffee Filter included with your Coffeemaker eliminates the need for disposable paper filters. It is specially designed to fit into the Removable Filter Basket. Check to make sure the round recessed area fits easily into the groove of the Removable Filter Basket. **The Tab on the Removable Filter Basket must be placed in either the 2 o'clock position or the 7 o'clock position, otherwise the Lid will not close properly.**

# Operating Instructions

## Toasting Bread

1. Be sure no bread or other objects are inside the Toasting Slot. Place Toaster on a flat, level, heat resistant surface and plug the power cord into a 120V AC electrical outlet.
2. Position the Browning Selector Control to desired setting. Setting #1 will be the lightest shade setting and setting #5 will be the darkest shade setting. Adjust each subsequent toasting to your preference.
3. Remove all protective wrappings from food before placing into the Toasting Slots. Avoid toasting torn bread slices that may get lodged in Toasting Slot.
4. Insert the bread into the Toasting Slots. Lower the Toasting Lever until it locks into place. The centering guides will automatically center the bread for even toasting. When the bread is lowered into position, it will automatically begin to toast.

**NOTE: To prevent a fire hazard, never place bread over the opening of the Toaster, but always place it into the Toasting Slots.**

**NOTE: DO NOT change the Browning Selector Control selection during the toasting cycle.**

5. When the toast reaches the selected browning level, it will pop up automatically.

6. To interrupt toasting, turn the Browning Selector Control to "Cancel."
7. Remove bread from Toasting Slots. Use care when removing bread as the bread and Toaster will still be hot.
8. Unplug cord from wall outlet when not in use.

**IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

## Convenience Food Toasting

Extra wide Toasting Slots accommodate many varieties of packaged convenience food available today, both frozen and non-frozen (shelf pastry). Since toaster foods and individual tastes vary, it is difficult to recommend exact Browning Control settings. However, after a little experimentation you will discover the best setting for your needs. You may also wish to refer to the heating instructions on food packaging.

## Pastry

For best results, follow the instructions printed on the pastry package. If the package does not have instructions, position the Browning Selector Control to Medium (mid-way between the lightest and darkest setting). Some pastries may require a second toasting cycle.

**NOTE: Do not use this Toaster for toasting pastry items with runny-type frosting or open fillings.**

## Non-Frozen Shelf Pastry

Move the Browning Selector Control to a lighter setting. For thicker convenience foods, it may be necessary to turn the Browning Selector Control clockwise for a longer toasting cycle.

## Automatic Centering Guides

Lowering the Toasting Lever closes the Centering Guides, and holds the bread or toaster food centrally in the Toasting Slots.

**NOTE: The Toasting Lever will not lock down unless the Toaster is plugged into an electrical outlet.**

## Removing Lodged Foods

If a piece of bread or any other appliance food becomes lodged in either of the Toasting Slots, unplug the appliance and allow it to cool. Hold the Toasting Lever down. Turn the appliance upside down and shake the food loose. If brewing coffee, wait until the brew cycle is complete and the unit has completely cooled, before turning the Toaster upside down and shaking the food loose.

**IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

**NOTE: Always remove Mug before cleaning or moving the appliance.**



## Important Points

- Remove all protective wrappings from food before placing in the Toasting Slot.
- For best results, clean the Crumb Tray frequently.
- Different breads require different color settings.
- Do not block top opening. Do not place any object over the top opening.
- Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.
- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as teacakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.
- Never immerse appliance, cord or plug in water or other liquid.
- **Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

## Brewing Coffee

1. Plug into a 120V AC outlet.
2. Make sure unit is powered OFF. The Indicator Light will not be illuminated.

**IMPORTANT: Place Coffeemaker on a level surface.**

3. Lift up the hinged Lid and fill to the MAX marking on the inside of the Water Reservoir with cold, fresh water.

## CAUTION:

**TAKE CARE NOT TO POUR WATER OR ALLOW ANY WATER TO POUR, DRIP OR SPLASH INTO THE TOASTING SLOTS! IF THE TOASTER APPEARS TO BE WET, UNPLUG THE UNIT AND ALLOW TO DRY THOROUGHLY BEFORE NEXT USE.**

**IMPORTANT: If cream or milk will be added to the Mug, use less water for brewing.**

4. For optimal holding temperature, rinse the inside of the Mug with warm water before brewing. Place the Mug in the recessed area under the Water Reservoir.
5. Insert the Removable Permanent Coffee Filter into the Removable Filter Basket and add coffee grounds. Use approximately 1 to 1-1/2 tablespoons for a Mug of coffee. Close Lid.

6. Make sure the Mug is in the recessed area under the Water Reservoir. Press Power Switch to turn the Coffeemaker ON. The Indicator Light will illuminate. Brew time is approximately 4 minutes.

**CAUTION: Avoid contact with heated water.**

**IMPORTANT: Do not remove Mug until the Indicator light has turned off and last drops of coffee flow into the Mug.**

7. After Indicator Light turns off, the Mug may be safely removed.
8. If brewing more than one cycle, allow unit to cool for 4 minutes between cycles.

**NOTE: To stop the Coffeemaker during the brewing process, press the Power Switch to OFF.**

**NOTE: Coffeemaker will shut-off automatically once the coffee brewing cycle is completed.**

## Helpful Hints for Brewing

- Always use fresh, cold water for brewing. In areas with hard water or where water contains a high mineral content, use cold filtered water for optimal coffee taste.
- For best results, use the Removable Permanent Coffee Filter.

## Descaling

We recommend that you descale your Coffeemaker once a month because mineral deposits can form a coating in the Coffeemaker, causing slower brewing time and possibly an off flavor in the coffee. Use a cleaner recommended for Coffeemakers. To descale your unit:

1. Pour 2 ounces of vinegar or coffee cleaner into the Water Reservoir. Add slightly less than one full Mug of water to allow for 2 oz. of vinegar.
2. Place the Removable Permanent Coffee Filter in the Removable Filter Basket and close Lid. Place the Mug in the recessed area under the Water Reservoir.
3. Follow "Brewing Coffee" (without coffee).
4. When the Indicator Light turns off, wait 15 minutes and pour solution from Mug back into the Water Reservoir. Be sure that the Removable Filter Basket is still in proper position.
5. Turn unit on again. Allow all solution to empty into Mug. When Indicator Light turns off, discard solution.
6. Allow unit to cool 10 minutes. To rinse unit, fill Water Reservoir with one Mug of fresh, cold water. Insert the Removable Permanent Coffee Filter into Removable Filter Basket. Close Lid. Place the Mug in the recessed area under the Water Reservoir and turn the power ON.
7. At end of cycle, allow unit to cool, discard water. Wash and dry Mug and other removable parts.
8. Unplug the appliance from outlet. When the appliance has cooled, wipe exterior with a damp cloth.

# User Maintenance Instructions

## Coffeemaker Care and Cleaning

1. Make sure the unit is powered OFF. The Indicator Light will not be illuminated.
2. Unplug and allow to cool completely before cleaning.
3. Open Lid and lift up on the tab of Removable Filter Basket. Remove the Permanent Coffee Filter and rinse thoroughly.
4. Wash Removable Filter Basket and Mug in warm, soapy water. Rinse and dry thoroughly. Or, you may wash the Mug in the top rack of a dishwasher.
5. Clean the outside of the appliance with a damp cloth.

**CAUTION: DO NOT IMMERSE CORD, PLUG OR APPLIANCE IN WATER OR OTHER LIQUID.**

6. Replace Removable Permanent Coffee Filter, Removable Filter Basket, and Mug for next use.

**NOTE: Always remove Mug before cleaning or moving the appliance.**

## Toaster Care And Cleaning

**CAUTION: Do not immerse appliance, cord, or plug in water or any other liquid.**

**CAUTION: Be sure the appliance is unplugged before cleaning.**

**CRUMB TRAY:** Remove the Crumb Tray at bottom of the Toaster. Pull the Crumb Tray away from the bottom of the Toaster, and allow the crumbs to fall out. We suggest that you do this over a sink or over a garbage can. Wipe the Crumb Tray with a clean, damp cloth. Replace the Crumb Tray, making sure to push firmly so that it is fully inserted in the bottom of the Toaster.

**EXTERIOR:** Wipe the Toaster exterior with a clean, damp cloth. Do not use abrasive cleaners. Do not put cord, or plug in water or liquid.

**NOTE: Always remove Mug before cleaning or moving the appliance.**

## Storage

Unplug unit, allow to cool, and clean before storing. Store unit in its box in a clean, dry place. Never store unit while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

# LIMITED ONE YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

**To contact us,** please write to, call, or email:

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: [www.maxim-toastmaster.com](http://www.maxim-toastmaster.com).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>