

Tonka CHUCK & FRIENDS™

Thank you for purchasing
this **CHUCK MY TALKING
TRUCK™** vehicle.

Be sure to read and follow all
instructions carefully before
playing with your vehicle.

AGES 3+

93957/93956 Asst.



CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

 
CHUCK MY TALKING TRUCK™

INCLUDES:

truck, storybook and instructions.

POWER SWITCHES

There are two slide switches that turn your vehicle ON and OFF. Your **CHUCK MY TALKING TRUCK™** vehicle is packaged in "TRY ME" mode. To activate the full range of play features:

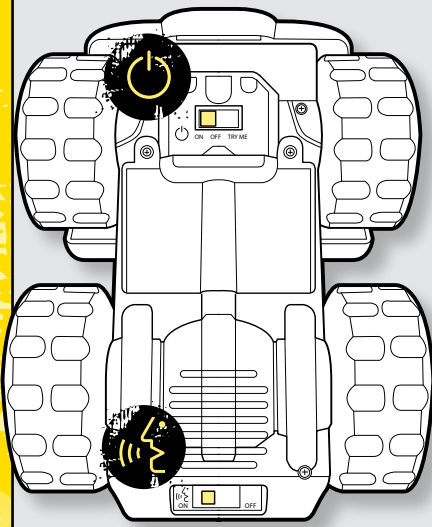


Move  to the **ON** position to play.


Move  to the **ON** position for Sound Activation.

PLAY FEATURES

 
Your **CHUCK MY TALKING TRUCK™** vehicle has 4 sensors. When a sensor is activated, he makes a sound, says a phrase, wiggles his dump bed and moves his front bumper.

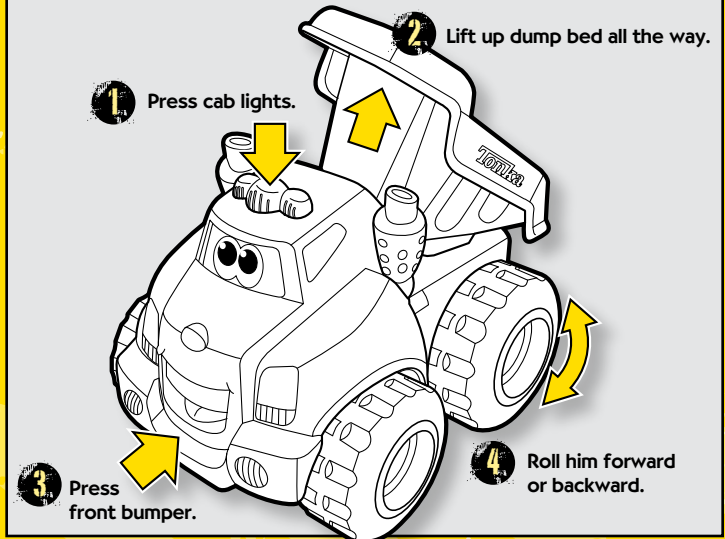

SOUND ACTIVATION

Turn **ON** the sound activation switch . When you call to your **CHUCK MY TALKING TRUCK™** vehicle or make a loud sound, he will honk his horn, and then drive forward.

Unintentional loud sounds from televisions, radios and people in close proximity to the vehicle may cause the vehicle to respond.

Turn **OFF** the sound activation feature by sliding switch  to **OFF**.

If your vehicle bumps into something while in Sound Activation mode, he will stop moving and make a noise.

If you stop playing with your vehicle for 20 seconds, he will say "bye" and turn off. Activate any of his sensors to turn him back on.

TROUBLESHOOTING

If your **CHUCK MY TALKING TRUCK™** vehicle does not respond, move power switches to OFF, then ON. Or, replace the batteries.



X3 | BATTERIES INCLUDED

 
Replace with 3 x 1.5V "C" or LR14 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment cover (screws remain attached to cover). Remove cover. Remove and discard old batteries.

Replace with 3 x 1.5V "C" or LR14 size alkaline batteries.

Replace cover and tighten screws.

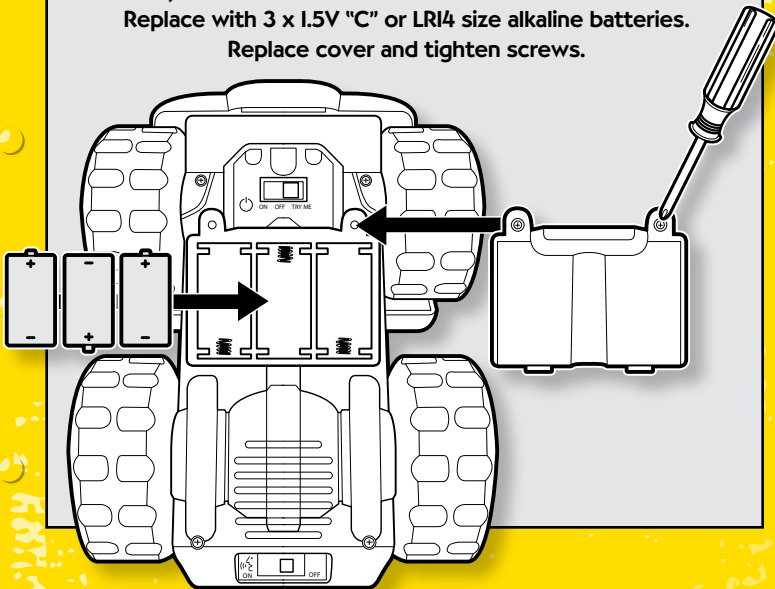

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.



Product and colors may vary.

© 2009 Hasbro. All Rights Reserved.
TM & © denote U.S. trademarks.
U.S. Patent No. 6039626.

P/N 6918670002

Download from Www.Somanuals.com All Manuals Search And Download.



Questions? Call: 1-800-327-8264

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>