


TOSHIBA

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS

User Functions Guide

e-STUDIO2500c/3500c/3510c

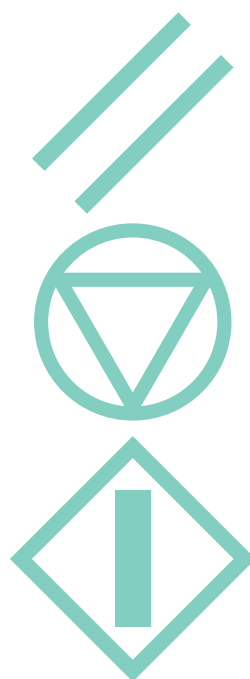

TRADEMARKS AND COPYRIGHT

Trademarks

- The official name of Windows 98 is Microsoft Windows 98 Operating System.
- The official name of Windows Me is Microsoft Windows Me Operating System.
- The official name of Windows 2000 is Microsoft Windows 2000 Operating System.
- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, TrueType, and LaserWriter are trademarks of Apple Computer, Inc. in the US and other countries.
- Postscript is a trademark of Adobe Systems Incorporated.
- Netscape is a trademark of Netscape Communications Corporation.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare, and NDS are trademarks of Novell, Inc.
- Other company names and product names in this manual are the trademarks of their respective companies.

Copyright

© 2006 TOSHIBA TEC CORPORATION All rights reserved

Under the copyright laws, this manual cannot be reproduced in any form without prior written permission of TTEC. No patent liability is assumed, however, with respect to the use of the information contained herein.

TABLE OF CONTENTS

PREFACE	5
---------------	---

Chapter 1 MANAGING ADDRESS BOOK (ADDRESS MENU)

MANAGING ADDRESS BOOK	10
About Managing Contacts in Address Book	10
Registering Contacts	10
Editing Contacts	14
Deleting Contacts	16
Searching Contacts	18
MANAGING GROUPS	22
About Managing Groups in Address Book	22
Creating New Group	22
Editing Groups	25
Deleting Groups	31
Searching Groups	33
Confirming the Members of the Groups	36

Chapter 2 MANAGING COUNTERS (COUNTER MENU)

TOTAL COUNTER	40
Displaying Print Counter	40
Displaying Scan Counter	43
PRINT OUT TOTAL COUNTER	45
DEPARTMENT COUNTER	46
Displaying Print Counter for Department Code	46
Displaying Scan Counter for Department Code	49
Displaying Fax Communication Counter for Department Code	51
MANAGING DEPARTMENT CODE	53
Logging On As Administrator	53
Printing Department Codes List	55
Enabling Department Code	55
Resetting All Department Counters	57
Deleting All Department Codes	58
Registering a New Department Code	59
Editing the Department Code	63
Deleting the Department Code	67
Resetting the Counter of Each Department	69
Setting Output Limitations for All Departments	71
Setting No Limit Black	73
CHECKING TONER AMOUNT	74

Chapter 3 SETTING ITEMS (USER)

SETTING GENERAL FUNCTIONS	76
Setting the Auto Clear Mode	76
Changing the Display Language	78
Setting the Reversed Display Mode	79
Replacing the Toner Cartridge	81
Setting the Calibrations	83
Setting the Registration	85
SETTING COPY FUNCTIONS	86
SETTING FAX FUNCTIONS	88
SETTING SCAN FUNCTIONS	90
SETTING E-FILING FUNCTIONS	93
PRINTING LISTS	94
Printing the Address Book List	94
Printing the Group Numbers List	96
Printing the Function List (User)	97
SETTING DRAWER	98
CHECKING E-MAIL	100
TURN OFF THE POWER (SHUT DOWN)	101
SETTING BIP PRINTING	103

Chapter 4 SETTING ITEMS (ADMIN)

ENTERING TO ADMIN MENU	107
SETTING GENERAL FUNCTIONS	109
Setting the Device Information	109
Setting the Notification	111
Changing the Administrator Password	113
Setting the Date and Time	115
Setting the Weekly Timer	117
Setting the Auto Power Save Mode	120
Setting the Sleep Mode	122
Setting the Calibration and Registration Display Level	124
Setting the Copy Calibrations	126
Setting the Print Calibration	129
Setting the Registration	132
Setting the Drawer Set Pop-Up and Paper Jam Recovery Pop-Up	134
SETTING NETWORK FUNCTIONS	136
Setting the TCP/IP Protocol	136
Setting the IPX/SPX Protocol	142

Setting the NetWare Settings	144
Setting the SMB Protocol	146
Setting the AppleTalk Protocol	149
Setting the HTTP Network Service	151
Setting the Ethernet Speed	153
Setting the LDAP and SNMP Network Service	155
Setting the User Certificate.....	157
SETTING COPY FUNCTIONS.....	161
SETTING FAX FUNCTIONS.....	163
Setting the Terminal ID.....	163
Setting the Fax Initial Setup.....	166
Setting the Line-2 Mode	168
Setting the RX Printing	171
Setting the Recovery Transmission.....	177
SETTING FILE FUNCTIONS	179
SETTING E-MAIL FUNCTIONS.....	180
Setting the Scan to E-mail Message Properties	180
Setting the Scan to E-mail Fragmentation.....	181
SETTING INTERNET FAX FUNCTIONS.....	182
Setting the Internet Fax Message Properties	182
Setting the Internet Fax Fragmentation	183
Setting the Internet Fax Body String Transmission	184
SETTING LIST/REPORT	185
Setting the Transmission / Reception Journal	185
Setting the Communication Report.....	187
Setting the Reception List.....	190
PRINTING LISTS	192
SETTING PRINTER/E-FILING FUNCTIONS.....	193
WIRELESS SETTINGS AND Bluetooth SETTINGS	194

Chapter 5 APPENDIX

LIST PRINT FORMAT.....	196
Total Counter List	196
Department Code List.....	197
Address Book List.....	198
Group Numbers List	199
Function List (User)	200
NIC Configuration Page.....	201
Function List (Administrator).....	202
PS3 Font List.....	217
PCL Font List.....	218

INDEX	219
--------------------	------------

PREFACE

Thank you for purchasing the Toshiba Multifunctional Digital Color System e-STUDIO2500c/3500c/3510c. This Operator's Manual describes the following:


- How to set up the Multifunctional Digital Color System.
- How to operate the functions in the [USER FUNCTIONS] button.

Before using the Multifunctional Digital Color System, thoroughly read and understand this Operator's Manual. To ensure that clean copies are made at all times and to keep your Multifunctional Digital Color System in optimum working order, this Operator's Manual should be readily available for future reference.

Lineup of Our Manuals


Thank you for purchasing the TOSHIBA multifunctional digital color systems e-STUDIO2500c/3500c/3510c.

We have provided you with these manuals for the operation of this equipment. Select and read the manual best suited to your needs.

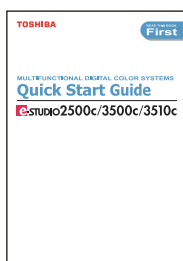


Quick Start Guide

This Quick Start Guide describes the initial setup method of this equipment and accessories of this product such as operator's manuals and CD-ROMs.

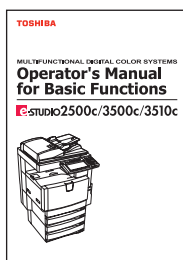

Operator's Manual Basic Functions

This Operator's Manual Basic Functions describes how to use the basic functions of this equipment mainly focusing on the copying function. Also this manual contains safety precautions for users to be observed. Be sure to read it first carefully.

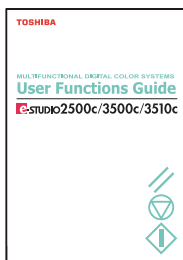

User Functions Guide


This User Functions Guide describes the functions and settings under the [USER FUNCTIONS] button on the control panel of this equipment.



Color Guide


This color Guide simply explains the functions such as "copy density adjustment", "color adjustment", "copy editing", "image editing" and "image processing" in color. This guide also includes the basic knowledge of color.

Other guides are provided by the User Documentation CD-ROM in PDF files:

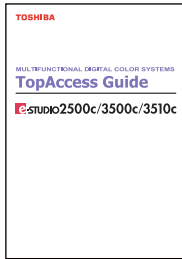


TopAccess Guide

This TopAccess Guide explains how to operate and set up the network functions such as the network scanning function and job management, using the TopAccess (Web-based utility) from client computers.

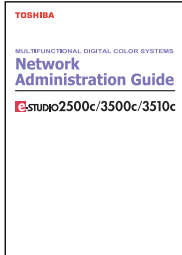


Network Administration Guide

This Network Administration Guide explains the guidelines for setting up network servers to provide various network services, and troubleshooting for network administrators.

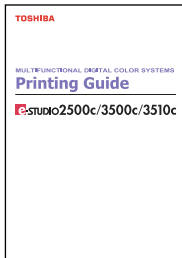


Printing Guide

This Printing Guide explains how to install the client software for printing from Microsoft Windows, Apple Mac OS, and UNIX computers, and print to the equipment.

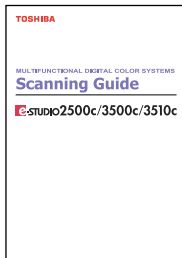


Scanning Guide

This Scanning Guide explains how to operate the scanning function of this equipment.

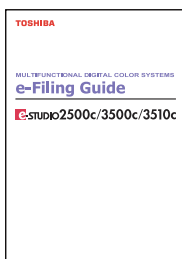


e-Filing Guide

This e-Filing Guide explains how to operate the e-Filing function using the TWAIN driver, File Downloader and e-Filing web utility.

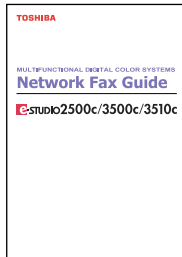

Network Fax Guide

This Network Fax Guide explains how to use the network fax function that enable users to operate fax and internet fax sending from a client computer via network.

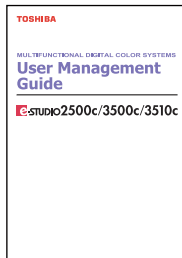

User Management Guide

This User Management Guide describes how to manage this equipment using the functions of “Department Management”, “User Management Setting” and “User Authentication for Scan to E-mail”.

To read manuals in PDF (Portable Document Format) files

Viewing and printing this operator’s manual in PDF files require that you install Adobe Reader or Adobe Acrobat Reader on your PC. If Adobe Reader or Adobe Acrobat Reader is not installed on your PC, download and install it from the website of Adobe Systems Incorporated.

Precautions in this manual

To ensure correct and safe use of this equipment, this operator's manual describes safety precautions according to the three levels shown below.

You should fully understand the meaning and importance of these items before reading this manual.

Warning

Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding assets.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage of the equipment or surrounding assets, or loss of data.

Note

Indicates a procedure you should follow to ensure the optimal performance of the equipment and problem-free copying.

Other than the above, this manual also describes information that may be useful for the operation of this equipment with the following signage:

Tip

Describes handy information that is useful to know when operating the equipment.



Pages describing items related to what you are currently doing. See these pages as required.

1

MANAGING ADDRESS BOOK (ADDRESS MENU)

MANAGING ADDRESS BOOK.....	10
About Managing Contacts in Address Book.....	10
Registering Contacts.....	10
Editing Contacts.....	14
Deleting Contacts.....	16
Searching Contacts.....	18
MANAGING GROUPS	22
About Managing Groups in Address Book.....	22
Creating New Group.....	22
Editing Groups.....	25
Deleting Groups.....	31
Searching Groups.....	33





MANAGING ADDRESS BOOK

About Managing Contacts in Address Book

The Address Book contents are entered using the [ADDRESS] button. The Address Book contents are used for Facsimile and Scan to E-mail.

In Address Book, you can register up to 1000 contacts that can contain a fax number, an E-mail address, or both in each contact. Also you can specify the option settings for the fax transmission in each contact, such as Transmission type, ECM, Quality transmission, Line select, and subaddress settings.


In the Address Book button menu, you can perform following operations to manage contacts.

-  P.10 "Registering Contacts"
-  P.14 "Editing Contacts"
-  P.16 "Deleting Contacts"
-  P.18 "Searching Contacts"

Registering Contacts

The following procedure describes how to register new contact in the Address Book.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

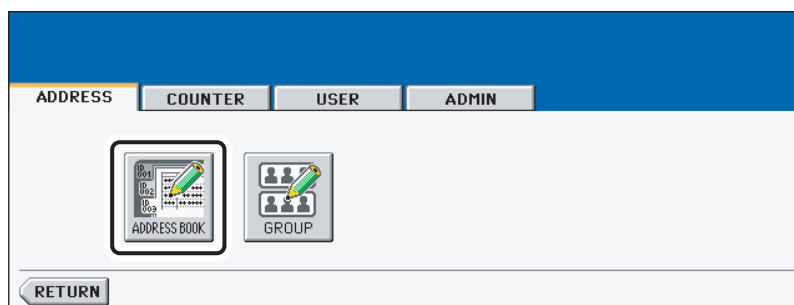

- The ADDRESS BOOK screen is displayed.

3 Press undefined button that you want to register new contact and press the [ENTRY] button.

Select an Address

ADDRESS COUNTER USER ADMIN

ADDRESS BOOK

001	User01 User	FAX	E-MAIL	005		KNOWN ID
002	User02 User	FAX	E-MAIL	006		SEARCH ADDRESS
003	User03 User	FAX	E-MAIL	007		
004				008		

RETURN DELETE ENTRY EDIT 1/125 Next

- The ADDRESS BOOK REGISTRATION screen is displayed.

Tip

If the touch panel does not display an undefined contact, press the [Next] button to display the next screen.

4 Press each button on the touch panel to enter following contact information.

ADDRESS	COUNTER	USER	ADMIN
ADDRESS BOOK REGISTRATION			
FIRST NAME	User04	E-MAIL	User04@ifax.com
LAST NAME	User	CORP.	12345 COMPANY
FAX NO.	00000000004	DEPT.	Dept01
2ND FAX		KEYWORD	
<input type="button" value="OPTION"/> <input type="button" value="CANCEL"/> <input type="button" value="ENTER"/>			

- **[FIRST NAME]** — Enter the first name of the contact. This name will appear in the address book list on the touch panel.
- **[LAST NAME]** — Enter the last name of the contact. This name will appear in the address book list on the touch panel.
- **[FAX NO.]** — Enter the fax number of the contact.
- **[2ND FAX]** — Enter the second fax number of the contact.
- **[E-MAIL]** — Enter the E-mail address of the contact.
- **[CORP.]** — Enter the company name of the contact.
- **[DEPT.]** — Enter the department name of the contact.
- **[KEYWORD]** — Enter the keyword of the contact. This keyword can be used to search for this contact.

Notes

- You must at least enter either the [FIRST NAME] or [LAST NAME] button, and either the [FAX NO.] or [E-MAIL] button to register the contact.
- If you enter “-” in the [FAX NO.] and [2ND FAX], three seconds pause is added for dialing the fax number.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys and press the [ENTER] button to set the entry.

5 Press the [OPTION] button to specify the default settings for a fax transmission.

Note

This is available only when the optional fax unit is installed.

6 Specify following items as you required.

The screenshot shows a menu screen with a blue header and four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADDRESS tab is selected. The screen displays the following options:

TX TYPE	MEMORY TX	DIRECT TX	SUB	
ECM	ON	OFF	SID	
QUALITY TX	ON	OFF	SEP	
LINE SELECT	LINE 1	LINE 2	PWD	
			RESET	CANCEL
			ENTER	

- **TX TYPE** — This sets the type of the fax transmission mode. Press the [MEMORY TX] button to select the memory transmission mode or the [DIRECT TX] button to select the direct transmission mode.
- **ECM** — Select whether enabling or disabling the ECM (Error Correction Mode) to automatically resend any portion of the document affected by phone line noise or distortion. Press the [ON] button to enable the ECM, or the [OFF] button to disable the ECM.
- **QUALITY TX** — Select whether a document is sent in the Quality TX mode. This feature allows to send a document at a slower speed than a normal so that the transmission will be less affected by line condition. Press the [ON] button to enable the Quality TX, or [OFF] button to disable the Quality TX.
- **LINE SELECT** — Select the line to be used for the fax transmission. Press the [LINE1] button to use the Line 1, or [LINE2] button to use Line 2. The [LINE2] button can be selected only when the optional 2nd line board is installed.
- **[SUB]** — Enter the mailbox number if you want to send originals to the mailbox in the remote fax.
- **[SID]** — Enter the password to input a document into the mailbox in the remote facsimile.
- **[SEP]** — Enter the mailbox number if you want to retrieve a document from the mailbox in the remote fax.
- **[PWD]** — Enter the password to retrieve a document from the mailbox in the remote facsimile.

Tip

When you press the [SUB], [SID], [SEP], and [PWD] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

7 Press the [ENTER] button to save option settings.


8 Press the [ENTER] button to register the contact.

ADDRESS	COUNTER	USER	ADMIN
ADDRESS BOOK REGISTRATION			
FIRST NAME	User04	E-MAIL	User04@ifax.com
LAST NAME	User	CORP.	12345 COMPANY
FAX NO.	00000000004	DEPT.	Dept01
2ND FAX		KEYWORD	
OPTION		CANCEL	ENTER

Editing Contacts

The following procedure describes how to edit existing contacts in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

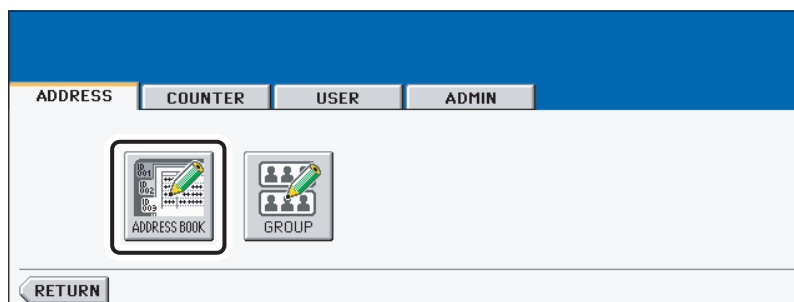

- The ADDRESS BOOK screen is displayed.

3 Press the contact that you want to edit and press the [EDIT] button.

Select an Address

ADDRESS	COUNTER	USER	ADMIN		
001User01 User	FAX	E-MAIL	005User05 User	FAX	E-MAIL
002User02 User	FAX	E-MAIL	006User06 User	FAX	E-MAIL
003User03 User	FAX	E-MAIL	007User07 User	FAX	E-MAIL
004User04 User	FAX	E-MAIL	008User08 User	FAX	E-MAIL

KNOWN ID
SEARCH ADDRESS

RETURN DELETE ENTRY EDIT 1/125 Next

- The ADDRESS BOOK EDIT screen is displayed.

Tips

- If the touch panel does not display the contact that you want to edit, press the [Next] button to display the next screen.
- You can quickly search for the contact that you want to edit. To search for the contact, see the "Searching Contacts". P.18

4 Press each button on the touch panel to edit the contact information.

ADDRESS BOOK EDIT

FIRST NAME	User04	E-MAIL	user04@ifax.com
LAST NAME	User	CORP.	12345 COMPANY
FAX NO.	00000000004	DEPT.	Dept01
2ND FAX		KEYWORD	

OPTION CANCEL ENTER

- For the description of each item, see the Step 4 in the procedure of "Registering Contacts" in the previous section.

5 Press the [OPTION] button to specify the default settings for a fax transmission.

Note

This is available only when the optional fax unit is installed.

6 Specify the items as you required and press the [ENTER] button.

- For the description of each item, see the Step 6 in the procedure of "Registering Contacts" in the previous section.

7 Press the [ENTER] button to save the contact.

- The contact is edited.


Deleting Contacts

The following procedure describes how to delete existing contact in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

- The ADDRESS BOOK screen is displayed.

3 Press the contact that you want to delete and press the [DELETE] button.

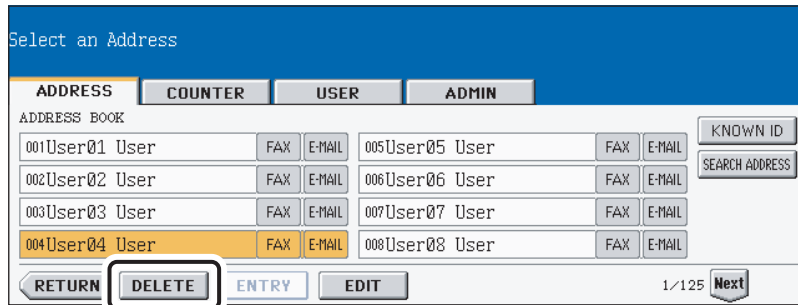


- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the contact that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or the [NO] button to cancel deleting.

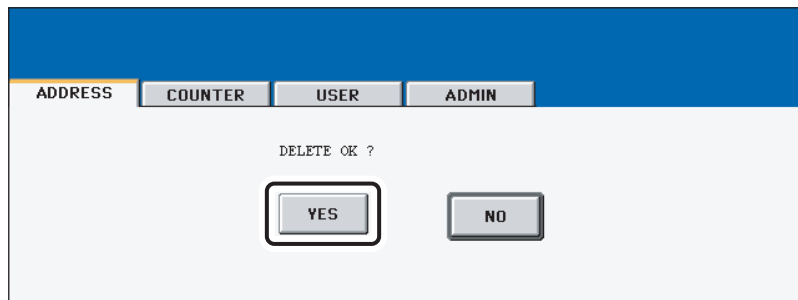

- When you press the [YES] button, the selected contact is deleted.


Searching Contacts

The following procedure describes how to search for contacts in the Address Book. This function is useful to find the contact that you want to edit.

You can search for the contacts by entering an ID number or the search strings.


Searching a Contact by ID Number

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

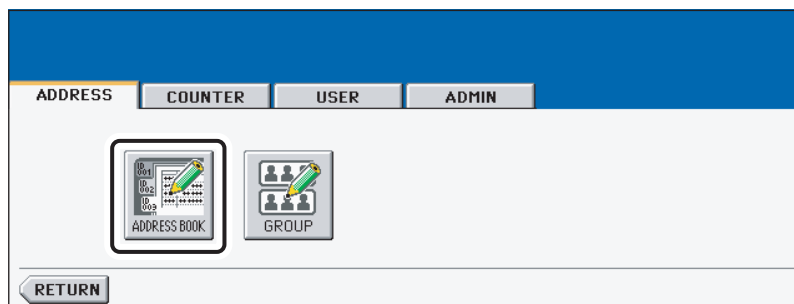

- The ADDRESS BOOK screen is displayed.

- 3 Press the [KNOWN ID] button.

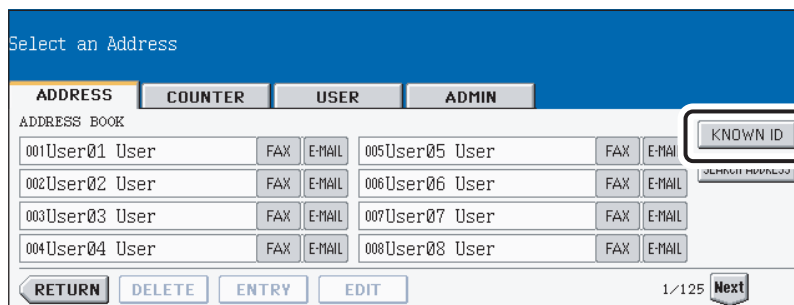

- The KNOWN ID screen is displayed.

- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

The screenshot shows a software interface with a blue header bar containing four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the header, the text 'KNOWN ID' is followed by a prompt 'Enter ID Number'. A yellow input field labeled 'KNOWN ID' contains the number '9'. At the bottom right, there are two buttons: 'CANCEL' and 'ENTER', with the 'ENTER' button highlighted by a red rectangle.

- 5 The touch panel displays the screen that contains the searched contact. Press the contact and press the [EDIT] button to edit the contact information, or press the [DELETE] button to delete the contact.

The screenshot shows a software interface with a blue header bar containing four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the header, the text 'Select an Address' is displayed. Underneath, there is a section titled 'ADDRESS BOOK' containing a table of contacts. Each contact entry includes a user ID, name, and options for FAX and E-MAIL. At the bottom, there are several buttons: 'RETURN', 'DELETE', 'ENTRY', and 'EDIT', with the 'EDIT' button highlighted by a red rectangle. On the right side, there are buttons for 'KNOWN ID' and 'SEARCH ADDRESS'. The bottom right corner shows '2/125' and 'Next' and 'Prev' navigation buttons.

KNOWN ID	SEARCH ADDRESS
009User09 User	FAX E-MAIL
010User10 User	FAX E-MAIL
011User11 User	FAX E-MAIL
012User12 User	FAX E-MAIL
013User13 User	FAX E-MAIL
014User14 User	FAX E-MAIL
015User15 User	FAX E-MAIL
016User16 User	FAX E-MAIL

- See "Editing Contacts" for the instruction to edit the contact. P.14

Searching Contacts by Entering Search String

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

The screenshot shows a software interface with a blue header bar containing four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the header, there are two large buttons: 'ADDRESS BOOK' and 'GROUP', both highlighted by red rectangles. At the bottom left, there is a 'RETURN' button.

- The ADDRESS BOOK screen is displayed.

3 Press the [SEARCH ADDRESS] button.

Select an Address

ADDRESS	COUNTER	USER	ADMIN
001User01	User	FAX	E-MAIL
002User02	User	FAX	E-MAIL
003User03	User	FAX	E-MAIL
004User04	User	FAX	E-MAIL
005User05	User	FAX	E-MAIL
006User06	User	FAX	E-MAIL
007User07	User	FAX	E-MAIL
008User08	User	FAX	E-MAIL

RETURN DELETE ENTRY EDIT 1/125 Next

- The SEARCH ADDRESS screen is displayed.

4 Press the button that is used for searching to specify the search string.

SEARCH

FIRST NAME
LAST NAME
FAX NO.
E-MAIL

CORP.
DEPT.
KEYWORD

CLEAR CANCEL SEARCH

- When you press each button, the input screen is displayed.

5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

User_

! " # \$ % & ' () = ~ | \ { } Back Space

* < > ? _ - ^ @ + | | ; : / \ ← →

Q W E R T Y U I O P CLEAR

A S D F G H J K L

Z X C V B N M , . Shift Caps Lock

Space CANCEL ENTER Next

Tip

It will search for the contacts that contain the search text in the specified items.

- 6** Specify the search string in the items that you require and press the [SEARCH] button.

The screenshot shows a search interface with a blue header and four tabs: ADDRESS (selected), COUNTER, USER, and ADMIN. Below the tabs is the text "ADDRESS SEARCH". There are four input fields on the left: FIRST NAME, LAST NAME (containing "User"), FAX NO., and E-MAIL. On the right, there are three input fields: CORP., DEPT. (containing "Dept01"), and KEYWORD. At the bottom, there are three buttons: CLEAR, CANCEL, and SEARCH (which is highlighted with a red box).

- 7** The touch panel displays the screen that contains the searched contacts. Press the contact and press the [ENTER] button to edit the contact information.

The screenshot shows a list of searched contacts. The header is the same as in the previous screenshot. Below the header is the text "ADDRESS SEARCH". The list contains eight rows of contact information. The first row is highlighted in orange. At the bottom, there are three buttons: RETURN, ENTER (highlighted with a red box), and Next. The text "1/13" is displayed between the ENTER and Next buttons.

ADDRESS	COUNTER	USER	ADMIN
001	User01	User	
002	User02	User	
003	User03	User	
004	User04	User	
005	User05	User	
006	User06	User	
007	User07	User	
008	User08	User	

- See "Editing Contacts" for the instruction to edit the contact. P.14

MANAGING GROUPS

About Managing Groups in Address Book





You can create groups that contain the multiple members of contacts. This enables you to specify the groups instead of specifying each recipient separately when operating Scan to E-mail, or fax or Internet Fax transmission. You can also delete groups.

In Address Book, you can register up to 200 groups and each group can contain up to 1000 members.

Notes

- One fax number or one E-mail address is counted as one destination. If you select the contact that contains both fax number and E-mail address, it results in two destinations in the group.
- You can register the fax numbers in the Groups, however, you can use them to specify the destinations for fax transmission only when the optional Fax unit is installed.


In the Group button menu, you can perform following operations to manage groups.

-  P.22 "Creating New Group"
-  P.25 "Editing Groups"
-  P.31 "Deleting Groups"
-  P.33 "Searching Groups"

Creating New Group


The following procedure describes how to create a new group in the Address Book.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

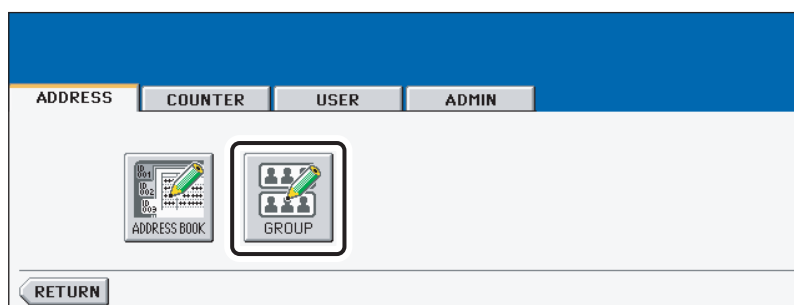

- The GROUP screen is displayed.

3 Press undefined button that you want to create a new group and press the [ENTRY] button.

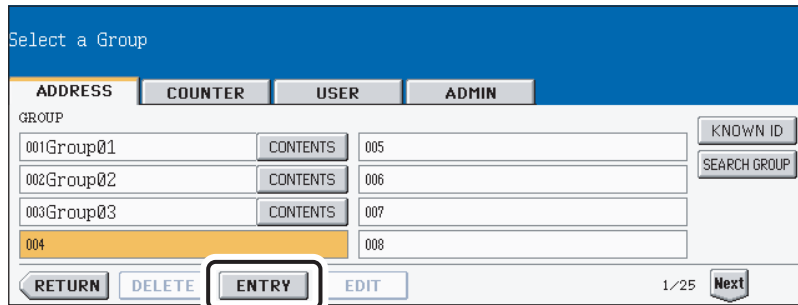


- The GROUP NO. REGISTRATION screen is displayed.

Tip


If the touch panel does not display an undefined group, press the [Next] button to display the next screen.

4 Press the [GROUP NAME] button.

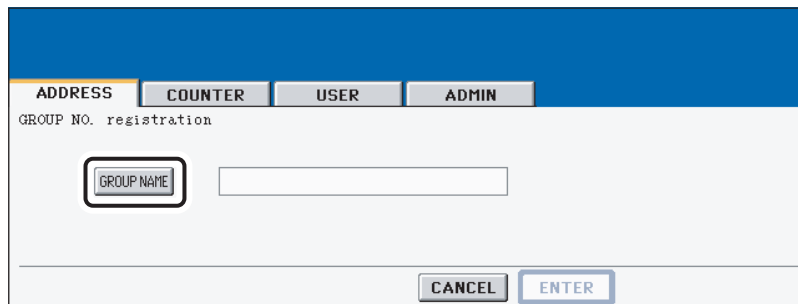

- The input screen is displayed.

5 Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

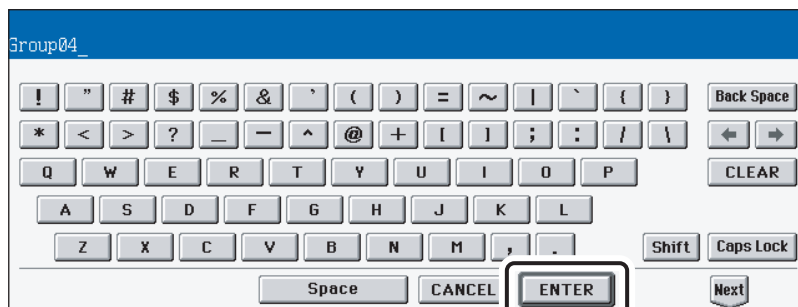

6 Press the [ENTER] button.

ADDRESS COUNTER USER ADMIN

GROUP NO. registration

GROUP NAME Group04

CANCEL ENTER

- The CHECK OF GROUP MEMBER screen is displayed.

7 Select the contacts that you want to add to the group, and then press the [ENTER] button.

Select member in a group

ADDRESS COUNTER USER ADMIN

Check of Group Member

001User01 User	FAX	E-MAIL	005User05 User	FAX	E-MAIL
002User02 User	FAX	E-MAIL	006User06 User	FAX	E-MAIL
003User03 User	FAX	E-MAIL	007User07 User	FAX	E-MAIL
004User04 User	FAX	E-MAIL	008User08 User	FAX	E-MAIL

KNOWN ID
SEARCH ADDRESS

ALL CLEAR CANCEL ENTER 1/125 Next

- To add or remove the contacts by selecting each contacts manually, see "Adding or Removing Contacts". P.27
- To add the contacts by searching them with the ID number, see "Adding Contacts by Searching with ID Number". P.28
- To add the contacts by searching them with search string, see "Adding Contacts by Searching with Search String". P.29

8 New Group is created and appears on the touch panel.

Select a Group

ADDRESS COUNTER USER ADMIN

GROUP

001Group01	CONTENTS	005
002Group02	CONTENTS	006
003Group03	CONTENTS	007
004Group04	CONTENTS	008

KNOWN ID
SEARCH GROUP


RETURN DELETE ENTRY EDIT 1/25 Next

Editing Groups

The following procedure describes how to edit the name of groups, add or remove the members in groups.


Editing Group Name

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

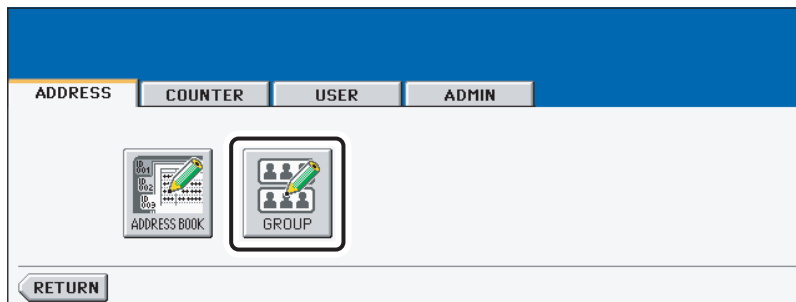

- The GROUP screen is displayed.

- 3 Press the group that you want to edit and press the [EDIT] button.

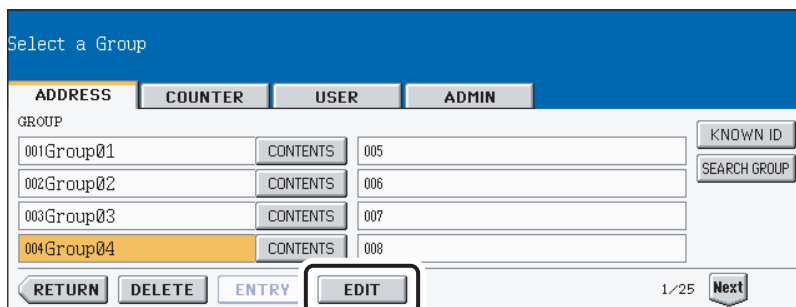

- The GROUP NO. EDIT screen is displayed.

Tip

If the touch panel does not display the group that you want to edit, press the [Next] button to display the next screen.

4 Press the [GROUP NAME] button to edit the group name.

The screenshot shows a menu with four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADDRESS tab is selected. Below the tabs, it says "GROUP NO. edit". There is a "GROUP NAME" button highlighted with a red box, and a text input field containing "Group04". At the bottom, there are "CANCEL" and "ENTER" buttons.

- The input screen is displayed.

5 Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

The screenshot shows a keyboard interface for editing the group name. The title bar says "Group04 Edit_". The keyboard has various keys, including function keys, letters, and symbols. The "ENTER" key is highlighted with a red box. Other keys like "Space", "CANCEL", and "Next" are also visible.

6 Press the [ENTER] button.

The screenshot shows the same menu as in step 4, but now the text in the input field is "Group04 Edit". The "ENTER" button at the bottom is highlighted with a red box.

- The CHECK OF GROUP MEMBER screen is displayed.

7 In the screen, the contacts that have been registered in the group are highlighted.

Select member in a group

ADDRESS	COUNTER	USER	ADMIN		
001User01 User	FAX	E-MAIL	005User05 User	FAX	E-MAIL
002User02 User	FAX	E-MAIL	006User06 User	FAX	E-MAIL
003User03 User	FAX	E-MAIL	007User07 User	FAX	E-MAIL
004User04 User	FAX	E-MAIL	008User08 User	FAX	E-MAIL

Check of Group Member

KNOWN ID
SEARCH ADDRESS

ALL CLEAR CANCEL ENTER 1/125 Next

- To add or remove the contacts by selecting each contacts manually, see "Adding or Removing Contacts". P.27
- To add the contacts by searching them with the ID number, see "Adding Contacts by Searching with ID Number". P.28
- To add the contacts by searching them with search string, see "Adding Contacts by Searching with Search String". P.29

8 To finish editing the group, press the [ENTER] key to save the settings.

Adding or Removing Contacts

1 Press the contacts that are not highlighted to add to the group, or press the highlighted contacts to remove from the group.

Select member in a group

ADDRESS	COUNTER	USER	ADMIN		
001User01 User	FAX	E-MAIL	005User05 User	FAX	E-MAIL
002User02 User	FAX	E-MAIL	006User06 User	FAX	E-MAIL
003User03 User	FAX	E-MAIL	007User07 User	FAX	E-MAIL
004User04 User	FAX	E-MAIL	008User08 User	FAX	E-MAIL

Check of Group Member

KNOWN ID
SEARCH ADDRESS

ALL CLEAR CANCEL ENTER 1/125 Next

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tips

- Press the [Prev] button or [Next] button to display the contacts in the different page.
- You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.

2 Press the [ENTER] button to save the group.

- The group is modified.

Adding Contacts by Searching with ID Number

1 Press the [KNOWN ID] button.

Select member in a group

ADDRESS	COUNTER	USER	ADMIN
Check of Group Member			
001User01 User	FAX	E-MAIL	005User05 User
002User02 User	FAX	E-MAIL	006User06 User
003User03 User	FAX	E-MAIL	007User07 User
004User04 User	FAX	E-MAIL	008User08 User

KNOWN ID

ALL CLEAR CANCEL ENTER 1/125 Next

- The KNOWN ID screen is displayed.

2 Enter the ID Number using the digital keys and press the [ENTER] button.

KNOWN ID

Enter ID Number

KNOWN ID : 50

CANCEL ENTER

3 The touch panel displays the screen that contains the searched contact. Press the contact to be added to the group.

Select member in a group

ADDRESS	COUNTER	USER	ADMIN									
Check of Group Member												
049	User49	User		FAX	E-MAIL	053	User53	User		FAX	E-MAIL	KNOWN ID
050	User50	User		FAX	E-MAIL	054	User54	User		FAX	E-MAIL	SEARCH ADDRESS
051	User51	User		FAX	E-MAIL	055	User55	User		FAX	E-MAIL	
052	User52	User		FAX	E-MAIL	056	User56	User		FAX	E-MAIL	

ALL CLEAR CANCEL ENTER 7/125 Next Prev

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tips

- Press the [Prev] button or [Next] button to display the contacts in the different page.
- You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.

4 Press the [ENTER] button to add to the group.

- The contacts in the group are modified.

Adding Contacts by Searching with Search String

1 Press the [SEARCH ADDRESS] button.

Select member in a group

ADDRESS	COUNTER	USER	ADMIN									
Check of Group Member												
001	User01	User		FAX	E-MAIL	005	User05	User		FAX	E-MAIL	KNOWN ID
002	User02	User		FAX	E-MAIL	006	User06	User		FAX	E-MAIL	SEARCH ADDRESS
003	User03	User		FAX	E-MAIL	007	User07	User		FAX	E-MAIL	
004	User04	User		FAX	E-MAIL	008	User08	User		FAX	E-MAIL	

ALL CLEAR CANCEL ENTER 1/125 Next

- The SEARCH ADDRESS screen is displayed.

2 Press the button that is used for searching to specify the search string.

- When you press each button, the input screen is displayed.


3 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

Tip

It will search for the contacts that contain the search string in the specified items.

4 Specify the search string in the items that you require and press the [SEARCH] button.

5 The touch panel displays the screen that contains the searched contacts. Press the contacts that you want to add to the group.

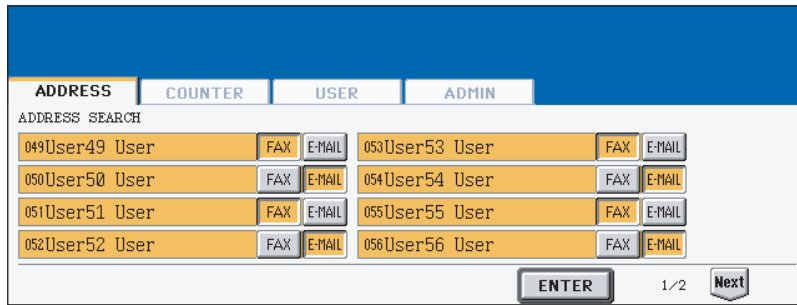

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tip

Press the [Prev] button or [Next] button to display the contacts in the different page.


6 Press the [ENTER] button to save the group.

- The contacts in the group are modified.

Deleting Groups

The following procedure describes how to delete a group in the Address Book.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

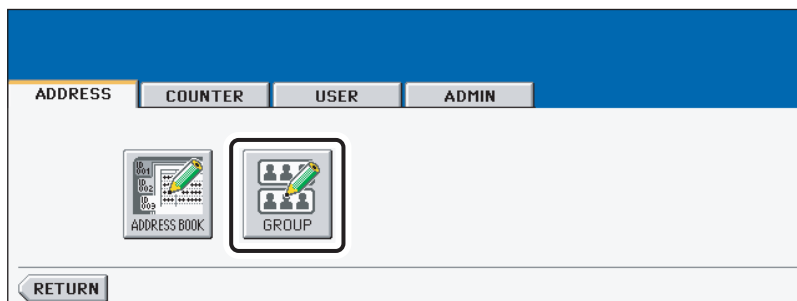

- The GROUP screen is displayed.

3 Press the group that you want to delete and press the [DELETE] button.

GROUP	CONTENTS	USER
001Group01	CONTENTS	005
002Group02	CONTENTS	006
003Group03	CONTENTS	007
004Group04	CONTENTS	008

- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the group that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or [NO] button to cancel deleting.

- When you press the [YES] button, the selected group is deleted.


Searching Groups

The following procedure describes how to search for groups in the Address Book. This function is useful to find the contact that you want to edit.

You can search for the groups by entering the ID number or the search string.


Searching a Group by ID Number

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

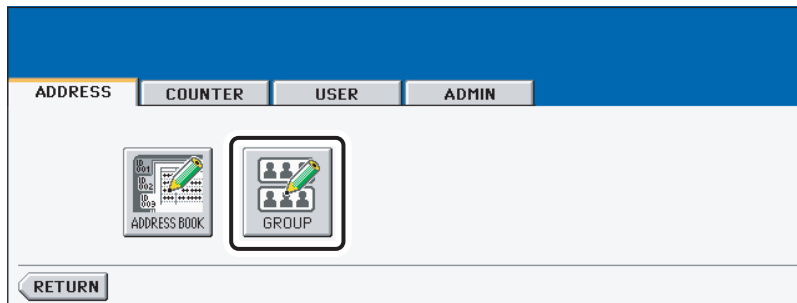

- The GROUP screen is displayed.

- 3** Press the [KNOWN ID] button.

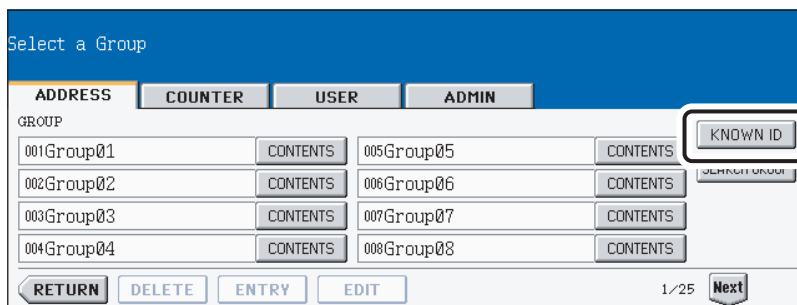

- The KNOWN ID screen is displayed.

- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

The screenshot shows a menu with four tabs: ADDRESS, COUNTER, USER, and ADMIN. The 'ADDRESS' tab is selected. Below the tabs, the text 'KNOWN ID' is followed by 'Enter ID Number'. A yellow input field labeled 'KNOWN ID' contains the number '9'. At the bottom, there are two buttons: 'CANCEL' and 'ENTER', with the 'ENTER' button highlighted by a red box.

- 5 The touch panel displays the screen that contains the searched group. Press the group and press the [EDIT] button to edit the group information.

The screenshot shows a screen titled 'Select a Group'. It has the same four tabs as the previous screen: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, the text 'GROUP' is displayed. A list of groups is shown in a table format:

009Group09	CONTENTS	013Group13	CONTENTS
010Group10	CONTENTS	014Group14	CONTENTS
011Group11	CONTENTS	015Group15	CONTENTS
012Group12	CONTENTS	016Group16	CONTENTS

At the bottom, there are several buttons: 'RETURN', 'DELETE', 'ENTRY', and 'EDIT', with the 'EDIT' button highlighted by a red box. To the right of these buttons, there are 'Next' and 'Prev' navigation buttons. The text '2/25' is also visible.

- See "Editing Groups" for the instruction to edit the group. P.25


Searching Groups by Group Name

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

The screenshot shows a touch panel with the same four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, there are two large icons: 'ADDRESS BOOK' and 'GROUP'. The 'GROUP' icon is highlighted by a red box. At the bottom, there is a 'RETURN' button.


- The GROUP screen is displayed.

3 Press the [SEARCH GROUP] button.

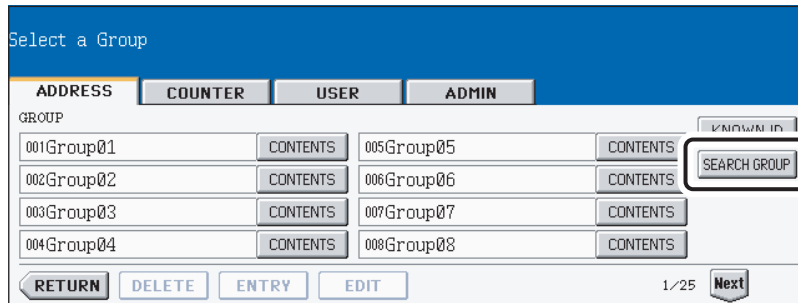

- The SEARCH GROUP screen is displayed.

4 Press the [GROUP NAME] button to specify the search string.

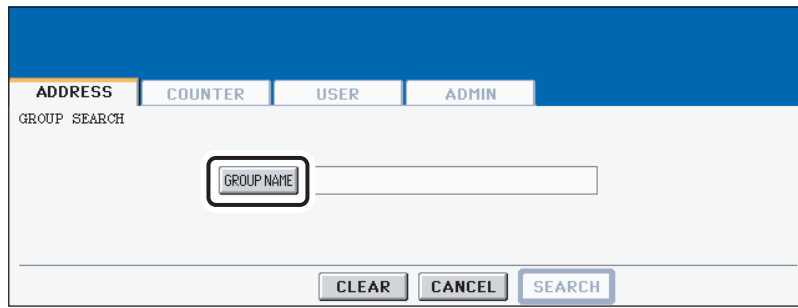

- The input screen is displayed.

5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.



Tip

It will search for the groups that contain the search string in the group name field.

6 Press the [SEARCH] button.

7 The touch panel displays the screen that contains the searched groups. Press the group and press the [ENTER] button to edit the group information.

010Group10	014Group14
011Group11	015Group15
012Group12	016Group16
013Group13	

- See "Editing Groups" for the instruction to edit the contact. P.25

Confirming the Members of the Groups

The following procedure describes how to confirm the contacts that are added in the group.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

- The GROUP screen is displayed.

- 3** Press the [CONTENTS] button of the group that you want to confirm the members.

Select a Group

ADDRESS	COUNTER	USER	ADMIN
GROUP			
001Group01	CONTENTS	005Group05	CONTENTS
002Group02	CONTENTS	006Group06	CONTENTS
003Group03	CONTENTS	007Group07	CONTENTS
004Group04	CONTENTS	008Group08	CONTENTS

KNOWN ID
SEARCH GROUP

RETURN DELETE ENTRY EDIT 1/25 Next

- 4** The contacts added to the group are displayed.

ADDRESS	COUNTER	USER	ADMIN
Check of Group Member			
001User01 User		FAX	099User99 User FAX
003User03 User		FAX	002User02 User E-MAIL
005User05 User		FAX	004User04 User E-MAIL
007User07 User		FAX	006User06 User E-MAIL

RETURN 1/2 Next

2

MANAGING COUNTERS (COUNTER MENU)

TOTAL COUNTER	40
Displaying Print Counter	40
Displaying Scan Counter.....	43
PRINT OUT TOTAL COUNTER	45
DEPARTMENT COUNTER	46
Displaying Print Counter for Department Code.....	46
Displaying Scan Counter for Department Code	49
Displaying Fax Communication Counter for Department Code	51
MANAGING DEPARTMENT CODE	53
Logging On As Administrator	53
Printing Department Codes List	55
Enabling Department Code	55
Resetting All Department Counters.....	57
Deleting All Department Codes.....	58
Registering a New Department Code	59
Editing the Department Code	63
Deleting the Department Code.....	67
Resetting the Counter of Each Department	69
Setting Output Limitations for All Departments	71
Setting No Limit Black.....	73
CHECKING TONER AMOUNT	74

TOTAL COUNTER


Displaying Print Counter

This feature allows you to display the Print Counter.

The print counter contains following counters:


- **Copy Counter** — indicates the number of sheets that have been printed by copy operations.
- **Fax Counter** — indicates the number of sheets that have been printed by fax receptions.
- **Printer Counter** — indicates the number of sheets that have been printed by print operations and E-mail receptions (Internet Fax receptions).
- **List Counter** — indicates the number of sheets that have been printed by system page print operations.

- 1 Press the **[USER FUNCTIONS]** button on the control panel to enter the User Functions menu.
- 2 Press the **[COUNTER]** button, and then press the **[TOTAL COUNTER]** button on the touch panel.

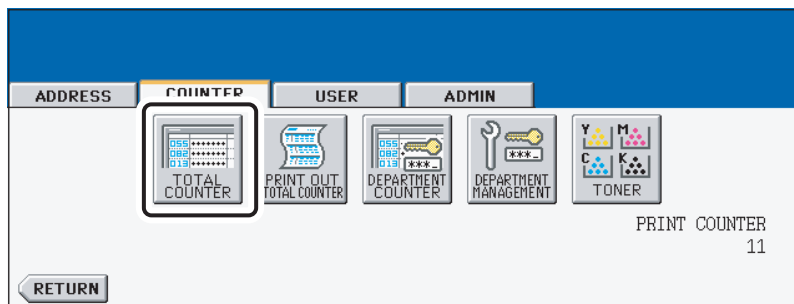

- The TOTAL COUNTER menu is displayed.

- 3 Press the **[PRINT COUNTER]** button.

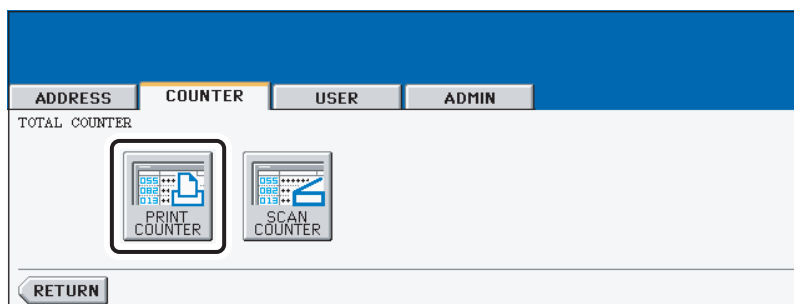

4 The Print Counter is displayed.

ADDRESS	COUNTER	USER	ADMIN	
	Full Color	Twin/Mono Color	Black	Total
Copy	11	0	0	11
Fax	0	0	0	0
Printer	0	0	0	0
List	0	0	0	0
Total	11	0	0	11

Buttons: TOTAL, COPY, FAX, PRINTER, LIST, RETURN

5 Press the [COPY] button to display the total number of copies classified by size group.

COPY COUNTER

ADDRESS	COUNTER	USER	ADMIN	
	Full Color	Twin/Mono Color	Black	Total
Small	11	0	0	11
Large	0	0	0	0
Total	11	0	0	11

Buttons: TOTAL, COPY, FAX, PRINTER, LIST, RETURN

6 Press the [FAX] button to display the total number of faxes classified by size group.

FAX COUNTER

ADDRESS	COUNTER	USER	ADMIN	
	Full Color	Twin/Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
Total	0	0	0	0

Buttons: TOTAL, COPY, FAX, PRINTER, LIST, RETURN

- 7** Press the [PRINTER] button to display the total number of prints classified by size group.

ADDRESS	COUNTER	USER	ADMIN		
PRINTER COUNTER					
	Full Color	Twin/Mono Color	Black	Total	TOTAL
Small	0	0	0	0	COPY
Large	0	0	0	0	FAX
Total	0	0	0	0	PRINTER
					LIST
RETURN					

- 8** Press the [LIST] button to display the total number of printed lists classified by size group.

ADDRESS	COUNTER	USER	ADMIN		
LIST COUNTER					
	Full Color	Twin/Mono Color	Black	Total	TOTAL
Small	0	0	0	0	COPY
Large	0	0	0	0	FAX
Total	0	0	0	0	LIST
					LIST
RETURN					


Displaying Scan Counter

This feature allows you to display the Scan Counter.

The scan counter contains following counters:


- **Copy Counter** — indicates the number of originals that have been scanned by copy operations.
- **Fax Counter** — indicates the number of originals that have been scanned by fax and Internet Fax transmissions.
- **Network Counter** — indicates the number of originals that have been scanned by scan operations.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [COUNTER] button, and then press the [TOTAL COUNTER] button on the touch panel.

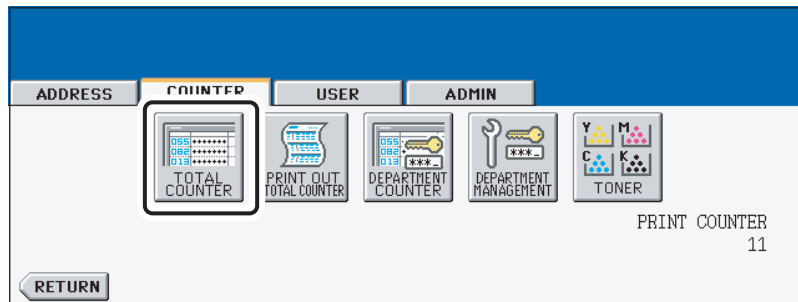

- The TOTAL COUNTER menu is displayed.

- 3** Press the [SCAN COUNTER] button.

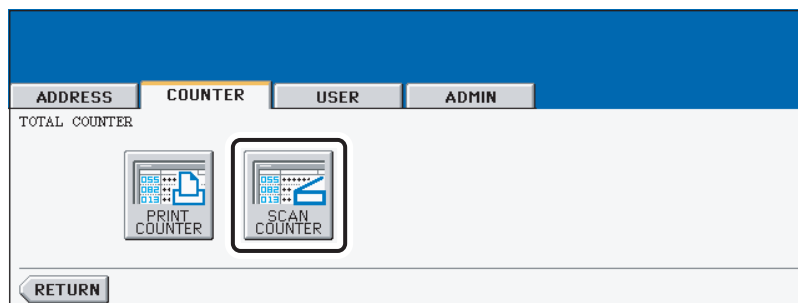

4 The Scan Counter is displayed.


SCAN COUNTER				
	Full Color	Twin/Mono Color	Black	Total
Copy	9	0	0	9
Fax	0	0	0	0
Network	0	0	0	0
Total	9	0	0	9

RETURN

PRINT OUT TOTAL COUNTER

This feature allows you to print the total counter list.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [COUNTER] button, and then press the [PRINT OUT TOTAL COUNTER] button on the touch panel.

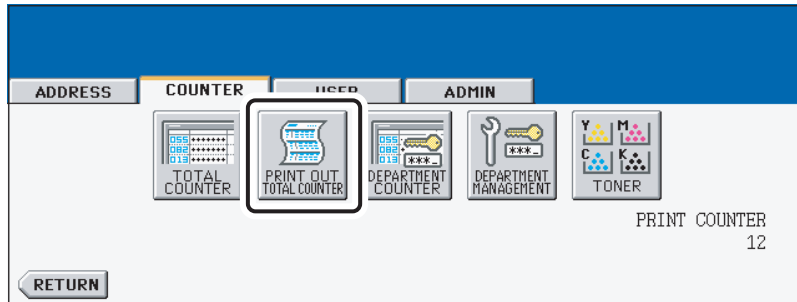

- The total counter list is printed.

Tip

For an output example of the total counter list, see "Total Counter List".  P.196

DEPARTMENT COUNTER

Displaying Print Counter for Department Code

This feature allows you to display the number of the print counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code. [P.53 “MANAGING DEPARTMENT CODE”](#)

The print counter contains following counters:


- **Copy Counter** — indicates the number of sheets that have been printed by copy operations.
- **Fax Counter** — indicates the number of sheets that have been printed by polling operations.
- **Printer Counter** — indicates the number of sheets that have been printed by print operations.
- **List Counter** — indicates the number of sheets that have been printed by system page print operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

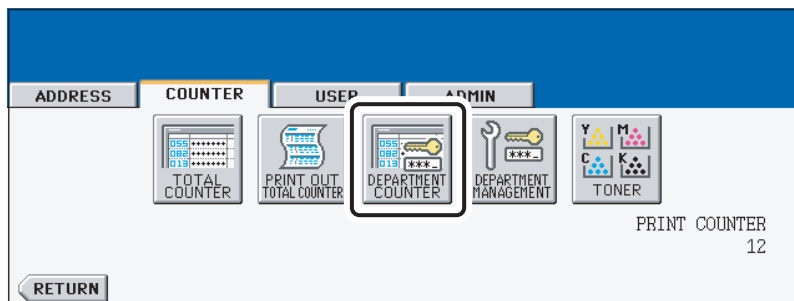


- The DEPARTMENT CODE screen is displayed.


- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

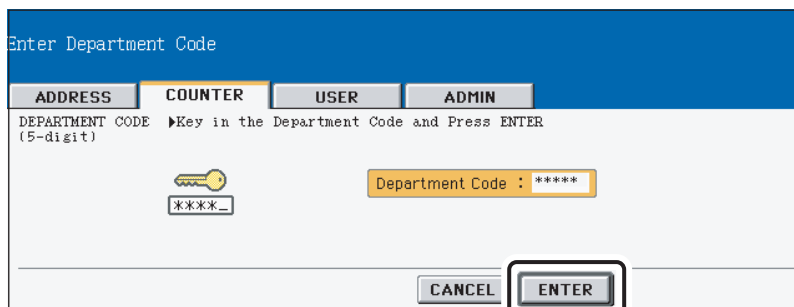


4 Press the [PRINT COUNTER] button.

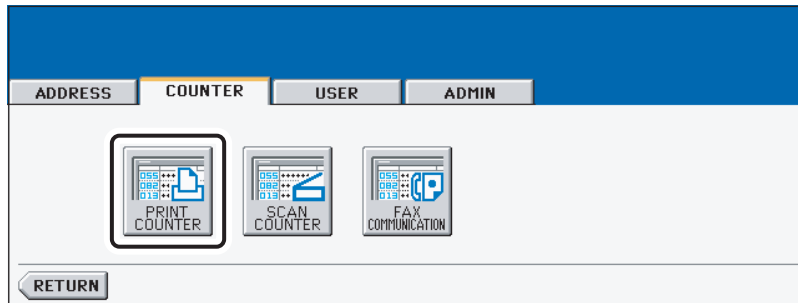

5 The Print Counter for the specified department code is displayed.

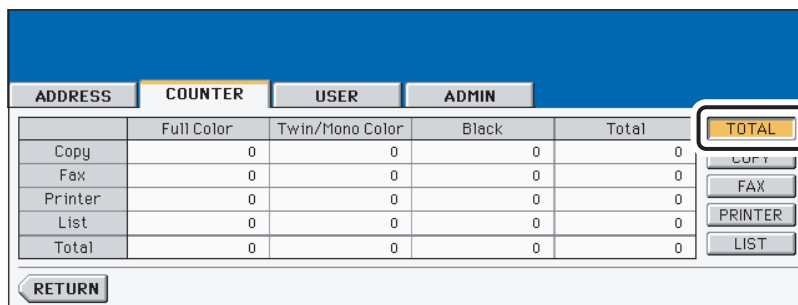

6 Press the [COPY] button to display the total number of copies classified by size group.

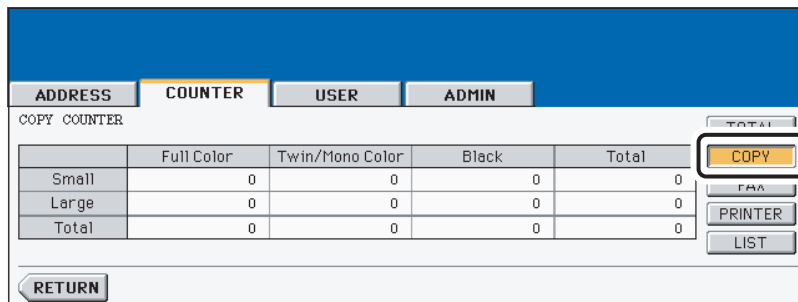

- 7** Press the [FAX] button to display the total number of faxes classified by size group.

ADDRESS	COUNTER	USER	ADMIN		
FAX COUNTER					
	Full Color	Twin/Mono Color	Black	Total	TOTAL
Small	0	0	0	0	COPY
Large	0	0	0	0	FAX
Total	0	0	0	0	PRINTED
					LIST
RETURN					

- 8** Press the [PRINTER] button to display the total number of prints classified by size group.

ADDRESS	COUNTER	USER	ADMIN		
PRINTER COUNTER					
	Full Color	Twin/Mono Color	Black	Total	TOTAL
Small	0	0	0	0	COPY
Large	0	0	0	0	FAX
Total	0	0	0	0	PRINTER
					LIST
RETURN					


- 9** Press the [LIST] button to display the total number of printed lists classified by size group.

ADDRESS	COUNTER	USER	ADMIN		
LIST COUNTER					
	Full Color	Twin/Mono Color	Black	Total	TOTAL
Small	0	0	0	0	COPY
Large	0	0	0	0	FAX
Total	0	0	0	0	PRINTED
					LIST
RETURN					

Displaying Scan Counter for Department Code

This feature allows you to display the number of the scan counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code.  P.53 "MANAGING DEPARTMENT CODE"

The scan counter contains following counters:


- **Copy Counter** — indicates the number of originals that have been scanned by copy operations.
- **Fax Counter** — indicates the number of originals that have been scanned by fax and Internet Fax transmissions.
- **Network Counter** — indicates the number of originals that have been scanned by scan operations.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

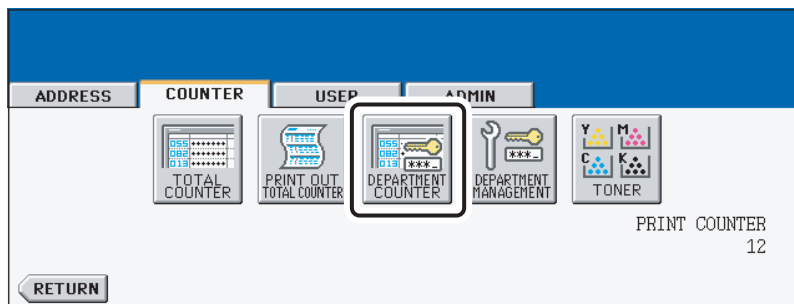


- The DEPARTMENT CODE screen is displayed.

- 3** Enter the department number using the digital keys, and then press the [ENTER] button.

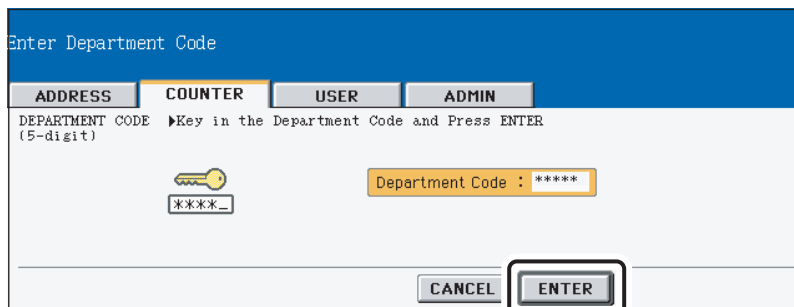

4 Press the [SCAN COUNTER] button.

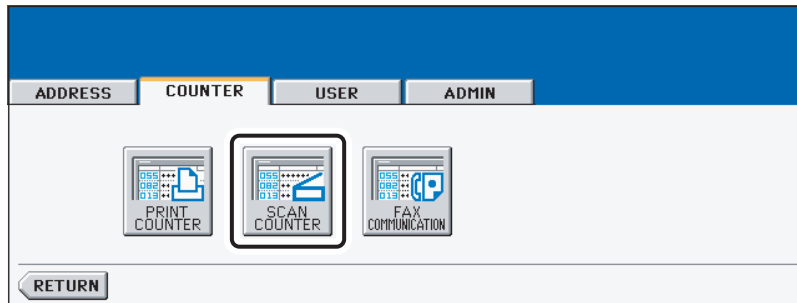


5 The Scan Counter for the specified department code is displayed.

SCAN COUNTER				
	Full Color	Twin/Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Network	0	0	0	0
Total	0	0	0	0

Displaying Fax Communication Counter for Department Code

This feature allows you to display the number of the Fax and Internet Fax Transmission and Reception counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code.  P.53 "MANAGING DEPARTMENT CODE"

The fax communication counter contains following counters:


- **Transmit** — indicates the number of pages that are sent by Fax transmissions.
- **Reception** — indicates the number of pages that are received by polling operations.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

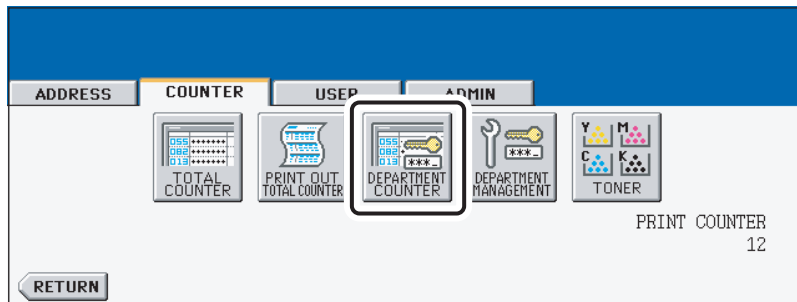


- The DEPARTMENT CODE screen is displayed.

- 3** Enter the department number using the digital keys, and then press the [ENTER] button.

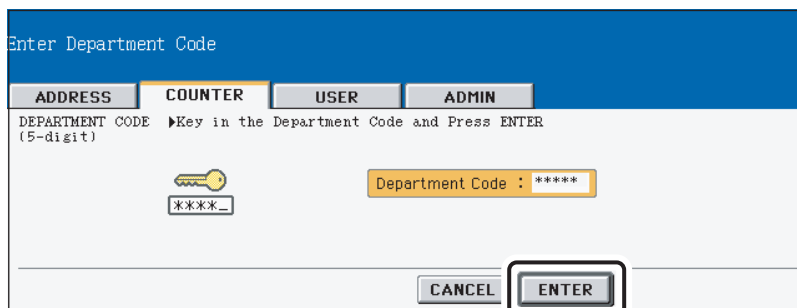

4 Press the [FAX COMMUNICATION] button.

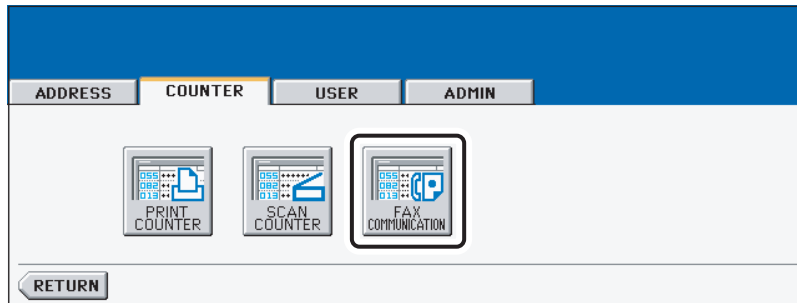

5 The Fax Communication Counter for the specified department code is displayed.

The screenshot shows the same menu interface as in step 4, but now the FAX COMMUNICATION icon is selected. Below the icons, the text "FAX COMMUNICATION" is displayed. Below this text is a table with the following data:

	Transmit	Reception	Total
Small	0	0	0
Large	0	0	0
Total	0	0	0

At the bottom of the screen is a RETURN button.

MANAGING DEPARTMENT CODE

Logging On As Administrator


You can audit the copy quantity of copy, print, scan, and facsimile pages performed by setting a department code. Up to 1000 department codes can be registered.

To manage the department code, you must know the administrator password for this equipment. Therefore, it is recommended to be performed by an authorized administrator in your place.

Note


If the User Management Setting is enabled and you login with the user name that has the Account Manager privilege, you do not have to enter the administrator password to display the DEPARTMENT MANAGEMENT menu.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT MANAGEMENT] button on the touch panel.**

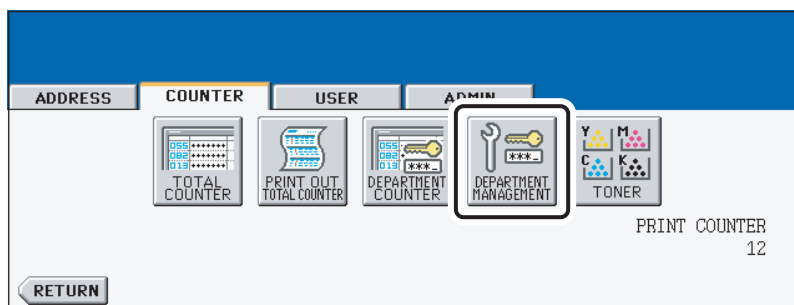

- The ADMINISTRATOR PASSWORD screen is displayed.

- 3 Press the [PASSWORD] button.**

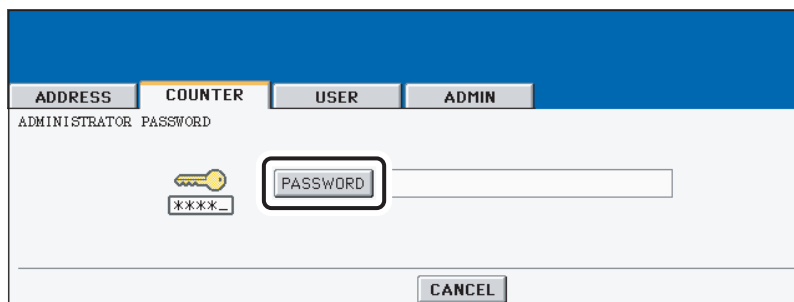


- The input screen is displayed.

4 Enter the administrator password and press the [ENTER] button.



- The DEPT. MANAGEMENT menu is displayed.

5 Continue the operation that you want.

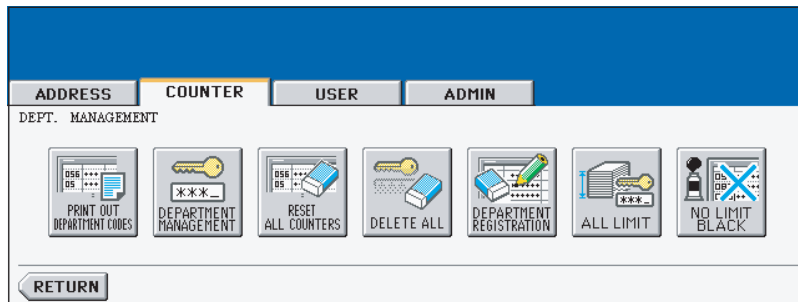


- P.55 "Printing Department Codes List"
- P.55 "Enabling Department Code"
- P.57 "Resetting All Department Counters"
- P.58 "Deleting All Department Codes"
- P.59 "Registering a New Department Code"
- P.63 "Editing the Department Code"
- P.67 "Deleting the Department Code"
- P.69 "Resetting the Counter of Each Department"
- P.71 "Setting Output Limitations for All Departments"
- P.73 "Setting No Limit Black"

Printing Department Codes List

You can print out the department codes list and counters for each department code.

- 1 In the DEPT. MANAGEMENT menu, press the [PRINT OUT DEPARTMENT CODES] button.

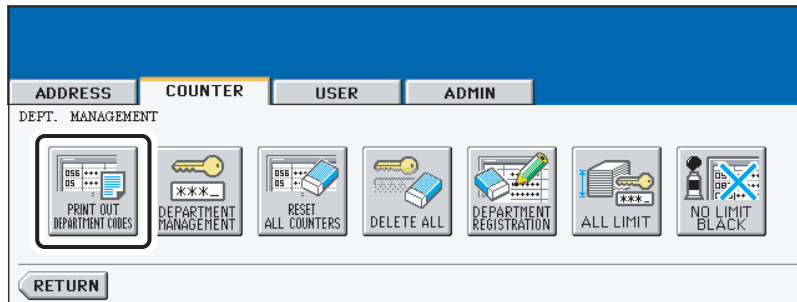

- Printing begins.

Tips

- For the procedure to display the screen above, see "Logging On As Administrator".
📖 P.53
- For an output example of the department code list, see "Department Code List".
📖 P.197


Enabling Department Code

In the initial setting, the department code feature is disabled. If you want to manage the counter separately by the department codes, you must enable the department code. When the department management is enabled, the department code input screen will be displayed before entering the copy, scan, fax, and e-Filing operation screen to manage the operations for each department code. Also the print jobs that are sent from computers can be managed for each department code.

Notes


- The [DEPARTMENT MANAGEMENT] button will be available after registering a department code. Before enabling the department code, register the required department code.
📖 P.59 "Registering a New Department Code"
- Using TopAccess, you can also configure the Department Code Enforcement setting that sets whether the invalid jobs, which a department code is not specified or invalid department code is specified, will be printed or stored in the invalid job list when the department management is enabled. For instructions on how to set the Department Code Enforcement, see **TopAccess Guide**.
- When the User Management Setting is enabled, the Department Code feature cannot be disabled. If you want to disable the Department Code, you must disable the User Management Setting and then disable the Department Code.
- When the Department Management is disabled, the No Limit Black function is also disabled. Therefore, the No Limit Black function is set as disabled every time you enable the Department Management. If you want to enable the No Limit Black function, you must enable it after enabling the Department Management.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT MANAGEMENT] button.

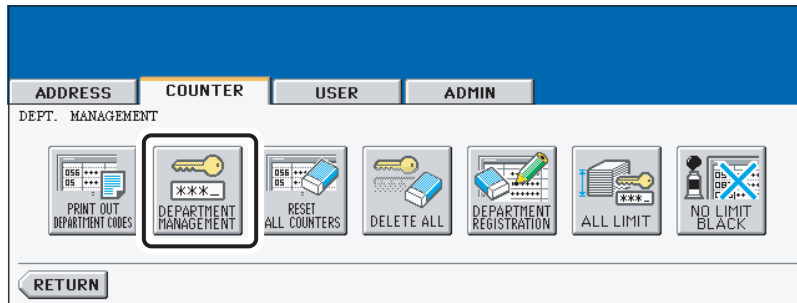


- The DEPARTMENT MANAGEMENT screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

- 2 Press the [ENABLE] button to enable the department code, or [DISABLE] button to disable the department code.

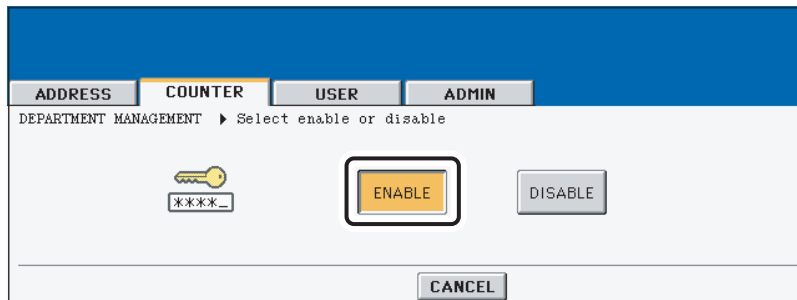


Resetting All Department Counters

This function clears all department counters to "0".

Notes


- This function is available only when the department code is enabled.
- This function clears only the department counters. You cannot clear the total counter.

1 In the **DEPT. MANAGEMENT** menu, press the **[RESET ALL COUNTERS]** button.

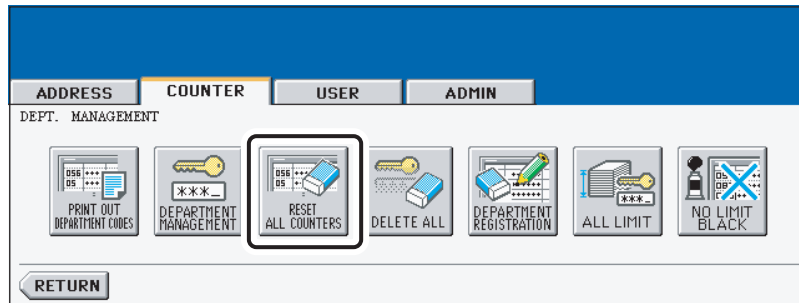


- The clear confirmation screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

2 Press the **[YES]** button to clear all department counters, or **[NO]** button to cancel clearing.

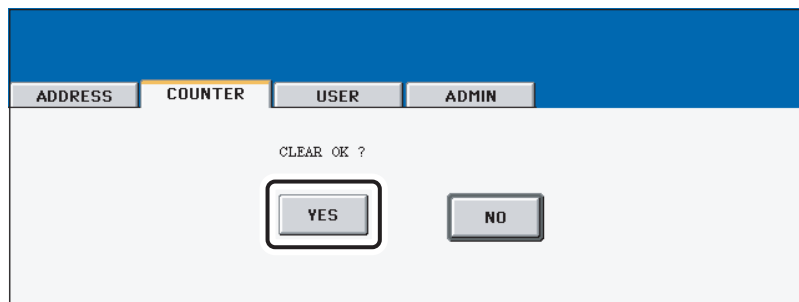


Deleting All Department Codes


This function deletes all department codes that have been registered.

Note

The [DELETE ALL] button will be available after registering a department code.


 P.59 "Registering a New Department Code"

1 In the DEPT. MANAGEMENT menu, press the [DELETE ALL] button.

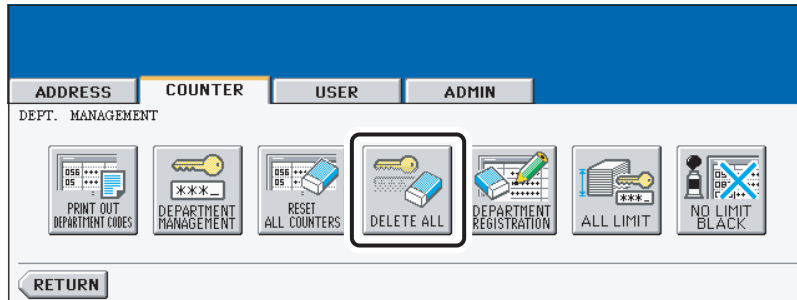


- The delete confirmation screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

2 Press the [YES] button to delete all department codes, or [NO] button to cancel deleting.

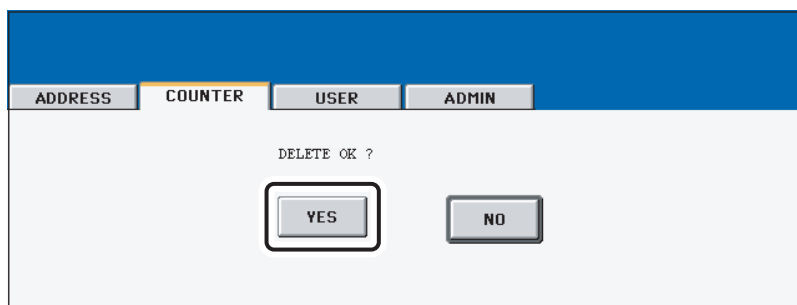

Registering a New Department Code


The function allows you to register new department code.

Note

After registering the department code(s), you must enable the Department Code function.

📖 P.55 “Enabling Department Code”

- 1 In the **DEPT. MANAGEMENT** menu, press the **[DEPARTMENT REGISTRATION]** button.

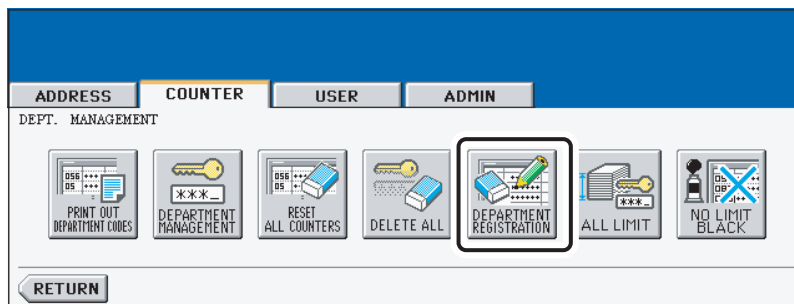


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator". 📖 P.53

- 2 Press the undefined department code and press the **[CHANGE]** button.

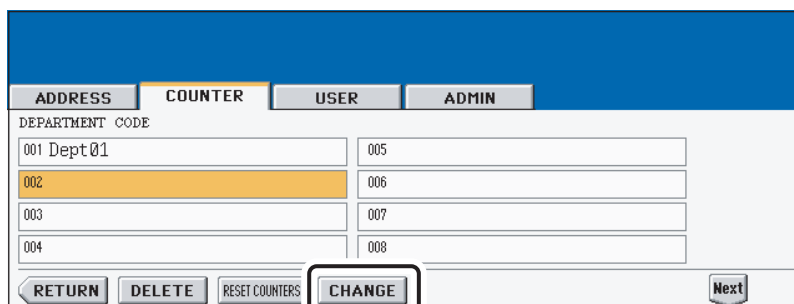

- The input screen is displayed.

Tip


If the touch panel does not display an undefined department code, press the **[Next]** button to display the next screen.

- 3** Enter the department name using the keyboard and digital keys, and press the [ENTER] button.



- The REGISTRATION DEPARTMENT CODE screen is displayed.

- 4** Enter the 5-digit code in the “New Code” field using the digital keys, and then press the [SET] button to set the entry.

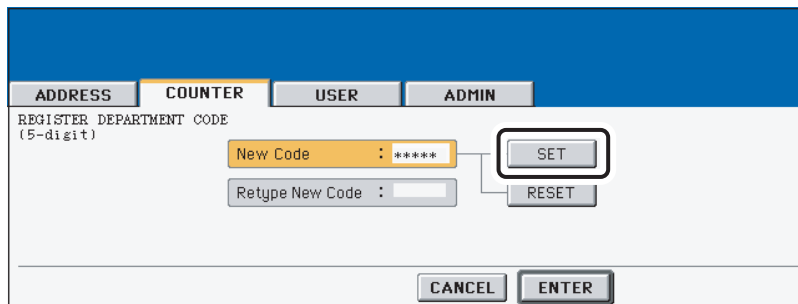

- If you enter the code, asterisks (*) appear in the “New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “Retype New Code” field is highlighted.

Note

The department code must be the 5-digit code except “00000”.

5 Enter the 5-digit code again in the “Retype New Code” field using the digital keys, and then press the [SET] button to set the entry.

REGISTER DEPARTMENT CODE
(5-digit)

New Code : *****

Retype New Code : *****

SET

RESET

CANCEL ENTER

- If you enter the code, asterisks (*) appear in the “Retype New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.

Tip

If you want to return to the “New Code” field to retype it, press the [RESET] button.

6 Press the [ENTER] button at the bottom of the touch panel.

- The LIMITATION screen is displayed.

7 Set the limitation of this department code as required.

The screenshot shows a menu interface with four tabs: ADDRESS, COUNTER, USER, and ADMIN. The 'COUNTER' tab is selected. Below the tabs, there is a 'LIMITATION' section with a prompt '▶Key in the number'. The interface is split into two columns: 'COLOR' and 'BLACK'. Each column has an 'ON' button (highlighted in yellow) and an 'OFF' button. Below each button is a 'Limitation' field with a numeric keypad and a minus sign. At the bottom of each column, it says 'PRINT COUNTER : 0'. At the very bottom of the screen are 'CANCEL' and 'ENTER' buttons.

- **COLOR** — Press the [ON] button to enable the color output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the color outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for color outputs, press the [OFF] button.
- **BLACK** — Press the [ON] button to enable the black output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the black outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for black outputs, press the [OFF] button.

Notes

- If you enter "0" for the limitation, it will disable printing any copies or prints using this department code.
- When the No Limit Black function is enabled, you cannot set the limitation for black.
- When the number of outputs exceeds the limitation during the job is being printed, few copies that exceeds the limitation are printed and counted because the equipment cannot stop the job immediately.


8 Press the [ENTER] button.

- New department code is registered.

Editing the Department Code


The function allows you to edit the existing department code.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

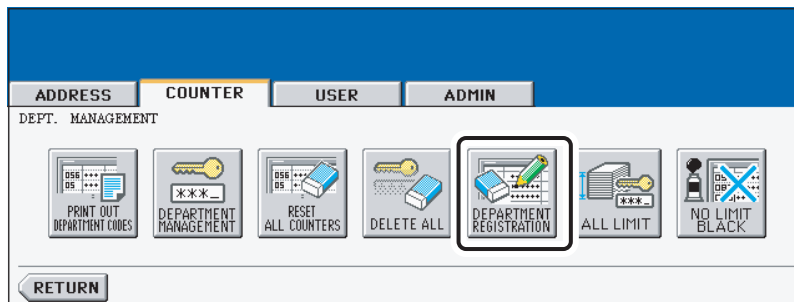


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

- 2 Press the department button that you want to edit and press the [CHANGE] button.

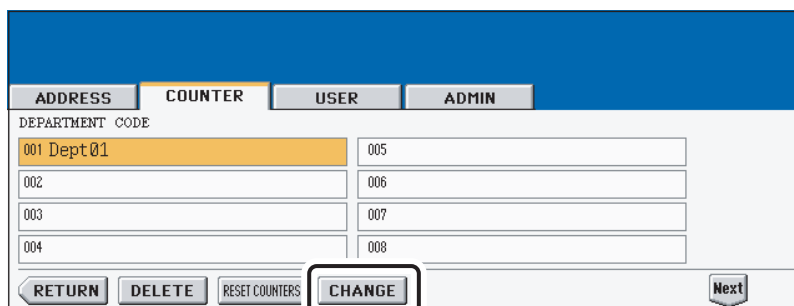

- The message "This department code is already registered. Do you wish to replace this code?" is displayed.

Tip

If the touch panel does not display the department code that you want to edit, press the [Next] button to display the next screen.

3 Press the [ENTER] button.

ADDRESS COUNTER USER ADMIN

This department code is already registered
Do you wish to replace this code?

CANCEL ENTER

- The input screen is displayed.

4 Enter the department name using the keyboard and digital keys, and press the [ENTER] button.

Dept01 Edit_

! " # \$ % & ' () = ~ | \ { } Back Space

* < > ? _ - ^ @ + [] ; : / \ ← →

Q W E R T Y U I O P CLEAR

A S D F G H J K L

Z X C V B N M , . Shift Caps Lock

Space CANCEL ENTER Next

- The CHANGE DEPARTMENT CODE screen is displayed.

5 Enter current department code in the “Current Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS COUNTER USER ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : ***** SET

New Code : RESET

Retype New Code :

CANCEL ENTER

- If you enter the code, asterisks (*) appear in the “Current Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “New Code” field is highlighted.

6 Enter new 5-digit code in the “New Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS COUNTER USER ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : *****

New Code : *****

Retype New Code :

SET

RESET

CANCEL ENTER

- If you enter the code, asterisks (*) appear in the “New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “Retype New Code” field is highlighted.

Note

The department code must be the 5-digit code except “00000”.

Tip

If you want to return to the “Current Code” field to retype it, press the [RESET] button.

7 Enter new 5-digit code again in the “Retype New Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS COUNTER USER ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : *****

New Code : *****

Retype New Code : *****

SET

RESET

CANCEL ENTER

- If you enter the code, asterisks (*) appear in the “Retype New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.

Tip

If you want to return to the “Current Code” field or “New Code” field to retype them, press the [RESET] button.

8 Press the [ENTER] button at the bottom of the touch panel.

- The LIMITATION screen is displayed.

9 Set the limitation of this department code as required.

The screenshot shows a menu interface with four tabs: ADDRESS, COUNTER, USER, and ADMIN. The 'COUNTER' tab is selected. Below the tabs, there is a 'LIMITATION' section with a prompt '▶Key in the number'. Under this, there are two main sections: 'COLOR' and 'BLACK'. Each section has an 'ON' button and an 'OFF' button. Below each button is a 'Limitation' field with a numeric keypad and a minus sign. At the bottom of each section is a 'PRINT COUNTER' field with a colon and the number '0'. At the very bottom of the screen are 'CANCEL' and 'ENTER' buttons.

- **COLOR** — Press the [ON] button to enable the color output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the color outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for color outputs, press the [OFF] button.
- **BLACK** — Press the [ON] button to enable the black output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the black outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for black outputs, press the [OFF] button.

Notes

- If you enter "0" for the limitation, it will disable printing any copies or prints using this department code.
- When the No Limit Black function is enabled, you cannot set the limitation for black.
- When the number of outputs exceeds the limitation during the job is being printed, few copies that exceeds the limitation are printed and counted because the equipment cannot stop the job immediately.


10 Press the [ENTER] button.

- The department code is edited.

Deleting the Department Code


The function allows you to delete the existing department code.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

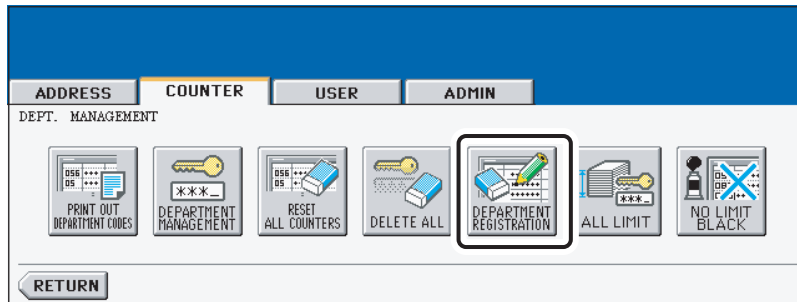


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

- 2 Press the department button that you want to delete and press the [DELETE] button.

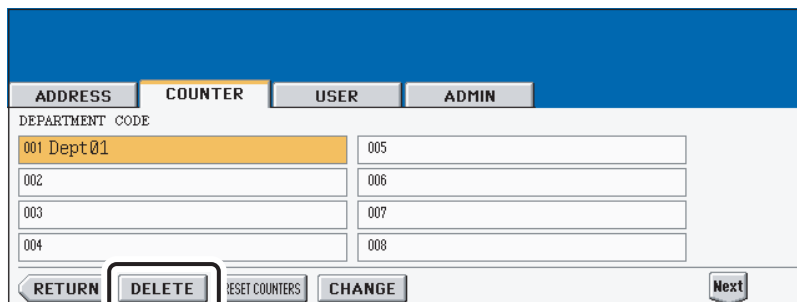


- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the department code that you want to delete, press the [Next] button to display the next screen.

3 Press the [YES] button to delete the department code, or [NO] button to cancel deleting.

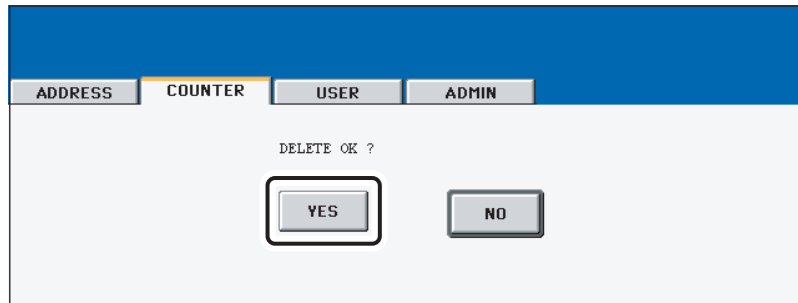


- When you press the [YES] button, the department code is deleted.

Resetting the Counter of Each Department


The function allows you to reset the counter of specific department code only.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

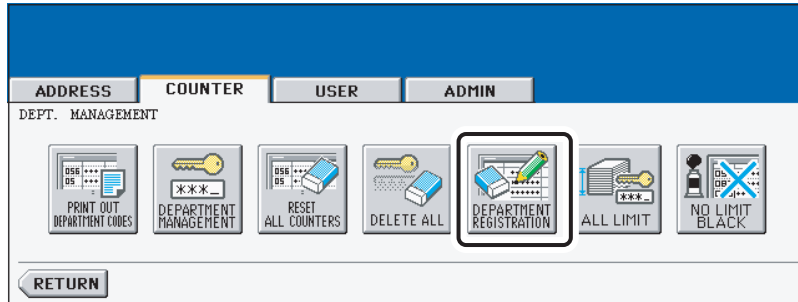


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

- 2 Press the department button that you want to reset the counter and press the [RESET COUNTERS] button.

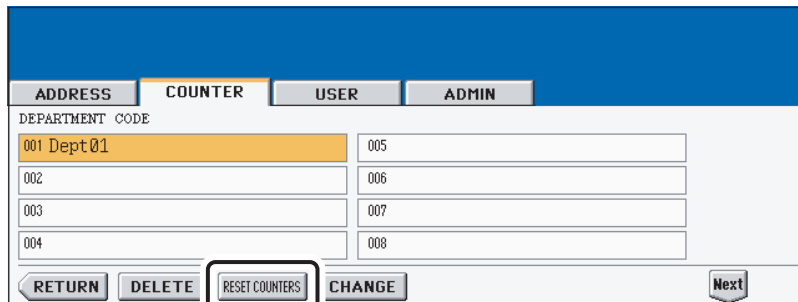


- The clear confirmation screen is displayed.

Tip

If the touch panel does not display the department code that you want to clear the counter, press the [Next] button to display the next screen.

- 3 Press the [YES] button to clear the counter of the department code, or [NO] button to cancel clearing the counter.

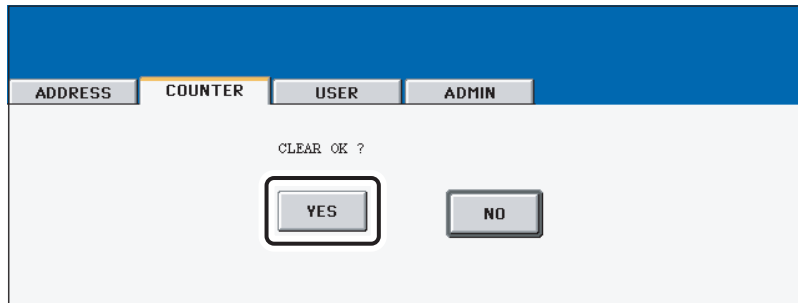

- When you press the [YES] button, the counter of the department code is cleared.

Setting Output Limitations for All Departments


This function allows you to set the output limitation for all departments by a single operation. When you select [ON], the output will be disabled for all departments. When you select [OFF], the infinite outputs will be allowed for all departments.

Tip

When you select [ON], the limitation setting for each department code will be set to [ON] and the "Limitation" field will be set to "0". If you want to change the limitation setting for each department code, change the limitation setting by editing a department code.


 P.63 "Editing the Department Code"

1 In the DEPT. MANAGEMENT menu, press the [ALL LIMIT] button.

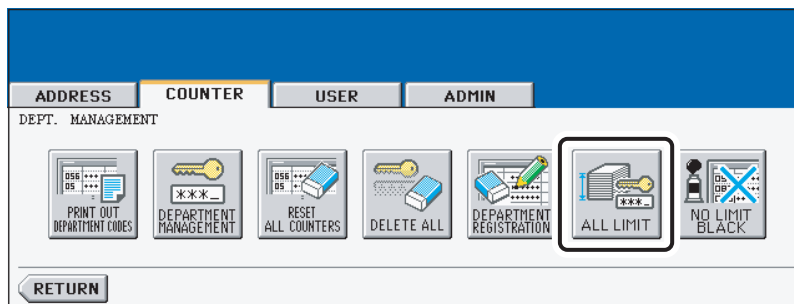


- The ALL LIMIT screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

2 Specify following items as required.

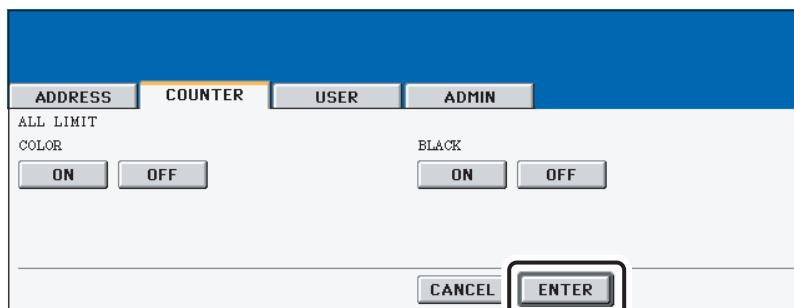

- **COLOR** — Press the [ON] button to disable the color copies/prints for all departments, or [OFF] button to permit infinite color copies/prints for all departments.
- **BLACK** — Press the [ON] button to disable the black copies/prints for all departments, or [OFF] button to permit infinite black copies/prints for all departments.

Note

The All Limit function for black cannot be set when the No Limit Black function is enabled.

3 Press the [ENTER] button.

- The output limitation settings are saved. After pressing the [ENTER] button, the “WAIT” message is displayed until the setting is applied. This may take a time according to the amount of the registered department codes.


Setting No Limit Black

When No Limit Black function is enabled, users can perform any numbers of the black copies/prints on this equipment and it will not count the number of black copies/prints for each department code.

Note


When the Department Management is disabled, the No Limit Black function is also disabled. Therefore, the No Limit Black function is set as disabled every time you enable the Department Management. If you want to enable the No Limit Black function, you must enable it after enabling the Department Management.

- 1** In the **DEPT. MANAGEMENT** menu, press the **[NO LIMIT BLACK]** button.

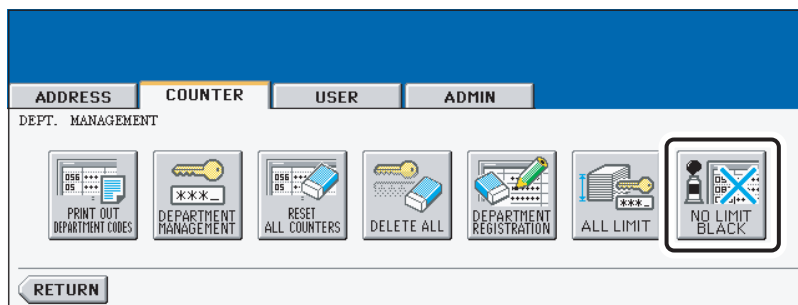


- The NO LIMIT BLACK COPY/PRINT screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.53

- 2** Press the **[ENABLE]** button to enable the No Limit Black function, or the **[DISABLE]** button to disable the No Limit Black function.

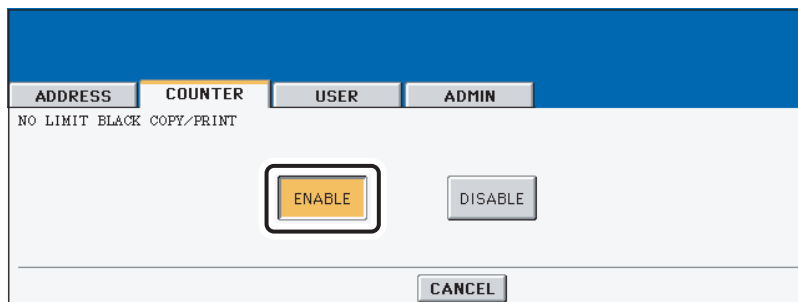


- The No Limit Black setting is saved.

CHECKING TONER AMOUNT


This feature allows you to check the toner amount for each color.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [TONER] button on the touch panel.

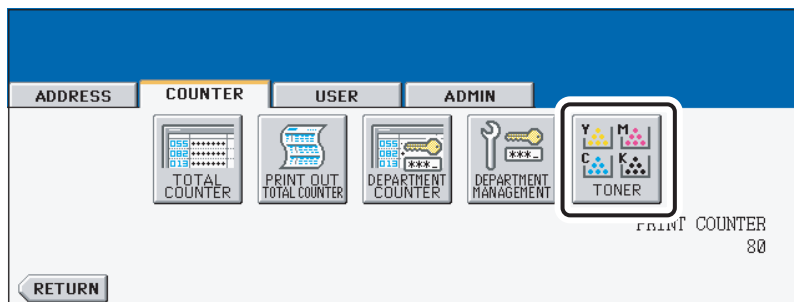

- The TONER screen is displayed.

- 3 You can check how much amount of toner is remained in each toner cartridge.

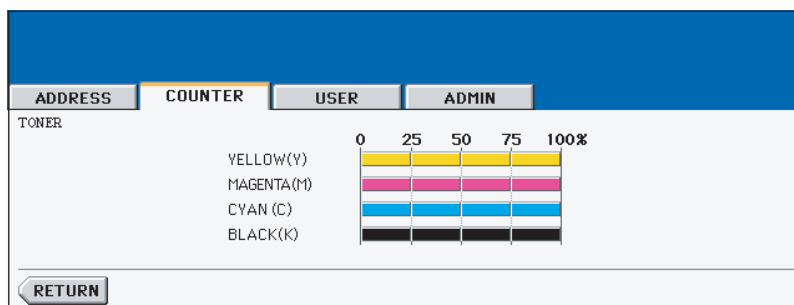

3

SETTING ITEMS (USER)


SETTING GENERAL FUNCTIONS	76
Setting the Auto Clear Mode	76
Changing the Display Language	78
Setting the Reversed Display Mode.....	79
Replacing the Toner Cartridge	81
Setting the Calibrations	83
Setting the Registration.....	85
SETTING COPY FUNCTIONS	86
SETTING FAX FUNCTIONS	88
SETTING SCAN FUNCTIONS	90
SETTING E-FILING FUNCTIONS	93
PRINTING LISTS	94
Printing the Address Book List.....	94
Printing the Group Numbers List.....	96
Printing the Function List (User).....	97
SETTING DRAWER	98
CHECKING E-MAIL	100
TURN OFF THE POWER (SHUT DOWN)	101
SETTING BIP PRINTING	103

SETTING GENERAL FUNCTIONS

Setting the Auto Clear Mode


This function sets how long the machine waits before clearing the previous functions set on the control panel.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [USER] button, and then press the [GENERAL] button on the touch panel.

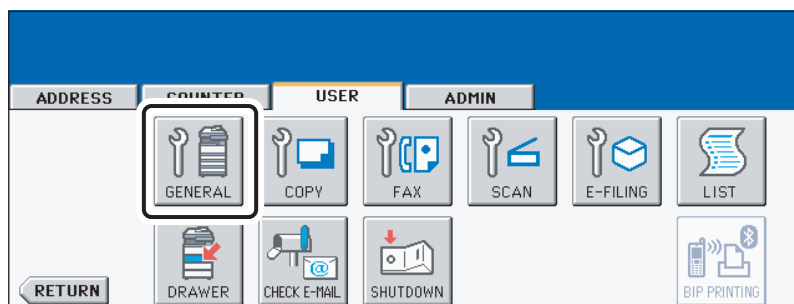

- The GENERAL menu is displayed.

- 3** Press the [AUTO CLEAR] button.

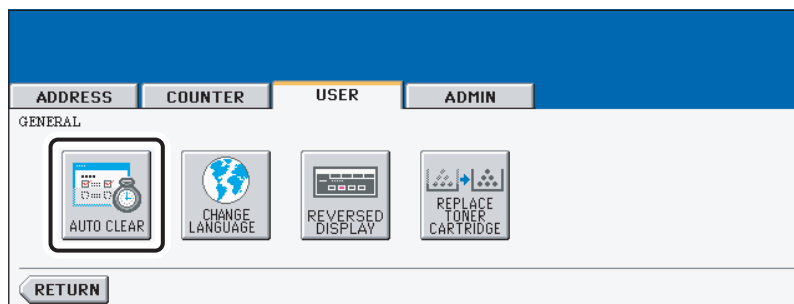

- The AUTO CLEAR screen is displayed.

4 Press the button that indicates the desired time in seconds.

ADDRESS COUNTER USER ADMIN

AUTO CLEAR

15 30 45 60 75

90 105 120 135 150

NO LIMIT

CANCEL

- The Auto Clear mode has been set to selected time.


Tips

- If you want to disable the Auto Clear mode, press the [NO LIMIT] button.
- Even if the [NO LIMIT] button is selected, the screen will be cleared after 45 seconds in case that users operate in the USER FUNCTION, JOB STATUS, or TEMPLATE screen.

Changing the Display Language


The language used on the touch panel can be changed to a different one.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.

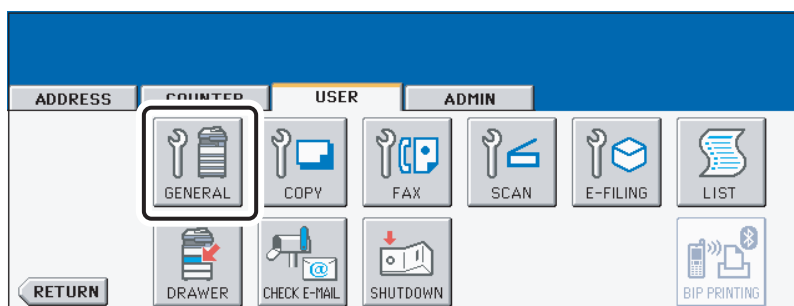


- The GENERAL menu is displayed.

- 3 Press the [CHANGE LANGUAGE] button.

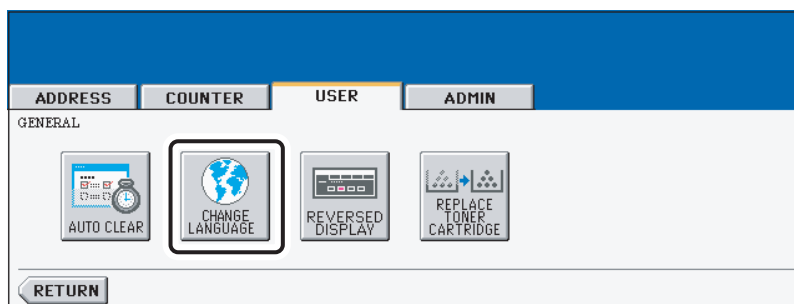

- The CHANGE LANGUAGE screen is displayed.

- 4 Press the desired language button.

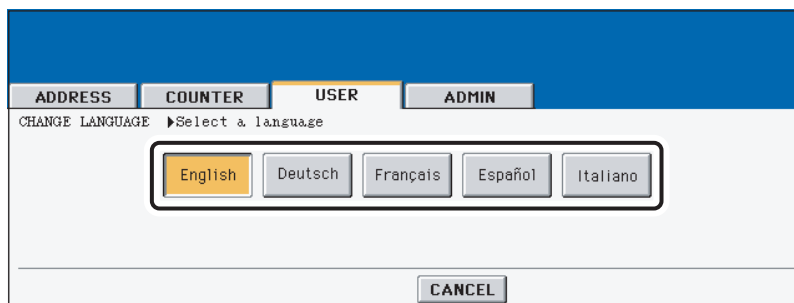


- The touch panel is displayed in the selected language.

Setting the Reversed Display Mode

You can change the touch panel to be displayed in the Reversed Display mode (which the white portion will be black and the black portion will be white).


Changing to the Reversed Display mode helps you to display the touch panel more clearly where it is too bright to see the touch panel.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.**

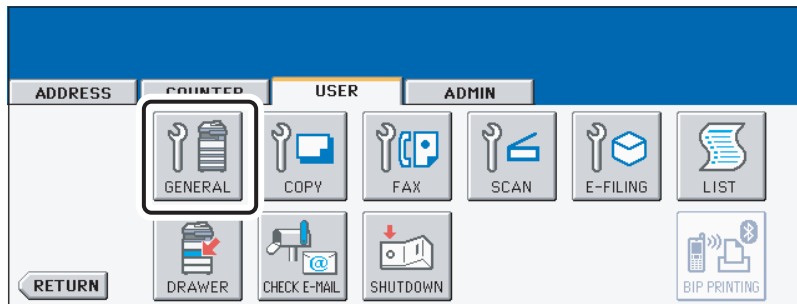


- The GENERAL menu is displayed.

- 3 Press the [REVERSED DISPLAY] button.**

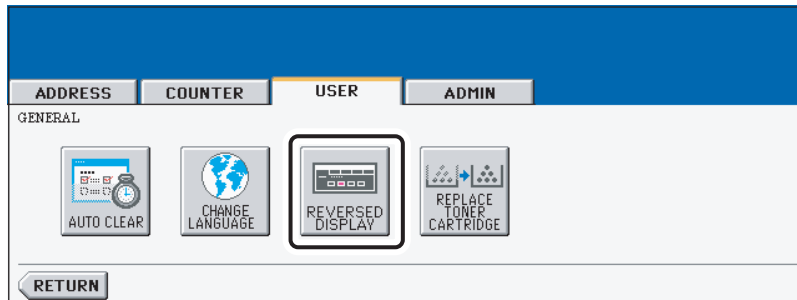


- The REVERSED DISPLAY screen is displayed.

- 4** Press the [ON] button to enable the Reversed Display, or [OFF] button to disable the Reversed Display.

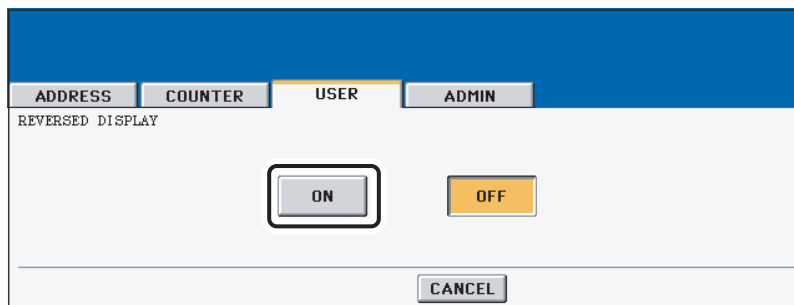


- When you select the [ON] button, the touch panel is displayed in the Reversed Display mode.

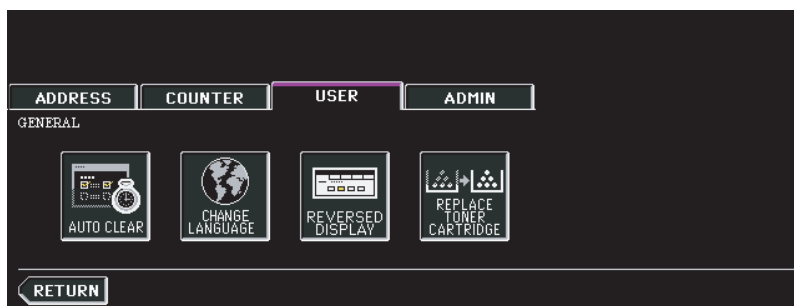

Replacing the Toner Cartridge


When you want to replace the toner cartridges before the Touch Panel Display indicates the toner empty message, you can replace them by the following procedure.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.

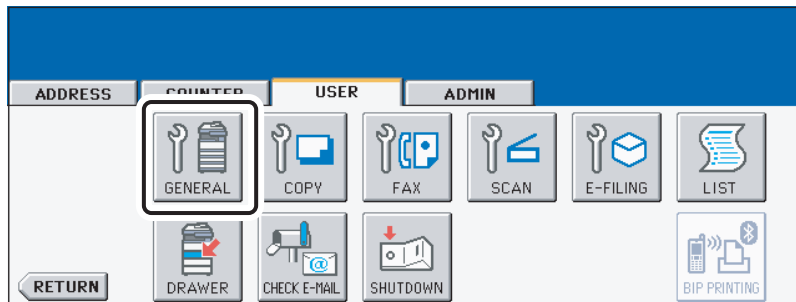


- The GENERAL menu is displayed.

- 3 Press the [REPLACE TONER CARTRIDGE] button.

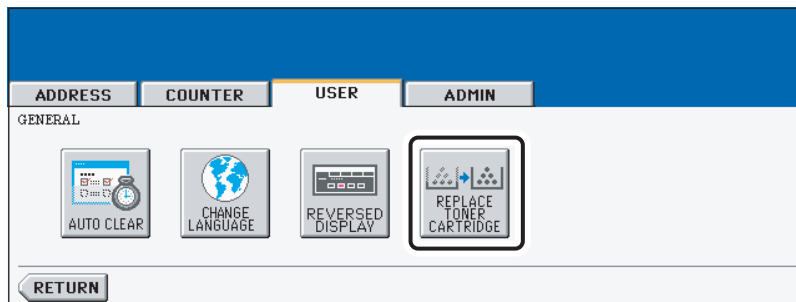

- The REPLACE TONER CARTRIDGE screen is displayed.

- 4 Press the button that indicates the toner cartridges you want to replace.

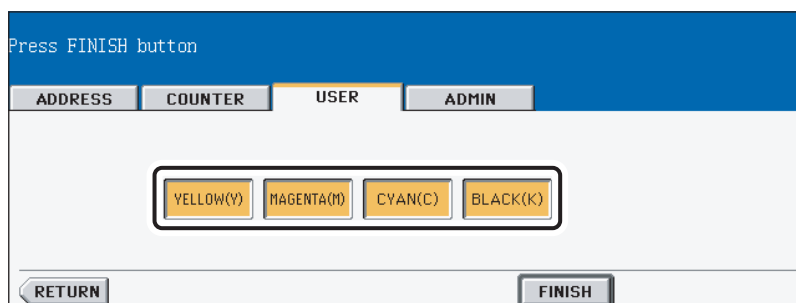


5 Replace the toner cartridges in the equipment.


Note

For instructions on how to replace the toner cartridges, please see the *Operator's Manual for Basic Functions*.

6 After replacing the toner cartridges, press the [FINISH] button.

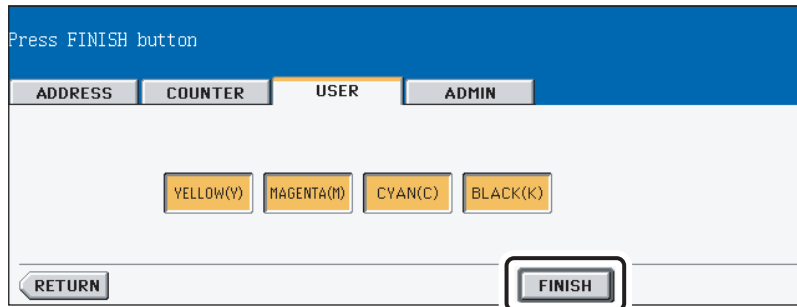

7 Press the [YES] button.

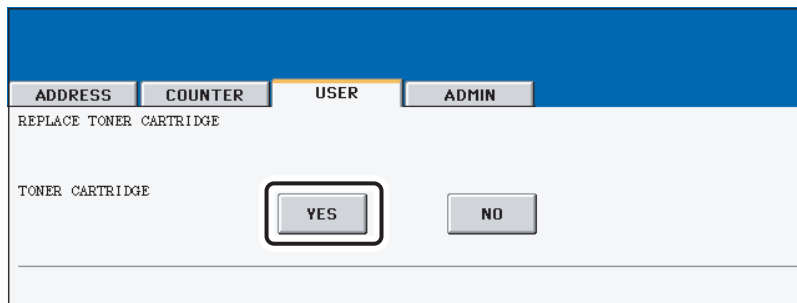

Setting the Calibrations

This equipment allows you to calibrate the color gradation for copy and print.

Notes

- The copy calibration setting in the [USER] menu can be configured only when an administrator has set the Calibration Display Level to [USER].
P.124 “Setting the Calibration and Registration Display Level”
- When the private print jobs, schedule print jobs, or invalid jobs are stored in the job list, the calibrations cannot be performed. In that case, delete the jobs in the job list.


This function allows the machine automatically to calibrate the color gradation for copy and printing jobs when the color cannot be adjusted well because the shading or the hue of the image has deviated.

- Set the LT-sized or A4-sized paper (recommended paper) in the cassette before starting the calibration. If any other paper is used, calibration may not be performed properly.
- If the color often deviates, call your service technician.

Caution


- If the glass is dirty or any foreign objects are stuck to the glass, the calibration may not be carried out properly. Keep the glass clean.
- Never raise the original cover or the optional Automatic Document Feeder, or open the front cover while the calibration is in progress. If this does happen, the calibration cannot be finished appropriately.
- Interrupt copying is not available during the calibration.

- 1 Place the LT-size or A4-size paper in the cassette.**
- 2 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 3 Press the [USER] button, and then press the [GENERAL] button on the touch panel.**

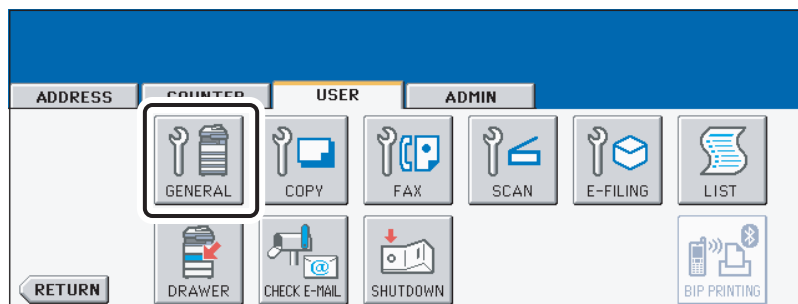

- The GENERAL menu is displayed.

4 Press the [CALIBRATION] button.

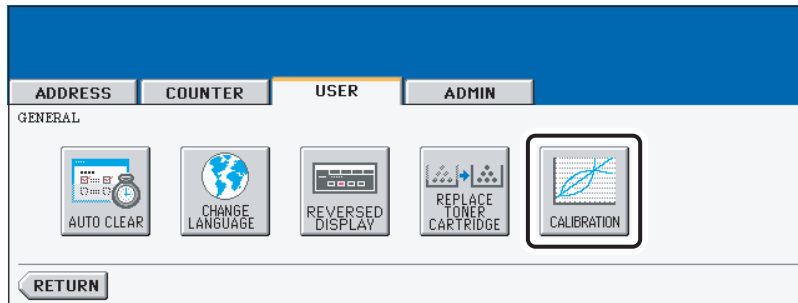

- The CALIBRATION menu is displayed.

5 Please refer to the Step 4 in the following procedures.

When you want to perform the copy calibration: P.126 “Setting the Copy Calibrations”

When you want to perform the print calibration: P.129 “Setting the Print Calibration”

Tip

The instructions on how to perform the copy and print calibration are same when they are performed in the [ADMIN] menu.

Setting the Registration


This equipment allows you to perform the registration to adjust the printing position manually.

Note

The registration setting in the [USER] menu can be configured only when an administrator has set the Registration Display Level to [USER].


📖 P.124 “Setting the Calibration and Registration Display Level”

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.**

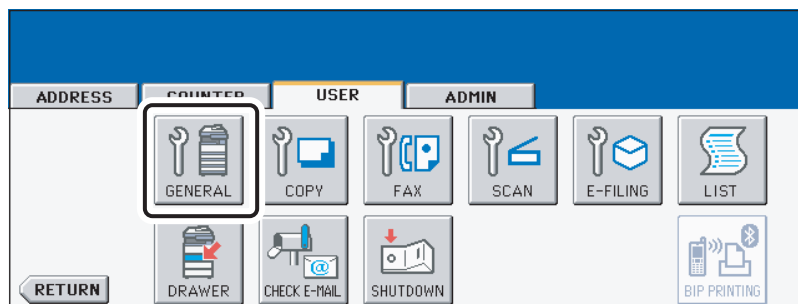

- The GENERAL menu is displayed.

- 3 Press the [REGISTRATION] button.**

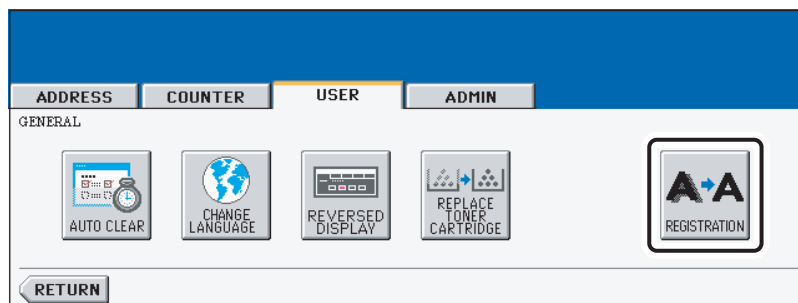

- The REGISTRATION menu is displayed.

- 4 Please refer to the Step 4 in the following procedures.**

📖 P.132 “Setting the Registration”


Tip

The instructions on how to perform the registration is same when it is performed in the [ADMIN] menu.

SETTING COPY FUNCTIONS


You can change the initial setting (default setting) of copy job.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [COPY] button on the touch panel.

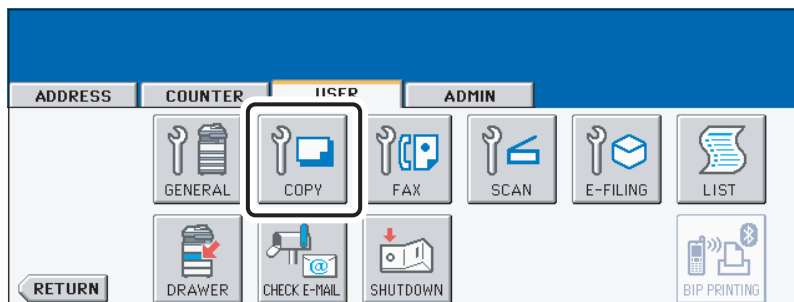

- The COPY screen is displayed.


- 3 Specify the following items as you require.

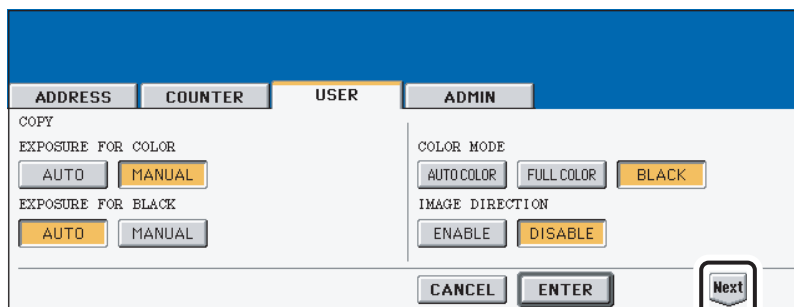

- In the “EXPOSURE FOR COLOR” and “EXPOSURE FOR BLACK” options, press the desired mode button.
- In the “COLOR MODE” option, press the desired mode button. Only [BLACK] can be selected when the No Limit Black function is enabled.
- In the “IMAGE DIRECTION” option, press the desired mode button. For more descriptions for the IMAGE DIRECTION option, please refer to the *Operator’s Manual For Basic Function*.

- 4 Press the [Next] button to display the next screen.

5 Press the desired media type button.

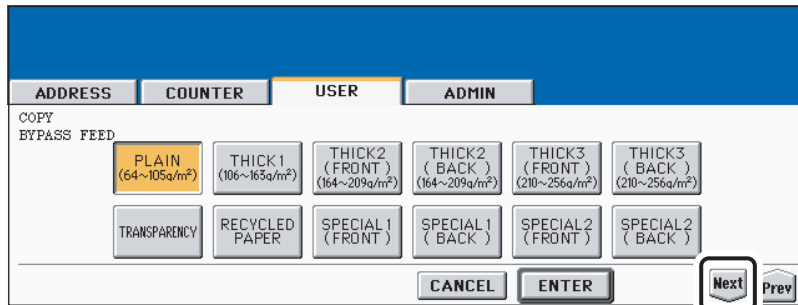


Tip

For more information about the paper type, please see the *Operator's Manual For Basic Functions*.


6 Press the [Next] button to display the next screen.

7 Press the desired mode button for "ORIGINAL MODE FOR COLOR" and "ORIGINAL MODE FOR BLACK" option.

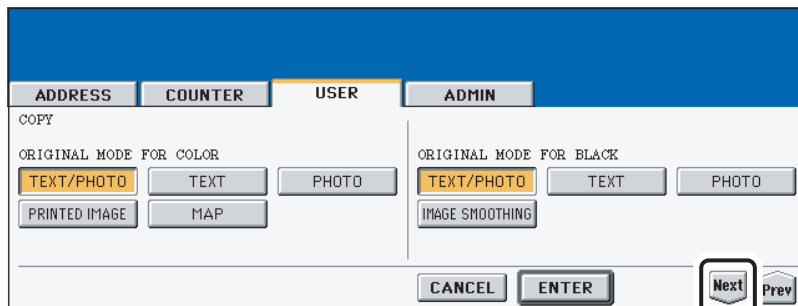

8 Press the [Next] button to display the next screen.

9 Press the desired mode button for "ORIGINAL MODE FOR AUTO COLOR" option.

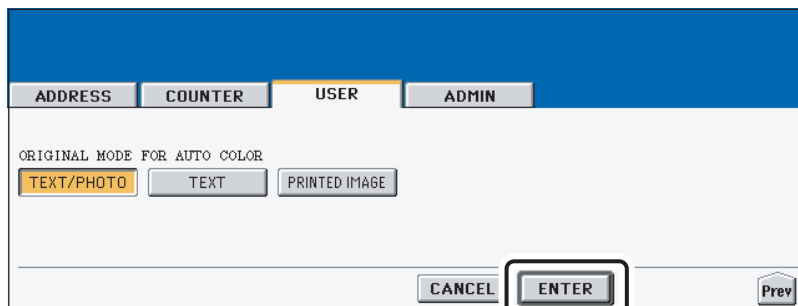


10 Press the [ENTER] button.

- The default settings for each mode are changed as you specified.

SETTING FAX FUNCTIONS


You can change the initial setting (default setting) of fax and Internet Fax features.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [FAX] button on the touch panel.

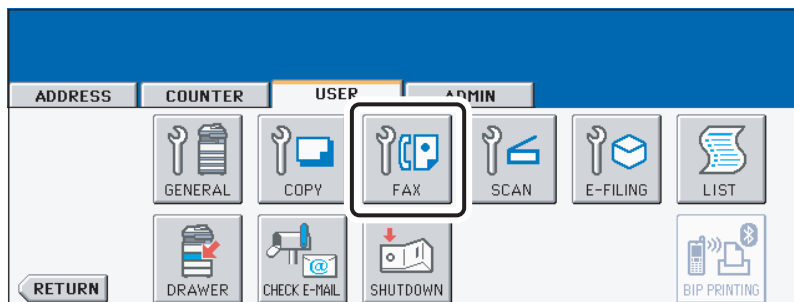

- The FAX screen is displayed.

- 3 Specify the following items as you require.

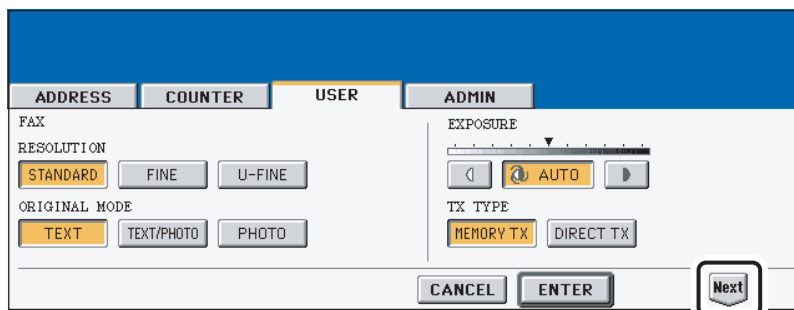


- In the “RESOLUTION” option, press the desired mode button.
- In the “ORIGINAL MODE” option, press the desired mode button.
- In the “EXPOSURE” option, press light or dark buttons to specify the default exposure manually, or press the [AUTO] button to select auto mode for the default exposure mode.
- In the “TX TYPE” option, press the desired mode button.
 - [MEMORY TX]** — Press this to set the Memory TX mode as default transmission mode that will send after scanning and saving all originals in the memory. This mode enables multi-address transmission.
 - [DIRECT TX]** — Press this to set the Direct TX mode as default transmission mode that will send originals page by page after every original has been scanned. This mode disables multi-address transmission.

Note

The “TX TYPE” option is available only when the optional Fax unit is installed.

- 4 Press the [Next] button to display the next screen.

5 Specify the following items as you require.

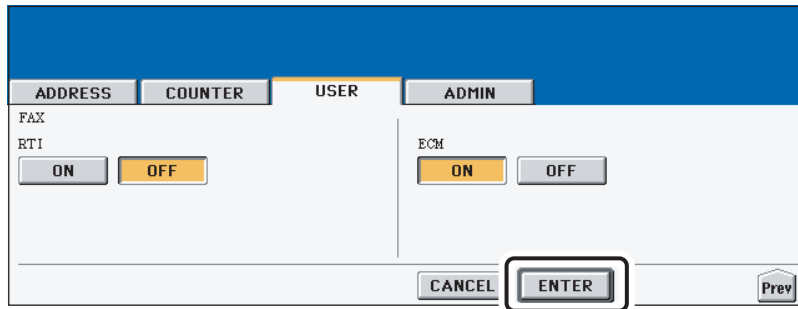

The screenshot shows a control panel with a blue header and four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is selected. Under the heading 'FAX', there are two sections: 'RTI' and 'ECM'. The 'RTI' section has two buttons: 'ON' (grey) and 'OFF' (yellow). The 'ECM' section has two buttons: 'ON' (yellow) and 'OFF' (grey). At the bottom of the panel, there are three buttons: 'CANCEL', 'ENTER' (highlighted with a red box), and 'Prev'.

- In the “RTI” option, specify whether the RTI is enabled or disabled as default setting.
[ON] — Press this to print a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
[OFF] — Press this not to print a reception header (RTI) on received faxes.
- In the “ECM” option, specify whether the ECM is enabled or disabled as default setting.
[ON] — Press this to enable the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
[OFF] — Press this to disable the ECM.

Note

The “RTI” and “ECM” options are available only when the optional Fax unit is installed.


6 Press the **[ENTER]** button.

- The default settings for each mode are changed as you specified.

SETTING SCAN FUNCTIONS


You can change the initial setting (default setting) of scan job.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [SCAN] button on the touch panel.

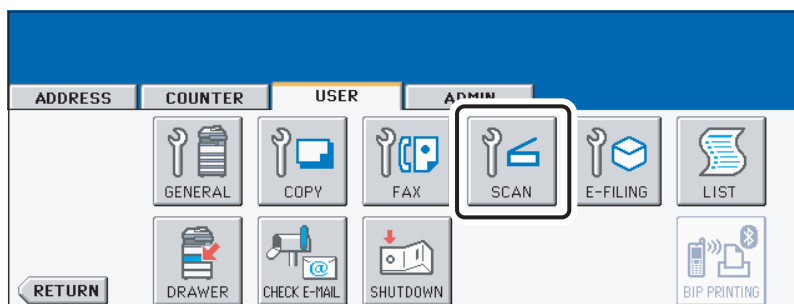

- The SCAN screen is displayed.


- 3 Specify the following items as you require.

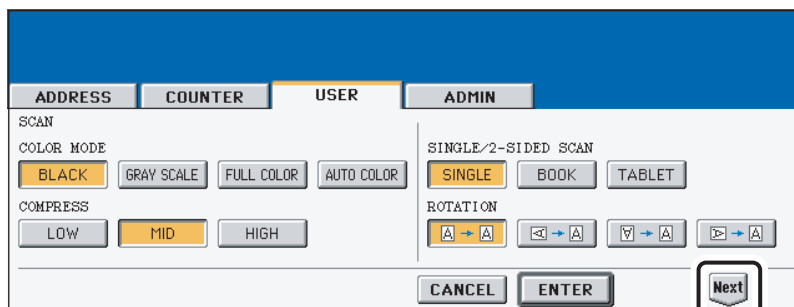

- In the “COLOR MODE” option, press the desired mode button.
- In the “COMPRESS” option, press the desired mode button that applies when scanning in gray scale, full color, or auto color mode.
- In the “SINGLE/2-SIDE SCAN” option, press the desired mode button.
 - [SINGLE]** — Press this to set single page scan as default scan mode.
 - [BOOK]** — Press this to set book scan mode as default scan mode. This enables to scan both side of originals in the same direction.
 - [TABLET]** — Press this to set tablet scan mode as default scan mode. This enables to scan front page in the general direction, and scan back page rotated 180 degree.
- In the “ROTATION” option, press the desired mode button.

- 4 Press the [Next] button to display the next screen.


5 Specify the following items as you require.

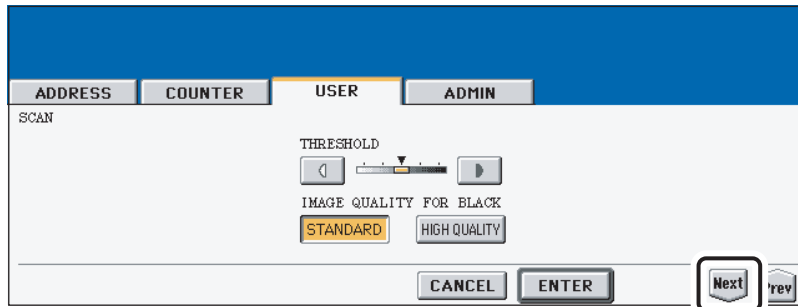

- In the “THRESHOLD” option, press the light button or dark button to specify the exposure that applies when scanning a black original in the auto color mode. If you move to the left, the black and white in an original will be scanned lightly. If you move to the right, the black and white in an original will be scanned deeply.
- In the “IMAGE QUALITY FOR BLACK” option, press the desired mode button that applies when scanning a black original in the auto color mode.

6 Press the [Next] button to display the next screen.


7 Specify the following items as you require.

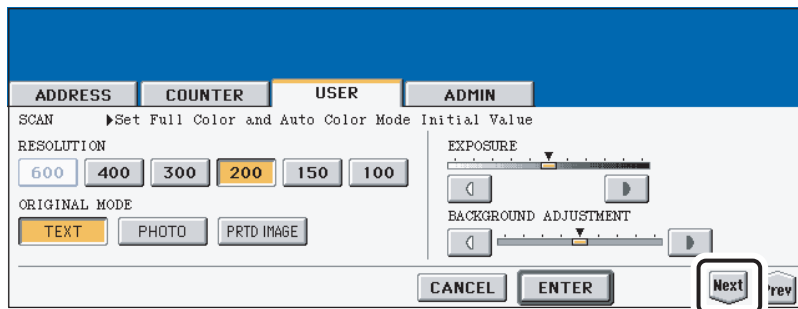

- In the “RESOLUTION” option, press the desired mode button applied for color scans. [600] can be selected only when the optional expansion memory is installed.
- In the “ORIGINAL MODE” option, press the desired mode button applied for color scans.
- In the “BACKGROUND ADJUSTMENT” option, press the light button or dark button to specify the contrast for color scans. If you move to the left, the background color will be lighter. If you move to the right, the background color will be darker.
- In the “EXPOSURE” option, press light or dark buttons to specify the default exposure for color scans manually.

8 Press the [Next] button to display the next screen.


9 Specify the following items as you require.

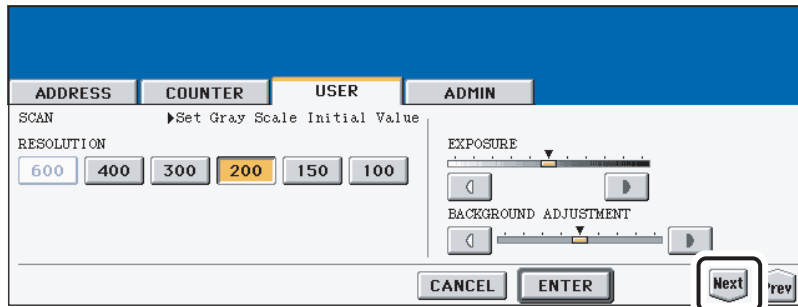

- In the “RESOLUTION” option, press the desired mode button applied for gray scale scans.[600] can be selected only when the optional expansion memory is installed.
- In the “EXPOSURE” option, press light or dark buttons to specify the default exposure for gray scale scans manually.
- In the “BACKGROUND ADJUSTMENT” option, press the light button or dark button to specify the contrast for gray scale scans. If you move to the left, the background color will be lighter. If you move to the right, the background color will be darker.

10 Press the [Next] button to display the next screen.

11 Specify the following items as you require.

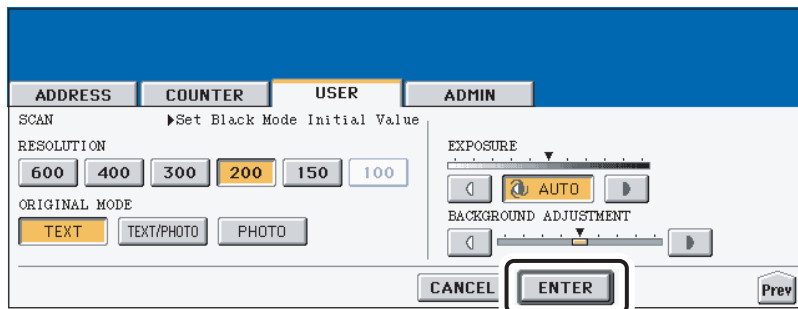

- In the “RESOLUTION” option, press the desired mode button applied for black scans.
- In the “ORIGINAL MODE” option, press the desired mode button applied for black scans.
- In the “EXPOSURE” option, press light or dark buttons to specify the default exposure for black scans manually, or press the [AUTO] button to select auto mode for the default exposure mode for black scans.
- In the “BACKGROUND ADJUSTMENT” option, press the light button or dark button to specify the contrast for black scans. If you move to the left, the background color will be lighter. If you move to the right, the background color will be darker.


12 Press the [ENTER] button.

- The default settings for each mode are changed as you specified.

SETTING E-FILING FUNCTIONS


You can set the image quality type for printing color documents from e-Filing that are stored by Scan to e-Filing.

- 1 Press the **[USER FUNCTIONS]** button on the control panel to enter the User Functions menu.
- 2 Press the **[USER]** button, and then press the **[E-FILING]** button on the touch panel.

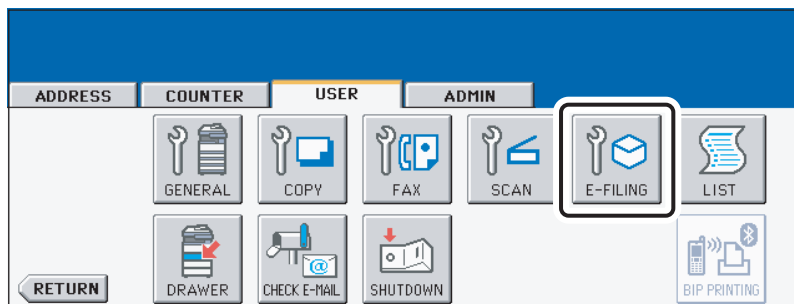

- The E-FILING screen is displayed.

- 3 In the “PRINTING IMAGE MODE” option, press the desired mode button.

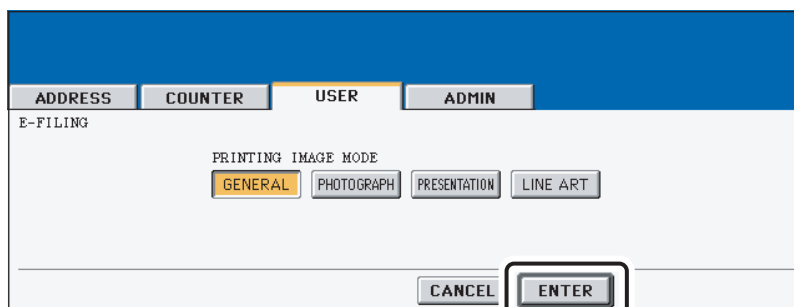

- **[GENERAL]** — Press this to apply proper color quality for printing a general color document.
- **[PHOTOGRAPH]** — Press this to apply proper color quality for printing photos.
- **[PRESENTATION]** — Press this to apply proper image quality for printing a vivid document.
- **[LINE ART]** — Press this to apply proper image quality for printing a document contains a lot of characters or line arts.


- 4 Press the **[ENTER]** button.

PRINTING LISTS

Printing the Address Book List


You can print the address book list that shows all registered contacts and groups in this equipment.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [USER] button, and then press the [LIST] button on the touch panel.

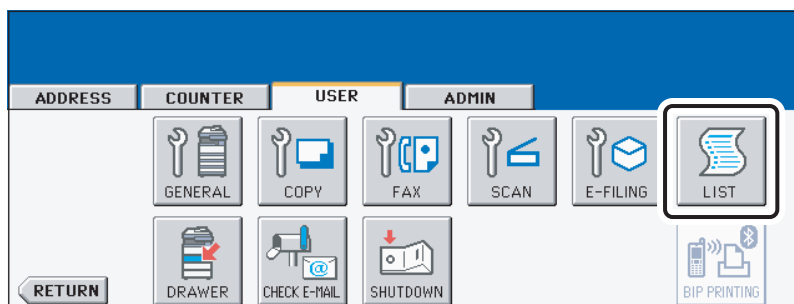


- The LIST menu is displayed.

- 3** Press the [ADDRESS BOOK] button.

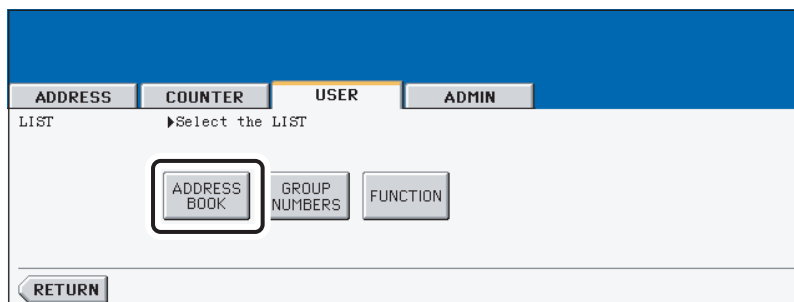


- The ADDRESS BOOK menu is displayed.

-
- 4** Press the [ID SORT] button to print it as sorted by the ID number, or [NAME SORT] button to print it as sorted by the last name.

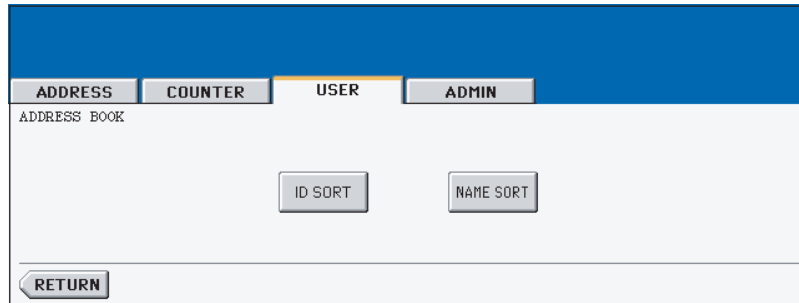

- When the department management is disabled, the address book list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the address book list.


Tips

- The list is printed on the paper that is fed from the drawer LT-R or A4-R paper is set and exit to the inner tray.
- For an output example of the address book list, see "Address Book List".  P.198

Printing the Group Numbers List


You can print the group numbers list that shows all registered groups and members in this equipment.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [LIST] button on the touch panel.

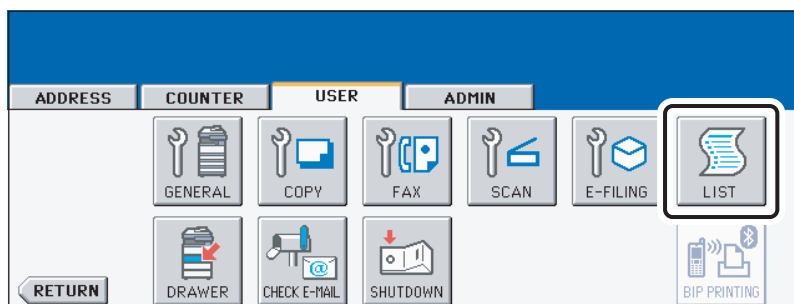


- The LIST menu is displayed.

- 3 Press the [GROUP NUMBERS] button.

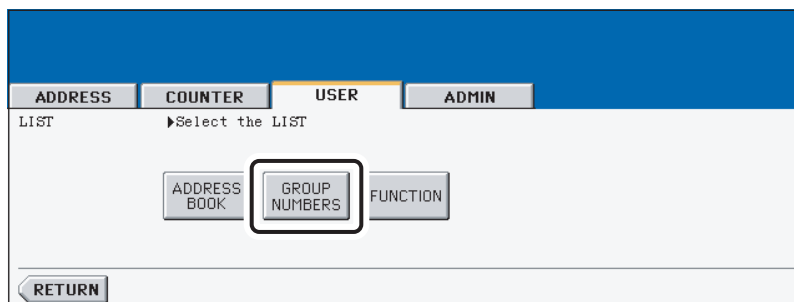

- When the department management is disabled, the group numbers list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the group numbers list.


Tips

- The list is printed on the paper that is fed from the drawer LT-R or A4-R paper is set and exit to the inner tray.
- For an output example of the group numbers list, see "Group Numbers List".  P.199

Printing the Function List (User)


You can print the function list that shows the function flow under the [USER] button of the User Functions.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [LIST] button on the touch panel.

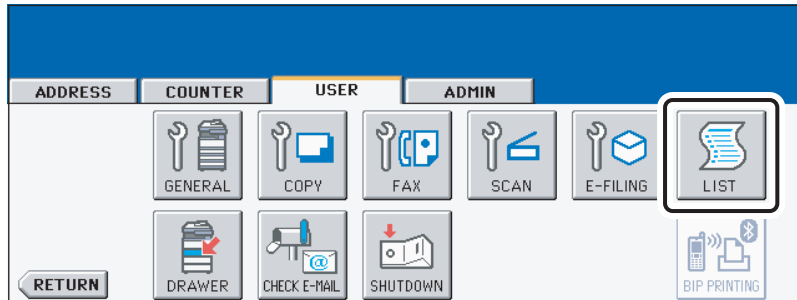


- The LIST menu is displayed.

- 3 Press the [FUNCTION] button.

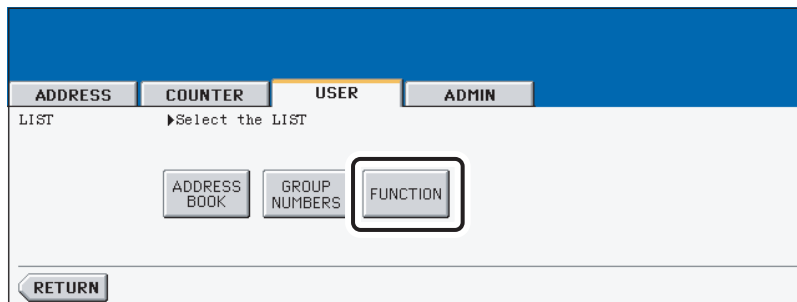

- When the department management is disabled, the function list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the function list.


Tips

- The list is printed on the paper that is fed from the drawer LT-R or A4-R paper is set and exit to the inner tray.
- For an output example of the function list, see "Function List (User)".  P.200


SETTING DRAWER

This function allows you to set the paper size and paper type of each drawer.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [USER] button, and then press the [DRAWER] button on the touch panel.

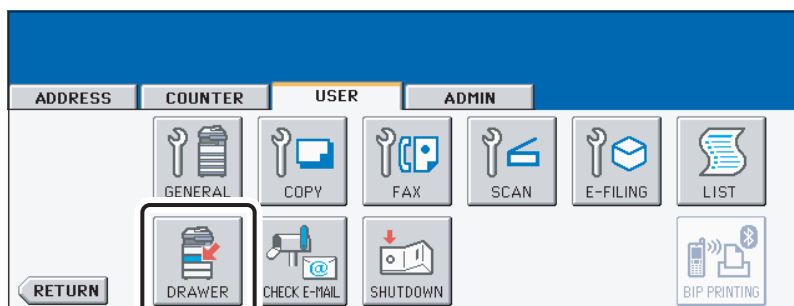


- 3** Press the drawer portion in the illustration to highlight the drawer where you want to change the paper size, then press the desired paper size button.

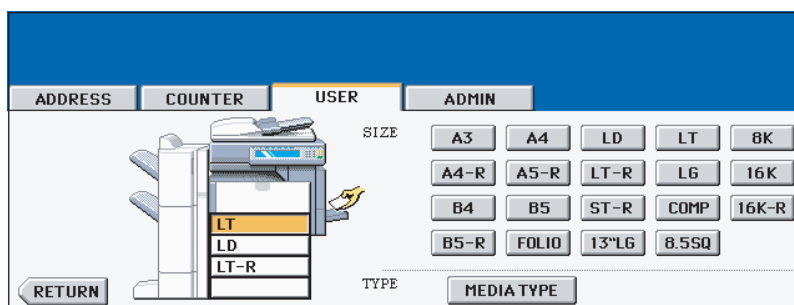

- When you press the paper size button, the selected paper size will be displayed in the drawer in the illustration.

- 4** Press the [MEDIA TYPE] button.

-
- 5** Press the drawer portion in the illustration to highlight the drawer where you want to change the media type, then press the desired media type button.

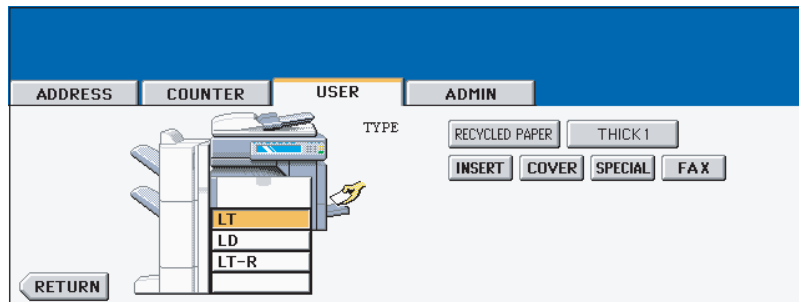

- You can select either [RECYCLES PAPER] or [THICK1] for the media type.
- You can select either [INSERT], [COVER], [SPECIAL], or [FAX] to restrict the uses for a specific job. For example, if you select the [INSERT] button for a drawer, the paper in the drawer is always used for copy insertion.


CHECKING E-MAIL

This function allows you to check for new E-mails (Internet Faxes) on the POP3 server.

Tip

This equipment also automatically checks for new E-mails on the POP3 server.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [USER] button, and then press the [CHECK E-MAIL] button on the touch panel.

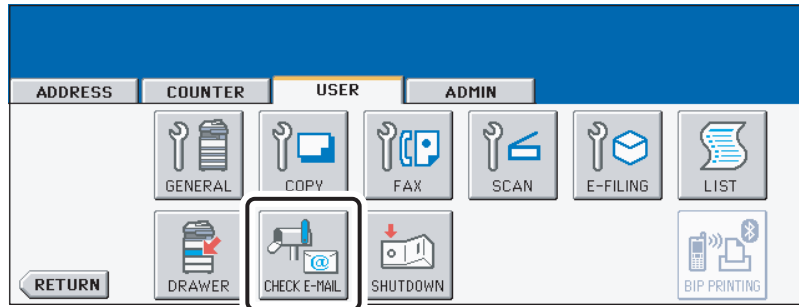

- This equipment starts communicating to the POP3 server.
- If new E-mail to this machine is on the POP3 server, it will be automatically printed after retrieving the E-mail data from the POP3 server.


TURN OFF THE POWER (SHUT DOWN)

When turning off the power of the equipment, perform the following shutdown procedure. DO NOT turn off the power by switching off the power switch of the equipment as it can cause the failure of the hard disk.


Before turning off the power, be sure that the following 3 conditions are satisfied.

- No jobs are left in the printing job list.
- The ERROR lamp is not blinking.
- No PCs access the equipment via network.

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [USER] button, and then press the [SHUTDOWN] button on the touch panel.

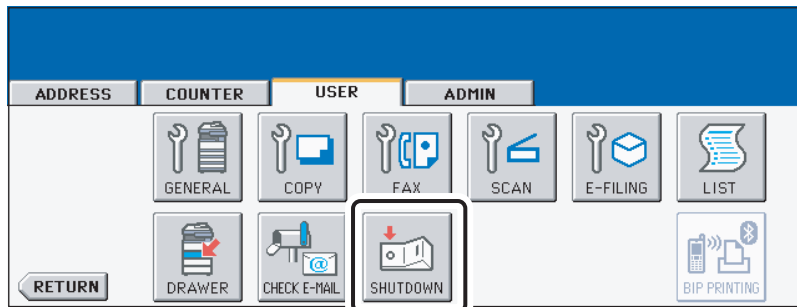


- 3** “Processing job will be deleted. Are you sure you want to shutdown?” appears on the screen. Press the [YES] button.

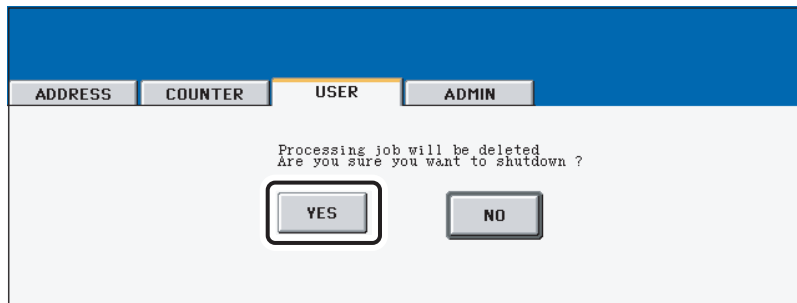

- To cancel the shutdown operation, press the [NO] button.

4 “Shutdown in progress” appears on the screen, and then the equipment is shut down.

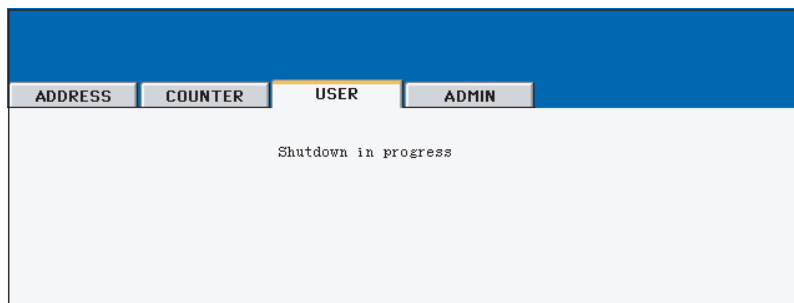

- The power switch automatically returns to the OFF position.

SETTING BIP PRINTING

The [BIP PRINTING] button will be available only when the optional Bluetooth Module is installed. For the instructions on how to set the BIP printing, please refer to the ***GN-2010 Operator's Manual for Bluetooth***.

4

SETTING ITEMS (ADMIN)


ENTERING TO ADMIN MENU	107
SETTING GENERAL FUNCTIONS	109
Setting the Device Information	109
Setting the Notification	111
Changing the Administrator Password	113
Setting the Date and Time	115
Setting the Weekly Timer	117
Setting the Auto Power Save Mode	120
Setting the Sleep Mode	122
Setting the Calibration and Registration Display Level	124
Setting the Copy Calibrations	126
Setting the Print Calibration	129
Setting the Registration	132
Setting the Drawer Set Pop-Up and Paper Jam Recovery Pop-Up	134
SETTING NETWORK FUNCTIONS	136
Setting the TCP/IP Protocol	136
Setting the IPX/SPX Protocol	142
Setting the NetWare Settings	144
Setting the SMB Protocol	146
Setting the AppleTalk Protocol	149
Setting the HTTP Network Service	151
Setting the Ethernet Speed	153
Setting the LDAP and SNMP Network Service	155
Setting the User Certificate	157
SETTING COPY FUNCTIONS	161
SETTING FAX FUNCTIONS	163
Setting the Terminal ID	163
Setting the Fax Initial Setup	166
Setting the Line-2 Mode	168
Setting the RX Printing	171
Setting the Recovery Transmission	177

SETTING FILE FUNCTIONS.....	179
SETTING E-MAIL FUNCTIONS	180
Setting the Scan to E-mail Message Properties.....	180
Setting the Scan to E-mail Fragmentation	181
SETTING INTERNET FAX FUNCTIONS	182
Setting the Internet Fax Message Properties.....	182
Setting the Internet Fax Fragmentation.....	183
Setting the Internet Fax Body String Transmission	184
SETTING LIST/REPORT.....	185
Setting the Transmission / Reception Journal.....	185
Setting the Communication Report	187
Setting the Reception List	190
PRINTING LISTS.....	192
SETTING PRINTER/E-FILING FUNCTIONS	193
WIRELESS SETTINGS AND Bluetooth SETTINGS.....	194

ENTERING TO ADMIN MENU

When the administrator password has been set, you must enter the administrator password to enter the [ADMIN] menu in the User Functions screen.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 2 Press the [ADMIN] button.**
 - The ADMINISTRATOR PASSWORD screen is displayed.
- 3 Press the [PASSWORD] button.**

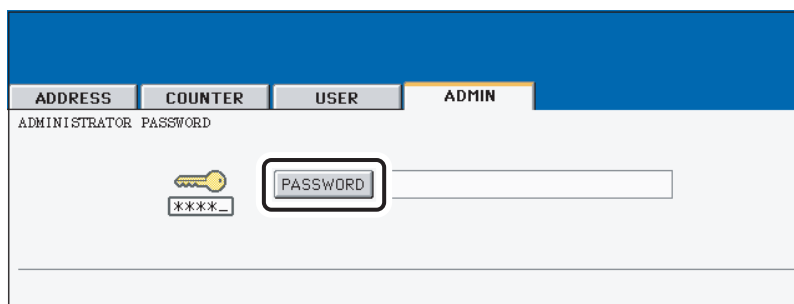

- The input screen is displayed.

- 4 Enter the administrator password and press the [ENTER] button.**



- The ADMIN menu is displayed.


Tip

If the administrator password has not been changed before, enter the default administrator password "123456".

Note

If you enter the incorrect password continuously, the equipment cannot be operated for a constant time.

5 The ADMIN menu is displayed. Continue the administrative operation that you require.

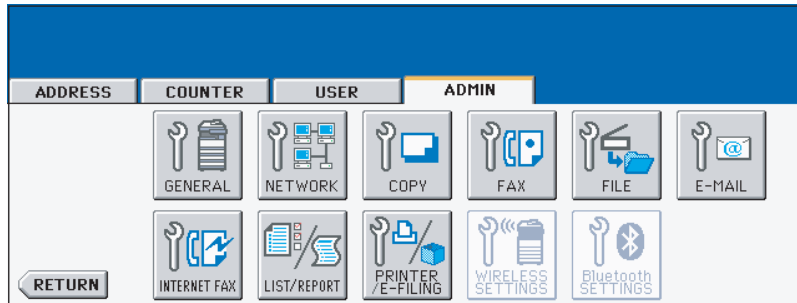

- P.109 "SETTING GENERAL FUNCTIONS"
- P.136 "SETTING NETWORK FUNCTIONS"
- P.161 "SETTING COPY FUNCTIONS"
- P.163 "SETTING FAX FUNCTIONS"
- P.179 "SETTING FILE FUNCTIONS"
- P.180 "SETTING E-MAIL FUNCTIONS"
- P.182 "SETTING INTERNET FAX FUNCTIONS"
- P.185 "SETTING LIST/REPORT"
- P.192 "PRINTING LISTS"
- P.193 "SETTING PRINTER/E-FILING FUNCTIONS"
- P.194 "WIRELESS SETTINGS AND Bluetooth SETTINGS"

Notes


- There is also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available only when the optional Wireless LAN is installed. For the instructions on how to operate the WIRELESS SETTINGS, please refer to the **GN-1041 Operator's Manual for Wireless LAN**.
- There is also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when the optional Bluetooth is installed. For the instructions on how to operate the Bluetooth SETTINGS, please refer to the **GN-2010 Operator's Manual for Bluetooth**.

SETTING GENERAL FUNCTIONS

Setting the Device Information

You can set the device information of this equipment. These items appear in the Device page of TopAccess, that is the web-based device management utility.

1 Press the [GENERAL] button in the ADMIN menu.

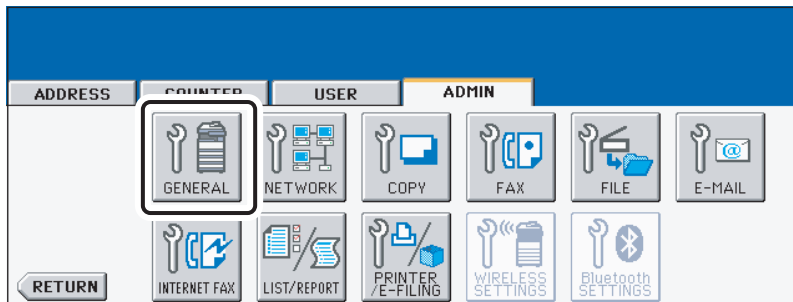


- The GENERAL menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [DEVICE INFORMATION] button.

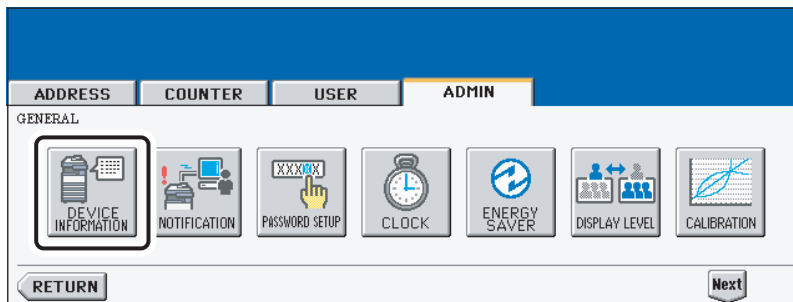

- The DEVICE INFORMATION screen is displayed.

3 Press each button on the touch panel to enter following items.

The screenshot shows a software interface with a blue header bar. Below the header is a navigation bar with four tabs: 'ADDRESS', 'COUNTER', 'USER', and 'ADMIN'. The 'ADMIN' tab is selected and highlighted in yellow. Underneath the tabs, the text 'DEVICE INFORMATION' is displayed. Below this text are four rows, each containing a button and an adjacent empty input field. The buttons are labeled 'LOCATION', 'SERVICE PHONE NUMBER', 'CONTACT INFORMATION', and 'ADMIN. MESSAGE'. At the bottom of the screen, there are two buttons: 'CANCEL' and 'ENTER'. The 'ENTER' button is highlighted with a red rectangular border.

- **[LOCATION]** — Press this button to enter the location where this device is located.
- **[SERVICE PHONE NUMBER]** — Press this button to enter the service call number.
- **[CONTACT INFORMATION]** — Press this button to enter the name of the service technician.
- **[ADMIN. MESSAGE]** — Press this button to enter the administration message for users.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry. To enter the [SERVICE PHONE NUMBER], enter the number using only the digital keys.

4 Press the [ENTER] button.

Setting the Notification


You can set the notification mail to send a notification message when specified events occur on this equipment such as toner empty, paper empty, serviceman call, and so on.

You can specify up to 3 E-mail addresses for the destination of the notification message.

Notes

- You can specify the events that you want to be notified using the TopAccess web utility. For instructions on how to specify the events for the notification, please refer to **TopAccess Guide**.
- To enable this function, there must be a SMTP server in your network. In addition, the settings to enable the Internet Fax transmission on this equipment must be configured correctly.

1 Press the [GENERAL] button in the ADMIN menu.

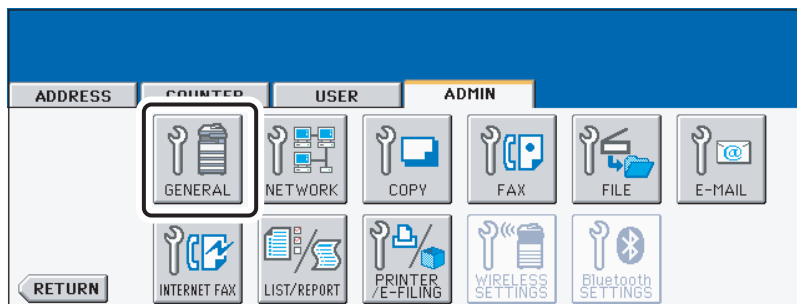


- The GENERAL menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [NOTIFICATION] button.

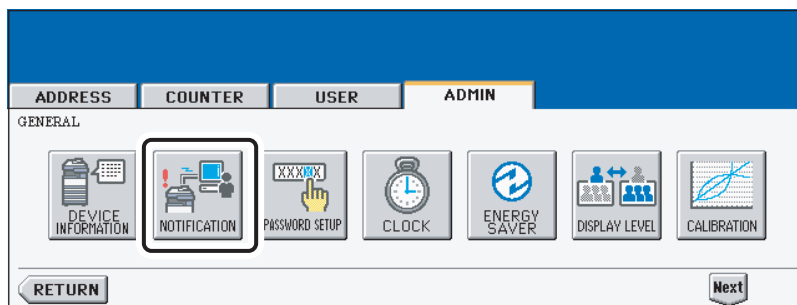

- The NOTIFICATION screen is displayed.

3 Press the [E-MAIL] buttons.

- The input screen is displayed.

4 Enter the E-mail address using the keyboard and digital keys, and press the [ENTER] key to set the entry.

- You can specify up to three E-mail addresses to which the notification message will be sent, as required. When you enable the notification, you must enter at least one E-mail address.

5 After entering the E-mail addresses that you require, press the [ON] button of the E-mail address that you want to enable the notification.

- To disable the notification for an E-mail address, press the [OFF] button.

Note


You can select only the [ON] button of which an E-mail address is entered.

6 Press the [ENTER] button.

Changing the Administrator Password

You can change the administrator password. The administrator password must be alphanumeric characters of 6 or more and 10 or less.

1 Press the [GENERAL] button in the ADMIN menu.

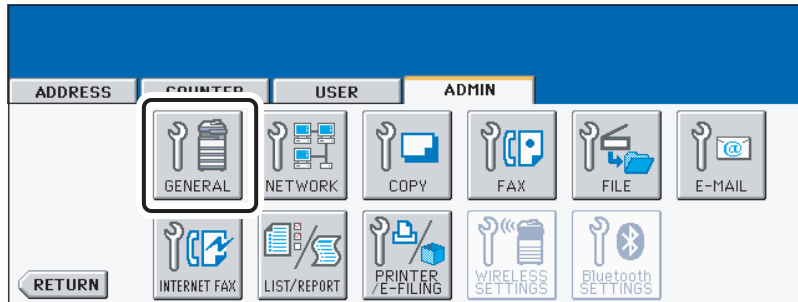


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [PASSWORD SETUP] button.

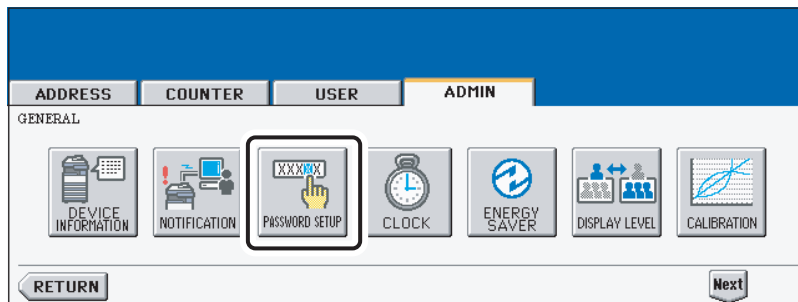

- The PASSWORD SETUP screen is displayed.

3 Press the [OLD PASSWORD] button.

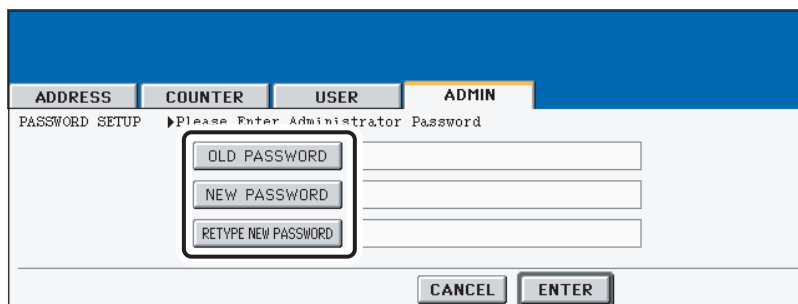

- The input screen is displayed.

4 Enter the current administrator password and press the [ENTER] button.




- The input password appears as asterisks (*).

Tip

If the administrator password will be changed at the first time, enter “123456” in the “Old Password” field.

5 Same as “OLD PASSWORD”, press the [NEW PASSWORD] and [RETYPE NEW PASSWORD] buttons and enter the new password.

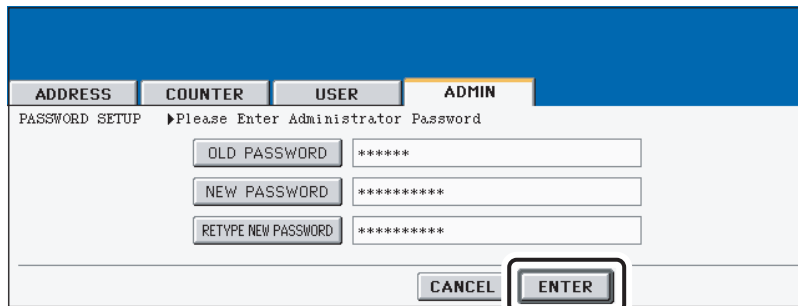

- You can enter alphanumeric characters of 6 or more and 10 or less for the administrator’s password. You cannot enter any symbol characters.

Tip


You cannot leave these fields blank to set no administrator password. You must set the administrator password.

6 Press the [ENTER] button at the bottom of the touch panel.

Setting the Date and Time

The clock built in to this equipment can be set by entering the date and time using the digital keys. Also, you can easily change the clock to and from the daylight saving system at the touch of a button.

1 Press the [GENERAL] button in the ADMIN menu.

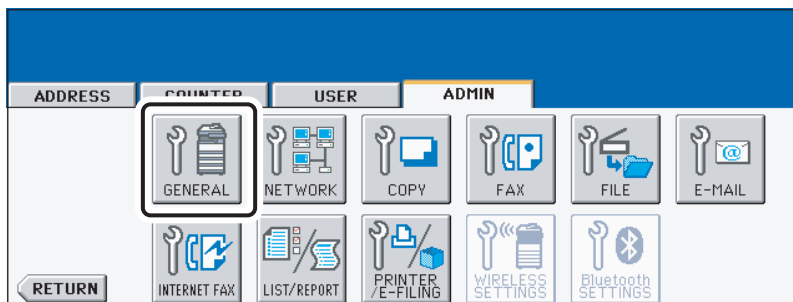


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [CLOCK] button.

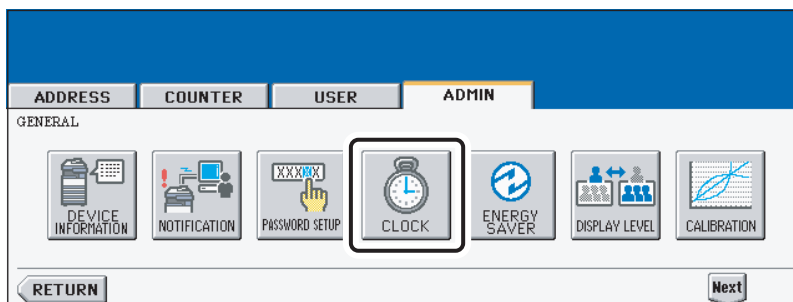

- The CLOCK menu is displayed.

3 Press the [DATE/TIME] button.

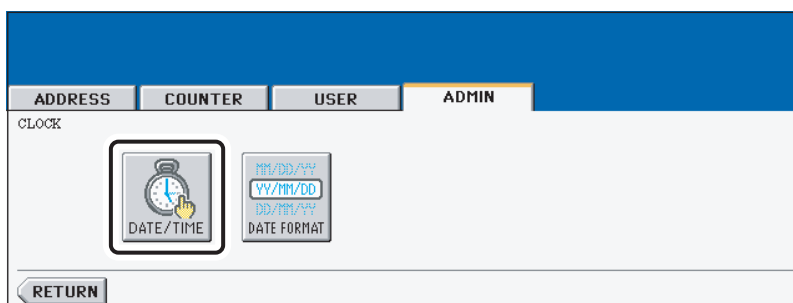

- If you want to change the date format only, skip to step 10.
- When you press the [DATE/TIME] button, the DATE/TIME screen is displayed.

- 4** Highlight the section that you want to edit using the arrow buttons, and enter the number using the digital keys.

- The “DAY” section describes the day of week with a number. The numbers corresponding to the days of week as following:
1: Sun, 2: Mon, 3: Tue, 4: Wed, 5: Thu, 6: Fri, 7: Sat

- 5** To enable the daylight saving system, press the  button.

- The daylight saving button is highlighted.

- 6** Press the [ENTER] button.

- Returns you to the CLOCK menu.

- 7** Press the [DATE FORMAT] button.

- The DATE FORMAT screen is displayed.

- 8** Press the desired date format button.

Setting the Weekly Timer

Using the built-in weekly timer, you can have this equipment automatically turned ON and OFF at specified times. For instance, you can set the timer for the starting time and closing time of your office so that the copier will automatically turn itself ON and OFF at those specified times.


Tip

You can turn on the power simply pressing the [START] button on the control panel when the device is OFF-mode by the weekly timer. If you leave the device for a while after the latest operation, it will automatically return to OFF-mode again by the weekly timer.

Note

When the power switch is turned off, the weekly timer does not work.

1 Press the [GENERAL] button in the ADMIN menu.

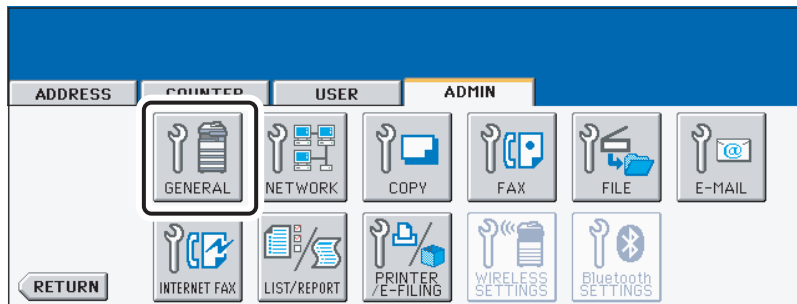


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [ENERGY SAVER] button.

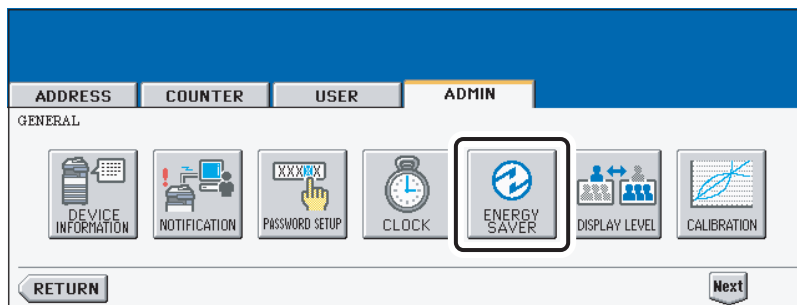


- The ENERGY SAVER menu is displayed.

3 Press the [WEEKLY TIMER] button.

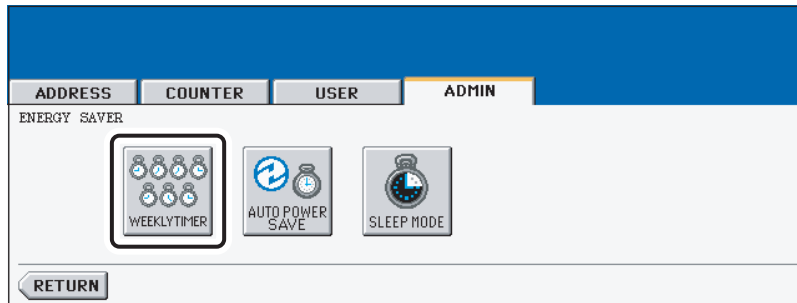


- The TIMER screen is displayed.

4 Check the settings on the display, and if corrections are necessary, press the [CHANGE] button.

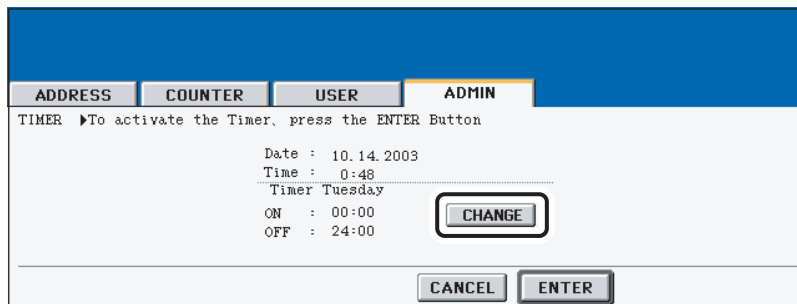

- If no correction is needed, press the [ENTER] button and complete the operation.

5 Press the [<-Sun] or [Sat->] buttons to switch the days of the week. Then in the "ON" field, enter the hour and minute that the device will automatically turn on the power using the digital keys and press the [SET] button to set each entry.

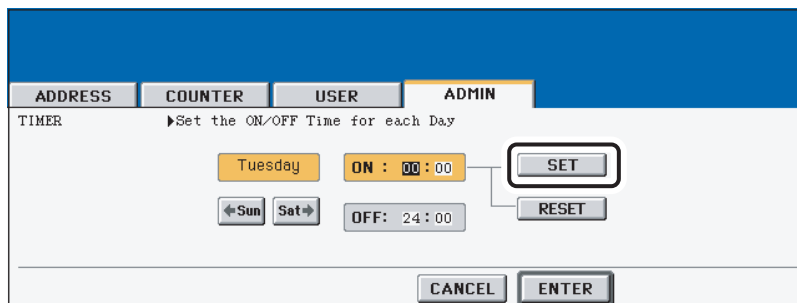

- If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the "OFF" field will be highlighted.

- 6** In the “OFF” field, enter the hour and time that the device will automatically turn off the power using the digital keys and press the [SET] button to set each entry.

The screenshot shows a control panel with a blue header and four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, the text 'TIMER' is displayed, followed by the instruction 'Set the ON/OFF Time for each Day'. The interface features two rows of settings. The first row is for 'Tuesday' with an 'ON' time of '00:00'. The second row is for 'Sun' and 'Sat' with an 'OFF' time of '22:00'. A 'SET' button is highlighted with a red box, and a 'RESET' button is also visible. At the bottom, there are 'CANCEL' and 'ENTER' buttons.

- If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.

Tips

- If you want to return to the “OFF” field to retype it, press the [RESET] button.
- If you want this equipment not to be turned ON, enter the same time in both “ON” and “OFF” field.
- If you want to disable the Weekly Timer, enter “00:00” for the ON time and “24:00” for the OFF time.

- 7** Press the [ENTER] button at the bottom of the touch panel.


Setting the Auto Power Save Mode

This function allows this equipment automatically to go into the energy saving mode (unnecessary electricity is cut off at standby) if it is left inactive for a certain period of time.

Note

This is not available for the European version.

1 Press the [GENERAL] button in the ADMIN menu.

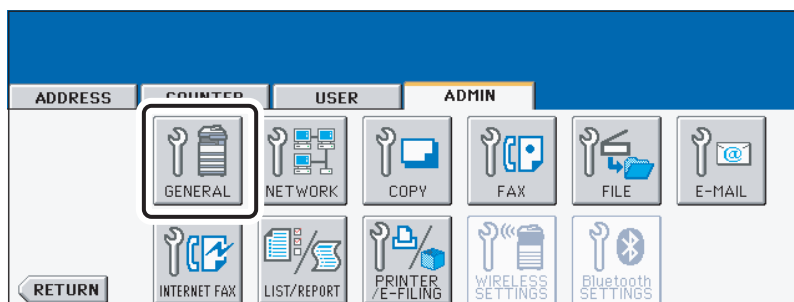


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [ENERGY SAVER] button.

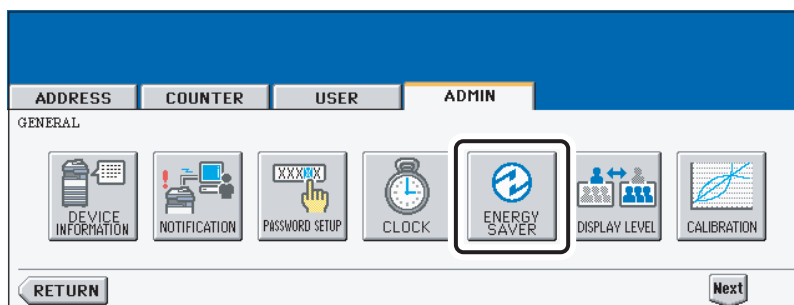


- The ENERGY SAVER menu is displayed.

3 Press the [AUTO POWER SAVE] button.

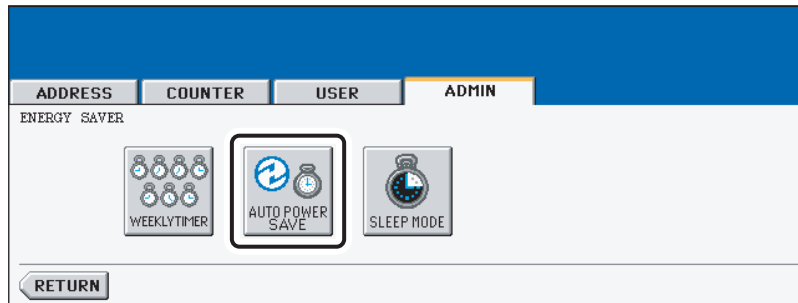

- The AUTO POWER SAVE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Power Save mode is activated.

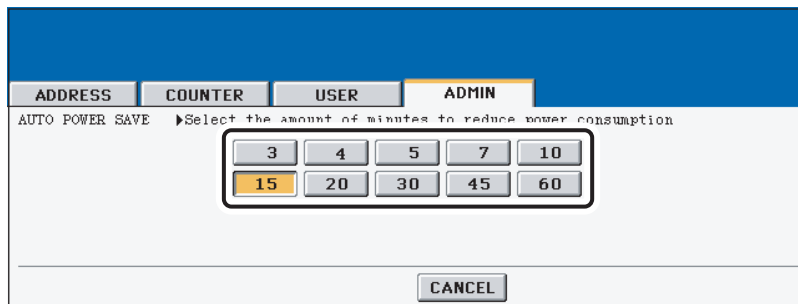

- The Auto Power Save mode setting is completed.


Setting the Sleep Mode

This function allows this equipment goes into the sleep mode that stands by with the minimum power consumption.

Note

This is not available for the European version.

1 Press the [GENERAL] button in the ADMIN menu.

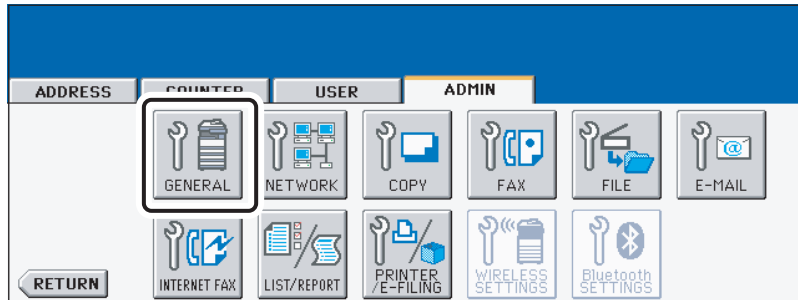


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [ENERGY SAVER] button.

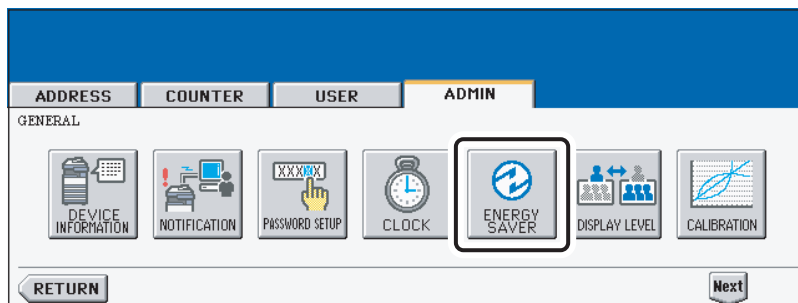


- The ENERGY SAVER menu is displayed.

3 Press the [SLEEP MODE] button.

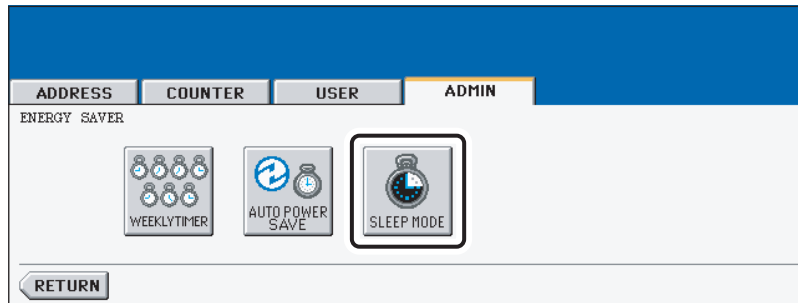

- The SLEEP MODE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Shut Off mode is activated.

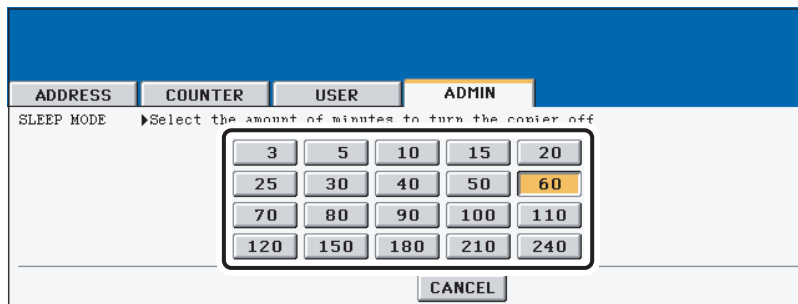

- The Sleep mode setting is completed.


Setting the Calibration and Registration Display Level

You can set whether this equipment uses the calibration and registration settings that are operated by a user or administrator.

When you select the Admin mode for the Calibration Display Level, the [CALIBRATION] button under the [USER] menu disappears. When you select the User mode for the Calibration Display Level, the [CALIBRATION] button under the [ADMIN] menu disappears.

When you select the Admin mode for the Registration Display Level, the [REGISTRATION] button under the [USER] menu disappears. When you select the User mode for the Registration Display Level, the [REGISTRATION] button under the [ADMIN] menu disappears.

1 Press the [GENERAL] button.

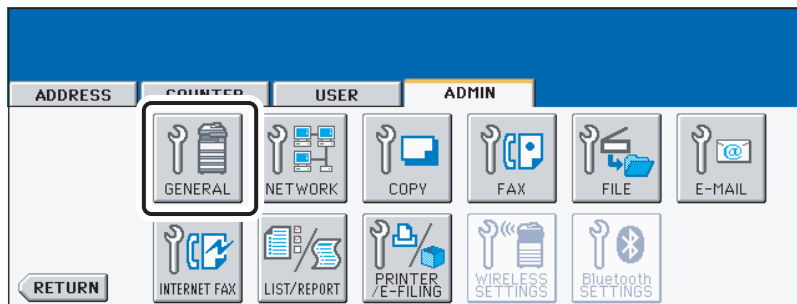


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [DISPLAY LEVEL] button.

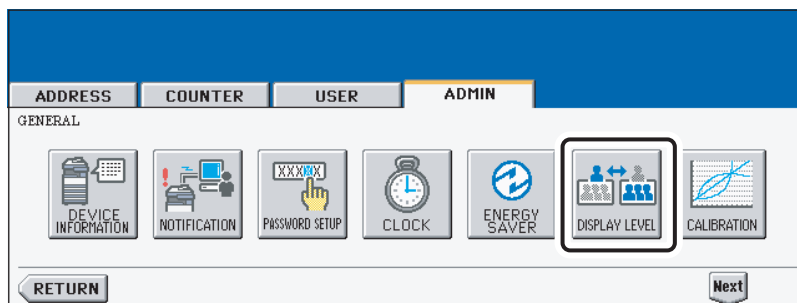

- The DISPLAY LEVEL screen is displayed.

-
- 3** Press the [USER] or [ADMIN] button in the “CALIBRATION” option to set the calibration display level, and press the [USER] or [ADMIN] button in the “REGISTRATION” option to set the registration display level.

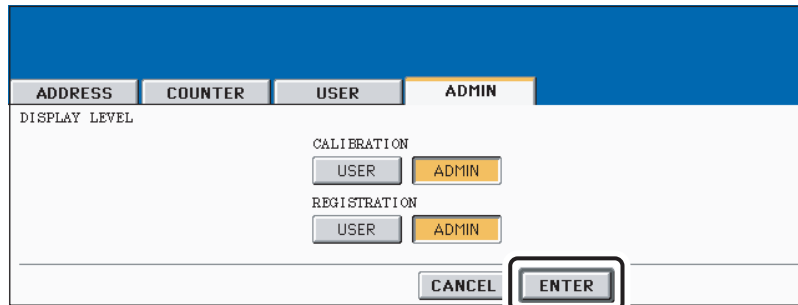

The screenshot shows a menu interface with a blue header. Below the header are four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is selected. The main area displays 'DISPLAY LEVEL' and two sections: 'CALIBRATION' and 'REGISTRATION'. Each section has two buttons: 'USER' and 'ADMIN'. The 'ADMIN' buttons in both sections are highlighted in yellow. At the bottom, there are 'CANCEL' and 'ENTER' buttons. The 'ENTER' button is highlighted with a thick black border.

- The Calibration Display Level setting is completed.

Setting the Copy Calibrations

Notes

- The copy calibration setting in the [ADMIN] menu can be configured only when an administrator has set the Calibration Display Level to [ADMIN].
 P.124 "Setting the Calibration and Registration Display Level"
- When the private print jobs, schedule print jobs, or invalid jobs are stored in the job list, the calibrations cannot be performed. In that case, delete the jobs in the job list.


This function allows the machine automatically to calibrate the color gradation for copy jobs when the color cannot be adjusted well because the shading or the hue of the image has deviated.

- Set the LT-sized or A4-sized paper (recommended paper) in the cassette before starting the calibration. If any other paper is used, calibration may not be performed properly.
- If the color often deviates, call your service technician.

Caution

- If the glass is dirty or any foreign objects are stuck to the glass, the calibration may not be carried out properly. Keep the glass clean.
- Never raise the original cover or the optional Automatic Document Feeder, or open the front cover while the calibration is in progress. If this does happen, the calibration cannot be finished appropriately.
- Interrupt copying is not available during the calibration.

- Place the LT-size or A4-size paper in the cassette.
- Press the [GENERAL] button.

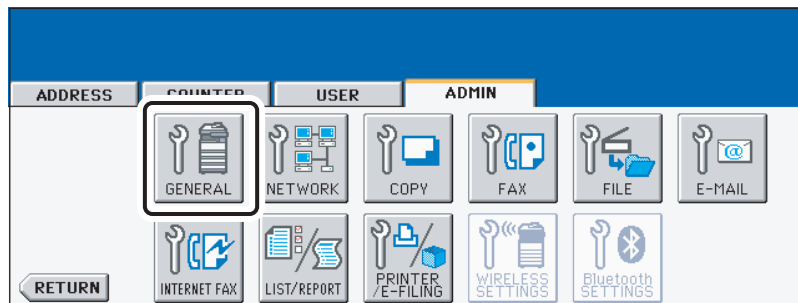


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

3 Press the [CALIBRATION] button.

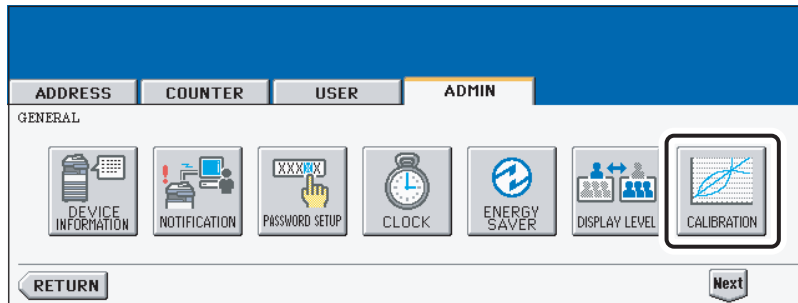


- The CALIBRATION menu is displayed.

4 Press the [COPY] button.

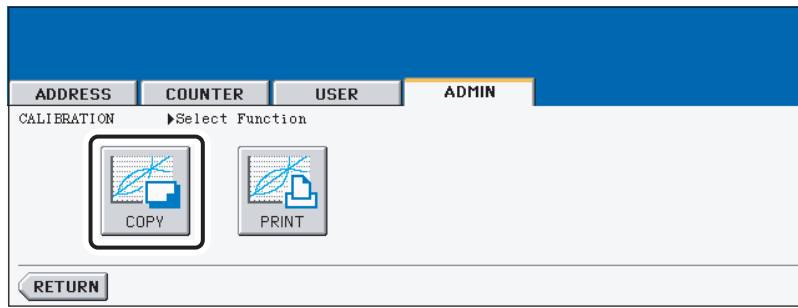


5 Press the [DEFAULT] button to set the default calibration setting, or [CALIBRATION] button to adjust the calibration setting.

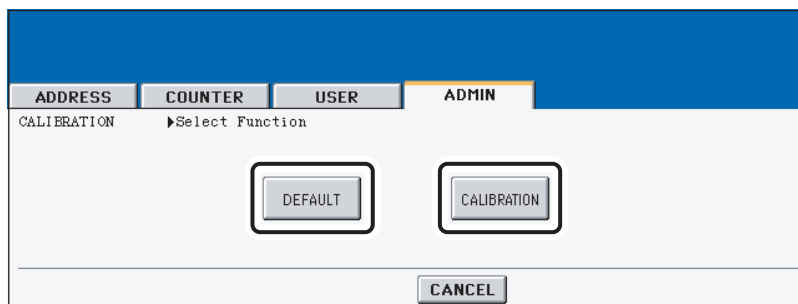

- When you press the [DEFAULT] button, the system maintains the default calibration setting and returns to the previous screen.
- When you press the [CALIBRATION] button, the chart is printed out and calibration guide illustration is displayed on the touch panel.

- 6** Place the printed chart face down on the glass with its bottom toward you and its top left aligned against the original scale on the left side, in order that the black line be placed at the left side.

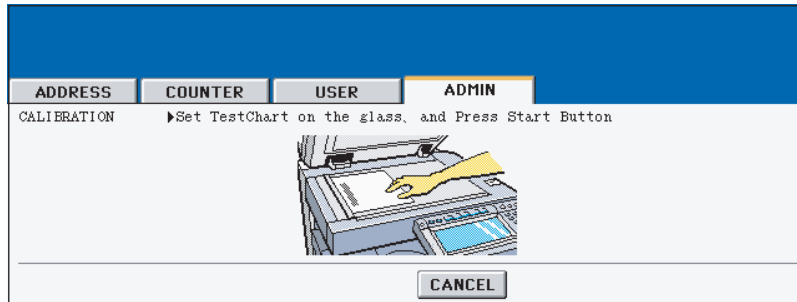

- 7** Press the [START] button.

- When the calibration setting is completed, the GENERAL menu will be displayed.

Tip

If the chart is not properly placed, the message "Set chart correctly" is displayed on the touch panel. In this case, go back to step 6 and place the chart again.

Setting the Print Calibration

Notes

- The print calibration setting in the [ADMIN] menu can be configured only when an administrator has set the Calibration Display Level to [ADMIN].
📖 P.124 "Setting the Calibration and Registration Display Level"
- When the private print jobs, schedule print jobs, or invalid jobs are stored in the job list, the calibrations cannot be performed. In that case, delete the jobs in the job list.


This function allows the machine automatically to calibrate the color gradation for print jobs when the color cannot be adjusted well because the shading or the hue of the image has deviated.

- Set the LT-sized or A4-sized paper (recommended paper) in the cassette before starting the calibration. If any other paper is used, calibration may not be performed properly.
- If the color often deviates, call your service technician.

Caution

- If the glass is dirty or any foreign objects are stuck to the glass, the calibration may not be carried out properly. Keep the glass clean.
- Never raise the original cover or the optional Automatic Document Feeder, or open the front cover while the calibration is in progress. If this does happen, the calibration cannot be finished appropriately.
- Interrupt copying is not available during the calibration.

- 1 Place the LT-size or A4-size paper in the cassette.**
- 2 Press the [GENERAL] button.**

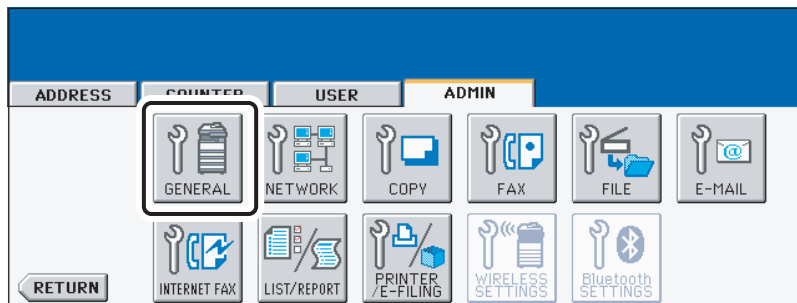


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". 📖 P.107

3 Press the [CALIBRATION] button.

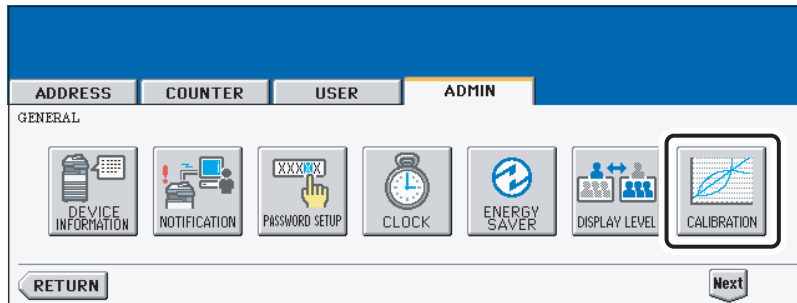


- The CALIBRATION menu is displayed.

4 Press the [PRINT] button.

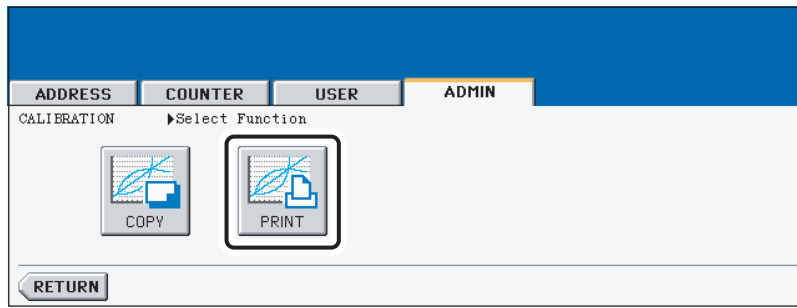


5 Press the [DEFAULT] button to set the default calibration setting for selected job type, or [CALIBRATION] button to adjust the calibration setting for selected job type.

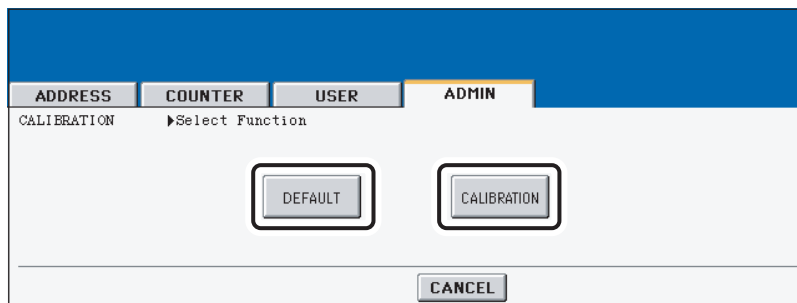

- When you press the [DEFAULT] button, the system maintains the default calibration setting for selected job type and returns to the CALIBRATION menu.
- When you press the [CALIBRATION] button, the chart is printed out and calibration guide illustration is displayed on the touch panel.

- 6** Place the printed chart face down on the glass with its bottom toward you and its top left aligned against the original scale on the left side, in order that the black line be placed at the left side.

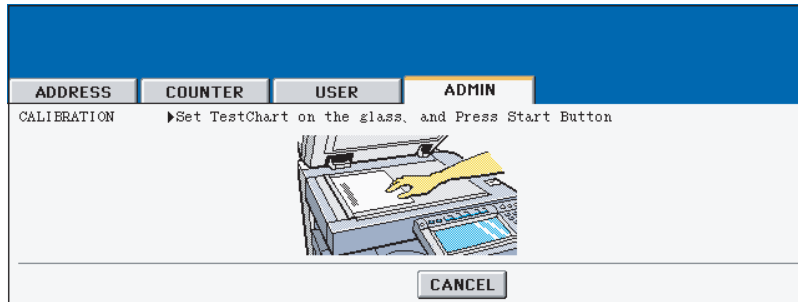


- 7** Press the [START] button.

- After scanning the printed chart, following message is displayed:
[Apply Calibration Setting?]

Tip

If the chart is not properly placed, the message “Set chart correctly” is displayed on the touch panel. In this case, go back to step 6 and place the chart again.

- 8** Press the [YES] button to apply the calibration setting, or press the [NO] button to cancel the calibration setting.

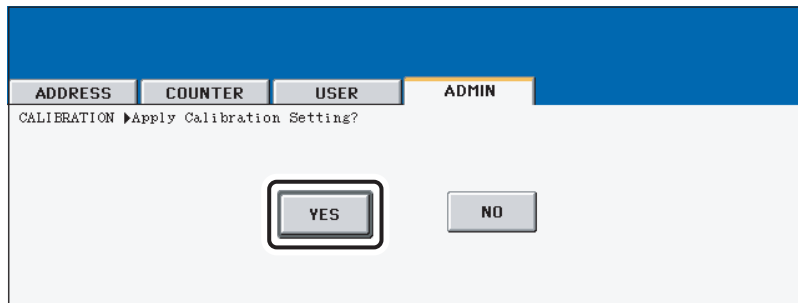

Setting the Registration


This equipment allows you to perform the registration to adjust the printing position manually.

Note

The registration setting in the [ADMIN] menu can be configured only when an administrator has set the Registration Display Level to [ADMIN].

📖 P.124 "Setting the Calibration and Registration Display Level"

1 Press the [GENERAL] button.

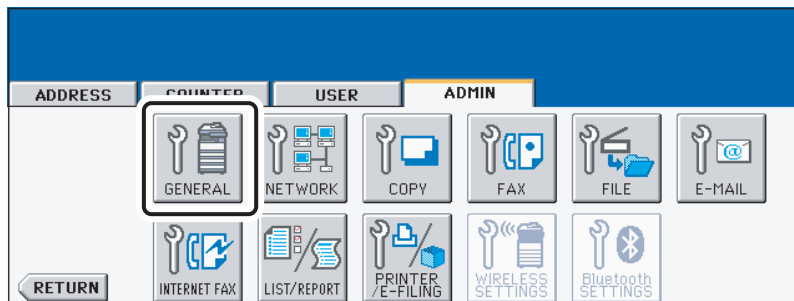


- The GENERAL menu is displayed.


Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". 📖 P.107

2 Press the [Next] button.

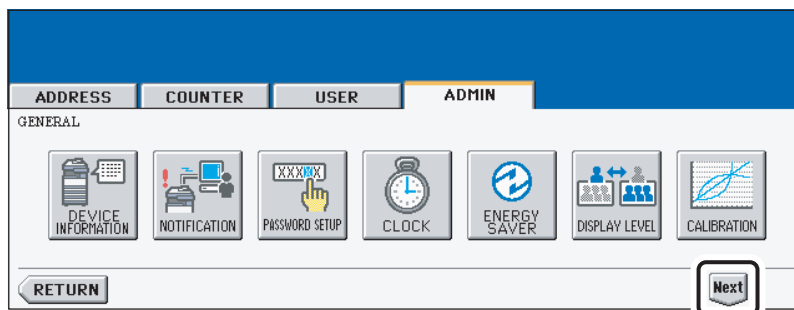


3 Press the [REGISTRATION] button.

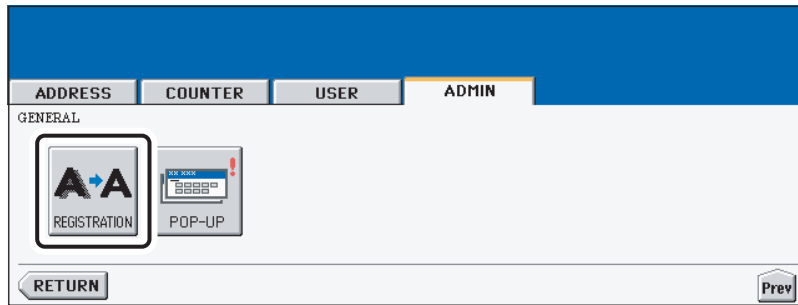

- The REGISTRATION menu is displayed.

4 Press the [YES] button to start the registration.

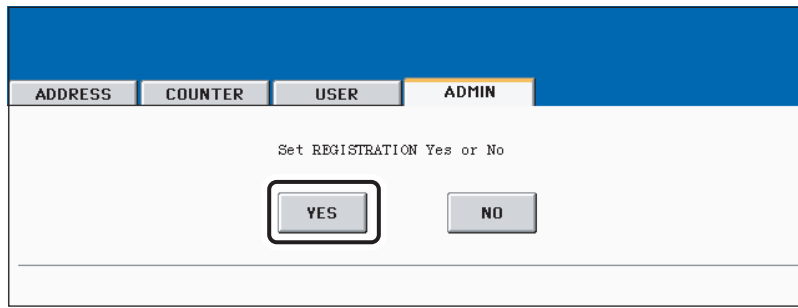


- The registration process begins.

Setting the Drawer Set Pop-Up and Paper Jam Recovery Pop-Up

You can set whether or not displaying the message to ask users to change the paper size setting every time you open the drawer.

You can also set whether or not displaying the message to ask users to continue the copying or printing after recovering the paper jam.

1 Press the [GENERAL] button.

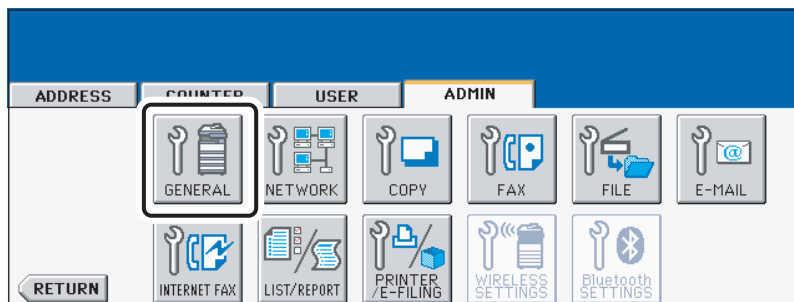


- The GENERAL menu is displayed.


Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [Next] button.

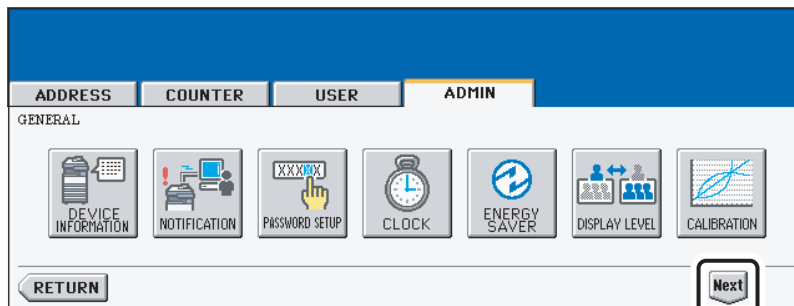


3 Press the [POP-UP] button.

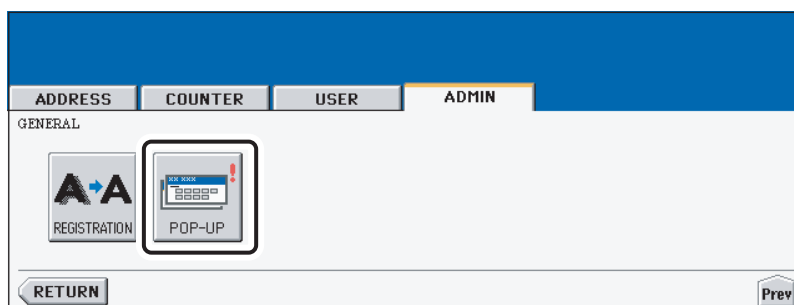

- The POP-UP screen is displayed.

4 Press the [ENABLE] or [DISABLE] for each option and press the [ENTER] button.

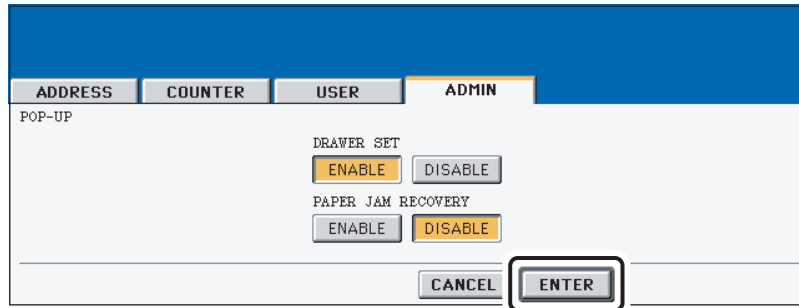

- **DRAWER SET** — When this is enabled, this equipment displays the message to ask users to change the paper size setting every time you open the drawer.
- **PAPER JAM RECOVERY** — When this is enabled, this equipment displays the message to ask users to continue copying or printing when the paper jam is recovered. When this is disabled, copying or printing will be continued automatically when the paper jam is recovered.

SETTING NETWORK FUNCTIONS

Setting the TCP/IP Protocol


You can set the TCP/IP protocol that is commonly used for most of network system. It is recommended to configure the TCP/IP protocol because TopAccess, the device management web-based utility, and e-Filing web-based utility, that allows you to manage files in the e-Filing, will be available with the TCP/IP protocol. Also other network features of this equipment use the TCP/IP protocol.

In the TCP/IP menu, you can select the addressing mode, assign the IP address, subnet mask, and default gateway (if manually assigned).

How the TCP/IP protocol is configured is depending on the network configuration of your network.


- **When you assign the TCP/IP using the Auto-IP addressing or DHCP server:**

If you do not know how the TCP/IP settings should be assigned, you can select Dynamic addressing mode. When the Dynamic addressing mode is selected, this equipment will obtain the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address from the DHCP server if the network supports the DHCP. If the network does not support the DHCP, this equipment will assign the appropriate IP address using the Auto-IP addressing. However, the Auto-IP addressing may not work properly when the router is placed in the network.

 P.137 "Setting the TCP/IP for Auto-IP and DHCP Server"


- **When you assign the TCP/IP using the DHCP server only:**

If your local area network has been configured with the DHCP server and you do not want to enable the Auto-IP addressing, you can select No Auto-IP addressing mode. When the No Auto-IP addressing mode is selected, the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address will be automatically obtained from the DHCP server, and the Auto-IP addressing will be disabled. To enable the DHCP addressing only, please configure the TCP/IP settings as described in following procedure.

 P.138 "Setting the TCP/IP for DHCP Server Only"


- **When you connect to local area network where the static IP addresses are used:**

If your local area network has been configured with the static IP address, you must assign the specific IP address, subnet mask, and default gateway as required.

 P.139 "Setting the TCP/IP for Static IP Address"

Setting the TCP/IP for Auto-IP and DHCP Server

1 Press the [NETWORK] button in the ADMIN menu.

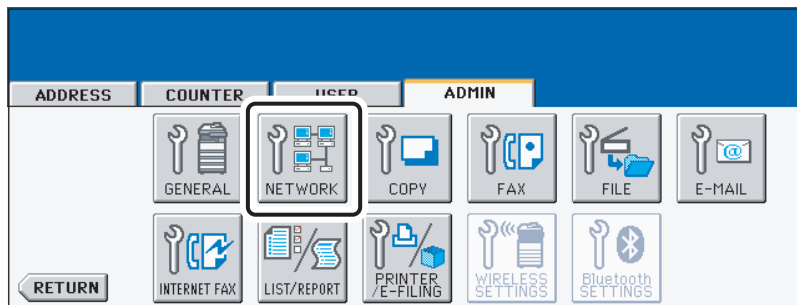


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [TCP/IP] button.

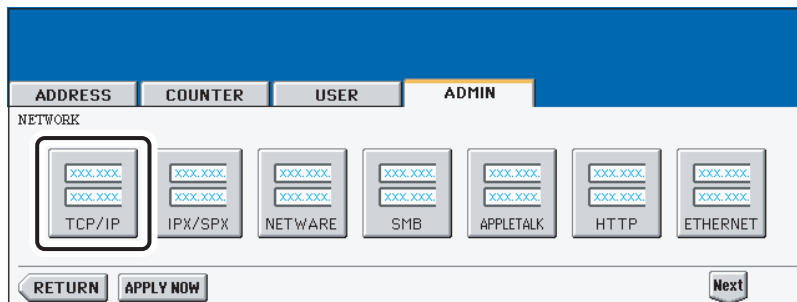

- The TCP/IP screen is displayed.


3 Press the [DYNAMIC] button in the "ADDRESS MODE" option.

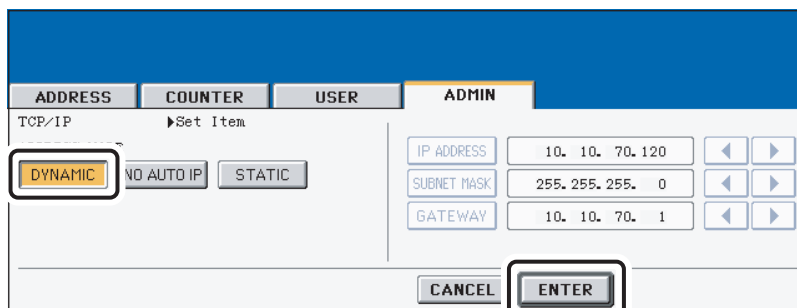

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.


5 Continue to another network setting if required, then press the [APPLY NOW] button.

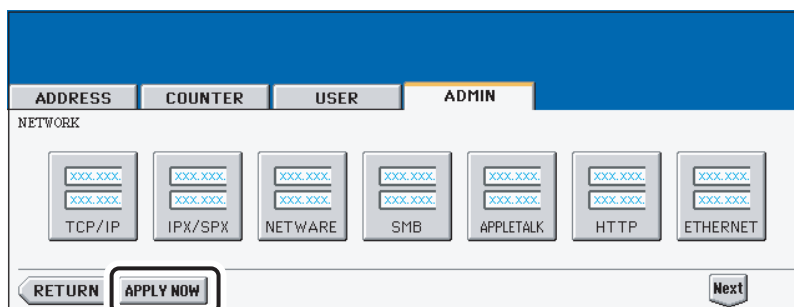

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the TCP/IP for DHCP Server Only

1 Press the [NETWORK] button in the ADMIN menu.

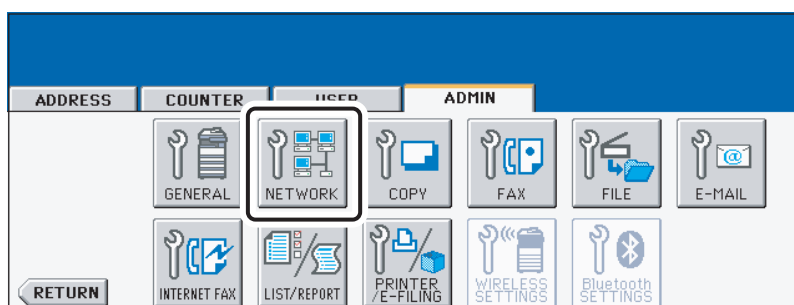


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [TCP/IP] button.

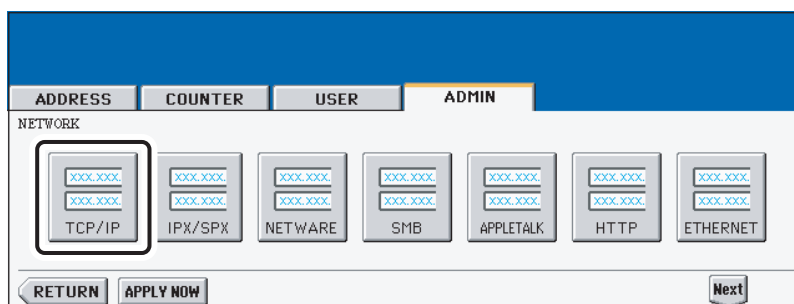

- The TCP/IP screen is displayed.


3 Press the [NO AUTO IP] button in the "ADDRESS MODE" option.

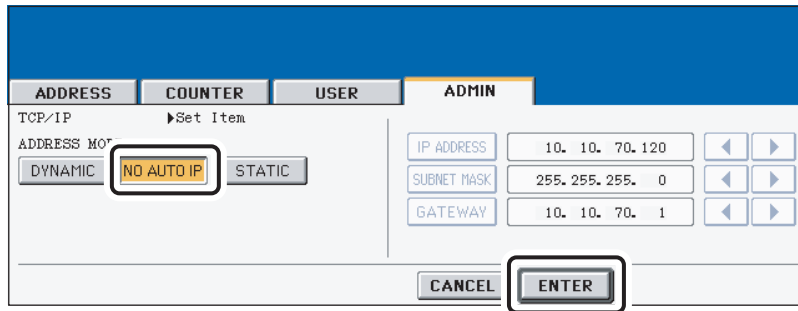

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.


5 Continue to another network setting if required, then press the [APPLY NOW] button.

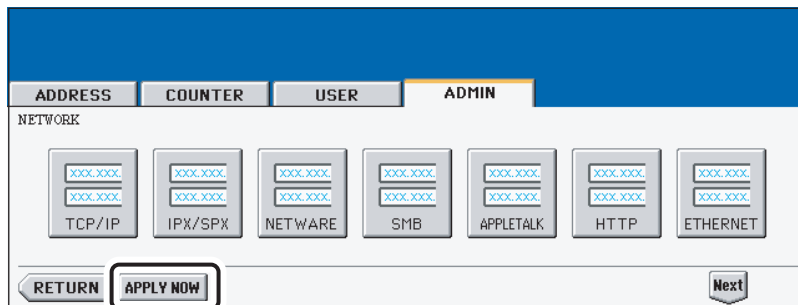

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the TCP/IP for Static IP Address

1 Press the [NETWORK] button in the ADMIN menu.

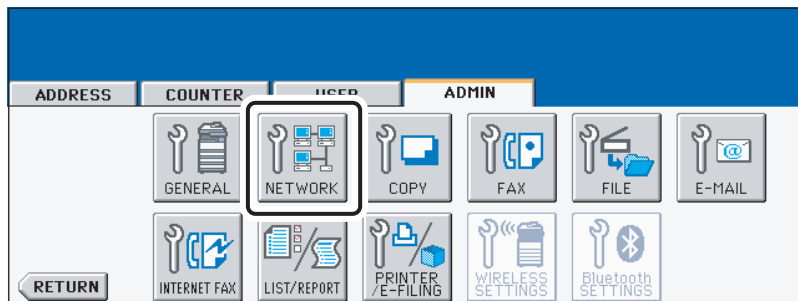


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [TCP/IP] button.

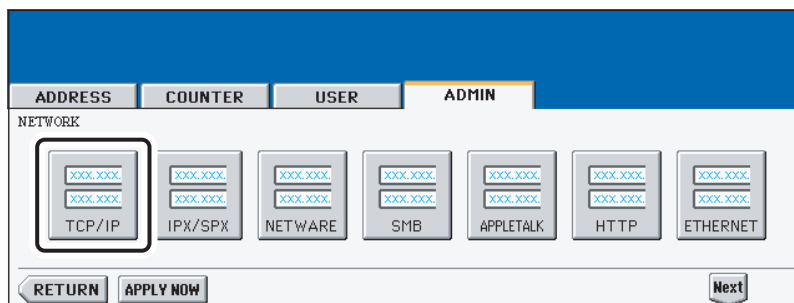


- The TCP/IP screen is displayed.

3 Press the [STATIC] button in the “ADDRESS MODE” option.

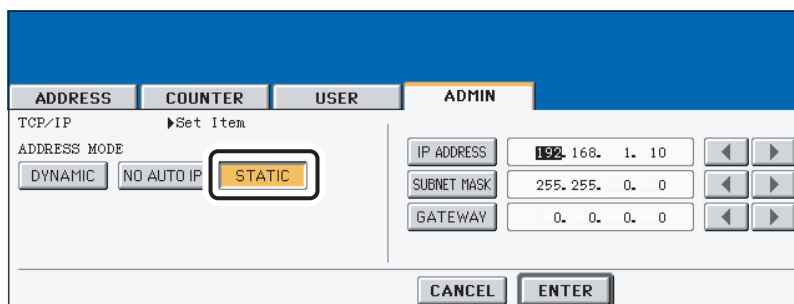


4 Press the [IP ADDRESS] button and enter the IP address of this device using the digital keys. Enter also the subnet mask and default gateway as required.

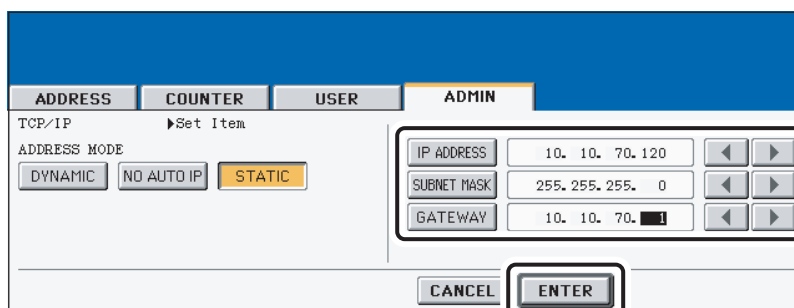

5 Press the [ENTER] button.

- Returns you to the NETWORK menu.

6 Continue to another network setting if required, then press the [APPLY NOW] button.

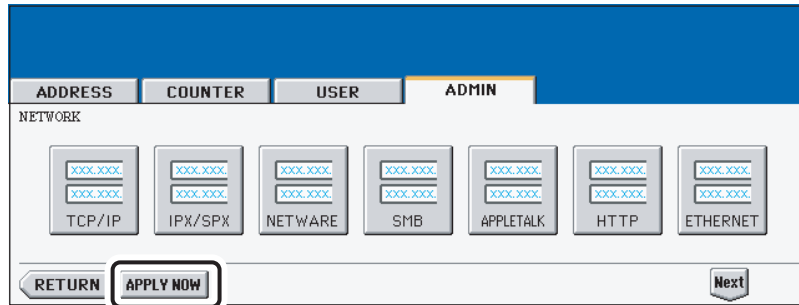


- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the IPX/SPX Protocol

You can set the IPX/SPX protocol on this equipment. The IPX/SPX protocol is usually used to communicate with the NetWare file server through the network.

1 Press the [NETWORK] button in the ADMIN menu.

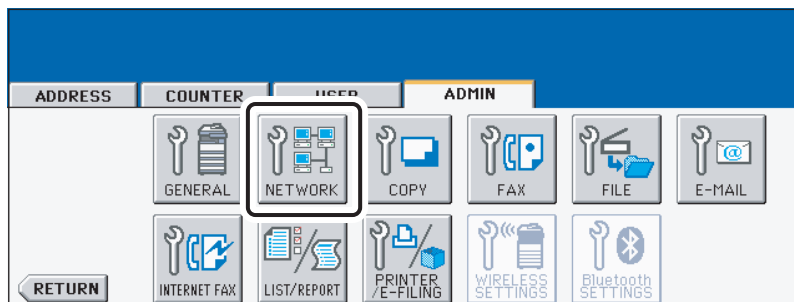


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [IPX/SPX] button.

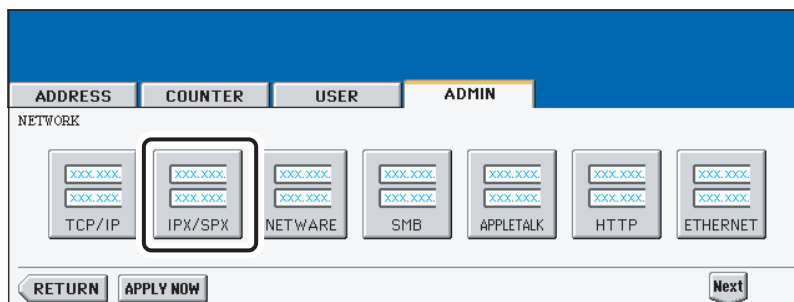

- The IPX/SPX screen is displayed.

3 Specify the following items as required.

The screenshot shows the ADMIN menu with the following options:

- IPX/SPX: ENABLE IPX/SPX (ENABLE, DISABLE)
- FRAME TYPE: AUTO, EN_802.3, EN_802.2, EN_I, EN_SNAP
- Buttons: CANCEL, ENTER

- **ENABLE IPX/SPX** — Press the [ENABLE] button to enable the IPX/SPX protocol, or [DISABLE] button to disable the IPX/SPX protocol.
- **FRAME TYPE** — Press the [AUTO] button to automatically detect the appropriate frame type, or press other specific frame type button. If you do not know the frame type that must be used, select the [AUTO] button.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

The screenshot shows the NETWORK menu with the following options:


- Buttons: RETURN, APPLY NOW, Next
- Options: TCP/IP, IPX/SPX, NETWARE, SMB, APPLE TALK, HTTP, ETHERNET

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the NetWare Settings

You can set the NetWare network mode and the NetWare configuration to be connected. This must be set when you use the NetWare file server for Novell printing.

1 Press the [NETWORK] button in the ADMIN menu.

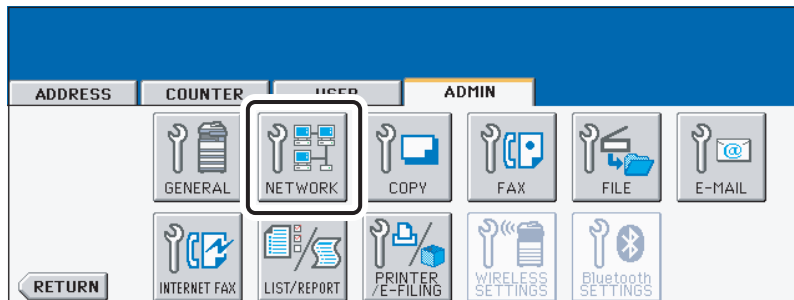


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [NETWARE] button.

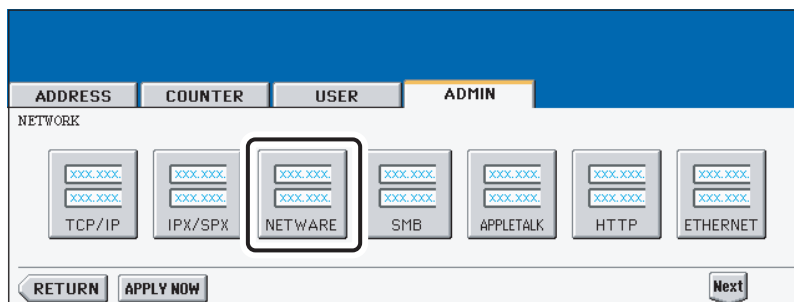

- The NETWARE screen is displayed.

3 Specify following items as required.

The screenshot shows a configuration menu with tabs for ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is active. Under the NETWORK heading, there are two sections: 'ENABLE BINDERY' and 'ENABLE NDS'. Each section has two buttons: 'ENABLE' (highlighted in yellow) and 'DISABLE'. To the right, there are three input fields: 'CONTEXT' with the value 'dept1', 'TREE' with the value 'org', and 'SEARCH ROOT' with the value 'nwstvr'. At the bottom of the menu, there are 'CANCEL' and 'ENTER' buttons, with 'ENTER' being highlighted with a red box.

- **ENABLE BINDERY** — Press the [ENABLE] button to enable communicating with the NetWare file server in bindery mode, or [DISABLE] button to disable the bindery mode.
- **ENABLE NDS** — Press the [ENABLE] button to enable communicating with the NetWare file server in NDS mode, or [DISABLE] button to disable the NDS mode.
- **[CONTEXT]** — Press this to enter the NDS context that the NetWare print server for this equipment is located. This must be entered when you connect the NetWare file server in NDS mode.
- **[TREE]** — Press this to enter the NDS tree. This must be entered when you connect the NetWare file server in NDS mode.
- **[SEARCH ROOT]** — Press this to enter the NetWare file server name. It is recommended to enter this when you connect the NetWare file server in bindery mode.

Tips

- When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.
- You can enable both the bindery and NDS mode at the same time.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

The screenshot shows the same configuration menu as before, but now with several network protocol options displayed as buttons: TCP/IP, IPX/SPX, NETWORK, SMB, APPLETTALK, HTTP, and ETHERNET. Each button has a placeholder 'xxx.xxx' above it. At the bottom, there are three buttons: 'RETURN', 'APPLY NOW' (highlighted with a red box), and 'Next'.

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.


Setting the SMB Protocol

When you want to enable this equipment visible in the Windows network, you must enable the SMB protocol and enter the NetBIOS name and workgroup to specify the device name of this equipment and workgroup where this equipment will be visible.

Also if your network uses the WINS server to allow the SMB communication across the segments, you must specify the WINS server address, so that this equipment will be visible from the different segment.

This must be enabled for SMB printing, Save as file to the network folder using SMB, and sharing the "FILE_SHARE" folder (that is the local folder of this equipment) in the network.

1 Press the [NETWORK] button in the ADMIN menu.

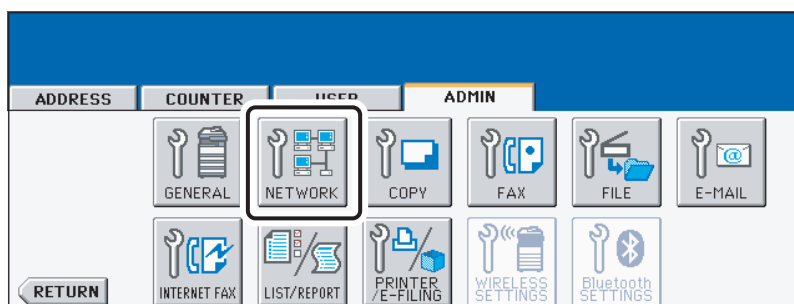


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [SMB] button.

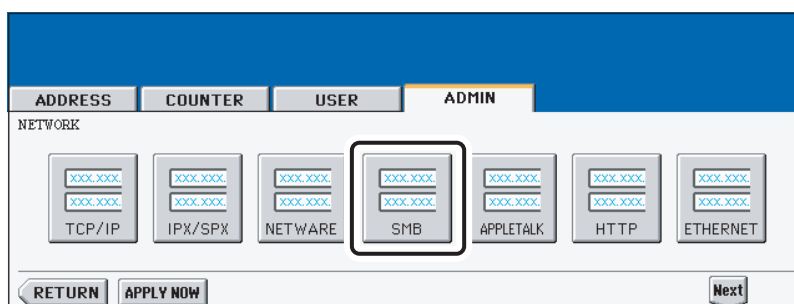

- The SMB screen is displayed.

3 Specify following items as required and press the [ENTER] button.

The screenshot shows the SMB configuration interface. It includes tabs for ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is active, showing the SMB PROTOCOL section with ENABLE and DISABLE buttons, and DISABLE PRINT SHARE and DISABLE FILE SHARE buttons. The LOGON section has a text field with 'workgroup' and WINS PRIMARY and WINS SECONDARY buttons with IP address input fields. The NetBIOS NAME section has a text field with 'MFP-04998820'. At the bottom are CANCEL and ENTER buttons.

- **SMB PROTOCOL** — Select whether the SMB protocol is enabled or disabled. When you want to enable the SMB protocol to enable the Save as file to network folder using SMB and sharing the “FILE_SHARE” folder of this equipment, but not to enable the SMB printing, press the [DISABLE PRINT SHARE] button. When you want to enable the SMB protocol to enable the SMB printing, but not to enable the Save as file to network folder using SMB and sharing the “FILE_SHARE” folder of this equipment, press the [DISABLE FILE SHARE] button.
- **[NetBIOS NAME]** — Press this button to enter the Windows computer name of this device if this device is connected to the Windows network. This must be specified when you want to enable SMB printing.
- **LOGON** — This displays the Windows network logon environment. “workgroup” will be displayed if this equipment logon the workgroup network and “domain” will be displayed if this equipment logon the domain network. This can be specified only from TopAccess. For instructions on how to set the workgroup or domain, please see “Setting up the SMB Session” in “Chapter 7 TopAccess Administrator Mode” of *TopAccess Guide*.
- **[WINS PRIMARY]** — Press this button and enter the IP address of the primary WINS server using the digital keys if required.
- **[WINS SECONDARY]** — Press this button and enter the IP address of the secondary WINS server using the digital keys if required.

Tip


When you press the [NetBIOS NAME] button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

Notes

- When you select [DISABLE] or [DISABLE FILE SHARE], the Save as File to MFP Local function will be disabled.
- If this equipment is configured to logon the domain in the SMB Session of TopAccess administrator mode but “workgroup” is displayed, login on the domain network is failed. In that case, confirm that the Windows Server and the SMB Session settings are correctly set.
- When you set “Domain” for the Logon setting in the SMB Session of TopAccess administrator mode, this equipment will logon to the domain network after turning ON the power of equipment or changing the network settings and pressing the [APPLY NOW] button.
- You can enter only alphanumeric characters and “-” (hyphenation) for NetBIOS name. If you use any other characters, a warning message will be displayed.
- Do not enter an IP address that starts with “0” (i.e. “0.10.10.10”), “127” (i.e. “127.10.10.10”), and “224” (i.e. “224.10.10.10”). If you enter such an address, the equipment cannot communicate with the WINS server.

- If you enter "0.0.0.0" for [WINS PRIMARY] and [WINS SECONDARY], this equipment will not use the WINS server.
- When [DYNAMIC] or [NO AUTO IP] is selected for the Address Mode in the TCP/IP setting, this equipment can obtain the IP address for [WINS PRIMARY] and [WINS SECONDARY] from the DHCP server.

4 Continue to another network setting if required, then press the [APPLY NOW] button.

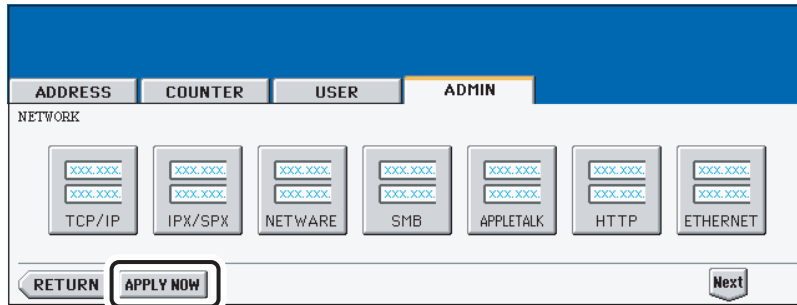

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the AppleTalk Protocol

The AppleTalk protocol must be enabled and properly configured to enable AppleTalk printing with the Macintosh computer.

1 Press the [NETWORK] button in the ADMIN menu.




- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [APPLETALK] button.

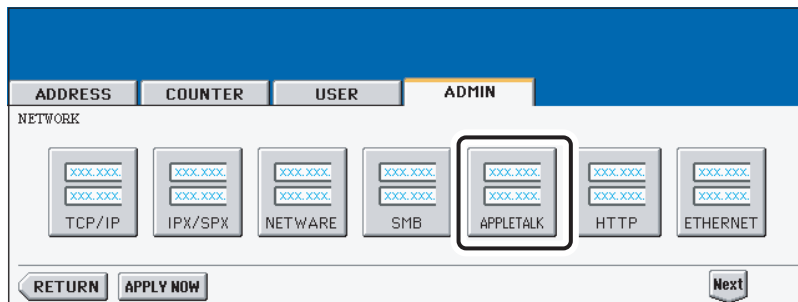

- The APPLETTALK screen is displayed.

3 Specify following items as required.

The screenshot shows a configuration window titled 'APPLETALK' with a 'Set Item' prompt. It features a menu bar with 'ADDRESS', 'COUNTER', 'USER', and 'ADMIN'. Below the menu, there are two buttons: 'ENABLE' (highlighted in orange) and 'DISABLE'. There are two input fields: 'DEVICE NAME' containing 'MFP_04998820' and 'DESIRED ZONE' containing '*'. At the bottom, there are 'CANCEL' and 'ENTER' buttons, with the 'ENTER' button circled in red.

- **ENABLE APPLETALK** — Press the [ENABLE] button to enable the AppleTalk, or [DISABLE] button to disable the AppleTalk.
- **[DEVICE NAME]** — Press this to enter the AppleTalk name of this equipment.
- **[DESIRED ZONE]** — Press this to enter the AppleTalk zone name this equipment joins. If your AppleTalk network has not been configured with a zone, you do not have to enter the zone name.

Tip

When you press the [APPLETALK NAME] and [DESIRED ZONE] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.


The screenshot shows a 'NETWORK' menu with a menu bar containing 'ADDRESS', 'COUNTER', 'USER', and 'ADMIN'. Below the menu, there are seven protocol icons: TCP/IP, IPX/SPX, NETWARE, SMB, APPLETALK, HTTP, and ETHERNET. At the bottom, there are 'RETURN', 'APPLY NOW' (highlighted in red), and 'Next' buttons.

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the HTTP Network Service

This function allows you to enable or disable the HTTP network server service that provides the web-based utility on this equipment, such as TopAccess and e-Filing web utility.

1 Press the [NETWORK] button in the ADMIN menu.

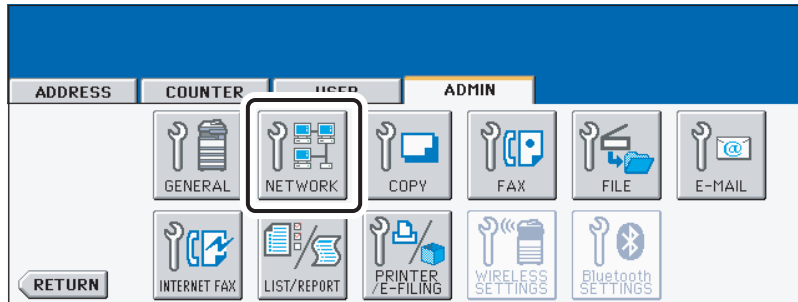


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [HTTP] button.

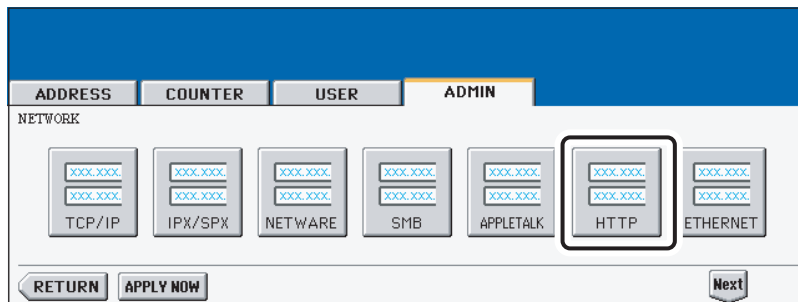

- The HTTP screen is displayed.

3 Specify following items as required.

HTTP ▶Set Item

ENABLE HTTP SERVER

ENABLE SSL

PRIMARY PORT NUMBER 80
 SECONDARY PORT NUMBER 8080

- **ENABLE HTTP SERVER** — Press the [ENABLE] button to enable the HTTP network server service, or [DISABLE] button to disable the HTTP network server service. This must be enabled for TopAccess and e-Filing web utility.
- **[PRIMARY PORT NUMBER]** — Press this to enter the primary port number to be used for the HTTP access from the other client. It is recommended to use the default port number “80” if you are not sure changing this port number.
- **[SECONDARY PORT NUMBER]** — Press this to enter the secondary port number to be used to access the TopAccess and e-Filing web utility. It is recommended to use the default port number “8080” if you are not sure changing this port number.
- **ENABLE SSL** — Press the [ENABLE] button to enable the SSL for accessing TopAccess and e-Filing web utility, or [DISABLE] button to disable the SSL for accessing TopAccess and e-Filing web utility. When this is enabled, the data transferred between the equipment and client computers will be encrypted using a private key when operating TopAccess and e-Filing web utility.

Note

To enable SSL, you must create a self-signed certificate in the equipment or import the server certificate using TopAccess. If the self-signed certificate is not created or the server certificate is not imported, the SSL cannot be enabled.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

NETWORK


TCP/IP IPX/SPX NETWARE SMB APPLE TALK HTTP ETHERNET

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.

Setting the Ethernet Speed

This function allows you to specify the ethernet speed.

1 Press the [NETWORK] button in the ADMIN menu.

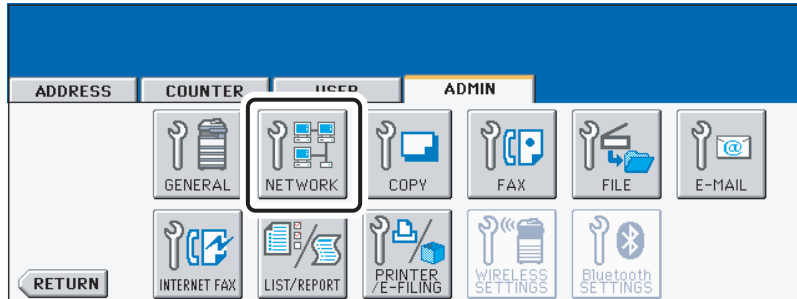


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [ETHERNET] button.

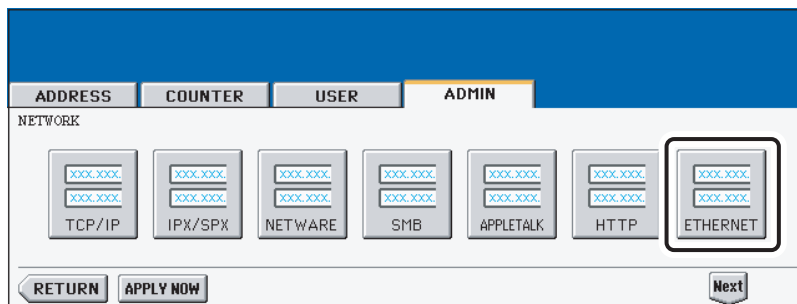

- The ETHERNET screen is displayed.

- 3 Press the [AUTO] button to automatically detect the appropriate ethernet speed, or press other specific ethernet speed button.**

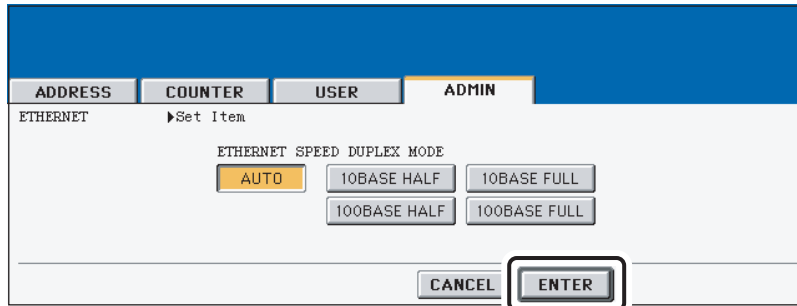


Tips

- When you select a specific ethernet speed, you must select the same ethernet speed as set in the connected network. If you do not know the ethernet speed that must be used, select the [AUTO] button.
- If the network is not stable, power OFF the equipment then ON.

- 4 Press the [ENTER] button.**

- Returns you to the NETWORK menu.

- 5 Continue to another network setting if required, then press the [APPLY NOW] button.**

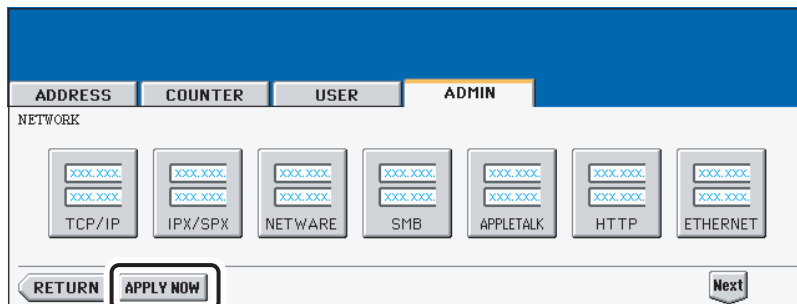

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.


Setting the LDAP and SNMP Network Service

This function allows this equipment to access the LDAP directory service. This equipment can search for the contacts in the LDAP server to specify the recipients of the Internet Fax, fax transmission, and Scan to E-mail job.

Tips

- If the LDAP network service is enabled, you can register the LDAP directory service, and then this equipment can search for the contacts in the LDAP server. To add the LDAP directory service, you must operate using TopAccess. For more information about registering the directory service, please see the **TopAccess Guide**.
- When the LDAP network service is disabled, it is not possible to obtain the user's e-mail address as "From Address" from the LDAP server during the User Authentication for Scan to Email.

1 Press the [NETWORK] button in the ADMIN menu.

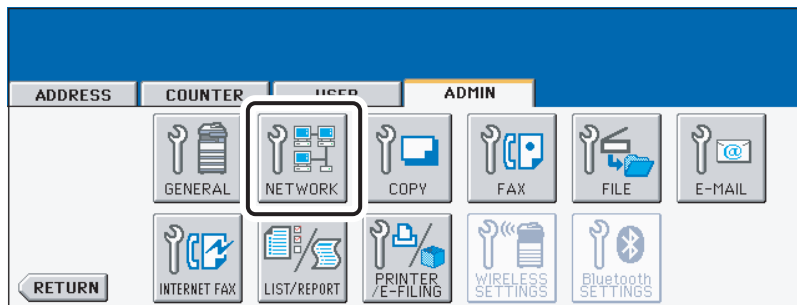


- The NETWORK menu is displayed.


Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [Next] button.

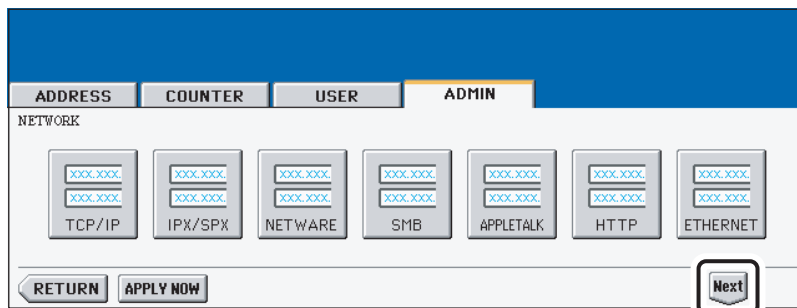


3 Press the [OTHER] button.

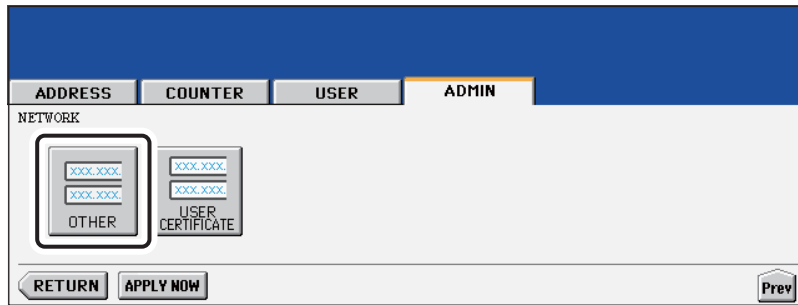

- The OTHER screen is displayed.

4 Press the [ENABLE] button to enable the LDAP network service, or [DISABLE] button to disable it.

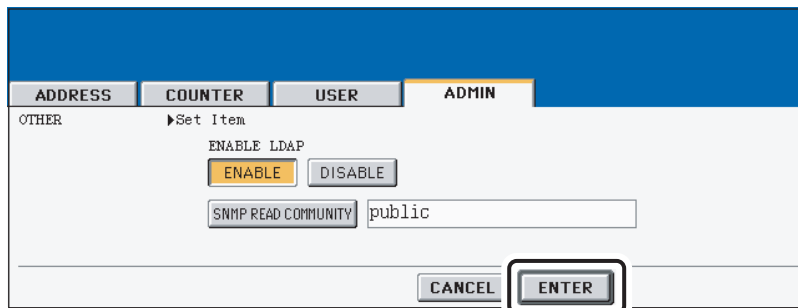

- Optionally you can enter the SNMP read community name for the SNMP access by pressing the [SNMP READ COMMUNITY] button. When you press this button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.


Notes

- If you specify a community name other than "public" for the Read Community, the applications that use MIB (TopAccessDocMon, TWAIN driver, File Downloader, and Address Book Viewer) will be unavailable. The SNMP communication of the printer driver also will be unavailable, so that the obtaining the configurations, confirming the department code, and obtaining the available boxes in e-Filing will be disabled.
- When you set the "Read Community" option blank, the SNMP communication between the SNMP Browser of Client PC and this equipment will be disabled.

5 Press the [ENTER] button.

- Returns you to the NETWORK menu.

6 Continue to another network setting if required, then press the [APPLY NOW] button.

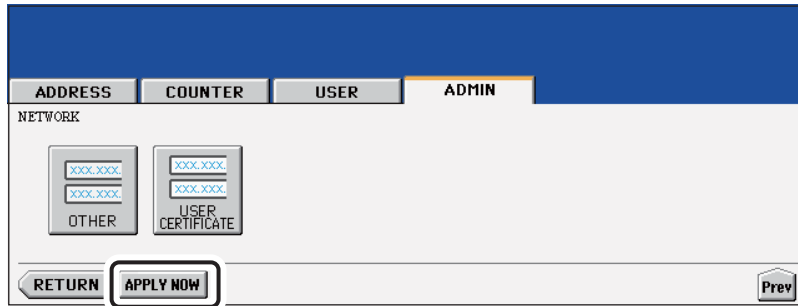

- The "NETWORK INITIALIZING" message is displayed and this equipment starts initializing the network interface card to apply the changes.


Setting the User Certificate

When you import the server certificate using TopAccess to enable SSL for the HTTP Network Service, FTP Server, and IPP Print Service, you must enter the password for the server certificate using this function.

Tip

This function must be performed after importing the server certificate using TopAccess. For more information about importing the server certificate, please see the **TopAccess Guide**.

1 Press the [NETWORK] button in the ADMIN menu.

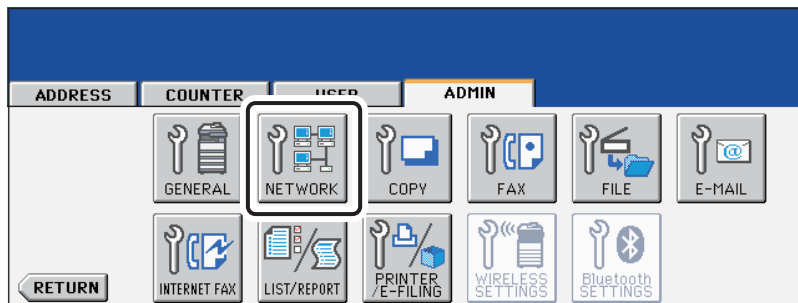

- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [Next] button.

ADDRESS COUNTER USER ADMIN

NETWORK

TCP/IP IPX/SPX NETWARE SMB APPLETTALK HTTP ETHERNET

RETURN APPLY NOW Next

3 Press the [USER CERTIFICATE] button.

ADDRESS COUNTER USER ADMIN

NETWORK

OTHER USER CERTIFICATE

RETURN APPLY NOW Prev

- The USER CERTIFICATE screen is displayed.

4 Press the [USER CERTIFICATE] button.

ADDRESS COUNTER USER ADMIN

USER CERTIFICATE

►Input the user certificate file name and password

USER CERTIFICATE A password is required for decryption of the private key contained in the user certificate.

PASSWORD


CANCEL ENTER

- The input screen is displayed.

- 5 Enter the server certificate file name using the keyboard and digital keys, and press the [ENTER] key to set the entry.



- 6 Press the [PASSWORD] button.

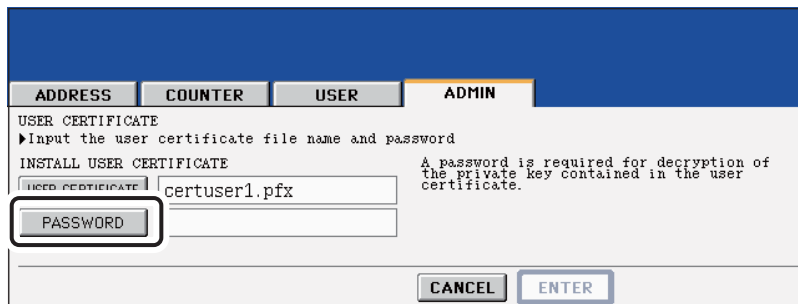

- The input screen is displayed.

- 7 Enter the password for the server certificate using the keyboard and digital keys, and press the [ENTER] key to set the entry.



- The input password appears as asterisks (*).

8 Press the [ENTER] button.

ADDRESS COUNTER USER ADMIN

USER CERTIFICATE
▶Input the user certificate file name and password

INSTALL USER CERTIFICATE

USER CERTIFICATE certuser1.pfx

PASSWORD *****

A password is required for decryption of the private key contained in the user certificate.


CANCEL ENTER

- Returns you to the ADMIN menu and the "NETWORK INITIALIZING" message is displayed. This equipment starts initializing the network interface card to apply the changes.

SETTING COPY FUNCTIONS

You can change the system behaviors for the copy operation, such as maximum number of copies, auto 2-sided mode, and the sort mode priority.

1 Press the [COPY] button in the ADMIN menu.

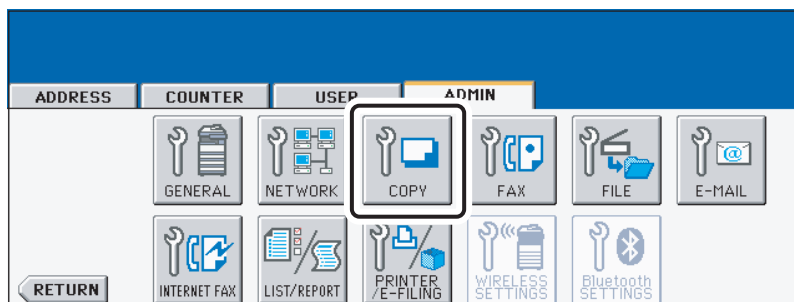


- The COPY screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Specify following items as required.

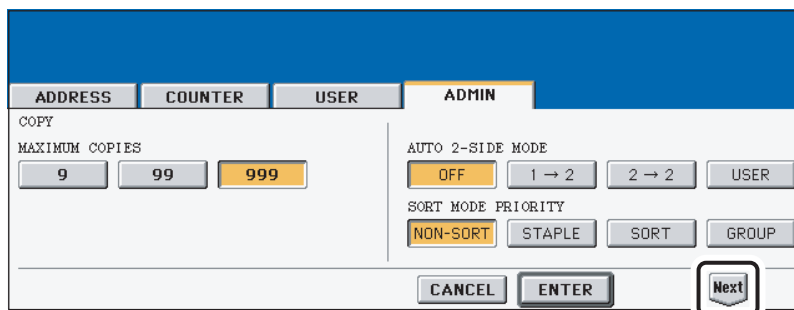

- **MAXIMUM COPIES** — Press the number button that indicates the maximum number of copies to be allowed.
- **AUTO 2-SIDE MODE** — Press the button of the 2-Sided mode that initially applies to copy settings when originals are set in the Automatic Document Feeder. When the [OFF] button is selected, the initial setting of the 2-Sided mode will be [1 -> 1 SIMPLEX] when originals are set in the Automatic Document Feeder. When the [1->2] button is selected, the initial setting of the 2-Sided mode will be [1 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder. When the [2->2] button is selected, the initial setting of the 2-Sided mode will be [2 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder. When the [USER] button is selected, the screen to select the 2-Sided mode will be displayed when originals are set in the Automatic Document Feeder.
- **SORT MODE PRIORITY** — Press the sort mode that applies prior for copy jobs. If the [STAPLE] button is selected, the output is stapled on the upper left corner as the default. To select the [STAPLE] button, the optional finisher must be installed.

3 Press the [Next] button to display the next screen.

4 Specify following items as required.

- **AUTOMATIC CHANGE OF PAPER SOURCE** — When this is set to [ON], this equipment will print on the different size of paper when the specified paper size is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- **PAPER OF DIFFERENT DIRECTION** — When this is set to [ON], this equipment will rotate the image and print on the different direction of paper if the correct direction of paper is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- **SUSPEND PRINTING IF STAPLER EMPTY** — When this is set to [ON], this equipment quit the job with stapling when the stapler empty occurs. When this is set to [OFF], this equipment will continue the job without stapling.
- **DEFAULT MODE OF AUTO COLOR** — Press the default color mode for Auto Color.

5 Press the [ENTER] button.

- Returns you to the ADMIN menu.

SETTING FAX FUNCTIONS

Setting the Terminal ID

Note


The Terminal ID settings are available only when the optional Fax unit is installed.

Once programmed, Terminal ID information will be printed on the leading edge of transmitted or received documents if the TTI and RIT are enabled.

Tips

- ID information is sent and printed about 5 mm from the top edge of the original.
- In compliance with FCC regulations, your company's name, facsimile telephone number and date & time are added at the top of all transmitted documents. This feature enables remote parties to easily identify your documents and the time of transmission.

1 Press the [FAX] button in the ADMIN menu.

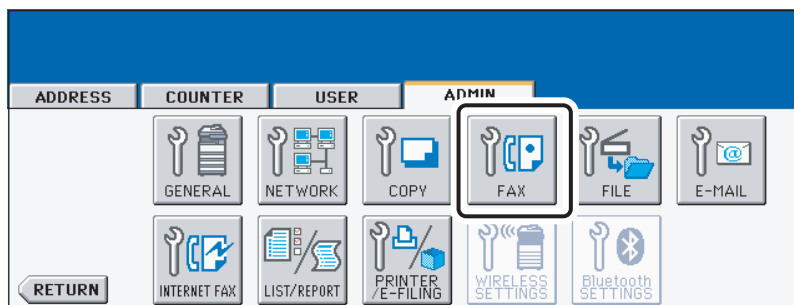


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [TERMINAL ID] button.

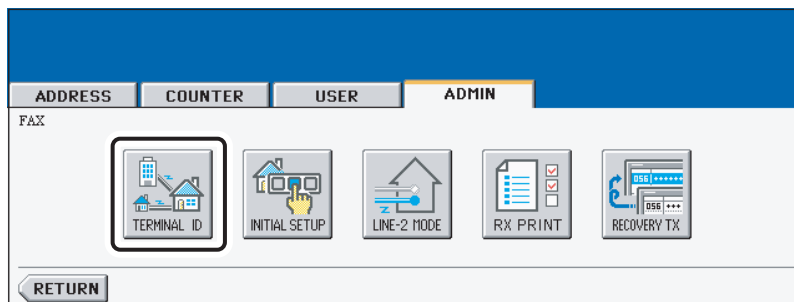

- The TERMINAL ID screen is displayed.

3 Specify following items as required.

The screenshot shows the ADMIN menu with the following options: ADDRESS, COUNTER, USER, and ADMIN. The ADMIN menu is selected, and the screen displays the text "TERMINAL ID TERMINAL ID ... recorded at TTI Add the International Code". Below this text are three input fields: ID NAME, FAX NUMBER, and LINE2 NUMBER. Each input field has a corresponding button below it. At the bottom of the screen are CANCEL and ENTER buttons.

- **[ID NAME]** — Press this to enter the terminal ID of this equipment.
- **[FAX NUMBER]** — Press this to enter the fax number of this equipment.
- **[LINE2 NUMBER]** — Press this to enter the 2 line fax number of this equipment if the Line2 board is installed. This is not displayed when the Line2 board is not installed.
- When you press the [ID NAME] button, the input screen is displayed. Enter the name using the keyboard and digital keys, and press the [ENTER] button to set the entry.

The screenshot shows the input screen for the ID NAME field. The screen displays the text "MFP-00C67861_" at the top. Below the text is a keyboard layout with various keys. The ENTER button is highlighted with a red box. Other buttons include Back Space, CLEAR, Shift, Caps Lock, Space, CANCEL, and Next.

- When you press the [FAX NUMBER] or [LINE2 NUMBER] button, the message to ask you whether adding the international code is displayed. Press the [YES] button if you want to add the international code, or the [NO] button if you do not want to add the international code. When you press the [YES] button, the input screen that "+" is entered is displayed. When you press the [NO] button, the input screen without any entry is displayed.

The screenshot shows the "Add the International Code" dialog box. The screen displays the text "Add the International Code" in the center. Below the text are two buttons: YES and NO. The YES button is highlighted with a red box. At the bottom of the screen is a CANCEL button.

Enter the phone number using the digital keys, and press the [ENTER] button to set the entry.

A terminal window with a blue header bar. The text '+0000000001' is displayed at the top left. Below it, the instruction 'Enter the fax/tel number' is centered. On the right side, there are three buttons: 'Back Space', a left arrow, and a right arrow. At the bottom of the window, there are two buttons: 'CANCEL' and 'ENTER', with the 'ENTER' button highlighted by a black rectangular box.

4 Press the [ENTER] button.

A terminal window with a blue header bar. Below the header, there are four tabs: 'ADDRESS', 'COUNTER', 'USER', and 'ADMIN', with 'ADMIN' selected. The text 'TERMINAL ID ▶ TERMINAL ID will be Recorded at TTI Add the International Code' is displayed. Below this, there are three input fields: 'ID NAME' with the value 'MFP-00C67861', 'FAX NUMBER' with the value '+0000000001', and 'LINE2 NUMBER' with the value '0000000002'. At the bottom of the window, there are two buttons: 'CANCEL' and 'ENTER', with the 'ENTER' button highlighted by a black rectangular box.

- Returns you to the FAX menu.

Setting the Fax Initial Setup


Note

The [INITIAL SETUP] button in the [ADMIN] menu will be available only when the optional Fax unit is installed.

Set the initial settings for the fax functions such as the volume settings and reception mode.

- Reception mode: AUTO, MANUAL
- Monitor tone volume: Adjustable 0-7 steps (0: tone OFF)
The "monitor tone" is the line monitor tone which is heard when the [MONITOR/PAUSE] button is pressed.
- Completion tone volume: Adjustable 0-7 stages (0: tone OFF)
The "completion tone" is the ringer tone which is heard when original printing has been completed. It can be heard when all originals have been printed out.
- Dial type (Line 1 /Line 2): DP, MF (not available for the European version)
There are two types of telephone lines: Dial pulse lines (DP) and multi frequency lines (MF). Change the telephone line setting to match the type of the line you are using, for example, when you first install the system or when you change the connected telephone line.

1 Press the [FAX] button in the ADMIN menu.

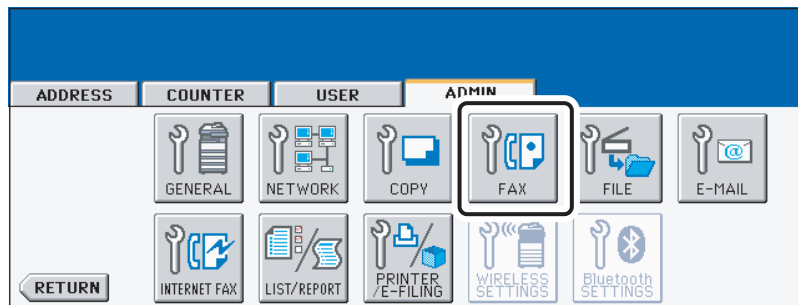


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [INITIAL SETUP] button.

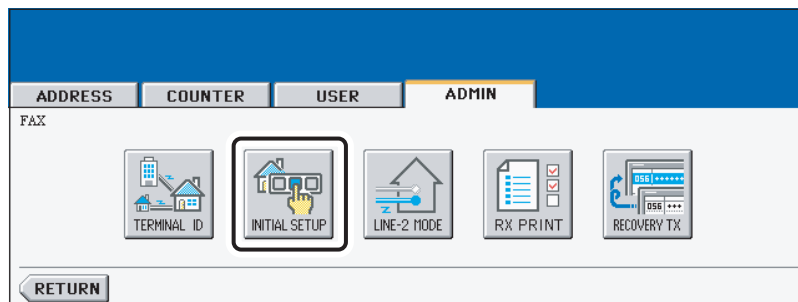

- The INITIAL SETUP screen is displayed.

3 Specify following items as required.

The screenshot shows the 'ADMIN' tab selected in the 'INITIAL SETUP' menu. Under 'RX MODE', the 'AUTO' button is highlighted. To the right, there are two volume sliders: 'MONITOR VOLUME' and 'COMPLETION TONE VOLUME', both set to 0. At the bottom, there are 'CANCEL', 'ENTER', and 'Next' buttons.

- **RX MODE** — Press the [AUTO] button to receive faxes automatically, or [MANUAL] button to receive faxes manually. When you select the manual mode, you can receive the faxes by pressing the [START] button when it rings.
- **MONITOR VOLUME** — Press the arrow buttons to change the monitor volume.
- **COMPLETION TONE VOLUME** — Press the arrow buttons to change the complete volume.

Note

When the User Management Setting is enabled, only the [AUTO] button can be selected for the RX MODE option.

4 Press the [Next] button to display the next screen.

5 Specify following items as required.

The screenshot shows the 'ADMIN' tab selected in the 'INITIAL SETUP' menu. Under 'DIAL TYPE', the 'DP' button is highlighted. Below it, under 'DIAL TYPE(LINE2)', the 'DP' button is also highlighted. At the bottom, there are 'CANCEL', 'ENTER', and 'Prev' buttons.

- **DIAL TYPE** — Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the Dial Pulse mode for the line 1.
- **DIAL TYPE (LINE2)** — Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the Dial Pulse mode for the line 2. This is available only when the optional 2nd line board is installed.

Note

The "DIAL TYPE" and "DIAL TYPE (LINE2)" is not available for the European version.

6 Press the [ENTER] button.

- Returns you to the FAX menu.



Setting the Line-2 Mode

Note

The Line-2 Mode settings are available only when the optional Fax unit and optional Line-2 board are installed.

Installing the 2nd line board (option) allows transmission during reception, reception during transmission, and simultaneous two communications of transmission/reception.

When the 2nd line is used, the following function setting and registration are required.


- Entering terminal ID  P.163
- Dial type setting  P.166
- Line-2 setting (following instruction)
- The 1st line takes precedence in the initial setting (not including the case that LINE 2 is selected in the LINE SELECT when you register remote fax numbers into the address). If you want the 2nd line to have priority in the initial setting, ask your service technician.

When the optional 2nd line board is installed, its operation can be selected from the following:

- Transmission/Reception
Both transmission and reception are available all the time.
 - Reception only (24 hours)
The 2nd line is always standing by for reception.
 - Reception only (timer)
Only reception is available during the specified period of time.
- * Even during reception only, the specified line performs transmission if any line has been specified by the options or address menu.

Entering Line-2 Mode Setting

- 1 Press the [FAX] button in the ADMIN menu.

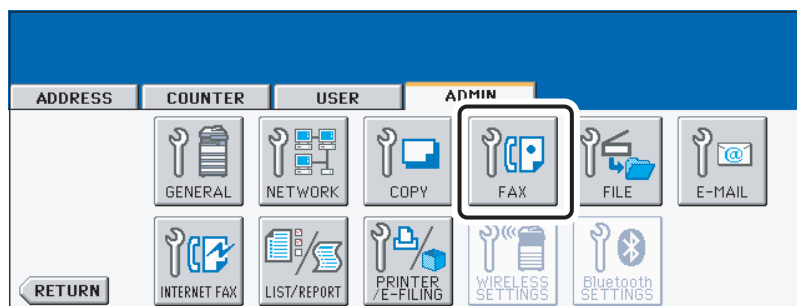


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [LINE-2 MODE] button.

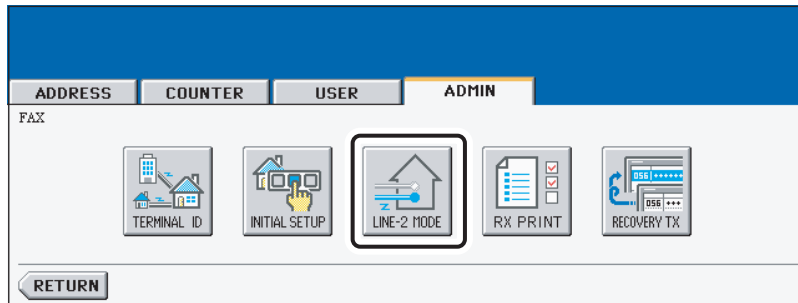


- The LINE-2 MODE screen is displayed.

3 Continue the procedure depending on how you set the Line-2 mode.

- P.169 "Transmission and Reception (TX /RX)"
- P.170 "Reception Only (24HR)"
- P.170 "Reception Only (TIMER)"

Transmission and Reception (TX /RX)

1 Press the [TX/RX] button.

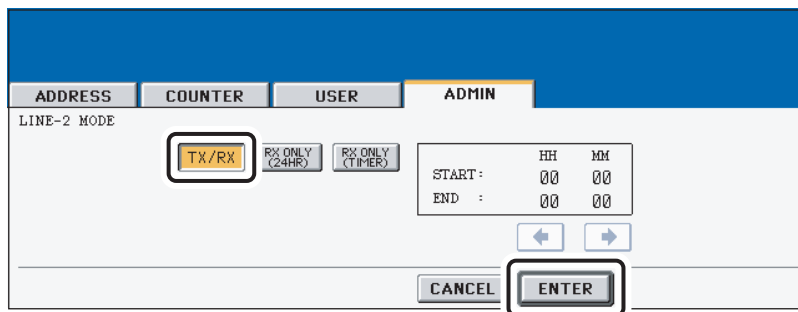

2 Press the [ENTER] button.

Reception Only (24HR)

1 Press the [RX ONLY (24HR)] button.

The screenshot shows the 'ADMIN' menu with the following elements:

- Menu tabs: ADDRESS, COUNTER, USER, ADMIN (selected)
- Section: LINE-2 MODE
- Buttons: TX/RX, RX ONLY (24HR) (highlighted), RX ONLY (TIMER)
- Time display: START: HH MM (00 00), END: HH MM (00 00)
- Navigation: Left and right arrow buttons
- Action: CANCEL, ENTER (highlighted)

- Making the 2nd line standby for the reception all the time.

2 Press the [ENTER] button.

Reception Only (TIMER)

1 Press the [RX ONLY (TIMER)] button.

The screenshot shows the 'ADMIN' menu with the following elements:

- Menu tabs: ADDRESS, COUNTER, USER, ADMIN (selected)
- Section: LINE-2 MODE
- Buttons: TX/RX, RX ONLY (24HR), RX ONLY (TIMER) (highlighted)
- Time display: START: HH MM (00 00), END: HH MM (23 00)
- Navigation: Left and right arrow buttons
- Action: CANCEL, ENTER (highlighted)

- Using the 2nd line for reception only during the specified period.
- Enter the START time and END time using the digital keys.
- Pressing the arrow buttons moves the cursor.
- Time is displayed in the 24-hour system.

2 Press the [ENTER] button.

Setting the RX Printing

Setting Discard and Reduction Printing

Set print settings for received fax and Internet Fax originals that are to be printed. Two print settings are available: discard printing and reduction printing.

Discard Printing: ON, OFF


- ON (default setting):
When originals are up to 10mm larger than the printing area; the part of the originals that exceeds the paper printing area is discarded.
- OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.
* For detail of DISCARD setting, contact your service technician.

RX Reduction Printing: ON, OFF

- ON (default setting):
If the received original is longer than the recording paper, it will be vertically reduced to 90% to fit on the recording paper.
- OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.

* Only drawers can be set for received FAX printing. Please see the *Operator's Manual for Basic Functions*. Be sure to use LD, LG, LT, LT-R, A3, A4, A4-R or B4.

1 Press the [FAX] button in the ADMIN menu.

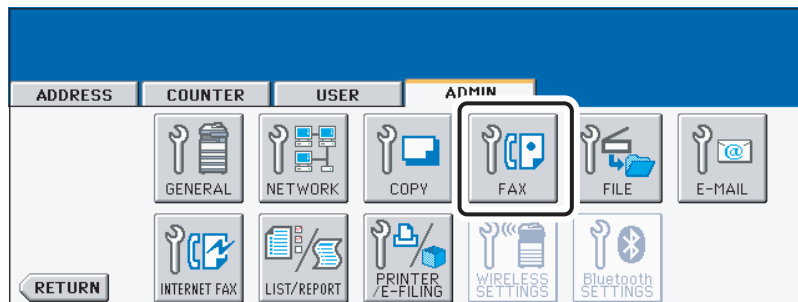


- The FAX menu is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [RX PRINT] button.

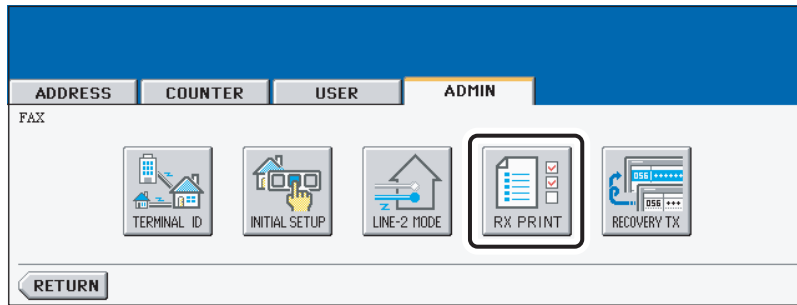


- The RX PRINT screen is displayed.

3 Press the [ON] (or [OFF]) button of the “DISCARD” and/or “REDUC-TION”.

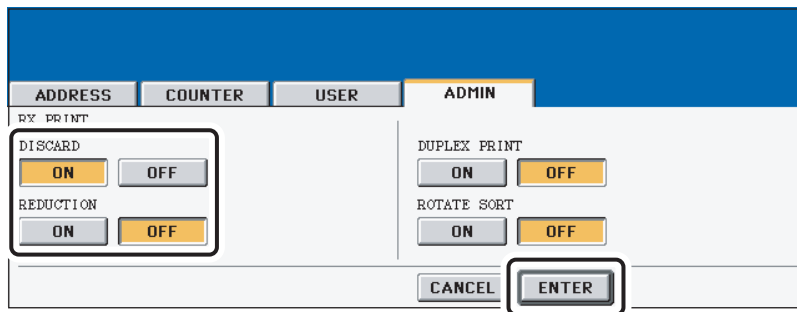

4 Press the [ENTER] button.

- The registered items can be confirmed in the function list.  P.192

Setting Duplex Printing


Note

The “Duplex Print” function is available only when the optional Fax unit is installed.

This printer setting determines whether or not to print received originals on both sides of sheet.

- * Duplex printing is available only if the received originals are the same size.
- * When the system runs out of paper during duplex printing, the rest of the documents is printed on both sides of another size of paper.

1 Press the [FAX] button in the ADMIN menu.

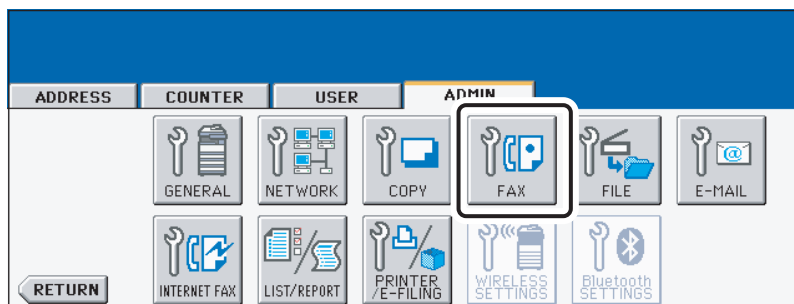


- The FAX menu is displayed.


Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [RX PRINT] button.

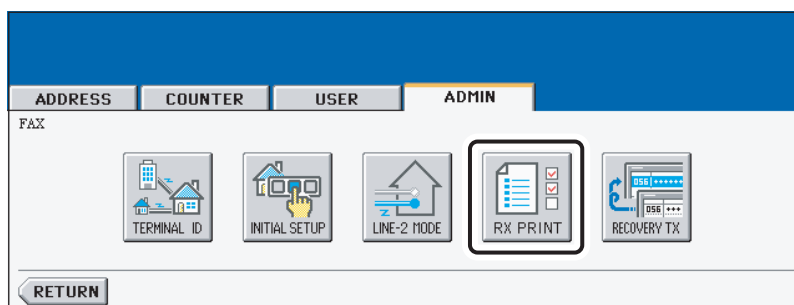

3 Press the [ON] button of the “DUPLEX PRINT”, and then press the [ENTER] button.


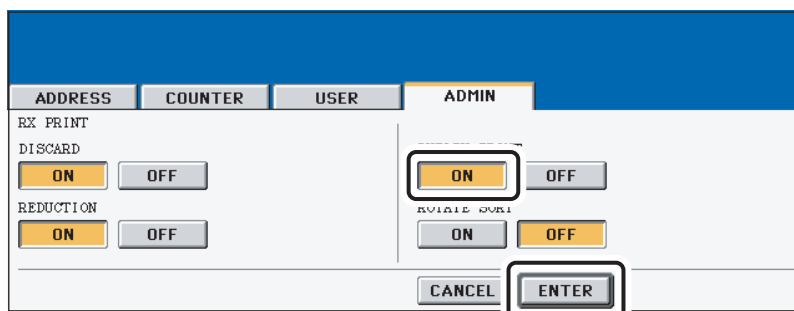


- The registered items can be confirmed in the function list. P.192

Tip

Duplex printing direction differs depending on the received original size.

- Received LD, LG, LT, A3, A4, or B4-sized originals are printed so that they can be bound along the long edge of direction.
- Received ST, A5 or B5-sized originals are printed so that they can be bound along the short edge of direction.

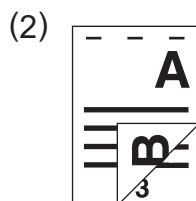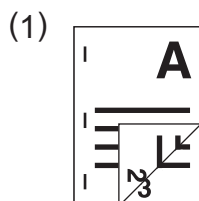

Setting the Rotate Sort


Note

The "Rotate Sort" function is available only when the optional Fax unit is installed.

The printer setting determines whether or not to output each separate job of received originals in the different orientation.

- * Rotate Sort printing is available only for LT/A4-sized paper. Set the LT and LT-R, or A4 and A4-R drawers.
- * When the system runs out of paper during Rotate Sort printing, the rest of the documents is printed on the remaining paper.

1 Press the [FAX] button in the ADMIN menu.

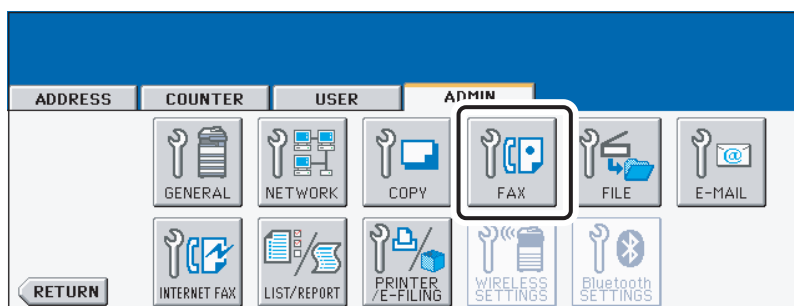


- The FAX menu is displayed.


Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [RX PRINT] button.

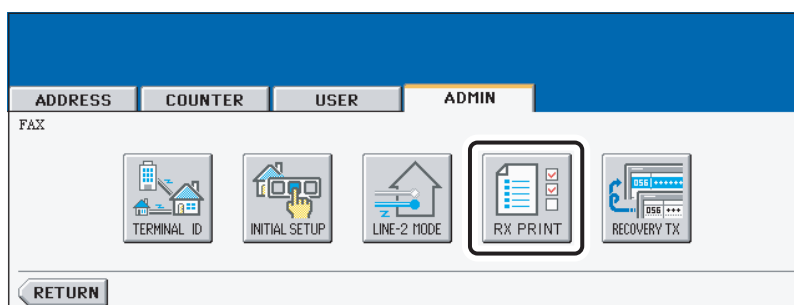

3 Press the [ON] button of the “ROTATE SORT”, and then press the [ENTER] button.

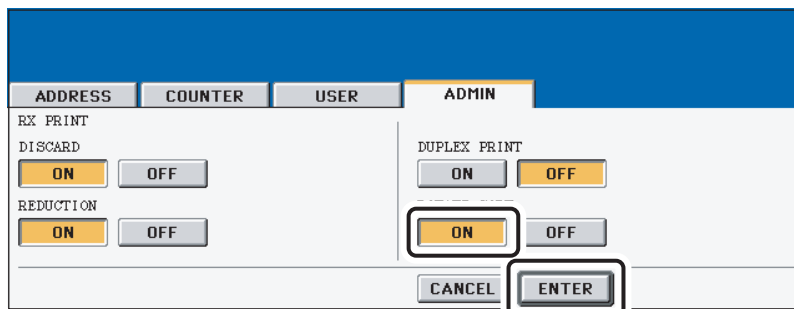

- The registered items can be confirmed in the function list.  P.192

Setting the Recovery Transmission

Note


The Recovery transmission is available only when the optional Fax unit is installed.

This function allows you to specify how long a document will be remained in the memory after failing the redial attempts.

Note

You can retransmit the document held in the memory. For instructions on how to send the recovery transmission, see the *Operator's Manual For Facsimile Function*.

1 Press the [FAX] button in the ADMIN menu.

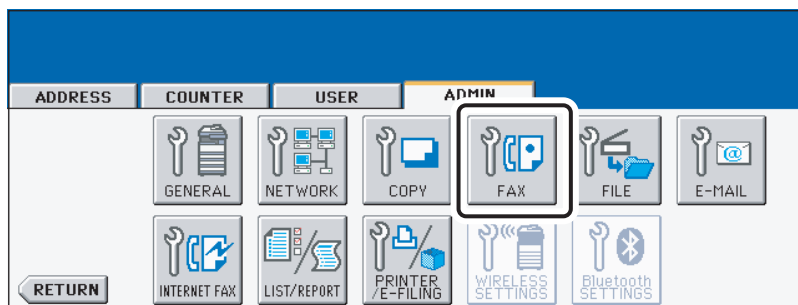


- The FAX menu is displayed.


Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [RECOVERY TX] button.

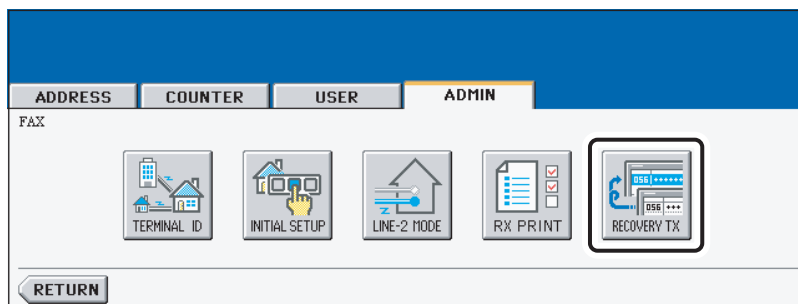

3 Change the document-stored time with the [**< 1H**] or [**24H >**] button, and press the [**ENTER**] button.

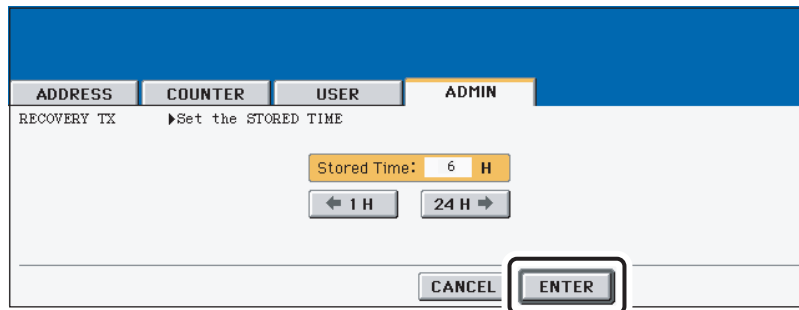

- The document-holding time can be changed by the 1 hour.


Note

When the Recovery transmission is enabled, the [RECOVERY TX] button will be grayed icon. You can disable the Recovery transmission by pressing the [RECOVERY TX] button again, and the button turns to the normal icon.

SETTING FILE FUNCTIONS

This function allows you to automatically delete the files stored by the Scan to File operations. This function is used to periodically delete stored files in the local storage to maintain the available hard disk space.

1 Press the [FILE] button in the ADMIN menu.

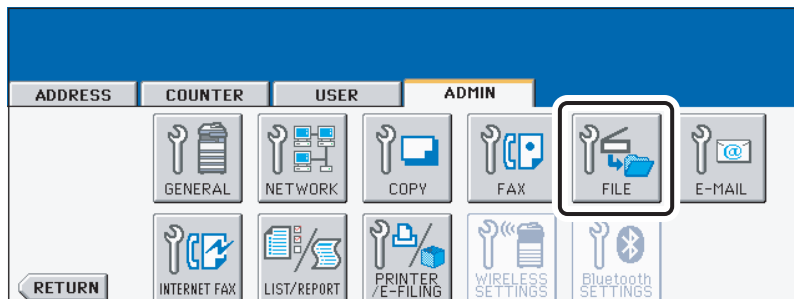


- The FILE menu is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [ON] button to enable the storage maintenance, or [OFF] button to disable the storage maintenance.

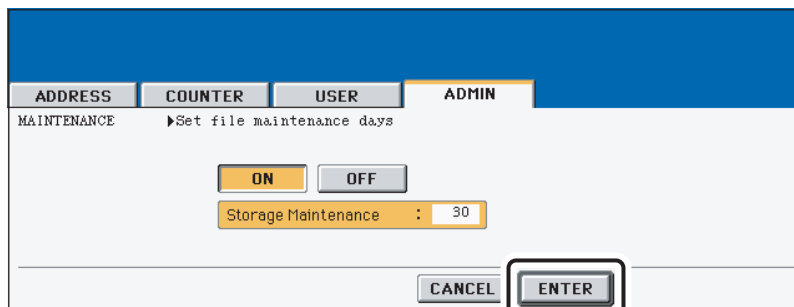

- When you press the [ON] button, the "Storage Maintenance" field will be highlighted. Continue to next step to enter the number of days.
- When you press the [OFF] button, skip to step 4.

3 Enter the number of days the system preserve the files before deleting them automatically using the digital keys.

- You can enter 1 to 99 days. To correct the value, press the [CLEAR] button to delete the input value and enter the number of days.


4 Press the [ENTER] button.

SETTING E-MAIL FUNCTIONS

Setting the Scan to E-mail Message Properties

You can configure the message properties of E-mail documents that will be sent by Scan to E-mail operation.

1 Press the [E-MAIL] button.

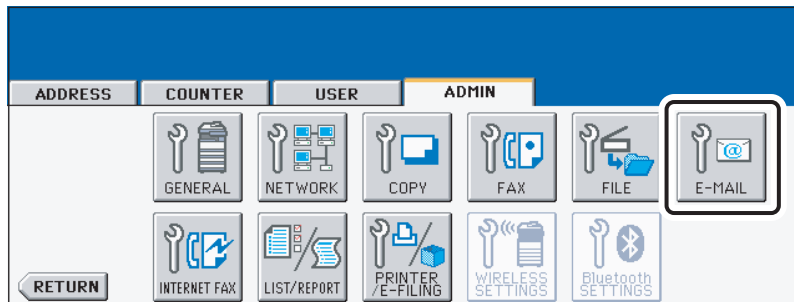


- The E-MAIL screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press each button to enter the E-mail properties.

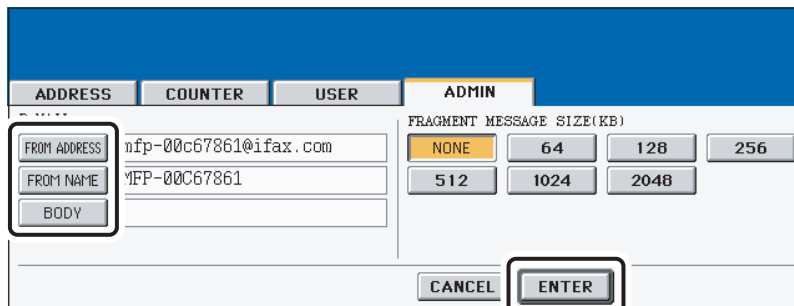

- **[FROM ADDRESS]** — Press this to enter the E-mail address of this equipment.
- **[FROM NAME]** — Press this to enter the identification name of this equipment.
- **[BODY]** — Press this to enter the body message.

Note

You must enter the [FROM ADDRESS] button to enable Scan to E-mail.

Tip


When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

3 Press the [ENTER] button.

Setting the Scan to E-mail Fragmentation

This function allows you to send the Scan to E-mail job split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.

1 Press the [E-MAIL] button in the ADMIN menu.

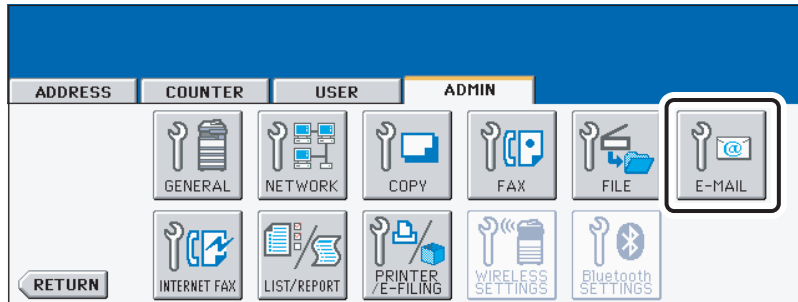


- The E-MAIL screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press desired fragment size button and press the [ENTER] button.

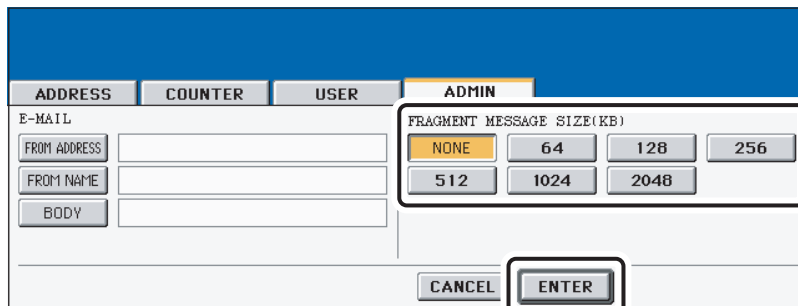


- Press the [NONE] button to disable the fragmentation.

SETTING INTERNET FAX FUNCTIONS

Setting the Internet Fax Message Properties

You can configure the message properties of Internet Faxes that will be sent by Internet Fax transmission.

1 Press the [INTERNET FAX] button in the ADMIN menu.

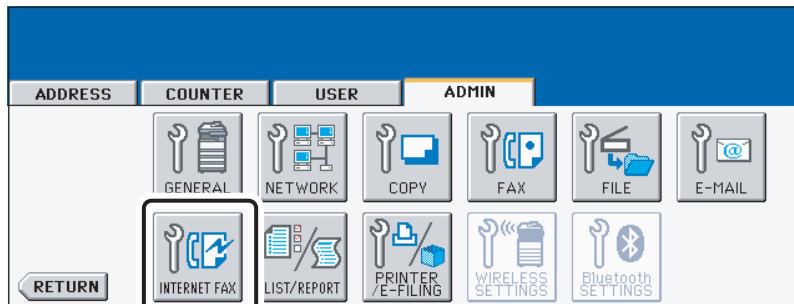


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press each button to enter the Internet Fax properties.

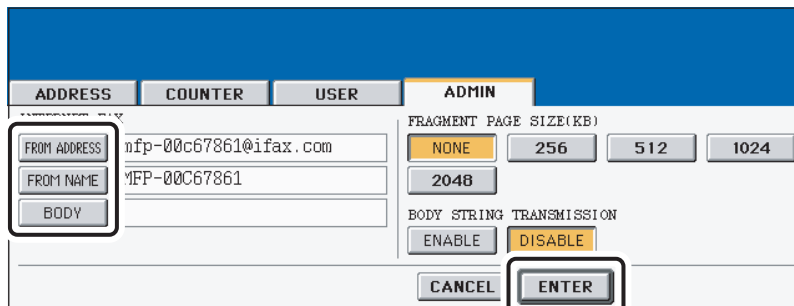

- **[FROM ADDRESS]** — Press this to enter the E-mail address of this equipment.
- **[FROM NAME]** — Press this to enter the identification name of this equipment.
- **[BODY]** — Press this to enter the body message.

Note

You must enter the [FROM ADDRESS] button to enable Internet Fax.

Tip


When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

3 Press the [ENTER] button.

Setting the Internet Fax Fragmentation

This function allows you to send the Internet Faxes split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.

1 Press the [INTERNET FAX] button in the ADMIN menu.

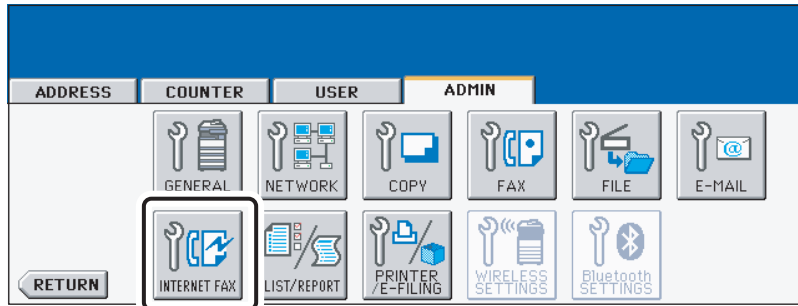


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press desired fragment size button and press the [ENTER] button.

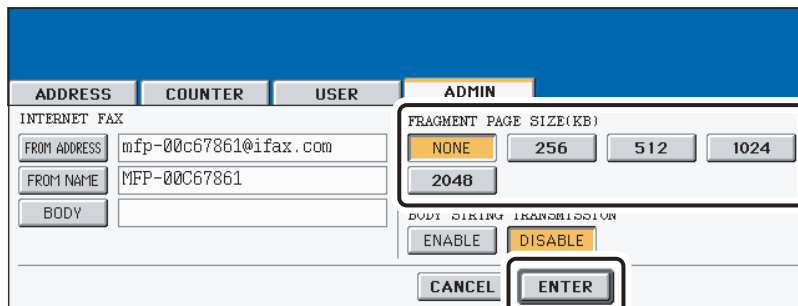


- Press the [NONE] button to disable the fragmentation.

Setting the Internet Fax Body String Transmission

This function allows you to set whether the body string will be transmitted or not.

- 1 Press the [INTERNET FAX] button in the ADMIN menu.

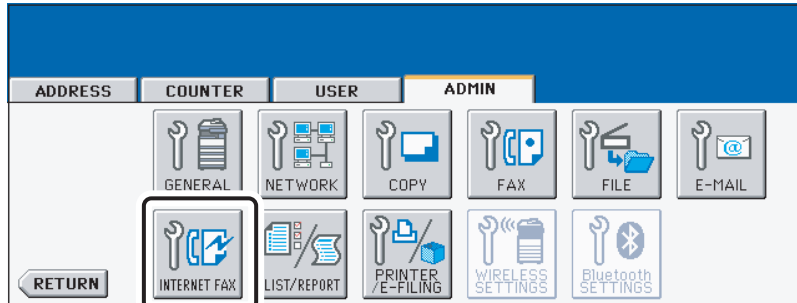


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

- 2 Press the [ENABLE] button to enable the body string transmission, or [DISABLE] button to disable the body string transmission.

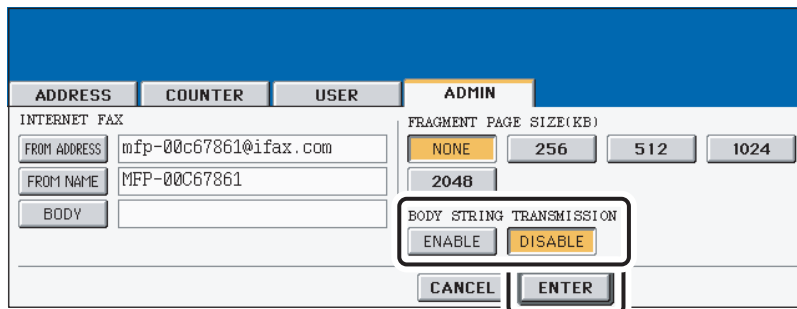

- 3 Press the [ENTER] button.

SETTING LIST/REPORT

Setting the Transmission / Reception Journal


There are two types of journals available on this equipment. Journals can be printed either automatically or manually.

This function allows you to set the auto-print for the journals, and the number of transactions appears in the journal list.

Tip

The old journals will be deleted and only the specified number of journals from newest one will be printed. The newer 100 journals can be exported as a file from the TopAccess administrator's mode.

1 Press the [LIST/REPORT] button in the ADMIN menu.

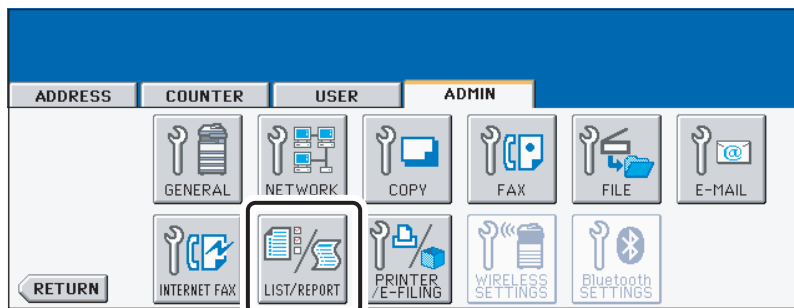


- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [REPORT SETTING] button.

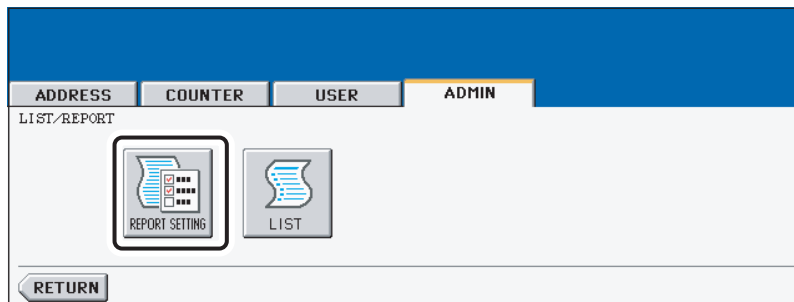


- The REPORT SETTING menu is displayed.

3 Press the [JOURNAL] button.

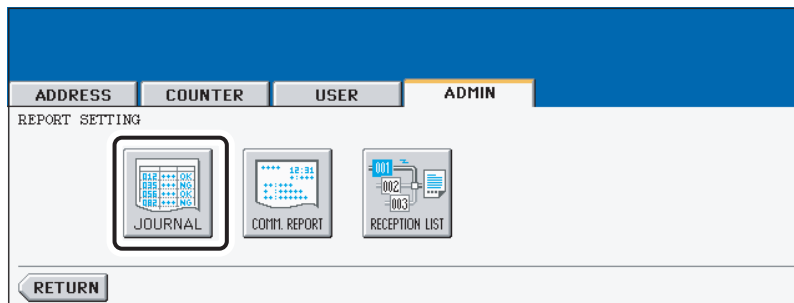

- The JOURNAL screen is displayed.

4 Specify the following items as required.

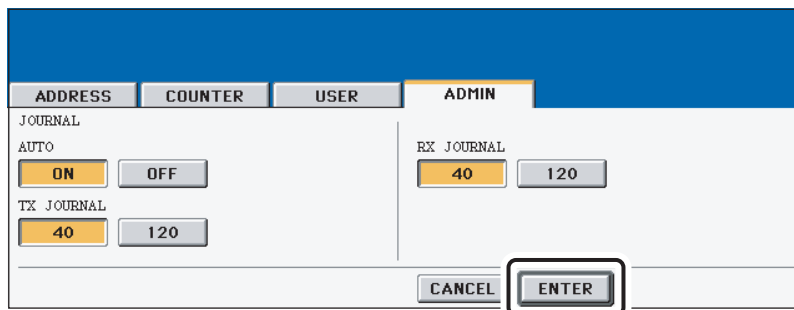

- **AUTO** — Press the [ON] button to enable printing the transmission and reception journals automatically. When you enable this, the transmission and reception journals will be printed when specified numbers of transmissions are completed.
- **TX JOURNAL** — Press the number button to specify the number of transmissions will be printed on a transmission journal.
- **RX JOURNAL** — Press the number button to specify the number of receptions will be printed on a reception journal.


5 Press the [ENTER] button.

Setting the Communication Report

Communication Report allows you to print a report after every transmission. Reports can be printed automatically only.

This function allows you to select the condition to print the communication report for each transmission type separately.

1 Press the [LIST/REPORT] button in the ADMIN menu.

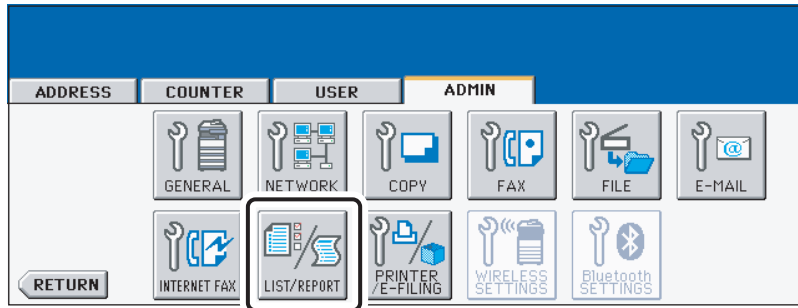


- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [REPORT SETTING] button.

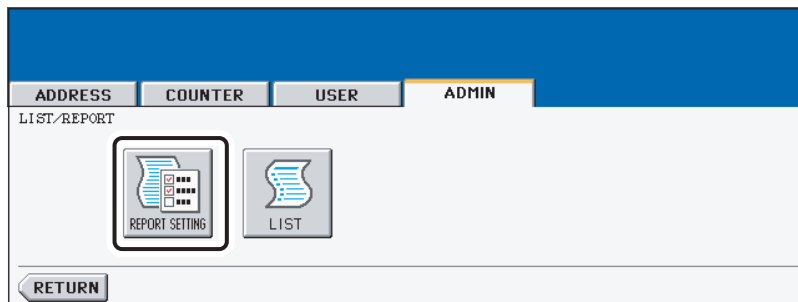

- The REPORT SETTING screen is displayed.

3 Press the [COMM. REPORT] button.

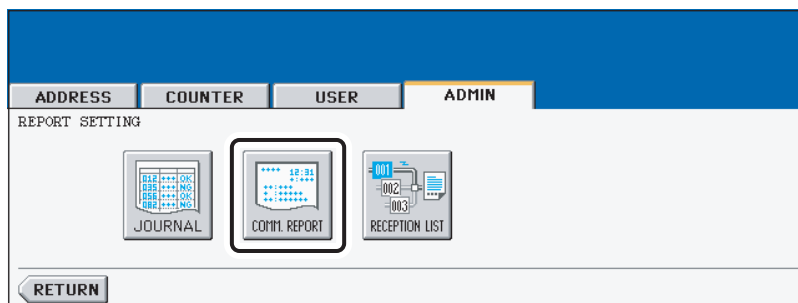

- The COMM. REPORT screen is displayed.

4 Specify the condition for each transmission type.

ADMIN

COMM. REPORT

MEMORY TX

OFF ALWAYS ON ERROR

MULTI TX

OFF ALWAYS ON ERROR

DIRECT TX

OFF ALWAYS ON ERROR

POLLING

OFF ALWAYS ON ERROR

CANCEL ENTER Next

- **[OFF]** — Press this to disable printing the communication report.
- **[ALWAYS]** — Press this to print the communication report every transmission.
- **[ON ERROR]** — Press this to print the communication report only when an error occurs.

Note

“DIRECT TX” and “POLLING” are available only when the optional Fax unit is installed.

5 When you press the **[ALWAYS]** or **[ON ERROR]** button for “MEMORY TX” or “MULTI TX”, the “PRINT 1st PAGE IMAGE?” message is displayed. Press the **[YES]** button to print the communication report with the first page image, or press the **[NO]** button to print the communication report without the page image.

ADMIN

PRINT 1st PAGE IMAGE?

YES NO

CANCEL

- Returns you to the COMM. REPORT screen.

- 6** Press the [Next] button to display the next screen and specify the condition for each transmission type.

The screenshot shows a menu interface with a blue header and four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is selected. Below the tabs, there are three sections: 'COMM. REPORT', 'RELAY ORIGINATOR', and 'RELAY STATION'. Each section has three buttons: OFF, ALWAYS, and ON ERROR. The 'RELAY DESTINATION' section is also present with the same three buttons. At the bottom, there are 'CANCEL' and 'ENTER' buttons, and a 'Prev' button with a left-pointing arrow.

Note

“RELAY ORIGINATOR”, “RELAY STATION”, and “RELAY DESTINATION” are available only when the optional Fax unit is installed.

- 7** When you press the [ALWAYS] or [ON ERROR] button for each transmission type, the “PRINT 1st PAGE IMAGE?” message is displayed. Press the [YES] button to print the communication report with the first page image, or press the [NO] button to print the communication report without the page image.

The screenshot shows a dialog box with a white background and a blue header. The header has four tabs: ADDRESS, COUNTER, USER, and ADMIN. The text 'PRINT 1ST PAGE IMAGE?' is centered in the dialog. Below the text are two buttons: YES and NO. At the bottom of the dialog is a 'CANCEL' button.

- Returns you to the COMM. REPORT screen.

- 8** Press the [ENTER] button.

Setting the Reception List

The Reception List allows you to print a reception list after receiving a document to a mailbox on this equipment.


This function allows you to enable or disable printing a reception list for the following mailbox transmissions:

Relay Station — Receiving a relay transmission from an originator as a relay hub.

Local — Reserving a document to a mailbox within this equipment locally.

Remote — Reserving a document to a mailbox within this equipment remotely from another facsimile.

1 Press the [LIST/REPORT] button in the ADMIN menu.

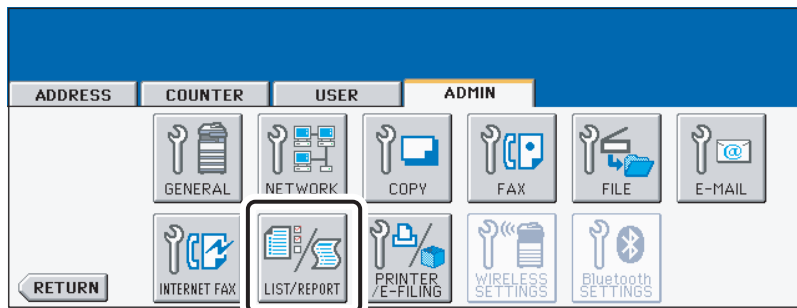


- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Press the [REPORT SETTING] button.

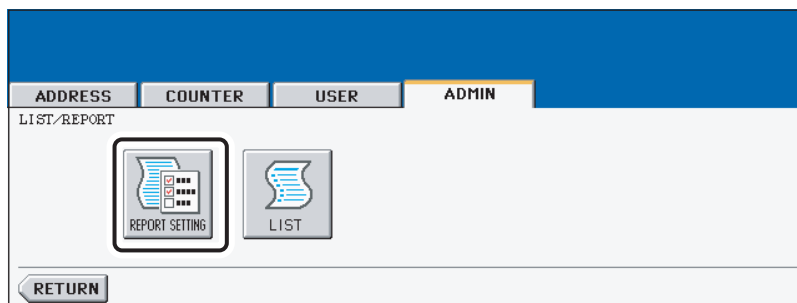


- The REPORT SETTING screen is displayed.

3 Press the [RECEPTION LIST] button.

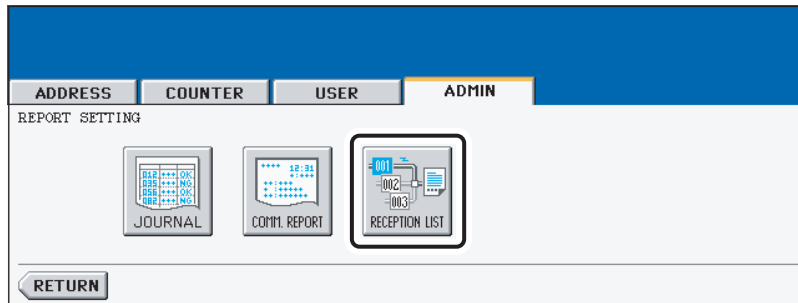

- The RECEPTION LIST screen is displayed.

4 Specify whether the reception list will be printed for each transmission.

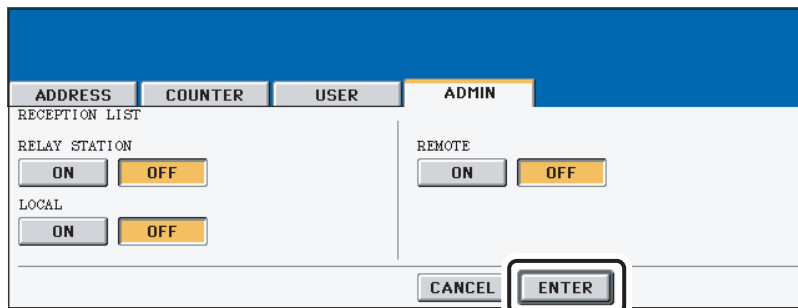

- **RELAY STATION** — Select the [ON] button to print the reception list when receiving a relay transmission from an originator.
- **LOCAL** — Select the [ON] button to print the reception list when reserving a document to a mailbox within the machine locally.
- **REMOTE** — Select the [ON] button to print the reception list when receiving a document to a mailbox within the machine remotely from another facsimile.


5 Press the [ENTER] button.

PRINTING LISTS

This function allow you to print the NIC configuration page, function list, PS3 font list, and PCL font list.

* For the examples of each list format are described in Appendix.  P.195

1 Press the [LIST/REPORT] button in the ADMIN menu.

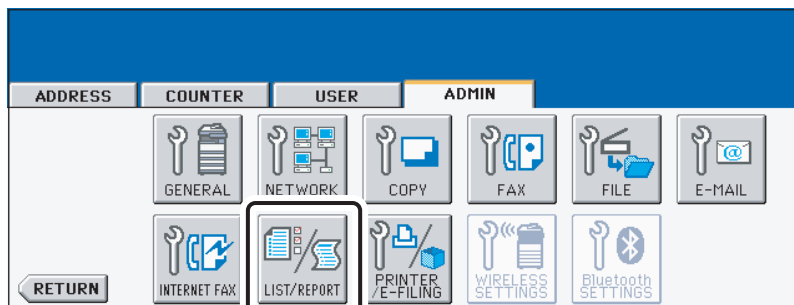


- The LIST screen is displayed.

Tip


To display the ADMIN menu, see "ENTERING TO ADMIN MENU".  P.107

2 Press the [LIST] button.

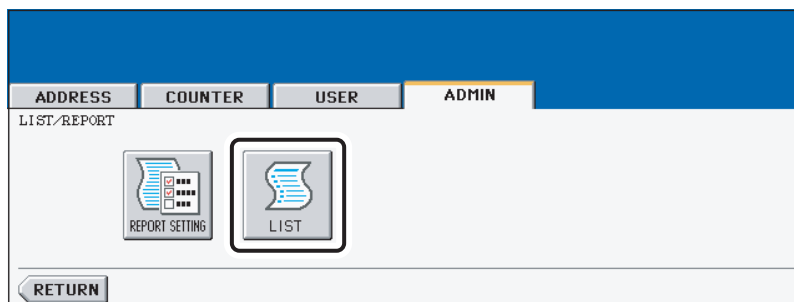

- The LIST screen is displayed.

3 Press the button that you want to print.

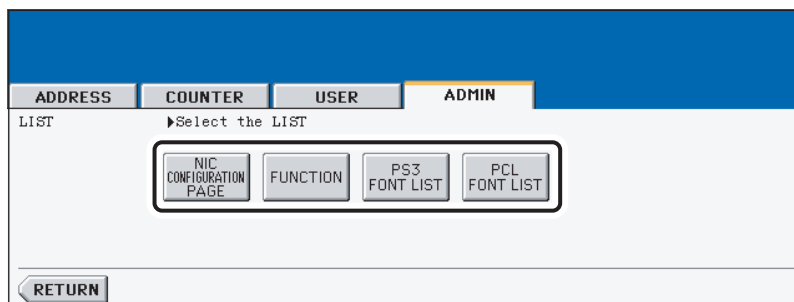


- Selected list is printed.

SETTING PRINTER/E-FILING FUNCTIONS

You can configure the printer and e-Filing functions that will apply to the print jobs or e-Filing jobs.

1 Press the [PRINTER/E-FILING] button in the ADMIN menu.

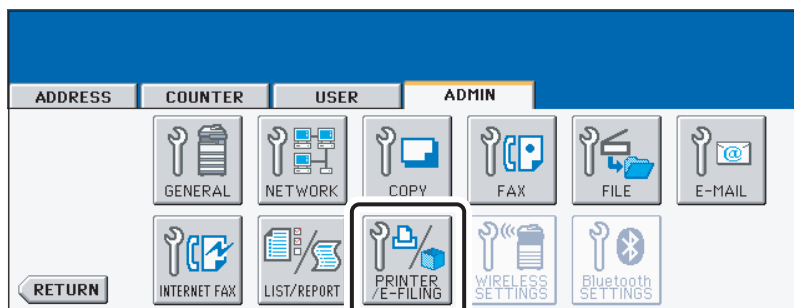


- The PRINTER/E-FILING screen is displayed.

Tip

To display the ADMIN menu, see "ENTERING TO ADMIN MENU". P.107

2 Specify the following items as you require.

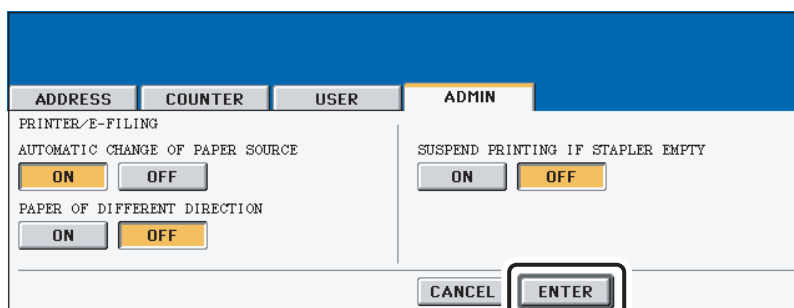

- **AUTOMATIC CHANGE OF PAPER SOURCE** — When the [ON] button is selected, this equipment will feed the same size of paper from the different drawer if the specified drawer becomes empty.
- **PAPER OF DIFFERENT DIRECTION** — When the [ON] button is selected, this equipment will feed the same size of paper that is set in a different direction if the specified drawer becomes empty.
- **SUSPEND PRINTING IF STAPLER EMPTY** — Select the [ON] button to enable suspending printing if stapler empty occurs. When this is enabled, this equipment quit printing that stapling is specified if stapler empty occurs. When this is disabled, this equipment will print a document without stapling even if stapler empty occurs.

3 Press the [ENTER] button.

WIRELESS SETTINGS AND Bluetooth SETTINGS

- There is also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available only when the optional Wireless LAN Module is installed. For the instructions on how to operate the WIRELESS SETTINGS, please refer to the ***GN-1041 Operator's Manual for Wireless LAN***.
- There is also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when the optional Bluetooth Module is installed. For the instructions on how to operate the Bluetooth SETTINGS, please refer to the ***GN-2010 Operator's Manual for Bluetooth***.

5

APPENDIX

LIST PRINT FORMAT	196
Total Counter List	196
Department Code List	197
Address Book List	198
Function List (User).....	200
NIC Configuration Page	201
Function List (Administrator)	202
PS3 Font List.....	217
PCL Font List	218

LIST PRINT FORMAT

Total Counter List

An output example of the Total Counter List

TOTAL COUNTER LIST				
			TIME	: 10-09-'06 20:47
			S/N	: 0987654321
PRINT COUNTER				
TOTAL	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL
COPY	99999	99999	99999	299996
FAX	99999	99999	99999	299996
PRINTER	99999	99999	99999	299996
LIST	99999	99999	99999	299996
TOTAL	399996	399996	399996	1199988
COPY				
	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL
SMALL	16667	16666	16667	399996
LARGE	16667	16665	16667	399996
TOTAL	33334	33331	33334	99999
FAX				
	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL
SMALL	16667	16666	16667	399996
LARGE	16667	16665	16667	399996
TOTAL	33334	33331	33334	99999
PRINTER				
	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL
SMALL	16667	16666	16667	399996
LARGE	16667	16665	16667	399996
TOTAL	33334	33331	33334	99999
LIST				
	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL
SMALL	16667	16666	16667	399996
LARGE	16667	16665	16667	399996
TOTAL	33334	33331	33334	99999
SCAN COUNTER				
	FULL COLOR	TWIN/MONO COLOR	BLACK	TOTAL

Department Code List

An output example of the Department Code List

```

DEPARTMENT CODE LIST
                                TIME      : 10-09-'06 20:47

DEPT NO.  DEPARTMENT
-----
D 1       00001

PRINT COUNTER
FULL COLOR
COPY      PRINT      TOTAL      LIMIT
SMALL    99999      99999      199998
LARGE    99999      99999      199998
-----
199998    199998      399996      -

TWIN/MONO COLOR
COPY      PRINT      TOTAL
SMALL    99999      99999      199998
LARGE    99999      99999      199998
-----
199998    199998      399996

BLACK
COPY      FAX      PRINT      LIST      TOTAL      LIMIT
SMALL    99999      99999      99999      99999      399996
LARGE    99999      99999      99999      99999      399996
-----
199998    199998      199998      199998      799992      -

FAX COMMUNICATION      SCAN COUNTER
COPY      PRINT      TOTAL      COPY      PRINT      TOTAL
SMALL    99999      99999      199998
LARGE    99999      99999      199998
-----
199998    199998      399996

FULL COLOR      TWIN      BLACK
COPY      NETWORK      COPY      NETWORK      COPY      FAX      NETWORK
SMALL    99999      99999      99999      99999      99999      99999      99999
LARGE    99999      99999      99999      99999      99999      99999      99999
-----
199998    199998      199998      199998      199998      199998      199998

DEPT NO.  DEPARTMENT
-----
D 2       00002

PRINT COUNTER
FULL COLOR
COPY      PRINT      TOTAL
SMALL    99999      99999      199998
LARGE    99999      99999      199998
-----
199998    199998      399996
    
```

Address Book List

An output example of the Address Book List

ADDRESS BOOK INFORMATION							TIME	: 10-09-'06 20:47
							FAX NO.1	: 99999999999
							FAX NO.2	: 99999999990
							NAME	: MFP_00000183
NO.	NAME	FAX NUMBER/E-MAIL ADDRESS	QUALITY TX	TX TYPE	LINE	ECM	ATT	
001	USER01	0000000001 ✉user01@ifax.com	OFF	MEMORY		OFF	0	
002	USER01	0000000002 ✉user02@ifax.com	OFF	MEMORY		OFF	0	
003	USER01	0000000003 ✉user03@ifax.com	OFF	MEMORY		OFF	0	
004	USER01	0000000004 ✉user04@ifax.com	OFF	MEMORY		OFF	0	
005	USER01	0000000005 ✉user05@ifax.com	OFF	MEMORY		OFF	0	
006	USER01	0000000006 ✉user06@ifax.com	OFF	MEMORY		OFF	0	
007	USER01	0000000007 ✉user07@ifax.com	OFF	MEMORY		OFF	0	
008	USER01	0000000008 ✉user08@ifax.com	OFF	MEMORY		OFF	0	
009	USER01	0000000009 ✉user09@ifax.com	OFF	MEMORY		OFF	0	
010	USER01	0000000010 ✉user10@ifax.com	OFF	MEMORY		OFF	0	
011	USER01	0000000011 ✉user11@ifax.com	OFF	MEMORY		OFF	0	
	USER01							

Group Numbers List

An output example of the Group Numbers List

GROUP NUMBER INFORMATION		TIME	: 10-09-'06 20:47								
		FAX NO.1	: 999999999999								
		FAX NO.2	: 999999999990								
		NAME	: MFP_00000183								
NO.	NAME	ADDRESS BOOK									
001	GROUP01	<input checked="" type="checkbox"/> 001	001	<input checked="" type="checkbox"/> 002	<input checked="" type="checkbox"/> 003	<input checked="" type="checkbox"/> 004	<input checked="" type="checkbox"/> 005	005	<input checked="" type="checkbox"/> 006	006	<input checked="" type="checkbox"/> 007
		007	<input checked="" type="checkbox"/> 008	008	<input checked="" type="checkbox"/> 009	009	<input checked="" type="checkbox"/> 010	010	<input checked="" type="checkbox"/> 011	<input checked="" type="checkbox"/> 012	<input checked="" type="checkbox"/> 013
		<input checked="" type="checkbox"/> 014	014	<input checked="" type="checkbox"/> 015	015	<input checked="" type="checkbox"/> 016	016	<input checked="" type="checkbox"/> 017	017	<input checked="" type="checkbox"/> 018	018
		<input checked="" type="checkbox"/> 019	019	<input checked="" type="checkbox"/> 020	020						
002	GROUP02	005	007	009	<input checked="" type="checkbox"/> 015	<input checked="" type="checkbox"/> 060	<input checked="" type="checkbox"/> 065				
003	GROUP03	<input checked="" type="checkbox"/> 005	005	<input checked="" type="checkbox"/> 006	<input checked="" type="checkbox"/> 006	<input checked="" type="checkbox"/> 007	<input checked="" type="checkbox"/> 009				

Function List (User)

An output example of the Function List (User)

```

FUNCTION LIST
S/N           : 0987654321      TIME           : 10-09-'06 20:47
F/W Ver.     : T380SY0U010    FAX NO.1      : 99999999999
M-ROM Ver.   : 380M-014      FAX NO.2      : 99999999990
S-ROM Ver.   : 380S-01      NAME          : MFP_00000183

GENERAL
TOTAL COUNTER      : 9999
DRAWER
DRAWER 1          : LT
DRAWER 2          : A3
DRAWER 3          : A4-R
DRAWER 4          : B5
AUTO CLEAR        : 45

COPY
EXPOSURE FOR COLOR : MANUAL
EXPOSURE FOR BLACK : AUTO
COLOR MODE         : BLACK
IMAGE DIRECTION    : DISABLE
BYPASS FEED       : PLAIN
ORIGINAL MODE FOR COLOR : TEXT/PHOTO
ORIGINAL MODE FOR BLACK : TEXT/PHOTO
ORIGINAL MODE FOR AUTO COLOR : TEXT/PHOTO
2IN1/4IN1         : WRITE LATERALLY
MAGAZINE SORT     : OPEN FROM LEFT
BOOK -> 2         : OPEN FROM LEFT

SCAN
COLOR MODE        : BLACK
COMPRESS          : MID
THRESHOLD         : 3
ROTATION          : 0
SINGLE/2-SIDE SCAN : SINGLE
IMAGE QUALITY FOR BLACK : STANDARD
COLOR
RESOLUTION        : 200dpi
ORIGINAL MODE     : TEXT
EXPOSURE          : AUTO
BACKGROUND ADJUSTMENT : 0
GRAY SCALE
RESOLUTION

```

Tip

For further information about the items printed on the function list, please refer to the "Function List (Administrator)". (📖 P.202)

NIC Configuration Page

An output example of the NIC Configuration Page

```
=====
Unit Serial No   : 04998820                Version : T000SY00000
Network Address  : 00:40:af:7e:28:55
Network Topology : Ethernet                Connector: RJ45
Network Mode     : Auto

Novell Network Information                  enabled
Print Server Name   : MFP_04998820
Password Defined    :
Search Root not defined
Directory Services Tree : ORG
Directory Services Context : dept1.org
Scan Rate           : 5
Frame Type          : Auto Sense

TCP/IP Network Information                 enabled
Address Mode       : Static IP
IP Address         : 10.10.70.120
Subnet Mask        : 255.255.255.0
Default Gateway    : 10.10.70.1
Primary DNS Server : 0.0.0.0
DNS Name           :
Host Name          : MFP-04998820
Primary WINS Server : 0.0.0.0
NetBios Name       : MFP-04998820

IPP Network Information                   enabled
IPP without SSL    : http://10.10.70.120:631/Print
IPP with SSL       : https://10.10.70.120:443/Print

AppleTalk Network Information             enabled
AppleTalk Printer Name: MFP_00C67861
AppleTalk Zone      : *
AppleTalk Type      : LaserWriter
AppleTalk Frame Type : 802.2 SNAP On 802.3

=====

Novell Connection Information
File Server Name: NWSRV
Queue Name: MFP_QUEUE

AppleTalk Connection Information
```

Function List (Administrator)

An output example of the Function List (Administrator)

```

FUNCTION LIST
S/N           : 0987654321      TIME           : 10-09-'06 20:47
F/W Ver.     : T380SY0U010    FAX NO.1      : 99999999999
M-ROM Ver.   : 380M-014      FAX NO.2      : 99999999990
S-ROM Ver.   : 380S-01       NAME           : MFP_00000183

GENERAL
TOTAL COUNTER           : 9999
MAIN / PAGE MEMORY SIZE : 512 MB / 256 MB
DRAWER
  DRAWER 1              : LT
  DRAWER 2              : LD
  DRAWER 3              : LT-R
  DRAWER 4              : A4
AUTO CLEAR              : 45
ENERGY SAVER
  WEEKLY TIMER          : ON      OFF
    TIMER SUNDAY        : 00:00  24:00
    TIMER MONDAY        : 00:00  24:00
    TIMER TUESDAY       : 00:00  24:00
    TIMER WEDNESDAY     : 00:00  24:00
    TIMER THURSDAY     : 00:00  24:00
    TIMER FRIDAY        : 00:00  24:00
    TIMER SATURDAY     : 00:00  24:00
  AUTO POWER SAVE      : 15
  SLEEP MODE           : 60

POP-UP
DRAWER                  : ENABLE
PAPER JAM RECOVERY     : DISABLE

COPY
EXPOSURE FOR COLOR     : MANUAL
EXPOSURE FOR BLACK     : AUTO
COLOR MODE              : BLACK
IMAGE DIRECTION        : DISABLE
BYPASS FEED            : PLAIN
ORIGINAL MODE FOR COLOR : TEXT/PHOTO
ORIGINAL MODE FOR BLACK : TEXT/PHOTO
ORIGINAL MODE FOR AUTO COLOR : TEXT/PHOTO
MAXIMUM COPIES

```

The Function List for an administrator shows the setting list for all functions. The following table shows all functions that are printed for an administrator's function list, and the "User" column indicates which functions are printed in a user's function list. This table also describes about each function.

GENERAL

Function	Description	User
TOTAL COUNTER	Shows the total counter.	YES
MAIN / PAGE MEMORY SIZE	Shows the main memory size and page memory size.	NO
DRAWER - DRAWER 1	Shows the paper size of the drawer 1.	YES

GENERAL

Function	Description	User
DRAWER - DRAWER 2	Shows the paper size of the drawer 2.	YES
DRAWER - DRAWER 3 *1	Shows the paper size of the drawer 3.	YES
DRAWER - DRAWER 4 *2	Shows the paper size of the drawer 4.	YES
DRAWER - LARGE CAPACITY FEEDER *3	Shows the paper size of the large capacity feeder	YES
AUTO CLEAR	Shows the time (in second) that the Touch Panel Display clears the previous settings that had been set and turns to the initial screen.	YES
ENERGY SAVER - WEEKLY TIMER	Shows the time to enter the energy saver mode (ON time), and the time to exit the energy saver mode (OFF time) for each day (Sunday to Saturday).	NO
ENERGY SAVER - AUTO POWER SAVE	Shows the time to enter the power save mode (in minutes).	NO
ENERGY SAVER - SLEEP MODE	Shows the time to enter the sleep mode (in minutes).	NO

*1 "DRAWER 3" is printed only when the Drawer 3 & 4 is installed.

*2 "DRAWER 4" is printed only when the Drawer 3 & 4 is installed.

*3 "LARGE CAPACITY FEEDER" is printed only when the LCF is installed.

POP-UP

Function	Description	User
DRAWER	Shows whether the Drawer Set Pop-up is enabled or disabled.	NO
PAPER JAM RECOVERY	Shows whether the Paper Jam Recovery Pop-up is enabled or disabled.	NO

COPY

Function	Description	User
EXPOSURE FOR COLOR	Shows the default exposure setting for color copy.	YES
EXPOSURE FOR BLACK	Shows the default exposure setting for black copy.	YES
COLOR MODE	Shows the default color mode for copy.	YES
IMAGE DIRECTION	Shows whether the image direction is enabled or disabled.	YES
BYPASS FEED	Shows the default paper type of the bypass feed.	YES
ORIGINAL MODE FOR COLOR	Shows the default original mode for color copy.	YES

COPY

Function	Description	User
ORIGINAL MODE FOR BLACK	Shows the default original mode for black copy.	YES
ORIGINAL MODE FOR AUTO COLOR	Shows the default original mode for auto color copy.	YES
MAXIMUM COPIES	Shows the maximum copies that are allowed to be set.	NO
AUTO 2-SIDE MODE	Shows the default auto 2-sided mode.	NO
SORT MODE PRIORITY	Shows the default sort mode.	NO
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO
DEFAULT MODE OF AUTO COLOR	Shows the default color mode for auto color mode.	NO

SCAN

Function	Description	User
COLOR MODE	Shows the default color mode for scan.	YES
COMPRESS	Shows the default compression setting.	YES
THRESHOLD	Shows the default threshold setting.	YES
ROTATION	Shows the default rotation mode.	YES
SINGLE/2-SIDED SCAN	Shows the default 2-sided scan mode.	YES
IMAGE QUALITY FOR BLACK	Shows the default image quality setting that applies for scanning a black original in auto color mode.	YES
COLOR - RESOLUTION	Shows the resolution for color scans.	YES
COLOR - ORIGINAL MODE	Shows the default original mode for color scans.	YES
COLOR - EXPOSURE	Shows the default exposure setting for color scans.	YES
COLOR - BACKGROUND ADJUSTMENT	Shows the default background adjustment setting for color scans.	YES
GRAY SCALE - RESOLUTION	Shows the resolution for grayscale scans.	YES
GRAY SCALE - EXPOSURE	Shows the default exposure setting for grayscale scans.	YES

SCAN

Function	Description	User
GRAY SCALE - BACKGROUND ADJUSTMENT	Shows the default background adjustment setting for grayscale scans.	YES
BLACK - RESOLUTION	Shows the resolution for black scans.	YES
BLACK - ORIGINAL MODE	Shows the default original mode for black scans.	YES
BLACK - EXPOSURE	Shows the default exposure setting for black scans.	YES
BLACK - BACKGROUND ADJUSTMENT	Shows the default background adjustment setting for black scans.	YES

FAX

Function	Description	User
FAX ROM VERSION	Shows the ROM version of the Fax unit.	YES
RESOLUTION	Shows the default resolution setting for a fax/ Internet Fax transmission.	YES
ORIGINAL MODE	Shows the default original mode for a fax/ Internet Fax transmission.	YES
EXPOSURE	Shows the default exposure setting for a fax/ Internet Fax transmission.	YES
TX TYPE *1	Shows the default transmission type.	YES
TTI	Shows whether the TTI is enabled or disabled.	NO
RTI	Shows whether the RTI is enabled or disabled.	YES
ECM *1	Shows whether the ECM is enabled or disabled.	YES
INITIAL SETUP - MONITOR VOLUME *1	Shows the monitor volume setting.	NO
INITIAL SETUP - COMPLETION TONE VOLUME *1	Shows the complete volume setting.	NO
INITIAL SETUP - RX MODE *1	Shows the default RX mode.	NO
INITIAL SETUP - DIAL TYPE *1	Shows the dial type of the line 1.	NO
INITIAL SETUP - DIAL TYPE (LINE2) *2	Shows the dial type of the line2.	NO
LINE-2 MODE *2	Shows the line2 mode.	NO
LINE-2 MODE - START *2	Shows the start time to use the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO

FAX

Function	Description	User
LINE-2 MODE - END *2	Shows the end time to finish using the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO
RX PRINT - DISCARD	Shows whether the discard function is enabled or disabled.	NO
RX PRINT - REDUCTION	Shows whether the reduction is enabled or disabled.	NO
RX PRINT - DUPLEX PRINT *1	Shows whether the duplex print is enabled or disabled.	NO
RX PRINT - ROTATE SORT *1	Shows whether the rotate sort is enabled or disabled.	NO
RECOVERY TX *1	Shows whether the recovery transmission is enabled or disabled.	NO
RECOVERY TX - STORED TIME *1	Shows how many hours that a recovery transmission job is to be stored.	NO
FAX RECEIVED FORWARD - AGENT1 *1	Shows the agent type if the Fax Received Forward is registered.	NO
FAX RECEIVED FORWARD - AGENT2 *1	Shows the agent type if the Fax Received Forward is registered.	NO

*1 These are printed only when the optional Fax unit is installed.

*2 These are printed only when the optional Fax unit and optional Line2 board are installed.

E-FILING

Function	Description	User
PRINTING IMAGE MODE	Shows the default printing image mode.	YES

FILE

Function	Description	User
MAINTENANCE	Shows whether the storage maintenance is enabled or disabled.	NO
STORAGE MAINTENANCE	Shows how many days the data in the local folder is remained. This applies only when the maintenance function is enabled.	NO

E-MAIL

Function	Description	User
FRAGMENT MESSAGE SIZE (KB)	Shows the fragment message size that applies to an E-mail transmission.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an E-mail transmission.	NO

E-MAIL

Function	Description	User
FROM NAME	Shows the sender's name that applies to an E-mail transmission.	NO
NUMBER OF RETRY	Shows how many times this equipment tries to send an E-mail when it previously failed.	NO
RETRY INTERVAL	Shows the interval of the E-mail transmission.	NO

INTERNET FAX

Function	Description	User
FRAGMENT PAGE SIZE (KB)	Shows the fragment message size that applies to an Internet Fax transmission.	NO
BODY STRING TRANSMISSION	Shows whether the body string transmission is enabled or disabled.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an Internet Fax transmission.	NO
FROM NAME	Shows the sender's name that applies to an Internet Fax transmission.	NO
INTERNET FAX RECEIVED FORWARD - AGENT1	Shows the agent type if the Internet Fax Received Forward is registered.	NO
INTERNET FAX RECEIVED FORWARD - AGENT2	Shows the agent type if the Internet Fax Received Forward is registered.	NO
NUMBER OF RETRY	Shows how many times this equipment tries to send an Internet Fax when it previously failed.	NO
RETRY INTERVAL	Shows the interval of the Internet Fax transmission.	NO

REPORT SETTING

Function	Description	User
JOURNAL - AUTO	Shows whether the auto journal print is enabled or disabled.	NO
JOURNAL - TX JOURNAL	Shows how many transmissions will be printed on a transmission journal.	NO
JOURNAL - RX JOURNAL	Shows how many receptions will be printed on a reception journal.	NO
COMM. REPORT - MEMORY TX	Shows the condition to print a memory transmission report.	NO
COMM. REPORT - DIRECT TX	Shows the condition to print a direct transmission report.	NO
COMM. REPORT - MULTI TX	Shows the condition to print a multi transmission report.	NO

REPORT SETTING

Function	Description	User
COMM. REPORT - POLLING *1	Shows the condition to print a polling report.	NO
COMM. REPORT - RELAY ORIGINATOR*1	Shows the condition to print a relay originator report.	NO
COMM. REPORT - RELAY STATION*1	Shows the condition to print a relay station report.	NO
COMM. REPORT - RELAY DESTINATION*1	Shows the condition to print a relay destination report.	NO
RECEPTION LIST - LOCAL	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment.	NO
RECEPTION LIST - REMOTE	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment remotely from another facsimile.	NO
RECEPTION LIST - RELAY STATION	Shows whether a reception list will be printed or not after receiving a relay transmission from an originator as a relay hub.	NO

*1 These are printed only when the optional Fax unit is installed.

PRINTER/E-FILING

Function	Description	User
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO

WIRELESS SETTINGS

Function	Description	User
WIRELESS LAN	Shows whether the Wireless LAN function is enabled or disabled.	NO

Note

WIRELESS SETTINGS are printed only when the optional Wireless LAN Module is installed.

BLUETOOTH SETTINGS

Function	Description	User
BLUETOOTH	Shows whether the Bluetooth function is enabled or disabled.	NO
BLUETOOTH NAME	Shows the Bluetooth name of this equipment.	NO

BLUETOOTH SETTINGS

Function	Description	User
DEVICE ADDRESS	Shows the device address of this equipment.	NO
ALLOW DISCOVERY	Shows whether the Allow Discovery function is enabled or disabled.	NO
SECURITY	Shows whether the security function is enabled or disabled.	NO
REQUIRED PIN	Shows the PIN number.	NO
DATA ENCRYPTION	Shows whether the data encryption is enabled or disabled.	NO

Note

BLUETOOTH SETTINGS are printed only when the optional Bluetooth Module is installed.

NETWORK SETTING - GENERAL PRODUCT - GENERAL

Function	Description	User
ETHERNET SPEED DUPLEX MODE	Shows the Ethernet speed setting.	NO

NETWORK SETTING - NETWORK - TCP/IP

Function	Description	User
ADDRESS MODE	Shows the TCP/IP address mode.	NO
IP ADDRESS	Shows the IP address of this equipment.	NO
SUBNET MASK	Shows the subnet mask of this equipment.	NO
DEFAULT GATEWAY	Shows the default gateway address of this equipment.	NO

NETWORK SETTING - NETWORK - IPX/SPX

Function	Description	User
ENABLE IPX/SPX	Shows whether the IPX/SPX protocol is enabled or disabled.	NO
FRAME TYPE	Shows the frame type to be selected.	NO

NETWORK SETTING - NETWORK - APPLE TALK

Function	Description	User
ENABLE APPLE TALK	Shows whether the AppleTalk protocol is enabled or disabled.	NO
DEVICE NAME	Shows the AppleTalk device name.	NO
DESIRED ZONE	Shows the AppleTalk zone.	NO

NETWORK SETTING - SESSION - LDAP SESSION

Function	Description	User
ENABLE LDAP	Shows whether the LDAP is enabled or disabled.	NO
ENABLE SSL	Shows whether the LDAP SSL is enabled or disabled.	NO

NETWORK SETTING - SESSION - DNS SESSION

Function	Description	User
ENABLE DNS	Shows whether the DNS is enabled or disabled.	NO
PRIMARY DNS SERVER ADDRESS	Shows the primary DNS server address if it has been set.	NO
SECONDARY DNS SERVER ADDRESS	Shows the secondary DNS server address if it has been set.	NO

NETWORK SETTING - SESSION - DDNS SESSION

Function	Description	User
ENABLE DDNS	Shows whether the DDNS is enabled or disabled.	NO
HOST NAME	Shows the host name of this equipment.	NO
DOMAIN NAME	Shows the domain name of this equipment.	NO

NETWORK SETTING - SESSION - SMB SESSION

Function	Description	User
SMB SERVER PROTOCOL	Shows whether the SMB protocol is enabled or disabled.	NO
NETBIOS NAME	Shows the NetBIOS name of this equipment.	NO
LOGON	Shows the logon setting.	NO
WORKGROUP	Shows the workgroup of this equipment.	NO
DOMAIN	Shows the domain name of this equipment.	NO
PRIMARY DOMAIN CONTROLLER	Shows the primary domain controller address if it has been set.	NO
BACKUP DOMAIN CONTROLLER	Shows the backup domain controller address if it has been set.	NO
LOGON USER NAME	Shows the logon user name of this equipment for the domain if it has been set.	NO
PRIMARY WINS SERVER	Shows the primary WINS server address if it has been set.	NO
SECONDARY WINS SERVER	Shows the secondary WINS server address if it has been set.	NO

NETWORK SETTING - SESSION - SMB SESSION

Function	Description	User
SMB SIGNING OF SMB SERVER	Shows the setting of the SMB Signing of SMB Server.	NO
SMB SIGNING OF SMB CLIENT	Shows the setting of the SMB Signing of SMB Client.	NO

NETWORK SETTING - SESSION - NETWARE SESSION

Function	Description	User
ENABLE BINDERY	Shows whether the bindery mode is enabled or disabled.	NO
ENABLE NDS	Shows whether the NDS mode is enabled or disabled.	NO
CONTEXT	Shows the NDS context.	NO
TREE	Shows the NDS tree.	NO
SEARCH ROOT	Shows the NDS Search Root.	NO

NETWORK SETTING - SESSION - BONJOUR SESSION

Function	Description	User
ENABLE BONJOUR	Shows whether the Bonjour is enabled or disabled.	NO
LINK-LOCAL HOST NAME	Shows the link-local host name of this equipment for Bonjour.	NO
SERVICE NAME	Shows the service name of this equipment for Bonjour.	NO

NETWORK SETTING - NETWORK SERVICE - HTTP NETWORK SERVICE

Function	Description	User
ENABLE HTTP SERVER	Shows whether the HTTP network service is enabled or disabled.	NO
PRIMARY PORT NUMBER	Shows the primary port number for the HTTP network service.	NO
SECONDARY PORT NUMBER	Shows the secondary port number for the HTTP network service.	NO
ENABLE SSL	Shows whether the SSL for the HTTP network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number for the HTTP network service.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP CLIENT NETWORK SERVICE

Function	Description	User
ENABLE SMTP CLIENT	Shows whether the SMTP client is enabled or disabled.	NO
AUTHENTICATION	Shows whether SMTP authentication is enabled or disabled.	NO
POP BEFORE SMTP	Shows whether POP Before SMTP is enabled or disabled.	NO
SMTP SERVER ADDRESS	Shows the IP address of SMTP server that has been assigned.	NO
LOGIN NAME	Shows the login name used for SMTP authentication.	NO
PORT NUMBER	Shows the port number to be used for sending an E-mail or Internet Fax to the SMTP server.	NO
ENABLE SSL	Shows whether the SSL for the SMTP client is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE SMTP SERVER	Shows whether the SMTP server is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for receiving the Internet Fax using the SMTP protocol.	NO
ENABLE OFFRAMP GATEWAY	Shows whether the offramp gateway is enabled or disabled.	NO
ENABLE OFFRAMP SECURITY	Shows whether the offramp security is enabled or disabled.	NO
ENABLE OFFRAMP PRINT	Shows whether the offramp print is enabled or disabled.	NO
E-MAIL ADDRESS	Shows the E-mail address of this equipment if the SMTP server is enabled and it has been set.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
ENABLE POP3 CLIENT	Shows whether the POP3 client is enabled or disabled.	NO
POP3 SERVER ADDRESS	Shows the IP address of the POP3 server if it has been assigned.	NO
AUTHENTICATION	Shows whether POP3 authentication is enabled or disabled.	NO
TYPE POP3 LOGIN	Shows the POP3 login type.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
ACCOUNT NAME	Shows the POP3 account name if it has been set.	NO
SCAN RATE	Shows the scan rate to check the POP3 server for new message (in minutes).	NO
PORT NUMBER	Shows the port number to be used for accessing the POP3 server.	NO
ENABLE SSL	Shows whether the SSL for the POP3 network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the POP3 server.	NO

NETWORK SETTING - NETWORK SERVICE - FTP CLIENT NETWORK SERVICE

Function	Description	User
DEFAULT PORT NUMBER	Shows the default port number to be used for saving a document to the network folder using the FTP.	NO

NETWORK SETTING - NETWORK SERVICE - FTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE FTP SERVER	Shows whether the FTP server service is enabled or disabled.	NO
DEFAULT PORT NUMBER	Shows the default port number to be used for receiving data using FTP.	NO
ENABLE SSL	Shows whether the SSL for the FTP network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the FTP server.	NO

NETWORK SETTING - NETWORK SERVICE - SNMP NETWORK SERVICE

Function	Description	User
ENABLE SNMP	Shows whether the SNMP is enabled or disabled.	NO
READ COMMUNITY	Shows the read community name.	NO
ENABLE AUTHENTICATION TRAP	Shows whether the authentication trap is enabled or disabled.	NO
ENABLE ALERTS TRAP	Shows whether the alerts trap is enabled or disabled.	NO
IP TRAP ADDRESS1	Shows the IP address that have been set for IP trap address 1.	NO
IP TRAP COMMUNITY	Shows the IP Trap community name.	NO

NETWORK SETTING - NETWORK SERVICE - SNMP NETWORK SERVICE

Function	Description	User
IPX TRAP ADDRESS	Shows the IPX trap address.	NO

NETWORK SETTING - NETWORK SERVICE - SNTP NETWORK SERVICE

Function	Description	User
ENABLE SNTP	Shows whether the SNTP is enabled or disabled.	NO
PRIMARY SNTP ADDRESS	Shows the primary SNTP server address if it has been set.	NO
SECONDARY SNTP ADDRESS	Shows the secondary SNTP server address if it has been set.	NO
PORT NUMBER	Shows the port number to be used for accessing the SNTP server.	NO
SCAN RATE	Shows the scan rate to check the SNTP server for adjusting the time setting.	NO

NETWORK SETTING - PRINT SERVICE SETTING - RAW TCP PRINT

Function	Description	User
ENABLE RAW TCP	Shows whether Raw TCP printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for Raw TCP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - LPD PRINT

Function	Description	User
ENABLE LPD	Shows whether LPR printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for LPR printing.	NO
BANNERS	Shows whether the banner will be printed for each LPR print job.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
ENABLE IPP	Shows whether IPP printing is enabled or disabled.	NO
ENABLE PORT80	Shows whether the Port80 is used for IPP printing.	NO
PORT NUMBER	Shows the port number to be used for IPP printing.	NO
URL	Shows the URL for IPP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
ADMINISTRATOR'S NAME	Shows the administrator's user name to be allowed to perform the [Cancel All Documents] function.	NO
AUTHENTICATION	Shows whether the authentication for IPP printing is enabled or disabled.	NO
USER NAME	Shows the user name for authentication.	NO
ENABLE SSL	Shows whether the SSL for IPP printing is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for IPP printing.	NO
SSL URL	Shows the SSL URL for IPP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - FTP PRINT

Function	Description	User
ENABLE FTP PRINT	Shows whether FTP printing is enabled or disabled.	NO
PRINT USER NAME	Shows the user name for FTP printing.	NO
PRINT PASSWORD	Shows the password for FTP printing.	NO
PORT NUMBER	Shows the port number to be used for FTP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - NETWARE PRINT

Function	Description	User
LOGIN NAME	Shows the login name for NetWare file server.	NO
PASSWORD	Shows the password for NetWare file server.	NO
PRINT QUEUE SCAN RATE	Shows how often the equipment scans the queue on NetWare file server (in second).	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE PRINT HEADER	Shows whether the header will be printed or not for E-mail printing.	NO
ENABLE PRINT MESSAGE BODY	Shows whether the message body will be printed or not for E-mail printing.	NO
MAXIMUM E-MAIL BODY PRINT	Shows the maximum number of pages to print the body strings of the received Email print job.	NO
ENABLE PRINT E-MAIL ERROR	Shows whether an E-mail error report will be printed or not.	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE E-MAIL ERROR FORWARD	Shows whether an E-mail error message will be sent or not.	NO
E-MAIL ERROR TRANSFER ADDRESS	Shows the E-mail address where an E-mail error message will be sent, if it has been set.	NO
ENABLE PARTIAL E-MAIL	Shows whether the equipment allows printing an E-mail job that partially received.	NO
PARTIAL WAIT TIME	Shows how long the equipment will wait for receiving data of a partial E-mail job before printing (in second).	NO
MDN REPLY	Shows whether MDN Reply is enabled or disabled.	NO

PS3 Font List

An output example of the PS3 Font List

TOSHIBA	e-STUDIO3510c	Page:1
AlbertusMT-Light	The quick brown fox jumps over the lazy dog	
AlbertusMT	The quick brown fox jumps over the lazy dog	
AlbertusMT-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
AntiqueOlive-Roman	The quick brown fox jumps over the lazy dog	
AntiqueOlive-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
AntiqueOlive-Bold	The quick brown fox jumps over the lazy dog	
AntiqueOlive-Compact	The quick brown fox jumps over the lazy dog	
Apple-Chancery	<i>The quick brown fox jumps over the lazy dog</i>	
ArialMT	The quick brown fox jumps over the lazy dog	
Arial-ItalicMT	<i>The quick brown fox jumps over the lazy dog</i>	
Arial-BoldMT	The quick brown fox jumps over the lazy dog	
Arial-BoldItalicMT	<i>The quick brown fox jumps over the lazy dog</i>	
AvantGarde-Book	The quick brown fox jumps over the lazy dog	
AvantGarde-BookOblique	<i>The quick brown fox jumps over the lazy dog</i>	
AvantGarde-Demi	The quick brown fox jumps over the lazy dog	
AvantGarde-DemiOblique	<i>The quick brown fox jumps over the lazy dog</i>	
Bodoni	The quick brown fox jumps over the lazy dog	
Bodoni-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
Bodoni-Bold	The quick brown fox jumps over the lazy dog	
Bodoni-BoldItalic	<i>The quick brown fox jumps over the lazy dog</i>	
Bodoni-Poster	The quick brown fox jumps over the lazy dog	
Bodoni-PosterCompressed	The quick brown fox jumps over the lazy dog	
Bookman-Light	The quick brown fox jumps over the lazy dog	
Bookman-LightItalic	<i>The quick brown fox jumps over the lazy dog</i>	
Bookman-Demi	The quick brown fox jumps over the lazy dog	
Bookman-DemiItalic	<i>The quick brown fox jumps over the lazy dog</i>	
Candid	©.L*~O@#-iOAS*HOO+O#O~O*+O@L*~i~A~i	
Chicago	The quick brown fox jumps over the lazy dog	
Clarendon-Light	The quick brown fox jumps over the lazy dog	
Clarendon	The quick brown fox jumps over the lazy dog	
Clarendon-Bold	The quick brown fox jumps over the lazy dog	
CooperBlack	The quick brown fox jumps over the lazy dog	
CooperBlack-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
Copperplate-ThirtyTwoBC	THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG	
Copperplate-ThirtyThreeBC	THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG	
Coronet-Regular	<i>The quick brown fox jumps over the lazy dog</i>	
Courier	The quick brown fox jumps over the lazy dog	
Courier-Oblique	<i>The quick brown fox jumps over the lazy dog</i>	
Courier-Bold	The quick brown fox jumps over the lazy dog	
Courier-BoldOblique	<i>The quick brown fox jumps over the lazy dog</i>	
Eurostile	The quick brown fox jumps over the lazy dog	
Eurostile-Bold	The quick brown fox jumps over the lazy dog	
Eurostile-ExtendedTwo	The quick brown fox jumps over the lazy dog	
Eurostile-BoldExtendedTwo	The quick brown fox jumps over the lazy dog	
Geneva	The quick brown fox jumps over the lazy dog	
GillSans-Light	The quick brown fox jumps over the lazy dog	
GillSans-LightItalic	<i>The quick brown fox jumps over the lazy dog</i>	
GillSans	The quick brown fox jumps over the lazy dog	
GillSans-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
GillSans-Bold	The quick brown fox jumps over the lazy dog	
GillSans-BoldItalic	<i>The quick brown fox jumps over the lazy dog</i>	

PCL Font List

An output example of the PCL Font List

TOSHIBA	e-STUDIO3510c	Page:1
Internal PCL Font List		
0 Courier	The quick brown fox jumps over the lazy dog	
1 CG-Times	The quick brown fox jumps over the lazy dog	
2 CG-Times Bold	The quick brown fox jumps over the lazy dog	
3 CG-Times Italic	<i>The quick brown fox jumps over the lazy dog</i>	
4 CG-Times Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
5 CG Omega	The quick brown fox jumps over the lazy dog	
6 CG Omega Bold	The quick brown fox jumps over the lazy dog	
7 CG Omega Italic	<i>The quick brown fox jumps over the lazy dog</i>	
8 CG Omega Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
9 Coronet	<i>The quick brown fox jumps over the lazy dog</i>	
10 Clarendon Condensed	The quick brown fox jumps over the lazy dog	
11 Unifers Medium	The quick brown fox jumps over the lazy dog	
12 Unifers Bold	The quick brown fox jumps over the lazy dog	
13 Unifers Italic	<i>The quick brown fox jumps over the lazy dog</i>	
14 Unifers Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
15 Unifers Medium Condensed	The quick brown fox jumps over the lazy dog	
16 Unifers Condensed Bold	The quick brown fox jumps over the lazy dog	
17 Unifers Medium Condensed Italic	<i>The quick brown fox jumps over the lazy dog</i>	
18 Unifers Condensed Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
19 Antique Olive	The quick brown fox jumps over the lazy dog	
20 Antique Olive Bold	The quick brown fox jumps over the lazy dog	
21 Antique Olive Italic	<i>The quick brown fox jumps over the lazy dog</i>	
22 Garamond Antiqua	The quick brown fox jumps over the lazy dog	
23 Garamond Halbfett	The quick brown fox jumps over the lazy dog	
24 Garamond Kursiv	<i>The quick brown fox jumps over the lazy dog</i>	
25 Garamond Kursiv Halbfett	<i>The quick brown fox jumps over the lazy dog</i>	
26 Marigold	<i>The quick brown fox jumps over the lazy dog</i>	
27 Albertus Medium	The quick brown fox jumps over the lazy dog	
28 Albertus Extra Bold	The quick brown fox jumps over the lazy dog	
29 Arial	The quick brown fox jumps over the lazy dog	
30 Arial Bold	The quick brown fox jumps over the lazy dog	
31 Arial Italic	<i>The quick brown fox jumps over the lazy dog</i>	
32 Arial Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
33 Times New Roman	The quick brown fox jumps over the lazy dog	
34 Times New Roman Bold	The quick brown fox jumps over the lazy dog	
35 Times New Roman Italic	<i>The quick brown fox jumps over the lazy dog</i>	
36 Times New Roman Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>	
37 Helvetica	The quick brown fox jumps over the lazy dog	
38 Helvetica-Bold	The quick brown fox jumps over the lazy dog	
39 Helvetica-Oblique	<i>The quick brown fox jumps over the lazy dog</i>	
40 Helvetica-BoldOblique	<i>The quick brown fox jumps over the lazy dog</i>	
41 Helvetica-Narrow	The quick brown fox jumps over the lazy dog	
42 Helvetica-Narrow-Bold	The quick brown fox jumps over the lazy dog	
43 Helvetica-Narrow-Oblique	<i>The quick brown fox jumps over the lazy dog</i>	
44 Helvetica-Narrow-BoldOblique	<i>The quick brown fox jumps over the lazy dog</i>	
45 Palatino-Roman	The quick brown fox jumps over the lazy dog	
46 Palatino-Bold	The quick brown fox jumps over the lazy dog	
47 Palatino-Italic	<i>The quick brown fox jumps over the lazy dog</i>	
48 Palatino-BoldItalic	<i>The quick brown fox jumps over the lazy dog</i>	
49 ITC AvantGarde-Book	<i>The quick brown fox jumps over the lazy dog</i>	
50 ITC AvantGarde-Book	<i>The quick brown fox jumps over the lazy dog</i>	

INDEX

Numerics

2ND TEL 12

A

ADDRESS BOOK 94
ADDRESS BOOK EDIT 15
Address Book List 94, 198
ADDRESS BOOK REGISTRATION 11
ADDRESS MENU 9
ADDRESS MODE 137, 139, 140
ADMIN 107
 COPY 161
 E-MAIL 180
 FAX 163
 FILE 179
 GENERAL 109
 INTERNET FAX 182
 LIST/REPORT 185
 NETWORK 136
ADMIN. MESSAGE 110
Administrator Password 113
ALL LIMIT 71
APPLETALK 149
AppleTalk Protocol 149
AUTO 2-SIDE MODE 161
AUTO CLEAR 76
Auto Clear Mode 76
AUTO POWER SAVE 121
Auto Power Save Mode 120
Auto-IP 137
AUTOMATIC CHANGE OF PAPER SOURCE
 162, 193

B

BACKGROUND ADJUSTMENT 91
BODY 180, 182
Body String Transmission 184

C

CALIBRATION 84, 127, 130
CHANGE LANGUAGE 78
CHECK OF GROUP MEMBER 24, 26
CHECKING E-MAIL 100
CLOCK 115
COLOR MODE 86, 90
COMM. REPORT 187
Communication Report 187
COMPLETION TONE VOLUME 167
COMPRESS 90
CONTACT INFORMATION 110
Contacts
 Deleting 16
 Editing 14
 Registering 10
 Searching 18

CONTEXT 145
Copy Calibrations 126
CORP. 12
COUNTER MENU 39

D

Date and Time 115
DATE FORMAT 116
DATE/TIME 115
Daylight Saving System 116
DEFAULT MODE OF AUTO COLOR 162
DELETE ALL 58
DEMO PAGE PRINT 192
Department Code
 Deleting 58, 67
 Editing 63
 Enabling 55
 Printing 55
 Registering 59
 Resetting All Counters 57
 Resetting Counter 69
Department Code List 197
DEPARTMENT COUNTER 46
DEPARTMENT MANAGEMENT 53, 56
DEPARTMENT REGISTRATION 59, 63, 67
DEPT. 12
DESIRED ZONE 150
DEVICE INFORMATION 109
DEVICE NAME 150
DHCP Server 137
DIAL TYPE 167
DIAL TYPE (LINE2) 167
DIRECT TX 188
DISABLE FILE SHARE 147
DISABLE PRINT SHARE 147
DISCARD 172
Discard Printing 171
Display Language 78
DISPLAY LEVEL 124
DRAWER 98
DRAWER SET 135
DUPLEX PRINT 174
Duplex Printing 173
DYNAMIC 137

E

ECM 13, 89
E-MAIL 12
ENABLE APPLETALK 150
ENABLE BINDERY 145
ENABLE HTTP SERVER 152
ENABLE IPX/SPX 143
ENABLE NDS 145
ENABLE SSL 152
ENERGY SAVER 117, 120, 122
ETHERNET 153

EXPOSURE	88, 91	LDAP Network Service	155
EXPOSURE FOR BLACK	86	LDAP PROTOCOL	156
EXPOSURE FOR COLOR	86	LINE SELECT	13
F		LINE-2 MODE	169
FAX COMMUNICATION	52	Line-2 Mode	168
Fax Initial Setup	166	LINE2 NUMBER	164
FAX NO.	12	LIST	192
FAX NUMBER	164	LOCAL	191
FIRST NAME	12	LOCATION	110
FRAGMENT MESSAGE SIZE	181	LOGON	147
FRAGMENT PAGE SIZE	183	M	
Fragmentation	181, 183	MAXIMUM COPIES	161
FRAME TYPE	143	MEMORY TX	188
FROM ADDRESS	180, 182	Message Properties	180, 182
FROM NAME	180, 182	MONITOR VOLUME	167
FUNCTION	97, 192	MULTI TX	188
Function List (Administrator)	202	N	
Function List (User)	97, 200	NAME SORT	95
G		NetBIOS NAME	147
GATEWAY	140	NETWARE	144
Group		NetWare Settings	144
Creating	22	NIC CONFIGURATION PAGE	192
Deleting	31	NIC Configuration Page	201
Editing	25	NO AUTO IP	139
Searching	33	NO LIMIT BLACK	73
GROUP NAME	23, 26, 35	NOTIFICATION	111
GROUP NO. EDIT	25	O	
GROUP NO. REGISTRATION	23	ORIGIANL MODE FOR BLACK	87
GROUP NUMBERS	96	ORIGINAL MODE	88, 91
Group Numbers List	96, 199	ORIGINAL MODE FOR AUTO COLOR	87
H		ORIGINAL MODE FOR COLOR	87
HTTP	151	OTHER	156
HTTP Network Service	151	Output Limitations	71
I		P	
ID NAME	164	PAPER JAM RECOVERY	135
ID SORT	95	PAPER OF DIFFERENT DIRECTION	162, 193
IMAGE DIRECTION	86	PASSWORD SETUP	113
IMAGE QUALITY FOR BLACK	91	PCL FONT LIST	192
INITIAL SETUP	166	PCL Font List	218
IP ADDRESS	140	POLLING	188
IPX/SPX	142	POP-UP	134
IPX/SPX Protocol	142	PREFACE	5
J		PRIMARY PORT NUMBER	152
JOURNAL	186	Print Calibration	129
K		PRINT COUNTER	40, 47
KEYWORD	12	PRINT OUT DEPARTMENT CODES	55
KNOWN ID	18, 28, 33	PRINT OUT TOTAL COUNTER	45
L		PRINTER/E-FILING	193
LAST NAME	12	PRINTING IMAGE MODE	93
		PS3 FONT LIST	192
		PS3 Font List	217
		PWD	13

Q			
QUALITY TX	13		
R			
Reception Journal	185		
RECEPTION LIST	191		
Reception List	190		
Recovery Transmission	177		
RECOVERY TX	177		
REDUCTION	172		
Reduction Printing	171		
REGISTRATION	85, 133		
RELAY DESTINATION	189		
RELAY ORIGINATOR	189		
RELAY STATION	189, 191		
REMOTE	191		
REPLACE TONER CARTRIDGE	81		
REPORT SETTING	185, 187, 190		
RESET ALL COUNTERS	57		
RESET COUNTERS	69		
RESOLUTION	88, 91		
REVERSED DISPLAY	79		
Reversed Display Mode	79		
ROTATE SORT	176		
Rotate Sort	175		
ROTATION	90		
RTI	89		
RX JOURNAL	186		
RX MODE	167		
RX ONLY (24HR)	170		
RX ONLY (TIMER)	170		
RX PRINT	172, 173, 175		
RX Printing	171		
S			
SCAN COUNTER	43, 50		
Scan to E-mail	180		
SEARCH ADDRESS	20, 29		
SEARCH GROUP	35		
SEARCH ROOT	145		
SECONDARY PORT NUMBER	152		
SEP	13		
SERVICE PHONE NUMBER	110		
SID	13		
SINGLE/2-SIDE SCAN	90		
SLEEP MODE	123		
Sleep Mode	122		
SMB	146		
SMB PROTOCOL	147		
SNMP READ COMMUNITY	156		
SORT MODE PRIORITY	161		
STATIC	140		
Static IP Address	139		
Storage Maintenance	179		
SUB	13		
		SUBNET MASK	140
		SUSPEND PRINTING IF STAPLER EMPTY	162, 193
		T	
		TCP/IP	137, 138, 140
		TCP/IP Protocol	136
		TERMINAL ID	163
		Terminal ID	163
		THRESHOLD	91
		TONER	74
		TOTAL COUNTER	40
		Total Counter List	196
		Transmission Journal	185
		TREE	145
		TX JOURNAL	186
		TX TYPE	13, 88
		TX/RX	169
		U	
		USER	
		COPY	86
		E-FILING	93
		FAX	88
		GENERAL	76
		LIST	94
		SCAN	90
		USER CERTIFICATE	158
		W	
		WEEKLY TIMER	118
		WINS PRIMARY	147
		WINS SECONDARY	147

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS
User Functions Guide

e-STUDIO2500c/3500c/3510c

TOSHIBA TEC CORPORATION

2-17-2, HIGASHIGOTANDA, SHINAGAWA-KU, TOKYO, 141-8664, JAPAN



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>