

TOSHIBA AMERICA INFORMATION SYSTEMS STORAGE DEVICE DIVISION IRVINE, CALIFORNIA

MK6412MAT (HDD2136) 2.5-INCH HARD DISK DRIVE USER MANUAL

Rev 02

11/2006

CONTENTS

Introduction	1
Setup	2
Using the HDD	4
Troubleshooting	5
Specifications	6
Drive Connectors	8

INTRODUCTION – MK6412MAT (HDD2136)

General Features

- 2.5" sized drive
- 6.495 Gigabytes*
- Slim 8.45mm High
- 13ms Average Seek Time
- ATA-4 Interface
- 33.3MBs Ultra DMA Transfer Rate
- 512KB Buffer
- Rotational speed of 4,200rpm
- MTTF 300,000 Hours

*Toshiba defines a megabyte (MB) as 1,000,000 bytes and a gigabyte (GB) as 1,000,000 bytes.

SETUP - MK6412MAT (HDD2136)

 
Æ

Caution: Your Hard Disk Drive is a precision device and even a small drop onto any surface can cause damage. Electronstatic discharge can also damage the drive. You should ground yourself prior to handling the drive.

Master/Slave Settings

Your Toshiba Hard Disk Drive can be configured as either a "Master" or "Slave" unit. Master configuration is used for all single drive applications, and master or slave configuration (only one of each per port) is used for two drive applications. Use the information in the following table before setting drive as Master or Slave.

Master configuration is obtained by setting jumpers A, B, C & D open (no jumper present). Slave configuration is obtained by setting jumpers C-D. When B-D jumper is installed, the drive is configured as cable select. If pin 28 = Low, the drive is "Master", if pin 28 - High, the drive is "Slave".



JUMPER	P28	DRIVE
No Jumper	-	Master Drive
C-D Jumper	-	Slave Drive
B-D Jumper	LOW	Master Drive
B-D Jumper	HIGH	Slave Drive
A-B Jumper	-	Prohibit
A-C Jumper	-	Prohibit

Installation Notes

- The drive should be mounted carefully on the surface of 0.1mm or less flatness to avoid excessive distortion.
- In order to prevent short-circuit under any circumstances, a space of 0.5mm or more should be kept under the PCB.
- Space should be kept around the drive to avoid any contact with other parts, which may occur due to shock or vibration.
- The temperature of the top cover and the base must always be kept under 60C to maintain the required reliability.
- Be sure not to cover the breathing hole to keep the pressure inside the drive at a certain level
- Do not apply any force to the top cover, except the screw areas on top cover. Maximum force to the specified area is 2N.
- The drive contains several parts which may be easily damaged by ESD (Electric Static Discharge). Avoid touching the interface connector pins and the surface of PCB. Be sure to use ESD proof wrist strap when handling drive.
- The four mounting screws should be tightened equally with 0.3N-m (3kgf-cm) torque. The depth should be 3.0mm minimum and 3.5mm maximum.

Placing Hard Drive inside your Computer

- Determine mounting configuration (the drive can be mounted in either a horizontal or vertical orientation)
- Configure drive for system application.
- Configure the adapter board for the specific system application (if required).
- Install adapter board into an unused PC/AT 16 bit slot (if required).
- Install the I/F cable to the system's 44 pin connector port or adapter board. Ensure pin 1 is oriented correctly, (pin 1 on the cable is usually identified by a red or blue strip.)
- Set correct drive type in system CMOS
- Refer to applicable manuals for software installation instructions.

W Important Note: Disconnect power from your computer system before beginning installation.



Figure 2.HDD Mounting Holes

USING THE HARD DISK DRIVE – MK6412MAT (HDD2136)

Backing up Data Files

To avoid data loss, regularly back up the data files on the hard disk drive.

TROUBLESHOOTING – MK6412MAT (HDD2136)

Problem	Solution
My system is not able to recognize all available capacity on my Hard Disk Drive. What do I need to do to utilize the complete hard drive?	There are some systems that are unable to recognize the new larger Hard Drives on the market. 3rd party software is available that breaks the "capacity barrier". Some suggestions are EZ Drive by Micro House and Disk Manager DiskGo by Ontrack. Check with your local computer/software supplier for availability or contact the software manufacturer.
How do I install my 2.5" Toshiba Hard Drive into my desktop or tower system?	You will need a HDD mounting kit in order to install a Toshiba 2.5" drive into your desktop or tower system.
	Contact your local computer supplier for kit availability.

SPECIFICATIONS - MK6412MAT (HDD2136)

General

Model Interface MK6412MAT (HDD2136) ATA-2/3/4

Functionality

Formatted Capacity	6.495GB*
Rotational Speed	4,200rpm
Avg. Rotational Latency	7.14/ms
Spin-up Time	4sec (typical)
Buffer	512KB
Seek Time (Average)	13
Seek Time (Maximum)	24
Internal Transfer Rate	86.1 – 133.1 Mbits/sec (max)
Host Transfer Rate	
Ultra DMA mode	33.3Mbytes/sec
PIO mode	16.6Mbytes/sec
Interleave Factor	1:1
*Toshiba defines a megabyte (MB) as 1,000,000 l	bytes and a gigabyte (GB) as 1,000,000,000 bytes.

Internal Drive Characteristics

2
4
748 (19.0K)
13,424
15
63
512

Reliability

Preventative maintenance	None
Nonrecoverable read errors	1 error per 10 ¹³ bits read
SMART-compliant	Yes

Electrical

Voltage

5V ±5%

Power Consumption

Start3.5W typSeek2.3W typRead/Write2.2W typSleep0.1W typPower Efficiency0.00012W/GB avg

Shock

Operating Non-Operating 150G, 2ms half sine wave 500G, 2ms half sine wave

Physical

Height Width Depth Weight 0.33" (9.5mm) 2.75" (69.85mm) 3.94" (100mm) 3.35oz (95g) typ

Regulatory

The drive satisfies the following standards:Underwriters Laboratories (UL)1950Canadian Standard Association (CSA)C22.2 No.220 No. 950TUV RheinlandEN 60 950

DRIVE CONNECTORS – MK6412MAT (HDD2136)



Figure 1.MK6412MAT HDD Rear View - Connectors

Interface Connector

Drive Side Connector	Yamaichi GAP050K11617 or equivalent
Recommended Host Side Connector	
Board	Straight type: Berg 86455-044 86456-044 or equivalent
Cable	Berg 89361-044 or equivalent

Recommended Cable Characteristics

Standard diameter	0.32mm (28AWG)
Characteristics impedance	100 - 132ohm
Max Length	0.46mm (max)
Capacitance	35pF (max)

* cable is not included with drive

Download from Www.Somanuals.com. All Manuals Search And Download.

Interface Pin Assignment

DRIVE INTERFACE SIGNALS			
PIN	SIGNAL	PIN	SIGNAL
1	RESET	2	GROUND
3	DD 7	4	DD 8
5	DD 6	6	DD 9
7	DD 5	8	DD 10
9	DD 4	10	DD 11
11	DD 3	12	DD 12
13	DD 2	14	DD 13
15	DD 1	16	DD 14
17	DD 0	18	DD 15
19	GROUND	20	KEY
21	DMARQ	22	GROUND
23	DIOW/STOP	24	GROUND
25	DIOR/ -DMARDY HSTROBE	26	GROUND
27	IORDY/ -DMARDY/- DSTROBE	28	CSEL
29	DMACK	30	GROUND
31	INTRQ	32	IOCS16
33	DA1	34	PDIAG
35	DA0	36	DA 2
37	CS0	38	CS1
39	DASP	40	GROUND
41	+5V (LOGIC)	42	+5V (MOTOR)
43	GROUND	44	RESERVED
Note: Symbol () in front of signal indicates negative logic.			

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com