

# TOSHIBA



## PORTABLE DVD PLAYER **SD-P90DTSE**

OWNER'S MANUAL



Introduction **2**

Basic playback **17**

Advanced playback **31**

Function setup **45**

Connections **53**

TV Viewing **65**

Others **73**



© 2007 TOSHIBA CORPORATION  
PX1D00001230

## SAFETY PRECAUTIONS

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

**CAUTION:** This equipment employs a Laser System.  
To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.  
Visible and invisible laser radiation when open and interlocks defeated.  
DO NOT STARE INTO BEAM.

CLASS 1 LASER PRODUCT

In the spaces provided below, record the Model and Serial No. located on the bottom of your DVD player.

Model No. \_\_\_\_\_



Serial No. \_\_\_\_\_

Retain this information for future reference.

### About disposal

The cold cathode fluorescent lamp in the LCD panel contains a small amount of mercury.  
Please follow local ordinances or regulations when you dispose of the product.

## Location of the required label

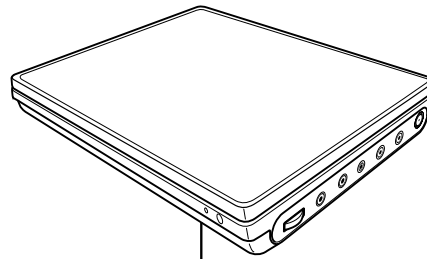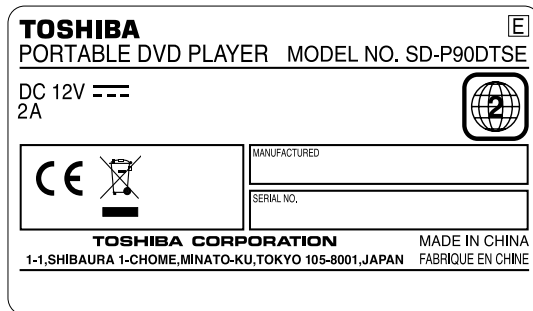

Introduction

### Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



## IMPORTANT SAFETY INSTRUCTIONS

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time. However, while it is thundering or lightning, do not touch the apparatus and any connected cable and/or equipment. This will prevent you from receiving the electric shock by an electric surge.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### ADDITIONAL SAFETY INSTRUCTIONS

12. When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damaged.
13. Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
14. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus and/or around it.
15. Be careful not to catch your fingers in the disc holder when closing the lid. It may cause personal injury.
16. Do not put a vessel containing liquid such as a vase, or a metal object on the apparatus. If liquid or a foreign metal object is let into the apparatus, it may cause fires or electric shock.
17. Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and apparatus malfunction.
18. Do not touch a spinning disc. When you open the disc holder, the disc may have not stopped spinning. Touching a spinning disc may cause personal injury or damage to the product.
19. Do not rest the product on your lap or other parts of body. The product may become warm during use. Even low temperatures may cause personal injury when exposed to your skin for prolonged periods.
20. Use the supplied AC adapter to operate the product. Substitute devices not specified by the manufacturer may result in fire or product malfunction. Do not cover the AC adapter with a blanket or place it near heating or on electric carpet when it is in use.

21. When you use this product in an airplane, follow the instructions of the airline. Disregarding them may cause harmful interference to radio communication.
22. Do not stare at the pick-up lens or look at the laser beam. Doing so may cause damage to eyesight.
23. Do not use this product while walking or driving. Neglecting this may cause a traffic accident.
24. CAUTION: If the DVD player is dropped and the cabinet or enclosure surface has been damaged or the DVD player does not operate normally, take the following precautions:
- ALWAYS turn off the DVD player and unplug the power cord to avoid possible electric shock or fire.
  - NEVER allow your body to come in contact with any broken glass or liquid from the damaged DVD player. The LCD panel inside the DVD player contains glass and a toxic liquid. If the liquid comes in contact with your mouth or eyes, or your skin is cut by broken glass, rinse the affected area thoroughly with water and consult your doctor.
  - ALWAYS contact a service technician to inspect the DVD player any time it has been damaged or dropped.
25. Use the player in a location that facilitates the immediate removal of the plug if there is a malfunction or failure.
26. Battery Pack
- a) Never throw the battery pack into a fire, as that could cause the battery pack to explode. Never heat the battery pack, as that could cause leakage of alkaline solution or other electrolytic substance.
  - b) Never disassemble the battery pack, as that could cause leakage of alkaline solution or other electrolytic substance.
  - c) Never short-circuit the battery pack by either accidentally or intentionally bringing the terminals in contact with another metal object. This could cause personal injury or a fire, and could also damage the battery pack.
  - d) Never drive a nail into the battery pack. Never strike the battery pack with a hammer. Never step or tread on the battery pack.
  - e) If you ever smell an unusual odor, excessive heat, discoloration, or deformation of the battery pack, remove it from the player after confirming safety and discontinue use of it. Take the battery pack to an authorized Toshiba service provider.
  - f) Keep the battery pack away from heat or fire.
  - g) Never dispose of used battery packs with other ordinary solid wastes, since they contain toxic substances. Always dispose of used battery packs in accordance with community regulations that apply to the disposal of batteries. Cover the metal terminals with insulating tape, in order to prevent accidental short-circuiting.
  - h) Always confirm that the battery pack is compatible with your player, before attaching the battery pack to the player.
  - i) Never expose the terminals of the battery pack to any other metal object. Wrap the battery or place it in a protective plastic bag, whenever transporting it.
  - j) Always confirm that the temperature is between 5 and 35°C (41°F and 95°F) before you charge the battery. Leakage, excessive heat, or deterioration of the battery pack may occur if this warning is not heeded.
  - k) Never immerse the battery pack in any liquid.
  - l) Never expose the battery pack to direct sunlight. Never store or use the battery pack in a locked and unventilated vehicle. (where excessive internal temperatures may be encountered.)
  - m) Always keep the battery pack out of reach of infants or small children.
  - n) Never shock the battery pack by dropping or throwing it.
  - o) If the liquid contained within the battery pack leaks, use a large amount of water and immediately wash off any liquid which may accidentally contact any part of the body. Remove any liquid that has contacted your clothing by washing it immediately with a detergent.
  - p) Always confirm that a "click" sound has resulted, when attaching the battery pack to the player. This sound confirms that the battery pack has been properly attached.

## IMPORTANT SAFETY INSTRUCTIONS

### 27. Coin-shaped Battery

- a) Keep coin-shaped batteries out of children's reach. Be careful not to ingest internally, especially by children, as doing so may cause poisoning.
- b) Do not load a battery into the remote control with the wrong side out.
- c) Do not charge, heat, open, or short-circuit the batteries. Do not throw the batteries into a fire.
- d) Do not leave a dead or exhausted battery in the remote control.
- e) If you do not use the remote control for a long period of time, remove the battery to avoid possible damage from battery corrosion.

28. After unpacking coin-shaped batteries, store them in poly bags, etc. separately one by one when unused. If you leave them unwrapped, they may be short-circuited by contact with metal objects, resulting in battery leakage, heat or bursting. This may cause burns or injury.

The batteries must be completely discharged when they are deposited in collection containers for old batteries. If a charge remains, countermeasures to prevent short circuits must be taken.

29. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

30. Following mark means "CAUTION - RISK OF ELECTRIC SHOCK - DO NOT OPEN".



### 31. Vehicle adapter and operation in a car

- a) NEVER operate the apparatus or view a DVD Video while operating an automobile or other vehicle. Note: doing so is illegal in many jurisdictions.  
NEVER place a apparatus within the eyesight of a driver while he/she is driving an automobile/vehicle. Note: an apparatus located in the front seating section of a vehicle is illegal in many jurisdictions.  
Failure to observe the above instructions could result in the driver's inattention to and/or distraction from road hazards.
- b) NEVER place an apparatus in a location where it could interfere with the proper deployment and/or performance of an air bag. Failure to observe this instruction could result in the prevention of an air bag to properly and/or effectively deploy.

- c) Do not use a vehicle adapter other than the model supplied, to power the apparatus. Do not use the supplied vehicle adapter to power an apparatus other than this apparatus. Neglecting these may cause smoke, fire or electrical shock to human body.
- d) This adapter is intended for exclusive use in automobiles/vehicles with a DC 12V negative ground electrical system. NEVER use this adapter with a DC 24V configured automobile/vehicle. Consult your vehicle owner's manual before using this adapter.
- e) When handling, using or storing the adapter power cord NEVER:
  - Place or locate near any apparatus that produces heat.
  - Disassemble, splice or extend the cord.
  - Pull, force or place any heavy objects on the cord.
  - Bend, twist or bind the cord.
- f) Keep away from the driving device (such as brake pedal, etc.) and the moving equipment (such as a seat rail, car windows, door, etc.).
- g) NEVER disassemble or alter this adapter in any manner.
- h) ALWAYS use caution when touching the adapter, cigarette lighter socket or power port. The adapter, lighter socket and power port may become heated after prolonged use.
- i) ALWAYS remove the adapter from the cigarette lighter socket or power port when not in use.
- j) Do not charge the battery pack which is attached to the apparatus by the adapter. Doing so may cause smoke, fire or electrical shock to human body. Whenever you use the adapter, be sure to remove the battery pack from the apparatus to prevent it from being charged by the adapter.
- k) Some cars may not have a compatible socket. NEVER modify this adapter to fit an incompatible cigarette lighter socket and/or power port. NEVER modify an incompatible cigarette lighter socket and/or power port to accept this adapter.  
Failure to observe the above warnings could cause smoke, fire, burns and/or electric shock.
- l) ALWAYS locate the apparatus on a level and secure surface. If placed on an uneven, shaky, unsecured or unstable surface, apparatus may fall.  
Failure to observe the above warning could result in the apparatus striking a person.

m) When using the adapter, insert the plug of the adapter into the cigarette lighter socket or power port fully.  
The incomplete insertion will cause smoke or fire.

n) Do not touch the adapter with wet hands. Do Not expose the adapter to water or liquid.

### 32. Carrying case

a) Do not drive a car with the carrying case attached.  
Neglecting this may cause personal injury by bumps at sudden stops.

b) Do not place the carrying case within range of an airbag, as it may obstruct the deployment.

c) Do not place the carrying case within driver's view. Obstructed visibility may cause a traffic accident.

d) For safety drive, keep the carrying case out of reach of driver and away the cockpit controls.

e) Do not hang the belts of the carrying case on a person's neck. Doing so may cause choke or injury.

f) Do not cover a person's head with the carrying case.  
Doing so may cause choke or injury. Pay special attention to children.

g) Do not swing the carrying case. Doing so may cause personal injury.

h) When attaching the carrying case to a car seat, be sure to fasten the belts to fix the carrying case firmly.  
Unstable installation of the carrying case may drop the player, resulting in personal injury or damage to the player.

i) When carrying the player using the carrying case, close the case completely.  
Neglecting this may drop the player, resulting in personal injury or damage to the player.



## Precautions

### Notes on handling

- Do not shock the LCD monitor. It may cause unit damage and malfunction.
- Do not use the player in a place subject to vibration. Neglecting this may cause malfunction of the player or damage to the disc.
- Do not leave the player in a vehicle. Rise or drop in temperature may result in malfunction of the player.
- When transporting the player, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packaged at the factory.
- Do not use volatile liquids, such as insect spray, near the player. Do not leave rubber or plastic products in contact with the player for a long time. They will leave marks on the finish.
- The player may become warm after a long period of use. This is not a malfunction.
- When the player is not in use, be sure to remove the disc and turn off the power.
- If you do not use the player for a long period, the unit may not function properly in the future. Turn on and use the player occasionally.

### Notes on locating

- When you place this player near a TV, radio, or VTR, the playback picture may become poor and the sound may be distorted. In this case, move the player away from the TV, radio, or VTR.

### Notes on cleaning

- Use a soft, dry cloth for cleaning. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the player.
- When cleaning the LCD monitor, use a soft, dry cloth.


### Notes on products incorporated laser system

- This product incorporates laser system. For proper and safety use of this product, read this owner's manual carefully, and keep near at hand for future reference. When you need any repair of this product, consult your dealer where you purchased this product.
- Never disassemble or modify this product. Changes or modifications may result in exposure to laser radiation.

### Notes on moisture condensation


**Moisture condensation damages the player. Please read the following carefully.**

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the player.

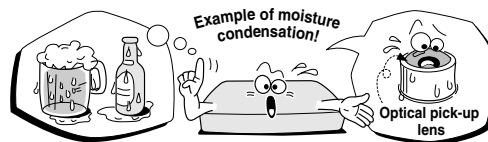

■ **Moisture condensation occurs during the following cases.**

- When you transport the player directly from a cold place to a warm place.
- When you use the player in a room where you just turned on the heater, or a place where the cold air from the air conditioner directly hits the unit.
- In summer, when you use the player in a hot and humid place just after you move the unit from an air conditioned room.
- When you use the player in a humid place.

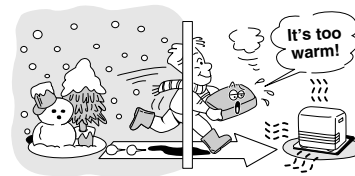

■ **Do not use the player when moisture condensation may occur.**

If you use the player in such a situation, it may damage discs and internal parts. Remove the disc, connect the AC adapter, turn on the player, and leave it for two or three hours. After two or three hours, the player will have warmed up and evaporated any moisture.







## Notes and Information

### Structure of disc contents


Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs/ audio CDs are divided into tracks.

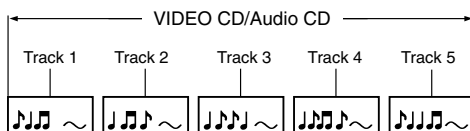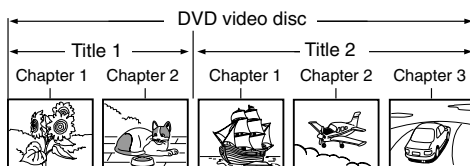

Each title, chapter, or track is assigned a number, which is called "title number", "chapter number" or "track number" respectively. There may be discs that do not have these numbers.

### On handling discs

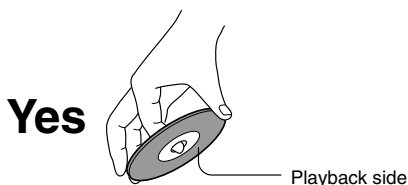

- Do not touch the playback side of the disc.



- Do not attach paper or tape to discs.



### Notes on region numbers

The region number of this player is 2. Region numbers, corresponding to specific geographical playback area, are printed on your DVD video disc. If you do not find  or , disc playback will not be allowed by the player. (In this case, the player will display a message on-screen.)

### On cleaning discs

- Fingerprints and dust on the disc may cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.



- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.

### On storing discs

- Do not store discs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping.

### Notes on copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## Notes and Information (continued)

### About this owner's manual

This owner's manual explains the basic instructions of this player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the player may not respond to all operating commands. This is not a defect in the player. Refer to instruction notes of discs.

"⊘" may appear on the screen during operation.  
A "⊘" means that the operation is not permitted by the player or the disc.

### Exemptions

- Toshiba is not liable for any damage caused by fires, earthquake, etc., uses by a third person, accidents, owner's intentional or unintentional misuse, or uses in other improper conditions.
- Toshiba is not liable for incidental damages (such as profit loss or interruption in business, etc.) caused by use or unavoidable of this product.
- Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- Toshiba is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment or software that Toshiba is not concerned with.

### On VIDEO CDs







This player supports VIDEO CDs equipped with the PBC (Version 2.0) function. (PBC is an abbreviation for Playback Control.)

You can enjoy two playback variations depending on types of discs.

- VIDEO CD not equipped with PBC function (Version 1.1)  
Sound and movie can be played on this player in the same way as an audio CD.
- VIDEO CD equipped with PBC function (Version 2.0)  
In addition to operation of a VIDEO CD not equipped with the PBC function, you can enjoy playback of interactive software with search function by using the menu displayed on the screen (Menu Playback).  
Some functions described in this owner's manual may not work with all discs.

### Playable discs

This player can play the following discs.

Disc	Disc Mark	Disc Size	Contents
DVD Video disc		12cm/8cm	• Video(moving pictures)+Audio
DVD-RW		12cm	• Video+Audio (DVDVideo format)* *Finalized discs only.
DVD-R		12cm	• Video+Audio (DVDVideo format)* *Finalized discs only.
Video CD		12cm/8cm	• Video (moving pictures)+Audio
Audio CD		12cm/ 8cm(CD single)	• Audio
CD-ROM		12cm	• Audio (MP3 / WMA files) • Movie (DivX) • Photograph (JPEG files)
CD-R/RW		12cm	• Audio (CD-DA, MP3/WMA files) • Movie (DivX) • Photograph (JPEG files) *CD-R/RW discs of VIDEO CD format can also be played. Some of these discs may be incompatible.

- You cannot play discs other than those listed above.
- You cannot play discs of DVD-RAM or non-standardized discs, etc., even if they may be labeled as above.
- Depending on the data recording method or the disc status, playback or recording on this recorder may not be possible, even if the disc is labeled as below. Toshiba cannot assure that all discs bearing the DVD or CD logos will operate as expected.
- This player uses the PAL/NTSC colour system, and cannot play DVD video discs recorded in any other colour system (SECAM, etc.).

# Table of Contents

## Introduction

- SAFETY PRECAUTIONS ..... 2
- IMPORTANT SAFETY INSTRUCTIONS ... 4
- Precautions ..... 8
- Notes and Information ..... 9
  - Notes on region numbers ..... 9
- Table of Contents ..... 11
- Identification of Controls ..... 12
  - Main unit ..... 12
  - Side view ..... 13
  - Remote control ..... 14
  - Loading the remote control battery ..... 15
  - Operating with the remote control ..... 15
- Power Connection ..... 16

## Basic playback

- Playing a Disc ..... 18
  - Basic playback ..... 18
- Variable Speed Playback ..... 22
  - Playing in fast reverse or fast forward directions ..... 22
  - Playing frame by frame ..... 22
  - Playing in slow-motion ..... 23
  - Resuming playback from the stopped location .. 23
- Locating a Specific Title, Chapter, or Track ..... 24
  - Locating a title using the top menu ..... 24
  - Locating a specific chapter or track ..... 24
  - Locating a desired section by entering its corresponding number ..... 25
- Playing MP3/WMA Audio or DivX® Video Files ..... 26
- Viewing JPEG Files ..... 27

## Advanced playback

- Directly Accessing a Specific Location ... 32
  - Entering the time counter of the desired location ... 32
- Repeat Play ..... 33
  - Repeating a title, chapter, or track ..... 33
  - Repeating a specific segment ..... 33
- Playing in a Favorite Order ..... 34
  - Setting titles, chapters, or tracks in a favorite order ..... 34
- Playing in Random Order ..... 35
  - Playing chapters or tracks in random order .... 35
- Zooming a Picture ..... 36
- Selecting the Sound Enhancement (E.A.M.) ... 37

- Selecting a Camera Angle ..... 38
- Selecting Subtitles ..... 39
- Selecting a Language ..... 40
- Operating in the On-screen Display Mode.. 42
- Adjusting the Picture ..... 44

## Function setup

- Customizing the Function Settings ..... 46
  - Setting procedure ..... 46
  - Setting details ..... 48

## Connections

- Connecting to a TV or audio system .... 54
- Connecting to Headphones ..... 56
- Viewing Pictures From Connected Video Equipment ..... 56
- Connecting to Audio Equipment ..... 57
  - Connecting to an amplifier equipped with a Dolby Digital decoder ..... 58
  - Connecting to an amplifier equipped with a DTS decoder ..... 58
  - Connecting to an amplifier equipped with an MPEG2 audio decoder ..... 59
  - Connecting to an amplifier equipped with a digital audio input ..... 59
- Using the Battery Pack ..... 60
- Using the automobile/vehicle Adapter or Power Port ..... 62
- Using the carrying case ..... 64

## TV Viewing

- Preparation for TV viewing ..... 66
  - Connection ..... 66
  - Selecting DTV mode ..... 66
  - Initial setup - Scanning channels available in your area ..... 67
- TV view operations ..... 68
  - Operations while viewing ..... 68
  - Customizing channel lineup ..... 70


## Others

- Before Calling Service Personnel ..... 74
- Specifications ..... 76



## Identification of Controls

See the page in  for details.

### Main unit

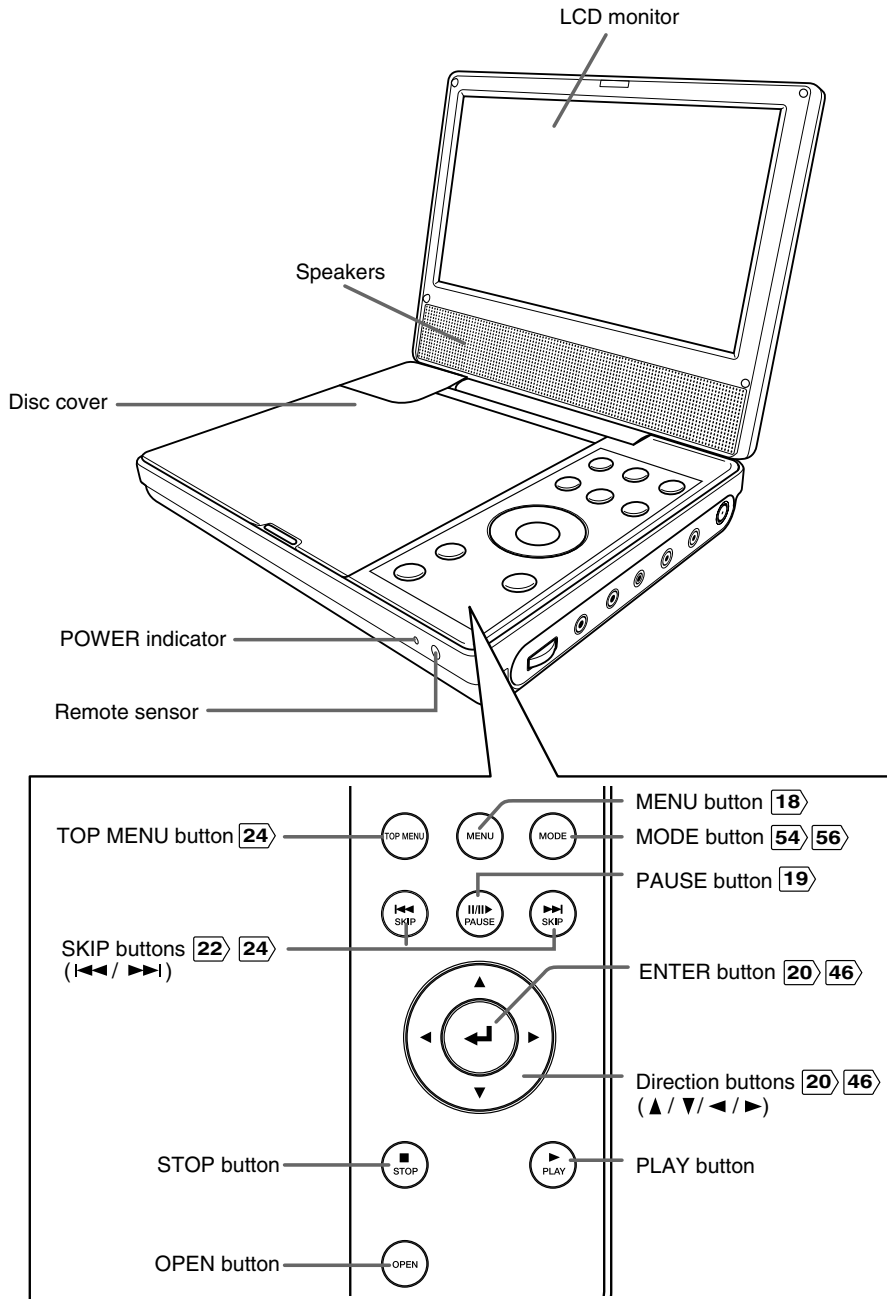


## Side view

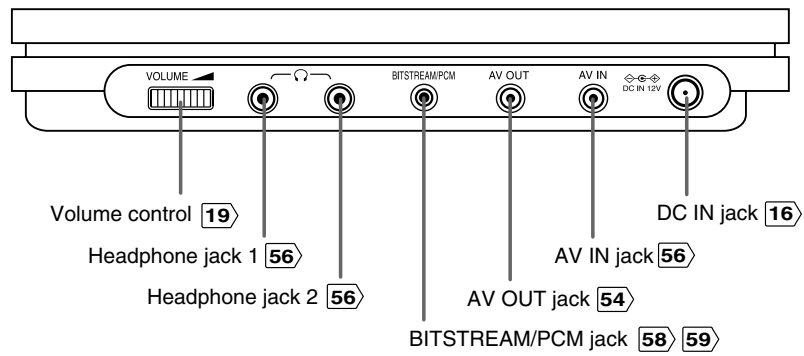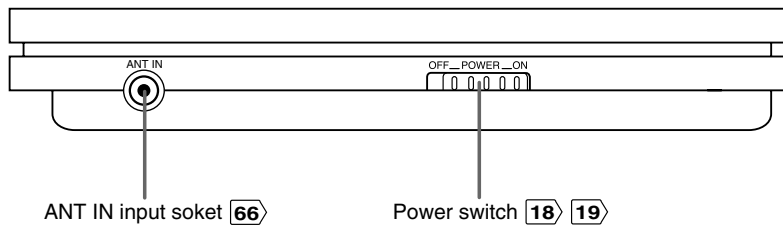

## Identification of Controls (continued)

The instructions in this manual describe the functions of the remote control. See the page in   for details.

### Remote control

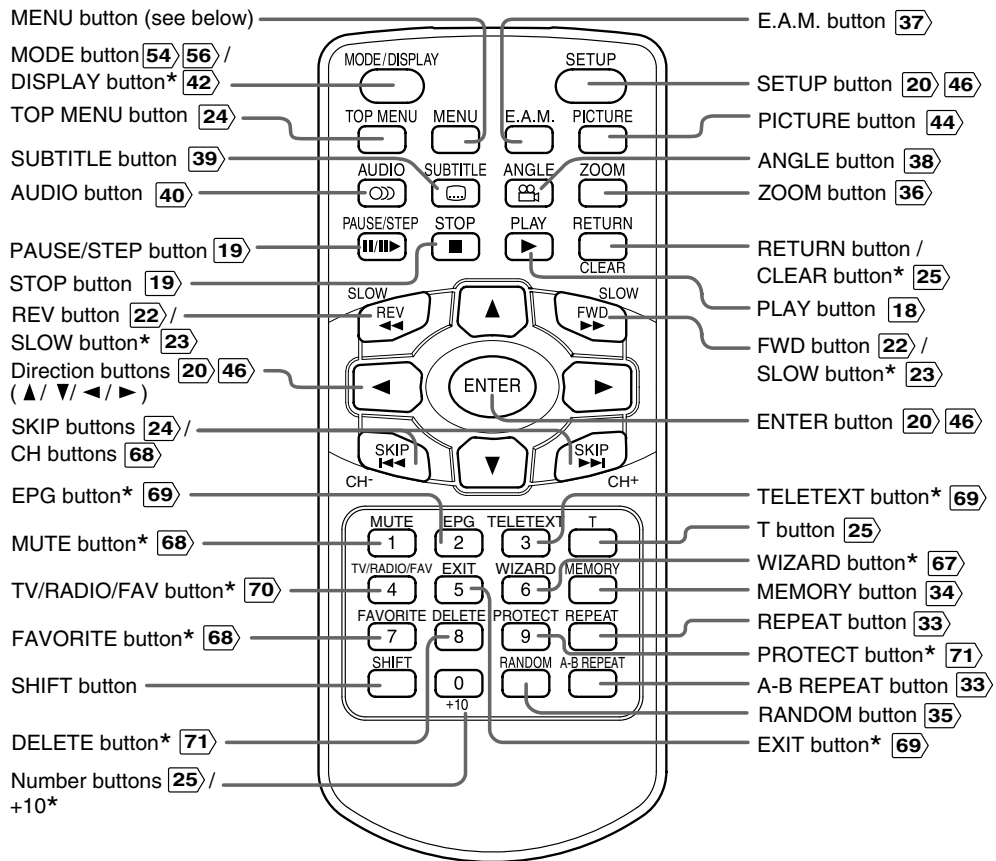


“ \* ” buttons  
Operate these buttons while simultaneously pressing the SHIFT button.

**MENU button**  
Use the MENU button to display the menu included on many DVD video discs. To operate a menu, follow the instructions in “Locating a title using the top menu.” [24]




### Loading the remote control battery

**1 Gently insert a fingernail in groove ① and pull out the holder in direction ②.**

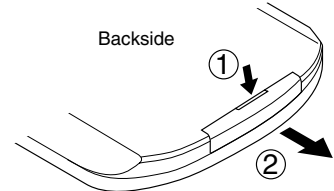


Take care not to break your fingernail.

**2 Place a coin-shaped battery (CR2025) with the ⊕ side up on the holder.**

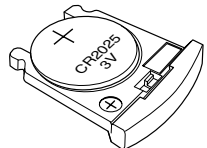

Keep the holder horizontal so that the battery does not fall through.


**3 Push the holder back into its receptacle.**

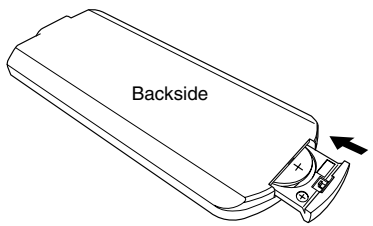

- Notes on coin-shaped batteries**
- If the remote control does not function correctly or if the operating range becomes reduced, replace the battery with new one.
  - See **6** for safety use of coin-shaped batteries.
  - Inserting a battery other than the specified one or an object may damage the remote control.

### Operating with the remote control

**Point the remote control at the remote sensor on the player and press the buttons.**

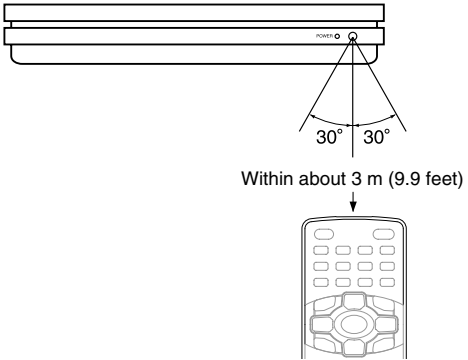

Distance: About 3 m (9.9 feet) from the front of the remote sensor  
 Angle: About 30° in each direction of the front of the remote sensor

\* Do not expose the remote sensor of the player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the player via the remote control.


- Notes on the remote control**
- Aim the remote control at the remote sensor of the player.
  - Do not drop or give the remote control a shock.
  - Do not leave the remote control near an extremely hot or humid place.
  - Do not spill water or put anything wet on the remote control.
  - Do not disassemble the remote control.

## Power Connection

Connect the supplied AC adapter to power the player.  
For mobile use, the battery pack (supplied) is also available.  
When using the battery pack, follow the instructions on page 60.

### CAUTION

- Do not connect the power plug to a power outlet other than that indicated on the label, as this can result in a risk of fire or electric shock.
- Do not connect or disconnect the power plug with wet hands. Doing so may cause electric shock.
- Do not use an AC adapter other than one specified, as it can cause a fire or damage to the player.
- When the AC adapter is in use, its temperature may increase. However, it is not a malfunction. Make sure that the power cord is disconnected and the temperature decreases before carrying it.

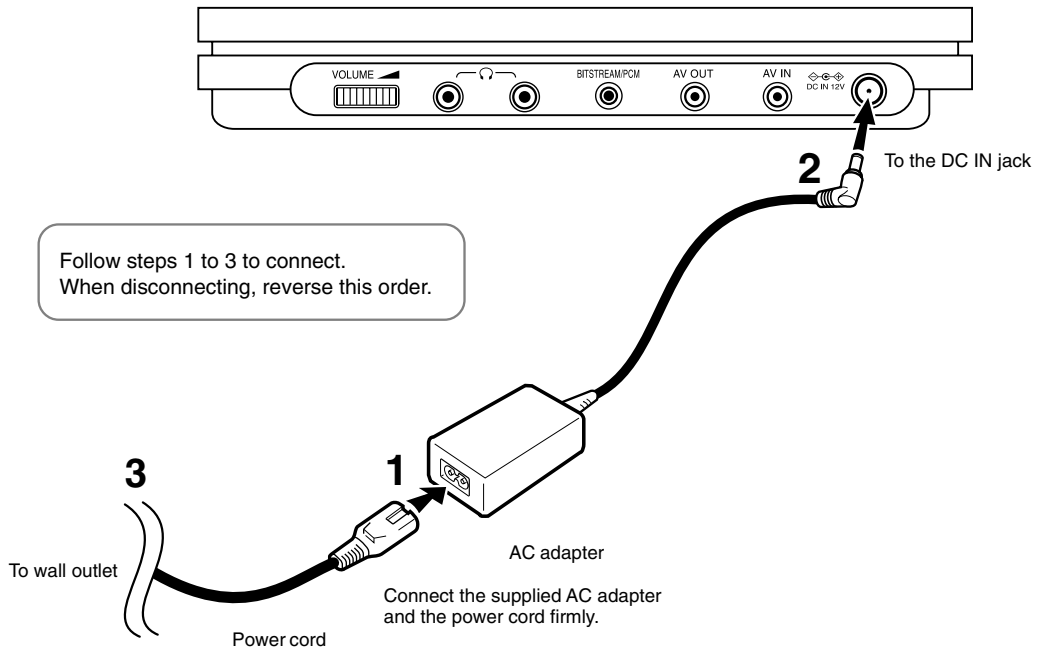



# Basic playback

Begin your operation.

- **Playing a Disc**
- **Variable Speed Playback**
- **Locating a Specific Title, Chapter, or Track**
- **Playing MP3/WMA Audio or DivX® Video Files**
- **Viewing JPEG Files**

#### **About this manual**

- The numbers indicated by lines on the illustrations correspond to the associated steps of the operation.
- Explanations of operations may only include illustrations of the corresponding buttons on the remote control. The buttons sharing the same name on the main unit can also be used in an identical manner.

## Playing a Disc

This section shows you the basics on how to play a disc.

□ indicates a reference page of this manual.  
See the page in □ for details.


### CAUTION

- Keep your fingers clear of the disc as it is spinning. Neglecting to may cause serious personal injury.
- Be careful not to catch your fingers in the disc holder.
- Do not use a cracked, deformed, or repaired disc.
- Do not tilt, shake or move the main unit while playing. It may damage the disc.

## DVD-V VCD CD Basic playback

### Preparations

- Connect the AC adapter [16] or the battery pack [60] to the player.
- When you want to view a disc on a connected TV or monitor [54], turn on the equipment and select the video input connected to the player.
- When you want to enjoy the sound of discs from an audio system [55], turn the audio system on and select the input connected to the player.
- If you use the supplied remote control, make sure that batteries are loaded in it. [15]
- If you use the headphones, see "Connecting to Headphones". [56]

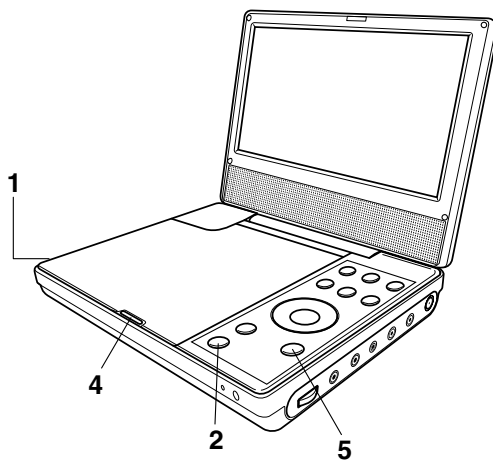

### 1 Turn on the power.



Slide the power switch to "ON".

The player turns on and the POWER indicator on the player illuminates in green.

The default setting for the language used to display the OSD of the player is English. You can change the language (English, French, Spanish, German, Dutch, Swedish). [20]


### 2 Open the disc cover.



Press OPEN on the main unit.  
The disc cover opens.

The disc cover will not open over a certain range. Do not force the cover open further, as it may cause damage to the player.

### 3 Set a disc.

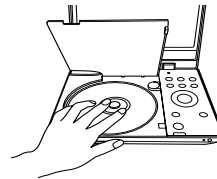

Place a disc with the playback side down, and push gently on the center of the disc to affix it to the spindle.

The disc will not be recognized or played correctly, or will be damaged if it is not affixed to the spindle properly.

### 4 Close the disc cover.

Press CLOSE on the right corner.

### 5 Start playback.




Press PLAY.



If you select a DVD video disc that contains a top menu, or select a PBC (Playback Control)-featured VIDEO CD ([9]), a menu may appear. See "Locating a title using the top menu". [24]

- You may need to press the TOP MENU or MENU button to display the disc menu (depending on the actual DVD video disc.)

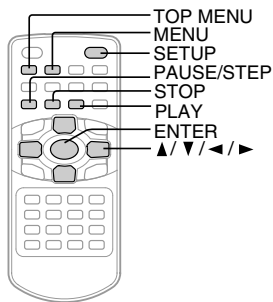

■ **To obtain a higher quality picture (When connected to a TV)**

Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. While the amount of noise depends on the TV you use with this player, you should generally reduce the sharpness adjustment on the connected TV when viewing DVD video discs.

■ **About DVD-V | VCD | CD**

The DVD-V | VCD | CD icons on the heading bar show the playable discs relevant to the function described under each heading.

DVD-V : DVD video discs.

VCD : VIDEO CDs.

CD : Audio CDs.

■ **To start playback in the stop mode**

Press **PLAY**.



■ **To stop playback**

Press **STOP**.



The player memorizes the location where playback is stopped. To clear the memory, press the STOP button once again. **[23]**

**Notes**

- Do not put an unplayable disc or any objects other than discs in the disc holder.
- In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of an on-screen menu may damage your television set, permanently etching that image onto its screen. To avoid this, be sure to press the STOP button once the movie is completed.

■ **To turn off the power**

Slide the power switch to "OFF".



■ **To remove the disc**

Press OPEN on the main unit to open the disc cover.



Wait until the disc stops completely, then remove it from under the rim while gently pressing down on its center. Close the disc cover after removing the disc.

**NOTICE**

Never operate the player in a moving vehicle. Vibration may prevent proper playback of the player or cause damage to the disc.

■ **To adjust the volume of the speakers or the connected headphones**

Turn volume control.



Right : Increase volume.  
Left : Decrease volume.

**CAUTION**

Do not touch the spindle immediately after prolonged play, as it may have become hot. Be careful in loading/removing a disc.

■ **To pause playback (still mode)**

Press **PAUSE** during playback.



To resume normal playback, press **PLAY**.

- Sound is muted during still mode.

## Playing a Disc (continued)


### Basic playback (continued)

#### ■ To change an on-screen language

1 Press **SETUP**.



The following on-screen display appears.

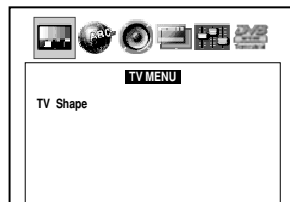

2 Press **◀/▶** to select "LANGUAGE MENU", then press **ENTER**.

3 Press **▲/▼** to select "On-screen", then press **ENTER**.

4 Select a language using **▲/▼**, then press **ENTER**.

5 Press **SETUP**.



The on-screen display disappears.

**■ About the screen saver**

If 20 minutes elapse while the power is on and there is no disc in the player or while the disc is stopped, the screen saver is automatically displayed (when "Screen Saver" is set to "On" [51]). To turn off the screen saver, press any button on the main unit or remote control.

**■ Automatic LCD Off function**

If the player is stopped or the screen saver is engaged for approximately 20 minutes, the LCD power automatically turned off. To turn on the LCD monitor, slide the power switch to off once and then turn the power on again.


**■ About the LCD**

- The color LCD is manufactured using extremely high precision technology, but even so may include certain pixels that do not operate properly (that do not light, that remain lit constantly, etc.). We do our best to keep the number of these defective pixels to a minimum, but please understand that they cannot be completely eliminated even with the most advanced manufacturing technologies available today.
- The fluorescent tube which illuminates the panel from the inside will deteriorate with use. (The standard life length is about 10,000 hours of continuous use at normal temperature. This is referential information only and is not warranted.) When the LCD becomes dim, flickers, or does not illuminate, contact your dealer for replacement.
- The brightness of the LCD monitor differs slightly depending on the viewing angles. Adjust the LCD monitor angle to obtain the best viewing. (The recommended viewing angle is 90 degrees to the monitor.)

## Basic playback


### Variable Speed Playback


You can play discs at various speeds, and resume playback from the location where you stopped playback.

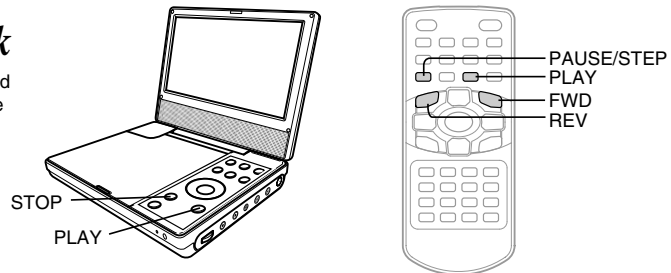



### DVD-V VCD CD Playing in fast reverse or fast forward directions

Press **REV** or **FWD** on the remote control during playback.

 **REV**: Fast reverse playback  
**FWD**: Fast forward playback

 Each time you press the **REV** or **FWD** button, the playback speed changes.

Press and hold **SKIP** (**⏮** / **⏭**) on the main unit during playback.

 **SKIP** — Fast forward playback  
 **SKIP** — Fast reverse playback

During the fast forward or fast reverse playback, you can vary the speed by holding down the button.

#### ■ To resume normal playback

Press **PLAY**.




#### Notes

- The player mutes sound and omits subtitles during reverse and forward scan of DVD video discs.
- The playback speed may differ depending on the disc.

### DVD-V VCD CD Playing frame by frame

Press **PAUSE/STEP** repeatedly during still playback.

 Each time you press the **PAUSE/STEP** button, the picture advances one frame.


#### ■ To resume normal playback

Press **PLAY**.




#### Note

The sound is muted during frame by frame playback.

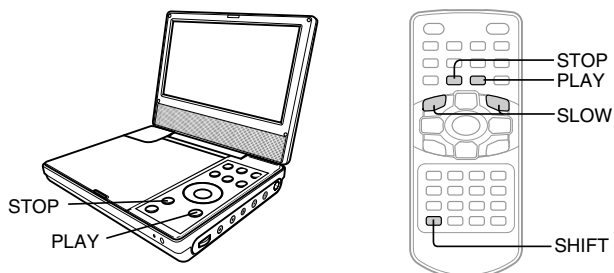

**DVD-V**  
**VCD** **CD** **Playing in slow-motion**

**Press SLOW while pressing SHIFT during playback.**

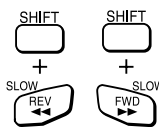

Each time you press the SLOW ►► button, the slow-motion speed changes.

If you press the SLOW ◀◀ button during playback, you can view the picture in reverse slow-motion. (Only when using a DVD video disc.)

Each time you press the SLOW ◀◀ button, the slow-motion speed changes.

**■ To resume normal playback**

Press **PLAY**.



**Notes**

- The sound is muted during slow-motion playback.
- The playback speed may differ depending on the disc.

**DVD-V**  
**VCD** **CD** **Resuming playback from the stopped location**

**1 Press STOP at the location where you want to interrupt playback.**



The player memorizes the location where playback is stopped.

**2 Press PLAY.**



The player resumes playback from the location where you stopped playback.

**2 Press PLAY.**



**DVD-V** Playback starts from the beginning of the titles.

**VCD** Playback starts from the beginning of the disc.

**CD** Playback starts from the beginning of the disc.

- If you want to return to the beginning of a DVD video disc, turn the power off and on by sliding the power switch to the ON position, and then start playback.

**Note**

- The player's memory is also cleared when you use a PBC-featured VIDEO CD while "PBC" is set to "On". [51]
- There may be a difference in the location where playback resumes depending on the disc.


**■ To start playback from the beginning regardless of the location where you stopped playback**

1 Press **STOP** twice.




The player's memory is cleared.


## Locating a Specific Title, Chapter, or Track

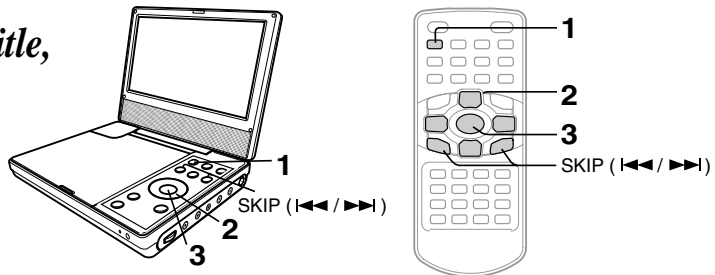

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. Contents of VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, or track.

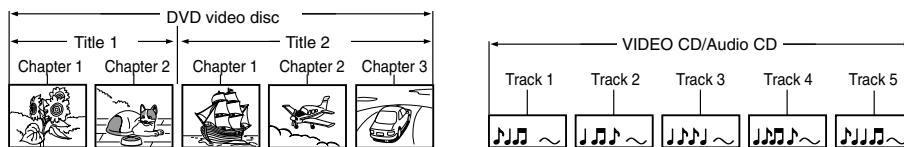

### DVD-V VCD CD Locating a title DVD using the top menu

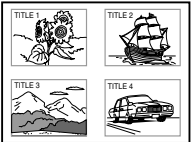**1 Press TOP MENU.**  
 TOP MENU The top menu appears.  
 e.g. 

**2 Press ▲/▼/◀/▶ to select the title you want.**  
 If the titles in the top menu are assigned a number, you can directly locate a specific title by pressing its designated number with the number buttons.

**3 Press ENTER.**  
 Playback starts from chapter 1 of the selected title.


**Notes**


- The instructions above describe basic procedures which may vary depending on the contents of the DVD video disc. If different instructions appear on the screen, follow those instructions.
- This method of locating a title is available only on a disc that contains a top menu.
- Instruction notes of discs may refer to the button that displays the top menu as TITLE button.

### DVD-V VCD CD Locating a specific chapter or track


**Press SKIP (◀◀/▶▶) repeatedly to locate the chapter or track you want.**  
 Playback starts from the selected chapter or track.

To locate succeeding chapters or tracks.

 Playback starts from the beginning of the current chapter or track.


 When you press twice, playback starts from the beginning of the preceding chapter or track.



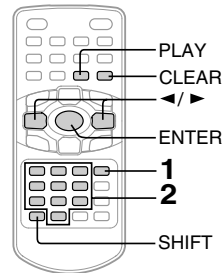

**DVD-V**  
**VCD** **CD** **Locating a desired section by entering its corresponding number**


 
**1 Press T several times.**  
The display changes each time this button is pressed. If you want to locate a title, chapter or track, display "Title," "Chapter," or "Track" respectively. You can also enter the time counter of the desired location. **[32]**






 e.g. **DVD-V**  
Title 01/03 Chapter -- /40

e.g. **VCD** **CD**  
Track -- /08

  - Notes**
- Pressing the CLEAR button while pressing the SHIFT button resets the numbers.
  - This location display will disappear in a few seconds if no further operation is made.
  - This method of locating a title is available only on a disc that contains title numbers.
  - You can also use an on-screen display to change a title, chapter or track. **[42]**

  
**2 Press the number buttons to enter a number of the section.**  
e.g. To enter 25


 → 

or  +  +  +  + 

Playback starts from the selected section.  
With a DVD video disc, you can use ◀ / ▶ to select either title or chapter for entry.


**3 Press PLAY or ENTER.**  
Playback starts from the selected section.





## Playing MP3/WMA Audio or DivX® Video Files

You can play MP3/WMA or DivX® files on this player.

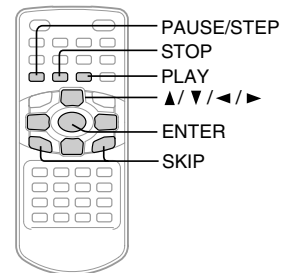

### Playing MP3/WMA audio or DivX® video files

#### ■ Playable files

MP3/WMA/DivX disc compatibility with this player is limited as follows:

- Playable discs: CD-ROM, CD-R, CD-RW, DVD-R
- Sampling Frequency: 32 kHz, 44.1 kHz, 48 kHz
- Bit rate: WMA: 48 kbps - 192 kbps (CBR)  
MP3: 32 kbps - 320 kbps (CBR)  
DivX: Less than 8Mbps
- CD physical format: Mode 1
- File system: ISO9660, UDF without interleave
- DivX File system: ISO14496
- File name: File names are limited to eight characters or less and must incorporate "MP3", "WMA" or "DivX" extension.  
e.g. "\*\*\*\*\*.MP3", "\*\*\*\*\*.WMA", "\*\*\*\*\*.avi"  
File names cannot contain special characters such as "?!><+\*}{[ @];\ /, ." etc.  
Less than 50 bytes
- Total number of files: Less than 650
- WMA codec version: V2, V7, V8, V9 (Stereo sound only)
- DivX codec version: 3.11, 4.x, 5.x, DivX
- DivX resolution: 720 x 576 (Less or equal)

#### 1 Set a CD that contains MP3/WMA or DivX® files and close the disc cover.

A menu appears.

#### 2 Press ▲/▼/◀/▶ to select a file name you want to play.



#### 3 Press PLAY or ENTER.



Playback starts.

#### ■ To stop the playback

Press **STOP**.



#### ■ To pause playback

Press **PAUSE/STEP** during playback.



To resume normal playback, press the **PLAY** button.

#### Notes

- Some discs may not permit this operation.
- WMA tracks copy-protected cannot be played.
- The BITSTREAM/PCM jack outputs MP3/WMA or DivX® sounds in the linear PCM format regardless of the current "Audio Out Select" selection. [49]
- If you stop playback by pressing the STOP button, and then press the PLAY button, playback will start from the beginning of the track.
- The SKIP, REPEAT and RANDOM functions are also available.

This player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. There are many different types of recordable disc formats (including CD-R containing MP3/WMA files). Not all recordable discs will operate or produce optimal playback quality. The technical criteria set forth in this owner's manual are meant only as a guide. Use of CD-RW for MP3 files is not recommended.

You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission.


Microsoft, Windows Media, and the Windows Logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

## Viewing JPEG Files

You can play JPEG files that have been recorded on a CD-R on this player.

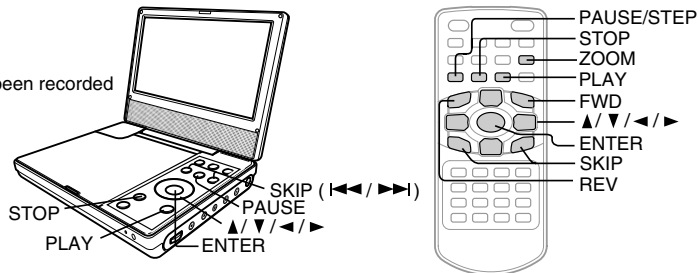

### Viewing JPEG Files


#### ■ Preparation

Prepare a disc that contains JPEG files you want to view [29](#).


#### 1 Set a disc contains JPEG files and close the disc cover.

A menu appears.

#### 2 Press $\blacktriangle/\blacktriangledown$ to select a folder, then press ENTER.

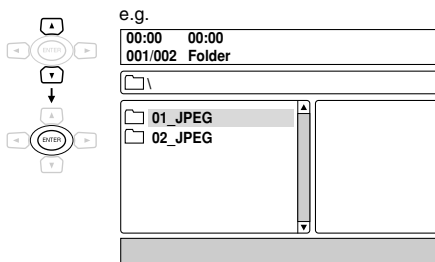

#### 3 Press $\blacktriangle/\blacktriangledown$ to select a file.

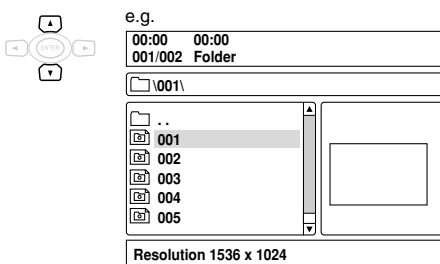

#### 4 Press PLAY or ENTER.



A slide show begins from the selected picture. Upon reaching the end, it will be back to the top menu.



#### ■ To stop the slide show

Press **STOP**.



Thumbnail mode (9-picture display) will be entered.

#### ■ To pause the slide show

Press **PAUSE/STEP** during playback.



To resume the slide show, press the **PLAY** button.

#### ■ To switch pictures

Press **SKIP** ( $\blacktriangleleft\blacktriangleright$ ) during playback.



$\blacktriangleleft$ : Switch to the previous picture  
 $\blacktriangleright$ : Switch to the next picture



#### Notes

- You may not be able to load a JPEG file exceeding 2MB.
- If you press the MENU button when no menu is displayed, a menu is displayed.

## Viewing JPEG Files (continued)

### Viewing JPEG Files (continued)

#### ■ To rotate a picture

Press ▲/▼/◀/▶ during playback.



- ▲ : A picture is vertically reversed.
- ▼ : A picture is horizontally reversed.
- ◀ : Rotate counterclockwise (by 90°).
- ▶ : Rotate clockwise (by 90°).

#### ■ To zoom in a picture

1 Press **ZOOM** during playback.



You will enter the zoom mode.

2 Press **FWD**.



**FWD: Magnification**  
Each time you press the FWD button, the magnification level changes.

If you press ▲/▼/◀/▶ in the zoom in mode, the zoom point will be shifted.  
Pressing the ZOOM button again exits the zoom mode.

#### ■ To play in random order

Press **RANDOM**.





- Shuffle** : Plays the files in the selected folder in shuffle order.
- Random** : Plays the files in the selected folder in random order.

#### ■ To play in repeatedly

Press **REPEAT**.




Each time you press the REPEAT button, the repeat mode changes as follows.

-  **One** : Plays a selected file repeatedly.
-  **All** : Plays the files in the selected folder repeatedly.

#### ■ Thumbnail mode

e.g.

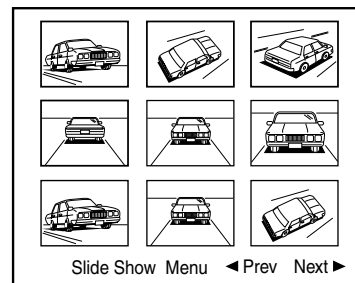

Press **PLAY**.

A slide show begins from the selected picture.  
A picture is selected by pressing ▲/▼/◀/▶.

Select [Slide Show] and press **ENTER** or **PLAY**.  
A slide show will begin again.

Select [Menu] and press **ENTER** or **PLAY**.  
A list of functions keys (buttons) at the time of JPEG files playback will be displayed.

Select [◀ Prev] and press **ENTER** or **PLAY**.  
The previous nine pictures will be displayed.

Select [Next ▶] and press **ENTER** or **PLAY**.  
The next nine pictures will be displayed.

Press **STOP**.  
The menu mode will be entered.

## JPEG files compatibility

Discs and pixels whose compatibility with this player has been confirmed by TOSHIBA are as follows.

JPEG disc compatibility with this player is limited as follows:

- Playable discs: CD-ROM, CD-R, CD-RW
- File system: ISO9660, UDF without interleave
- File name: File names are limited to eight characters or less and must incorporate "JPG" extension.  
e.g. "\*\*\*\*\*.JPG"  
File names cannot contain special characters such as "?!><+\*}{ [ @] ; \ / . , " etc.
- File size: Less than 10M bytes
- File format: BASELINE, PROGRESSIVE
- Resolution: Baseline JPG: 5760 × 4320  
Progressive JPG: 5760 × 4320




# Advanced playback

Customizing the performance of your player.

- **Directly Accessing a Specific Location**
- **Repeat Play**
- **Playing in a Favorite Order**
- **Playing in Random Order**
- **Zooming a Picture**
- **Selecting the Sound Enhancement (E.A.M.)**
- **Selecting a Camera Angle**
- **Selecting Subtitles**
- **Selecting a Language**
- **Operating in the On-screen Display Mode**
- **Adjusting the Picture**

## Directly Accessing a Specific Location


You can access a specific location by entering its corresponding time (hours, minutes, seconds).

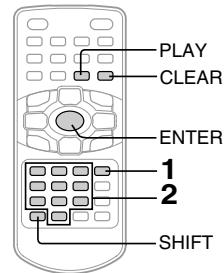

### DVD-VCD CD Entering the time counter of the desired location

#### 1 Press T several times.


The display changes each time this button is pressed. With DVD video disc, press this button until "Time" is displayed. With Video CD/audio CD, press this button until "Disc goto" or "Track goto" is displayed.

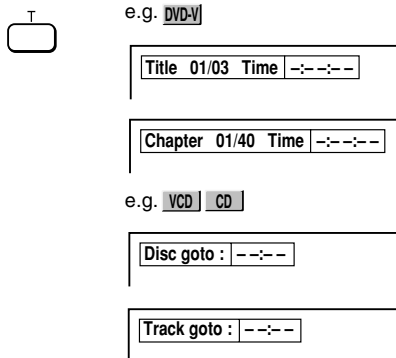


#### Notes

- Pressing the CLEAR button while pressing the SHIFT button resets the numbers.
- This location display will disappear in a few seconds if no further operation is made.
- Some discs may not respond to this process.
- Some scenes may not be located precisely as you specified.

#### 2 Press the number buttons to enter the time.

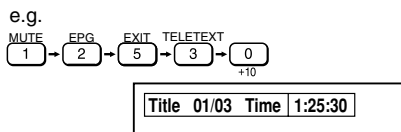



#### 3 Press PLAY or ENTER.

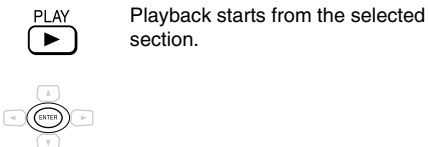




## Repeat Play

 
You can play a specific title, chapter, track, or segment repeatedly. (Title repeat, chapter/track repeat, A-B repeat)

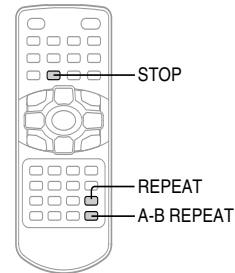

### DVD-V VCD CD Repeating a title, chapter, or track

#### Press REPEAT.

REPEAT  Each time you press the REPEAT button, the repeat mode changes as follows.

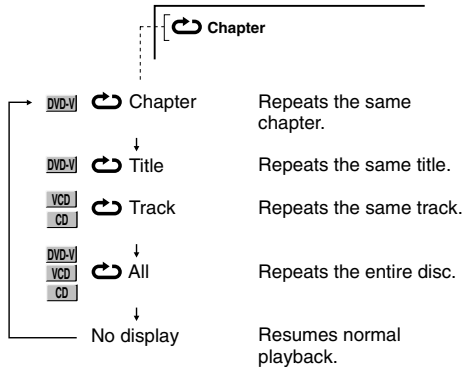

#### To resume normal playback

Press **REPEAT** repeatedly until the repeat icon disappears.



You can also use **STOP** to exit repeat playback.

 
#### Notes

- Some discs may not permit repeat operation.
- You can also use an on-screen display to perform a repeat playback. [42](#)


Advanced playback

### DVD-V VCD CD Repeating a specific segment

#### 1 Press A-B REPEAT at the beginning of the segment (point A) you want to play repeatedly.



#### 2 Press A-B REPEAT again at the end of the segment (point B).

A-B REPEAT  The player automatically returns to point A and starts repeat playback of the selected segment (A-B).



#### To resume normal playback

Press **A-B REPEAT** again.




You can also use **STOP** to exit A-B repeat function.

#### Notes

- Some discs may not permit A-B repeat operation.
- You can specify a segment only within the current title or track.
- There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

## Playing in a Favorite Order

You can combine your favorite titles, chapters, or tracks and play them in the order you determine. You can program up to 20 selections into the memory. (Memory playback)

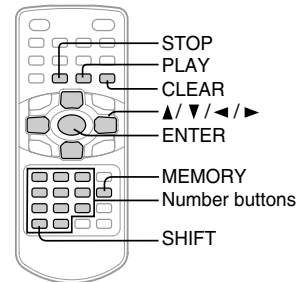

### DVD-V VCD CD Setting titles, chapters, or tracks in a favorite order

**1 Press MEMORY.**

The programming display appears.

MEMORY

e.g. DVD-V

01	TT:--	CH:--	06	TT:--	CH:--
02	TT:--	CH:--	07	TT:--	CH:--
03	TT:--	CH:--	08	TT:--	CH:--
04	TT:--	CH:--	09	TT:--	CH:--
05	TT:--	CH:--	10	TT:--	CH:--

TT: Title number  
CH: Chapter number

Exit Next (▶▶)

e.g. VCD CD

01	--	06	--
02	--	07	--
03	--	08	--
04	--	09	--
05	--	10	--

Exit Next (▶▶)

**2 Enter the number in the order wish to playback, then press ENTER.**

Pressing the ENTER button causes the highlight to move to the next item.

Pressing ▶▶ will allow you to access the next programming display.

**3 Select "Start" using ▼ and press ENTER or PLAY.**

The player starts memory playback.

- To change the programmed selections**

  - 1 While the display appears on the screen, press ▲/▼/◀/▶ to move the highlighted bar to the item you want to change.
  - 2 Change the selection following the instructions in step 2.
- To cancel the programmed selections**

  - 1 While the display appears on the screen, press ▲/▼/◀/▶ to move the highlighted bar to the item you want to cancel.
  - 2 Press **CLEAR** while pressing **SHIFT**.
- To resume normal playback from memory playback**


  - 1 Press **MEMORY** to display the programming display.
  - 2 Since "Stop" is selected, press **ENTER**.

You can also exit memory playback by pressing **STOP**.

- Notes**
- Once memory playback is executed, it is not possible to change or cancel the items of programmed selections. In this case, stop memory playback and reprogramme selections.
  - Some discs may not permit memory playback operation.
  - To turn off the display, press the MEMORY button. Alternatively select "Exit" on the display and press the ENTER button.
  - The programmed selections will be cleared when you turn off the player.


## Playing in Random Order

You can play chapters or tracks in random order.  
(Random playback)

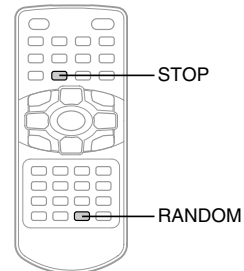

### DVD-V VCD CD Playing chapters or tracks in random order

#### Press RANDOM.

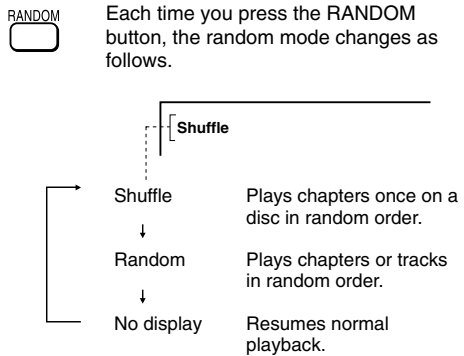

#### ■ To resume normal playback

Press **RANDOM** repeatedly until the random display disappears.



You can also exit random playback by pressing **STOP**.


 
#### Note

Some discs may not permit random playback operation.

Advanced playback

## Zooming a Picture

You can magnify areas within a picture.

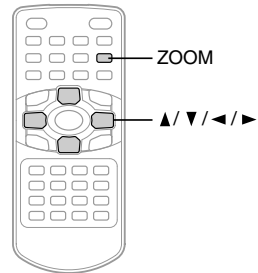

### DVD-VCD CD Zooming a picture

#### 1 During normal, slow, still, fast reverse or fast forward playback, press ZOOM.



The player enters the zoom playback mode, and the zoom icon appears.

e.g.



#### 2 Select the zoom point and magnification level.

##### Magnification level

You can select from the following.

- Magnification
- Normal playback



Press the **ZOOM** button repeatedly.

##### Zoom point

To shift:



Press **▲/▼/◀/▶** in the zoom in mode.

#### ■ To exit zoom playback

Press **ZOOM** repeatedly until the zoom icon disappears.



You can also use **STOP** to exit zoom playback.


#### Notes

- Some discs may not respond to zoom feature.
- During some scenes, the buttons may not work as described.
- Zooming does not work on characters selected on menus.

## Selecting the Sound Enhancement (E.A.M.\*)

You can easily select a preferred audio enhancement.

\*E.A.M.: Enhanced Audio Mode

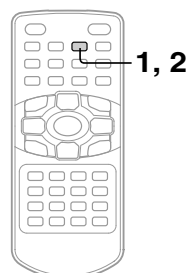

### DVD-V VCD CD Selecting the sound enhancement

#### 1 Press E.A.M.

E.A.M. The sound enhancement menu appears.

E. A. M. : Normal

#### 2 Select the sound enhancement by pressing E.A.M.

E.A.M. Each time you press the button, the sound enhancement changes.

Normal: Normal sound.

3D: To obtain expansive virtual surround sound effects from just two speakers.

3D (Headphone):  
To obtain expansive virtual surround sound effects when using headphone.

Dialog: To control critical center channel information to make dialogue more intelligible (only when playing a DVD video disc recorded on the Dolby Digital recording system).

- To use this enhancement on sounds output from the BITSTREAM/PCM jack, be sure to set "Audio Out Select" to "PCM." **49**


 
#### Notes

- Actual effects to sounds may vary depending on the speaker system. Make the selection to your preference.
- Actual effects to sounds may vary depending on the disc.

Advanced playback

## Selecting a Camera Angle

If a scene was recorded with multiple angles, you can easily change the camera angle of the scene you are viewing.

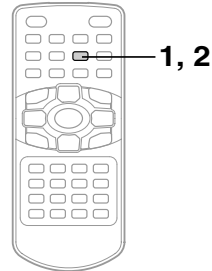


### DVD-V VCD CD Changing the camera angle

#### 1 Press ANGLE while playing a scene recorded with multiple angles.



While playing a scene recorded with multiple angles, the angle icon (📷) appears on the screen. Press the ANGLE button while the angle icon is displayed.

 e.g.



#### 2 Selecting the camera angle by pressing ANGLE.




Each time you press the ANGLE button, the camera angle changes.

#### Notes

- After selecting angle, it will take a few moments to change the camera angle of the scene you are viewing.
- If you pause a picture immediately after changing a camera angle, the resumed playback picture may not display the new camera angle.
- You can also use an on-screen display to change a camera angle. [42]


## Selecting Subtitles

You can display subtitles on the screen and select a subtitle language from those included on the DVD video disc.

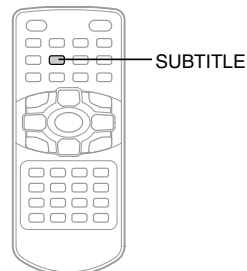

### DVD-V VCD CD Selecting a subtitle language


#### 1 Press SUBTITLE during playback.

**SUBTITLE**  
 The current subtitle setting is displayed.

e.g.

Subtitle 01/02 : English

#### 2 Press SUBTITLE while the subtitle setting is displayed on the screen.

**SUBTITLE**  
 Each time you press the SUBTITLE button, the subtitle languages included on the DVD video disc change.

#### ■ To turn subtitles on or off

Press **SUBTITLE** several times during playback until "Turn off subtitles" is displayed.

**SUBTITLE**  


#### Notes


- Some DVD video discs display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- Some DVD video discs will allow you to make subtitle selections and turn subtitles on or off only via the disc menu.
- You can also use an on-screen display to change a subtitle. [42](#)

#### Notes

- When you select a subtitle language which is not included on the disc, the player plays a prior language programmed on the disc.
- During some scenes, the subtitles may not appear immediately after you change the subtitle language.

## Selecting a Language

You can select a preferred language and sound recording system from those included on the disc.

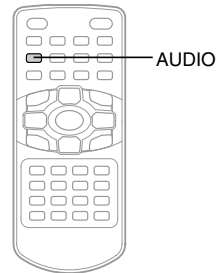

### DVD-V VCD CD Selecting a playback audio setting

#### 1 Press AUDIO during playback.



The current audio setting is displayed.

e.g.

Audio 1/3 : Dolby D 3/2.1 CH English

#### 2 Press AUDIO while the audio setting is displayed on the screen.



Each time you press the AUDIO button, the audio settings included on the DVD video disc change.

#### ■ Selecting sound channels of VIDEO CDs

During playback, press **AUDIO** repeatedly to select the sound channel.




#### Notes

- Some discs allow you to change audio selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate language from the selections on the disc menu.
- If you select a sound track which is not included on the disc, the player plays a prior sound track programmed on the disc.
- You can also use an on-screen display to change audio settings. [42](#)



■ Output sound conversion table (sampling frequency/quantization bit)


Discs	Sound recording system	Audio selection from the menu <b>(46)</b> / <b>(49)</b> and outputs					
		"Bitstream"		"Analog 2ch"		"PCM"	
		BITSTREAM/PCM jack	Speakers/AV OUT jack/Headphone jacks	BITSTREAM/PCM jack	Speakers/AV OUT jack/Headphone jacks	BITSTREAM/PCM jack	Speakers/AV OUT jack/Headphone jacks
DVD video discs	Dolby Digital	Bitstream	48 kHz/20 bit	Bitstream	48 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit
	Linear PCM	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	–	48 kHz/16 bit	48 kHz/16 bit
		48 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit	–	48 kHz/20 bit	48 kHz/16 bit
		48 kHz/24 bit	48 kHz/16 bit	48 kHz/24 bit	–	48 kHz/24 bit	48 kHz/16 bit
		96 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	–	96 kHz/16 bit	48 kHz/16 bit
		96 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit	–	96 kHz/20 bit	48 kHz/16 bit
	96 kHz/24 bit	48 kHz/16 bit	48 kHz/24 bit	–	96 kHz/24 bit	48 kHz/16 bit	
DTS	Bitstream	–	Bitstream	–	Bitstream	–	
MPEG1, MPEG2	Bitstream	48 kHz/16 bit	Bitstream	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	
VIDEO CDs	MPEG1	Bitstream	44.1 kHz/16 bit	Bitstream	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
Audio CDs	Linear PCM 44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
	DTS	Bitstream	(Noise)	Bitstream	(Noise)	Bitstream	(Noise)

 : 3D sound enhancement can function. (Signals are depressed by down sampling process.)

- Signals of 88.2kHz or higher from the BITSTREAM/PCM jack are down converted to 44.1 kHz or 48 kHz when:
  - "3D" is selected. **(37)**
  - a copyright protected disc is played.
- Quantization will be limited to 16 bits in a copyright protected disc.

## Operating in the On-screen Display Mode

When you turn on the on-screen display, you can view information on operational status and access features and settings.

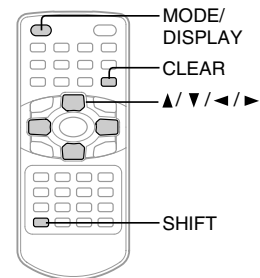

### DVD-V VCD CD On-Screen Display Operation

**1 Press DISPLAY while pressing SHIFT during playback.**

The following display appears.

e.g.

**2 Press ◀/▶ to select item.**

**3 Change the selection by ▲/▼.**

#### ■ When playing a DVD video disc

e.g.

Current title number      Current chapter number      Elapsed time of the current title

#### Note

Some discs may not be compatible with a set of these operations.


#### ■ To turn off the display

Press **DISPLAY** or **CLEAR** while pressing **SHIFT**.

#### Note

Doing nothing for approx. 10 seconds will eliminate the display.



■ When playing a VIDEO CD or audio CD

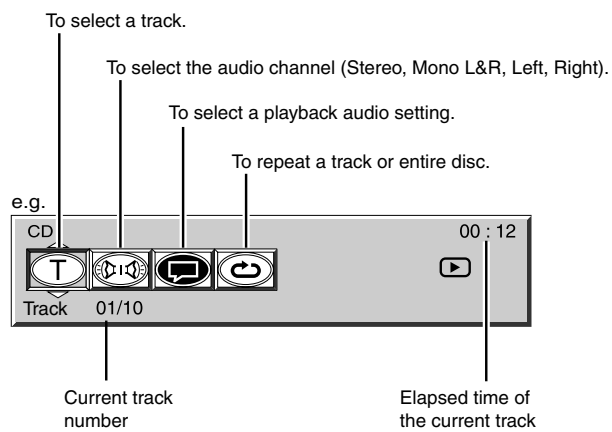

**Note**  
Some discs may not be compatible with a set of these operations.

## Adjusting the Picture

You can easily select a preferred picture.

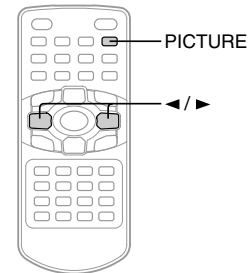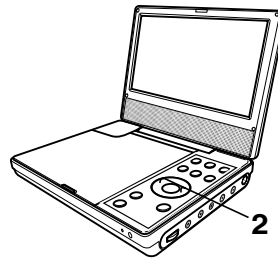

DVD-V  
VCD CD **Adjusting the picture**

### 1 Press PICTURE. Alternatively press PICTURE on the main unit.


(This function can only be set when you view pictures on the LCD of the player.)



The picture setting display appears.



Each time you press the button, the setup items changes as follows.

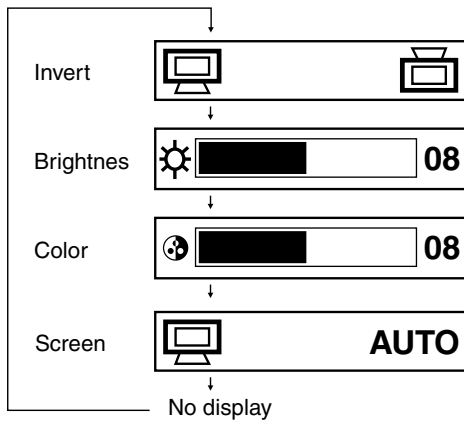

### 2 Press </> to adjust the value.



- Invert : Normal
  - ↓
  - Invert (Vertical in verse)
- Brightness : 0 (Darker) to 16 (Brighter)
- Color : 0 (Paler) to 16 (Deeper)
- Screen : Auto
  - ↓
  - 4:3
  - ↓
  - 16:9


# Function setup

You can change the default settings to customize performance to your preference.


- **Customizing the Function Settings**


## Customizing the Function Settings

You can change the default settings to customize performance to your preference.


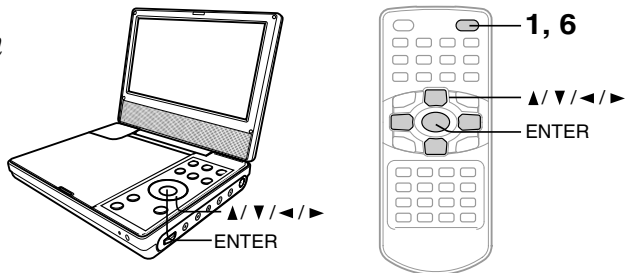


### DVD-V VCD CD Setting procedure



**1 Press SETUP during stop.**  
 The following on-screen display appears.

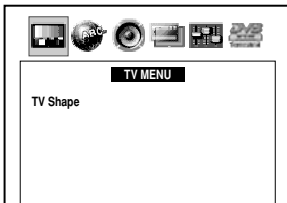

 **2 Press ◀/▶ to select the setting you want to change, then press ENTER.**  
 (See the next page.)  
 e.g.


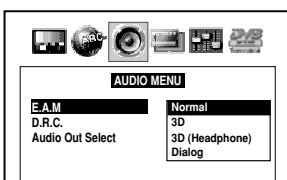


 
**3 Press ▲/▼ to select the setting you want to change, then press ▶.**  
 e.g.

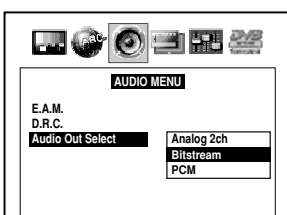



**4 Change the selection by ▲/▼, by referring to the corresponding pages (47), then press ENTER.**

 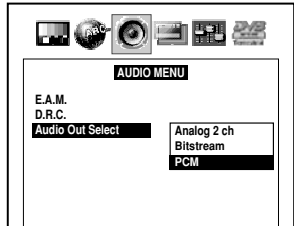














 







e.g.

**5 Press ◀, then repeat steps 2 to 4 to change other settings.**

 
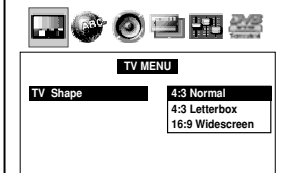

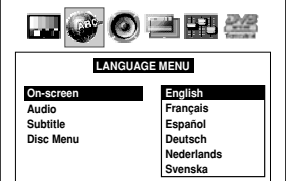



**6 Press SETUP.**  
 The on-screen display disappears.

**Note**  
 The SETUP button is functional even during the playback or during the stop time (STOP button pressed once) for resuming the playback. Some operations, however, are not accessible. In this case, press the STOP button twice to disable the playback to be resumed for further setup.


	Setting	Details	Page
<b>TV MENU</b> 	TV Shape	 To select a picture size according to the aspect ratio of your TV.	48
<b>LANGUAGE MENU</b> 	On-screen	   To select a preferred language for on-screen displays.	48
	Audio	 To select a preferred language for the sound track.	48
	Subtitle	 To select a preferred language for subtitles.	48
	Disc Menu	 To select a preferred language for disc menus.	48
<b>AUDIO MENU</b> 	E.A.M.	   You can easily switch to a preferred audio enhancement.	49
	D.R.C.	 To turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback.	49
	Audio Out Select	To select an output sound format corresponding to your system connection.	49
<b>OPERATION MENU</b> 	Parental	 To turn the parental lock function on or off.	50
	PBC	 To use the menu screen when playing a PBC-controllable VIDEO CD.	51
	Screen Saver	 To turn the screen saver on or off.	51
	DivX Registration	To display information about DivX.	51
	Default	To restore all settings to the factory set.	51
<b>CHANNEL EQUALIZER</b> 	EQ Type	   You can select a preferred equalizer mode.	51
<b>DVB-T MENU</b> 	Area	To select your country.	67
	Time Zone	To adjust for the local time zone.	67
	Parental Age	To set the age for parental protection.	70
	Channel Setup	You can customize channel settings to your preference.	70

## Customizing the Function Settings (continued)

### Setting details

									
<h4>TV Shape <small>DVD-V</small></h4> <p><b>4:3 Normal:</b> Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either or both sides of the picture are cut off when playing a source of 16:9 picture size.</p> 		<h4>On-screen <small>DVD-V VCD CD</small></h4> <p>OSD language</p> <table border="0"> <tr> <td>English: English</td> <td>Deutsch: German</td> </tr> <tr> <td>Français: French</td> <td>Nederlands: Dutch</td> </tr> <tr> <td>Español: Spanish</td> <td>Svenska: Swedish</td> </tr> </table>		English: English	Deutsch: German	Français: French	Nederlands: Dutch	Español: Spanish	Svenska: Swedish
English: English	Deutsch: German								
Français: French	Nederlands: Dutch								
Español: Spanish	Svenska: Swedish								
<p><b>4:3 Letterbox:</b> Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. When playing a source of 16:9 picture size.</p> 		<h4>Audio <small>DVD-V</small></h4> <p>Sound track language</p> <p><b>Note</b> Some DVD video discs may be played in a different language than you selected. A prior language may be programmed on the disc.</p>							
<p><b>16:9 Widescreen:</b> Select when a 16:9 wide TV is connected. Use this setting when using the player's LCD monitor.</p> 		<h4>Subtitle <small>DVD-V</small></h4> <p>Subtitles language</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>Some DVD video discs may be set to display subtitles in a different language than you selected. A prior subtitle language may be programmed on the disc.</li> <li>Some DVD video discs allow you to change subtitle selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate subtitle language from the selection on the disc menu.</li> </ul>							
<p><b>Notes</b></p> <ul style="list-style-type: none"> <li>The displayable picture size is preset on the DVD video disc. Therefore, the playback picture of some DVD video discs may not conform to the picture size you select.</li> <li>When you play DVD video discs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the TV shape setting.</li> <li>If you select "16:9 Widescreen" and you own a 4:3 TV set, the DVD playback picture will be horizontally distorted during playback. Images will appear to be horizontally compressed. Always be sure that your TV shape conforms to the actual TV in use.</li> </ul>		<h4>Disc Menu <small>DVD-V</small></h4> <p>Disc menu language</p> <p><b>Note</b> Some DVD video discs may not include your pre-selected language. In this case, the player automatically displays disc menus consistent with the disc's initial language setting.</p>							



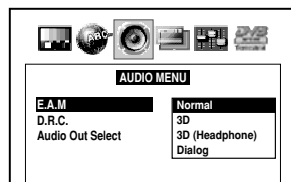

### E.A.M. DVD-V | VCD | CD

You can obtain expansive virtual surround sound effects from just two speakers.

Normal: Normal sound.

3D: To obtain expansive virtual surround sound effects from just two speakers.

3D (Headphone): To obtain expansive virtual surround sound effects when using headphone.

Dialog: To control critical center channel information to make dialogue more intelligible (only when playing a DVD video disc recorded on the Dolby Digital recording system).

- To use this enhancement on sounds output from the BITSTREAM/PCM jack, be sure to set "Audio Out Select" to "PCM."

#### Note

Pressing the E.A.M. button on the remote control also allows you to achieve the same setup. [37](#)

### D.R.C. DVD-V

Turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback.

D.R.C. = Dynamic Range Control

On : Dynamic range is reduced.

Off : Full dynamic range is maintained.

#### Notes

- This function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Reduction may differ depending on the DVD disc.

### Audio Out Select DVD-V | VCD | CD

Select the output sound format corresponding to your system connection.

For details of sound recording systems, see [41](#).

#### Analog 2ch:

Select when connected to a TV, or Dolby Pro Logic or stereo system via the analog audio jacks. [54](#)

#### Bitstream:


Select when connected to an amplifier equipped with a Dolby Digital, DTS, MPEG1 or MPEG2 decoder. [58](#) [59](#)  
The player outputs digital audio information in the bitstream format when you play a DVD video disc recorded in the Dolby Digital, DTS, MPEG1 or MPEG2 recording system.

#### PCM:

Select when connected to a 2 channel digital stereo amplifier. [59](#)  
The player outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.

## Customizing the Function Settings (continued)

### Setting details (continued)

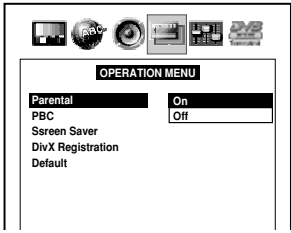


**Parental DVD-V**

DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc altogether.

- DVD video discs may or may not respond to the parental lock settings. This is not a defect in the player. Make sure this function works with your DVD video discs.


**On** : To activate the parental lock feature or change the settings.  
After pressing the ENTER button, follow steps 1) - 4) below.

**Off** : The parental lock feature does not function.  
After pressing the ENTER button, follow step 1) below.

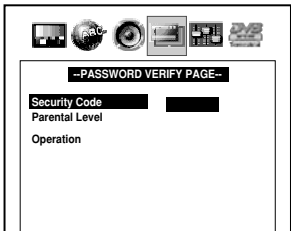

1) Press the number buttons to create a personal 5-digit security code.

2) Press ▲ / ▼ to select the parental lock level, then press the ENTER button.

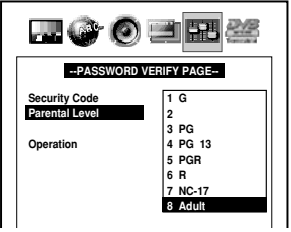

3) Press ◀.

4) Press ▼ to select "Operation", then press the ENTER button.

You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function.  
For example, when you select level 7, discs rated higher than level 7 are locked out and cannot be played.

The parental lock level is equivalent to the following USA movie ratings.

- Level 7: NC-17
- Level 6: R
- Level 4: PG 13
- Level 3: PG
- Level 1: G

The parental lock levels for other countries/areas than U.S. are included for future use. Check the appropriate parental lock level when you buy a DVD video disc equipped with the parental lock feature in the future.

■ **To change the parental lock level**  
Follow steps 1) - 4).

■ **To change your 5-digit security code**

1) After selecting "On" or "Off," press the 9 button five times.

PROTECT PROTECT PROTECT PROTECT PROTECT  
 (9) → (9) → (9) → (9) → (9)

The 5-digit security code is cleared.

2) Press the number buttons to create a new 5-digit security code.

### PBC VCD

On : To use the menu when playing a PBC-featured VIDEO CD.

Off : When playing a VIDEO CD without using the menu.

### Screen Saver DVD-V

On : The screen saver operates.



Off : The screen saver is disengaged.

### DivX Registration

If you select "Drm Code" and press ENTER, the Divx information appears. While it is displayed, press **ENTER** to return to "LANGUAGE MENU"

### Default DVD-V VCD CD

Reset : To restore settings to the factory set.

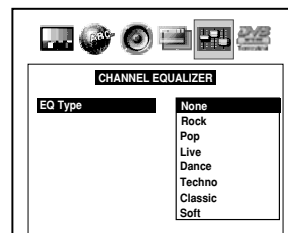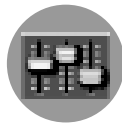

### EQ Type DVD-V VCD CD

You can select a preferred equalizer mode.

- None : Equalizer is not used.
- Rock : Equalizer mode for Rock.
- Pop : Equalizer mode for Pop.
- Live : Equalizer mode for Live.
- Dance : Equalizer mode for Dance.
- Techno : Equalizer mode for Techno.
- Classic : Equalizer mode for Classic.
- Soft : Equalizer mode for Soft.



# Connections

You can connect the player to a TV or audio system. Also, you can connect a battery pack to power the player.


- **Connecting to a TV or audio system**
- **Connecting to Headphones**
- **Viewing Pictures From Connected Video Equipment**
- **Connecting to Audio Equipment**
- **Using the Battery Pack**
- **Using the Automobile/vehicle Adapter or Power port**
- **Using a carrying case**

## Connecting to a TV or audio system

You can enjoy various disks by connecting the player to your TV or an audio system.

For details of output sound, see [41](#).

### Connecting to a TV

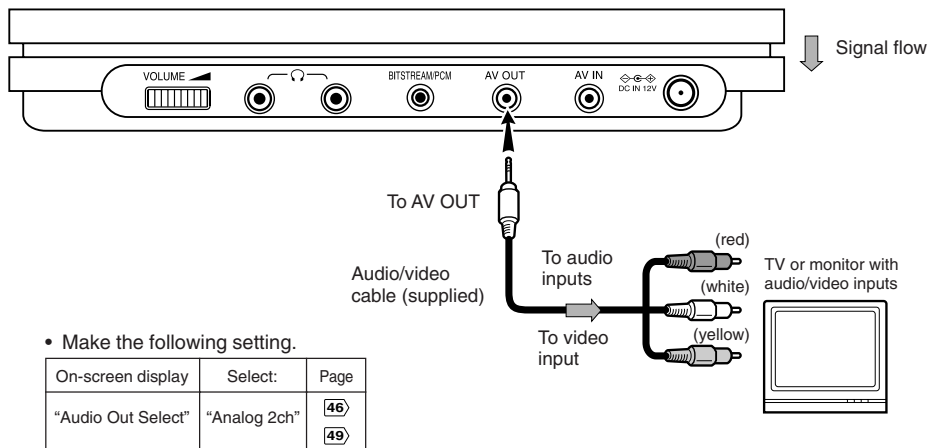

#### Notes


- Refer to the owner's manual of the connected TV as well.
- When you connect the player to your TV, be sure to turn off the power and unplug both units from the wall outlet before making any connections.
- Connect the player directly to your TV. If you connect the player to a VTR, TV/VTR combination or video selector, the playback picture may be distorted as DVD video discs are copy protected.
- When an NTSC disc is played, the AV OUT jack outputs NTSC signal to a connected TV.

#### To select AV mode of the player

Press **MODE** button on the player.



Each time the button is pressed, the LCD will change as below.

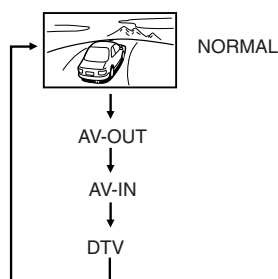


- NORMAL:** Outputs video and audio to the LCD of the player only.
- AV-OUT:** Select this to output to an external device such as a TV connected to the player.
- AV-IN:** Inputs video and audio from an external device such as a VCR connected to the LCD of the player, thus allowing you to view video on the LCD of the player.
- DTV:** Select this to watch DIGITAL TV.

#### Note

- To view disc playback on the LCD of the player, select "NORMAL".

## Connecting to an audio system

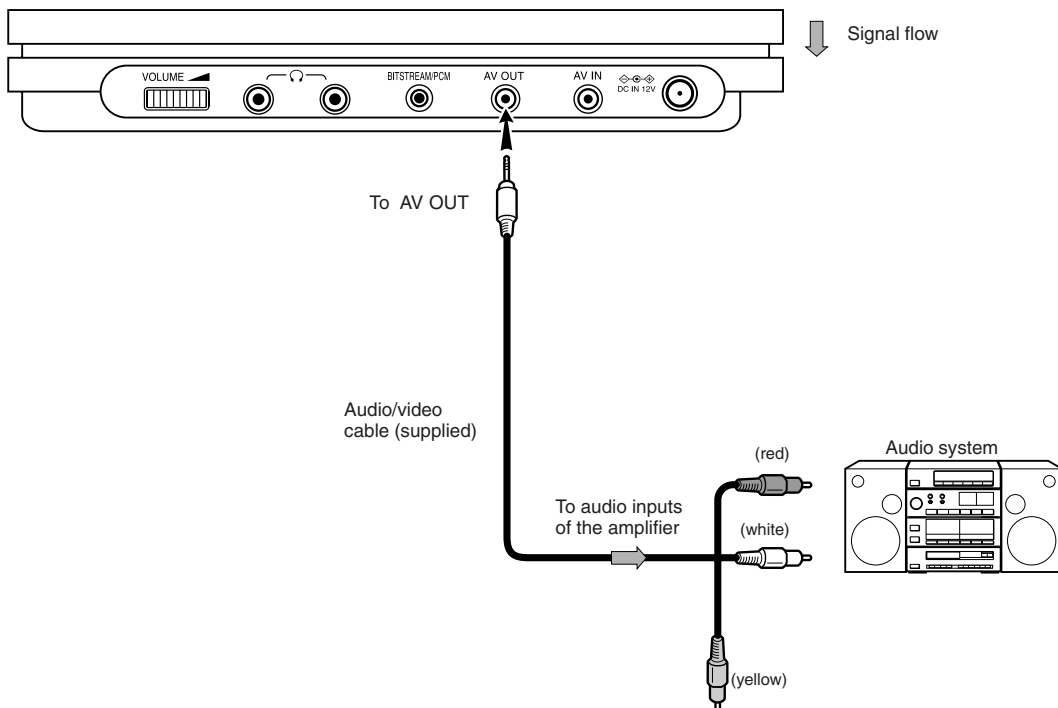

Connections

When the AV OUT or BITSTREAM/PCM jacks are connected to the audio input terminals of an audio system, sounds of discs can be heard on the connected audio system. For instructions on connections to audio systems, see also page [57](#).

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Analog 2ch"	<a href="#">46</a>
		<a href="#">49</a>

### Notes


- Refer to the owner's manual of the connected equipment as well.
- When you connect the player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- If you place the player near a tuner or radio, the radio broadcast sound might be distorted. In this case, place the player away from the tuner and radio.
- The output sound of the player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the player's power cord. If you leave the amplifier power on, the speakers may be damaged.

## Connecting to Headphones

You can listen to movies and music privately by connecting headphones.

### Caution

When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

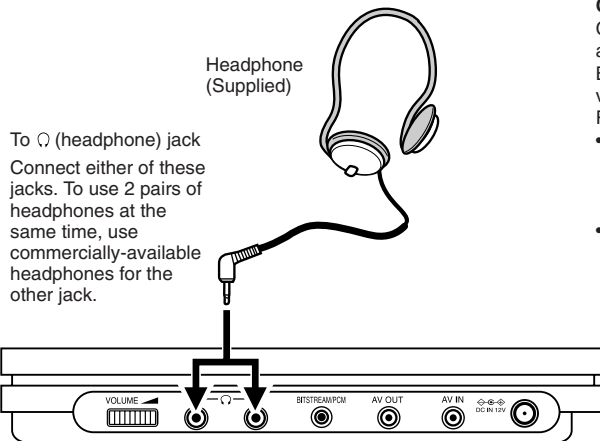

### Connecting headphones

Connect headphones to the headphone jack using a stereo mini plug.


Before connecting, temporarily turn down the volume with the headphone volume control. Readjust to your preference when playback starts.

- Turn off the player before you connect or disconnect the headphone cable. Possible shakes produced by plug connecting/disconnecting may cause damage to the disc.
- You can connect up to 2 headphones.

## Viewing Pictures From Connected Video Equipment

You can use the LCD of this player to monitor pictures of video equipment connected via the AV IN jack.

To select the external AV input mode, press the MODE button. In the external AV input mode (AV-IN appears on the screen), screen saver function/auto power OFF function becomes ineffective.

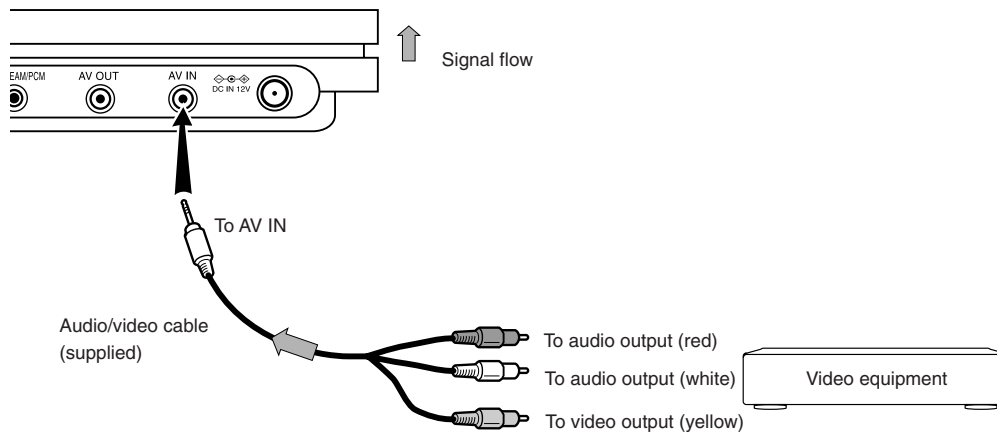

### Notes


- When supplying non-standard signals such as playback images from a video deck or images from a game player, some images may be displayed incorrectly. For example, shooting games, which shoots at a target on the screen with a light gun, may not work because of the LCD Color monitor properties.
- The AV IN jack is available only for the PAL signal.



## Connecting to Audio Equipment

You can enjoy high quality dynamic sounds by connecting the player to audio equipment.

- For connection to your TV, see “Connecting to a TV” [54](#).
- For details of output sound, see [41](#).
- This section uses the following reference marks.

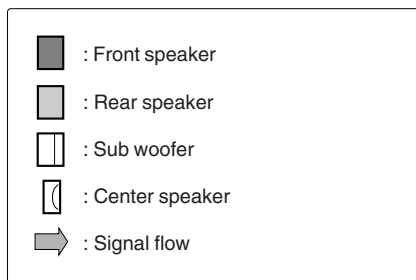

### Warning

- When you are connecting (via the BITSTREAM/PCM jack) an AV decoder that does not have Dolby Digital, DTS or MPEG2 decoding function, be sure to set “Audio Out Select” to “PCM” from the on-screen displays [46](#) [49](#). Otherwise, high volume sound may damage your hearing as well as the speakers.
- When playing DTS-encoded discs (audio CDs), excessive noise may be output from the analog audio output jacks. To avoid possible damage to the audio system, you should take proper precautions when the analog audio output jacks of the player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the BITSTREAM/PCM jack of the player.

### Notes

- DO NOT connect the BITSTREAM/PCM jack of the player to the AC-3 RF input of a Dolby Digital Receiver. This input on your A/V Receiver is reserved for Laserdisc use only and is incompatible with the BITSTREAM/PCM jack of the player.
- Connect the BITSTREAM/PCM jack of the player to the “DIGITAL (COAXIAL)” input of a Receiver or Processor.
- Refer to the owner’s manual of the connected equipment as well.
- When you connect the player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- The output sound of the player has a wide dynamic range. Be sure to adjust the receiver’s volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the player’s power cord. If you leave the amplifier power on, the speakers may be damaged.


## Connecting to Audio Equipment (continued)

### Connecting to an amplifier equipped with a Dolby Digital decoder

#### Dolby Digital

Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

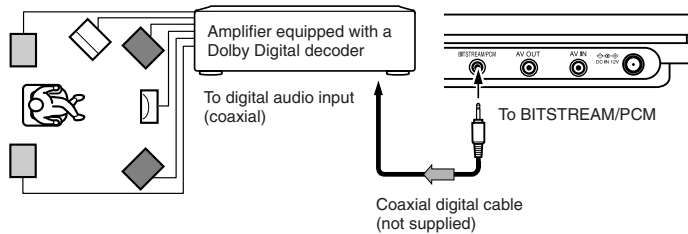

- Use DVD video discs encoded via the Dolby Digital recording system.
- Make the following setting.


On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	46
		49
Recording system (Press AUDIO.)	D D	40
		41

### Connecting to an amplifier equipped with a DTS decoder

#### DTS

DTS is a high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

"DTS" and "DTS Digital Surround" are trademarks of DTS Inc.

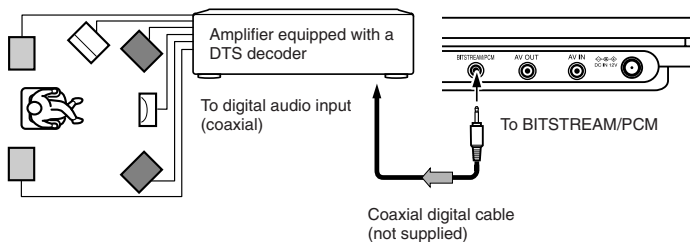


- Use DVD video discs or audio CDs encoded via the DTS recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	46
		49
Recording system (Press AUDIO.)	DTS	40
		41

## Connecting to an amplifier equipped with an MPEG2 audio decoder

### MPEG2 sound

You can enjoy motion picture and live concert DVD video discs with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor.

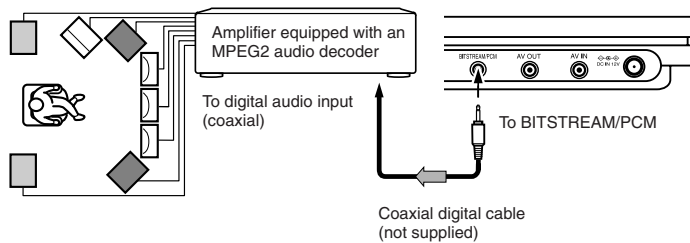


- Use DVD video discs encoded via the MPEG2 recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	46
		49
Recording system (Press AUDIO.)	MPEG2	40
		41

## Connecting to an amplifier equipped with a digital audio input

### 2 channel digital stereo

You can enjoy the dynamic sound of 2 channel digital stereo by connecting an amplifier equipped with a digital audio input and speaker system (right and left front speakers).

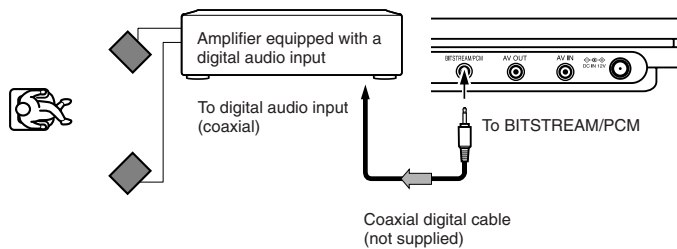

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"PCM"	46
		49

## Using the Battery Pack

The supplied battery pack can power the player for operation outdoors or in a place with no outlets.


### WARNING

- Do not use a battery pack other than one specified as it can result in a fire or damage to the unit.
- Do not heat, open, or short-circuit the battery pack. Do not throw the battery pack into a fire. Doing so may cause an explosion or a fire.
- Attach the battery pack properly following the explanation below. Make sure that the battery pack is attached firmly to the player when using it. Otherwise, the battery pack may become detached and cause personal injury.


### ■ Attaching the battery pack

First disconnect the AC adapter and the power cord from the player, then attach the battery pack.

- 1 Turn the player off.
- 2 Disconnect all cables and cords from the player.
- 3 Turn the player upside down.
- 4 Remove the connector cover on the bottom of the player.

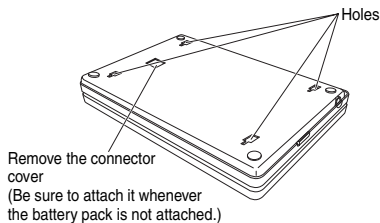

- 5 Turn the battery pack over and insert four catches into the player's corresponding holes ①. Then, slide the battery pack in the direction of the arrow ② until a "click" is heard.

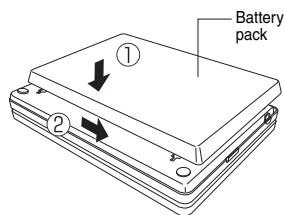

### Important

- Detach the battery pack from the player after being used.

### ■ Charging the battery pack

The battery pack needs to be charged before use. (The battery indicator is shown in the upper left corner of the screen when the power in the battery pack is running low.) Perform a full charge before the first use.

- 1 Turn the player off. The battery pack will be charged when the player is turned on or off.
- 2 Attach the battery pack to the player.
- 3 Connect the supplied AC adapter and the power cord to the player. Charging starts, and the POWER indicator illuminates in orange. When the charging is completed, the POWER indicator turns off.

### Notes

- While the charge is in progress, do not disconnect the AC adapter and the power cord until the POWER indicator turns off.
- The attached battery pack may get warm when you are charging it or operating the player. This is not a defect.
- Charge the battery pack with a surrounding temperature of +10°C to +30°C.

### ■ Charging time of a battery pack

Approximately 5 hours

- The battery pack can be charged when the player is turned on or off.
- This value is for reference only. Charging time may vary depending on battery pack status and environment.

### ■ Continuous playback time while using the battery pack


Up to approximately 5 hours

This value is for reference purpose only, it is not guaranteed. (Conditions: 25°C, output from the headphones, new battery pack in use.)

- Continuous playback time may vary depending on battery pack status, operational status and environment conditions.
- Low temperature will shorten the playback time.

### ■ Detaching the battery pack

- 1 Turn the player off.
- 2 Disconnect the AC adapter and the power cord from the player.
- 3 Turn the player upside down.
- 4 Slide the battery pack's lock switch in the direction of the arrow ①, then slide the battery pack in the direction of the arrow ② to remove it.

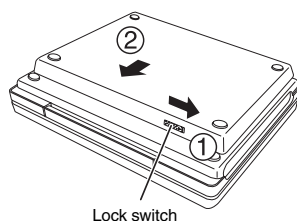

- 5 Attach the connector cover on the bottom of the player.

#### Important

- After detaching the battery pack, be sure to attach the battery cover in order to avoid a short-circuiting which may be caused by contact with metal objects to the connector.
- Do not detach the battery pack while the POWER indicator illuminates in green or orange.

### ■ About battery pack life

Battery pack has a limited service life. The length of service life varies depending on product use and user settings. If you use the battery pack beyond its service life, you may notice that playback time becomes remarkably shorter, even if the battery pack is fully charged. If you notice that playback time has become remarkably shorter, even when the battery pack is fully charged, it is recommended that you replace the battery pack with battery pack model number SD-PBP90E or SD-PBP90F.

## *Using the automobile/vehicle Adapter or Power Port*

For use of the DVD player in a car, this adapter can power the DVD player from the cigarette lighter socket.

### **WARNING**


- NEVER operate the player or view a DVD Video while operating an automobile or other vehicle. Note: doing so is illegal in many jurisdictions.  
NEVER place a player within the eyesight of a driver while he/she is driving an automobile/vehicle. Note: A player located in the front seating section of a vehicle is illegal in many jurisdictions.  
Failure to observe the above instructions could result in the driver's inattention to and/or distraction from road hazards.
- NEVER place a player in a location where it could interfere with the proper deployment and/or performance of an air bag.  
Failure to observe this instruction could result in the prevention of an air bag to properly and/or effectively deploy.
- Do not use an adapter other than the model supplied, to power the player. Do not use the supplied vehicle adapter to power an apparatus other than this player. Neglecting these may cause smoke, fire or electrical shock to human body.
- This adapter is intended for exclusive use in automobiles/vehicles with a DC 12V negative ground electrical system. NEVER use this adapter with a DC 24V configured automobile/vehicle.  
Consult your vehicle owner's manual before using this adapter.
- ALWAYS use caution when touching the adapter, cigarette lighter socket or power port. The adapter, lighter socket and power port may become heated after prolonged use.
- Do not charge the battery pack which is attached to the player by the adapter. Doing so may cause smoke, fire or electrical shock to human body. Whenever you use the adapter, be sure to remove the battery pack from the player to prevent it being charged by the adapter.
- Do not touch the adapter with wet hands. Do not get liquid on the adapter.

### **Notes**

- Never operate the player in a moving vehicle. Vibration may prevent proper playback of the player or cause damage to the disc.
- Do not leave the adapter in an unoccupied vehicle to avoid exposing it to unusually high ambient temperatures.
- Remove the adapter power plug from the cigarette lighter socket or power port before turning the engine off.
- When the player is not in use be sure to remove the adapter power plug from the cigarette lighter socket or power port and the pin plug from the player.
- Do not force the adapter into an incompatible lighter socket or power port.
- Avoid dropping the adapter or placing heavy objects on it.
- Do not pull the adapter power cord when removing it from a socket or power port.  
Always grasp and pull the body.  
Failure to do so could cause damage to and malfunction of the adapter.
- Do not operate the player using the adapter for a prolonged period with the car engine off. The car battery may be too exhausted to turn the engine on.
- Depending on the vehicle model or the location of the cigarette lighter socket, this adapter may not be applied.
- In some vehicles the cigarette lighter socket is powered even when the vehicle's engine is not running. Using the cigarette lighter socket for power when the engine is not running will drain the car's battery.

## ■ Instructions for Use

- 1 Turn off the player.
- 2 Insert the pin plug of the adapter into the DC IN 12V jack of the player.

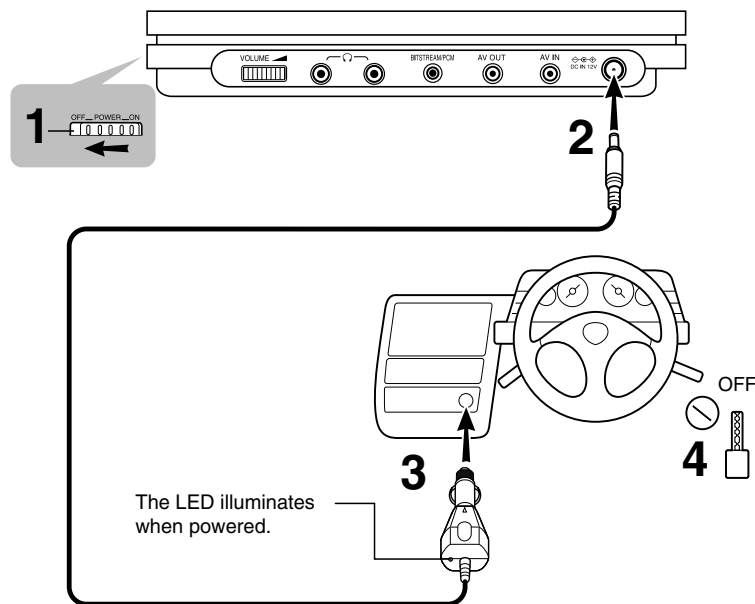

- 3 Insert the plug of the adapter into the cigarette lighter socket or power port fully.
- 4 Turn on the vehicle engine so that the cigarette lighter socket or power port is powered. In some vehicles the cigarette lighter socket or power port is powered even when the vehicle's engine is not running. It is important that the vehicle owner's manual be consulted.
- 5 When disconnecting the player, first remove the adapter pin plug from the player and then the power plug from the cigarette lighter socket or power port.

## Specification

Operating temperature: 5 – 35°C  
Operating humidity: 30 – 80%  
Storage temperature: -10 – 60°C  
Storage humidity: 20 – 80%

## Using the carrying case


### ■ Using for carrying

When using the case for carrying, put the player or its accessories in the carrying case, then zip it to close firmly.

### ■ Attaching to a car seat


You can use the player in the backseat by attaching the carrying case to the back of the front seat.

- 1 String belts ①, ② into their holders around the carrying case, then hook the belt ③.

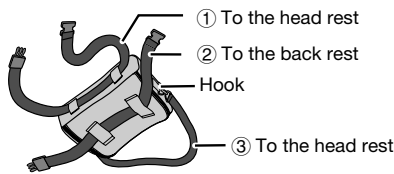

- 2 Tie belts ① – ③ to the seat.  
Adjust the length of belts to fit of the seat.

Backside of the Seat

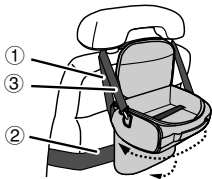

String belts and zip off the carrying case to open it. Then place it on the back of the seat.


Side of the Seat



Shift buckles to convenient locations apart from your body.

- 3 Put the player in the attached carrying case, then make sure it is fixed properly.

Adjust the length of belts in which you keep the player leveled.

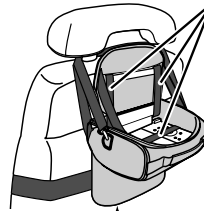

When operating the player, it is important to keep the carrying case opened as is shown above figure. Otherwise it will become filled with heavy heat that would damage the player.

### Notes

- Avoid using the case for carrying other object except the player or its accessories.
- When attaching or detaching the carrying case, make sure it is empty.
- While driving, the carrying case must be released of the seat. Otherwise, when a sudden stop occurs would result in a personal injury.
- Do not keep the player in the carrying case when no one in the car or when your car temperature gets high.
- When attaching the carrying case, avoid using any physical force. The carrying case may not fit some car's seat's types.
- Do not pull either belts or zipper of the carrying case strongly. Doing so may cause of damages.



# TV Viewing

- Preparation for TV viewing
- TV view operations

## Preparation for TV viewing


When poor broadcast reception due to inclement weather or other reasons, the picture or sound may be affected and video noise or audio noise may occur. Also depending on your location, the broadcast reception signal may fail.

### Connection

#### ■ Using an aerial

#### ■ Using the supplied outdoors aerial

Before you use the portable DVD player outdoors, attach the battery pack supplied with the player and sufficiently charge the battery.

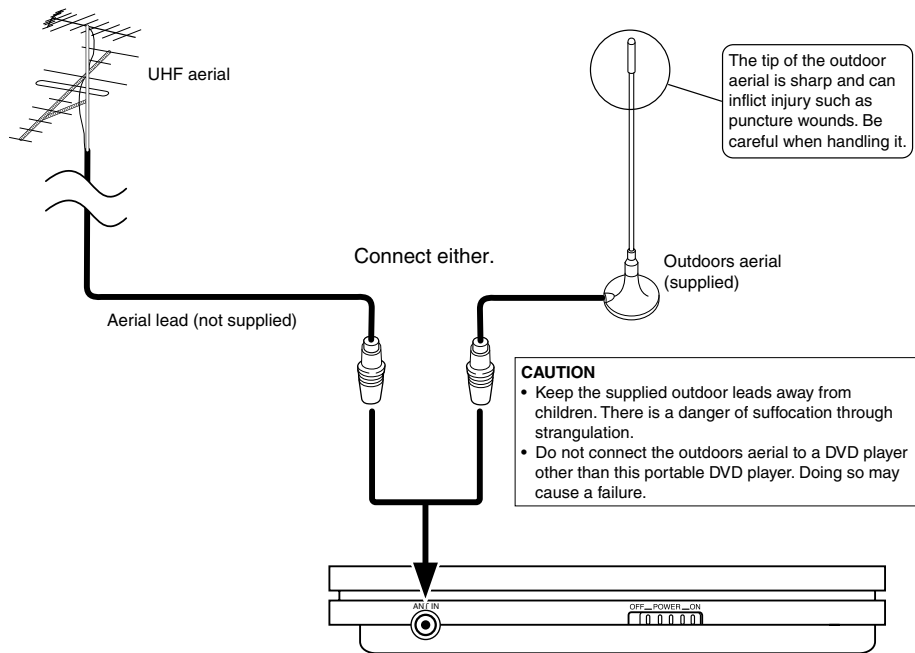

### Selecting DTV mode

Press **MODE** repeatedly to select “DTV”.



The player enters DTV mode and shows the current channel.

Select this mode whenever you want to view TV.

## Initial setup - Scanning channels available in your area

**1** In DTV mode (page 66), press **SETUP**.



 
**2** Press **▶** repeatedly to select “DVB-T MENU”, then press **ENTER**.



The following menu appears.

DVB-T MENU	
Area	Belgium
Time Zone	Denmark
Parental Age	Germany
Channel Setup	Spain
	France
	Italy
	Netherlands
	Others

**3** Press **▲/▼** to select “Area”, then press **▶**.



A cursor appears in the sub menu.

DVB-T MENU	
Area	UK
Time Zone	Australia
Parental Age	Austria
Channel Setup	Belgium
	Denmark
	Germany
	Spain
	France

**4** Press **▲/▼** to select the country, then press **ENTER**.

**5** Press **◀**, and press **▲/▼** to select “Time Zone”, then press **ENTER** twice.

The following menu appears.


Hour	00
Minute	00
OK	

**6** Set the time offset from GMT.

**▲/▼** : To change the digit.

**ENTER**: To input the selected digit and advance the cursor.

**7** Press **▲/▼** to select “Channel Setup”, then press **ENTER**.

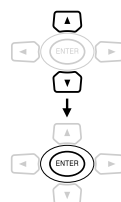

The following menu appears.

CHANNEL MENU	
Auto Scan	Start
Manual Scan	
Adjust Channel	
Channel Remap	
Reserve Channel	

**8** Press **▲/▼** to select “Auto Scan”, then press **ENTER** twice.

**9** Press **◀/▶** to select “OK”, then press **ENTER**.

The player begins scanning channels, and lists the found ones.

After completing the scan, the player displays the first TV program on the list.

### ■ To scan channels by specifying the frequency

1 In DTV mode (page 66), press **SETUP**.

2 Press **▶** repeatedly to select “DVB-T MENU”, then press **ENTER**.

3 Press **▲/▼** to select “Channel Setup”, then press **ENTER**.

4 Press **▲/▼** to select “Manual Scan”, then press **ENTER** twice.

5 Press **▲/▼** to select the frequency, then press **ENTER** twice.  
Scanning begins.


#### Note

- You can redo this initial setup and other essential settings at a time, if necessary. In DTV mode, press **WIZARD** while pressing **SHIFT**. “General Setup Page” appears. Make the selection by pressing **▲/▼/◀/▶** and **ENTER**.

# TV view operations


## Operations while viewing

In DTV mode (page 66), the following buttons can function.

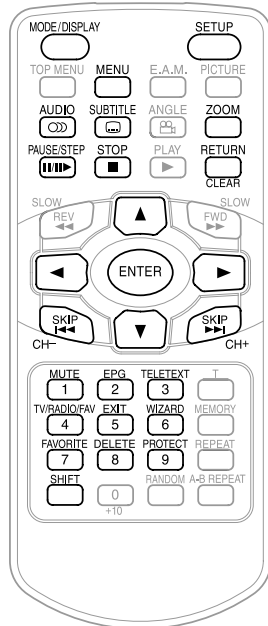

### To display information about the current channel


**SHIFT** + **MODE/DISPLAY**  
 If you do this operation again while channel information is displayed, signal status information is added. Further doing the same operation turns off the display.

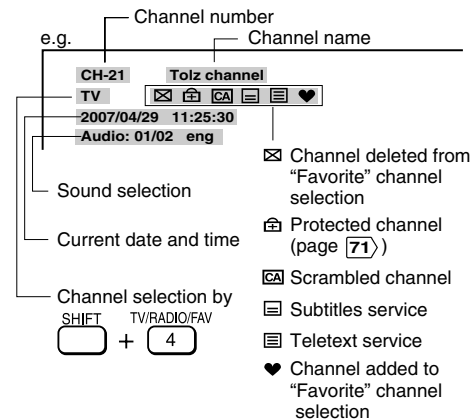

### To change channels


 
### To mute the sound



The sound turns off. To restore the volume, do this operation again.

### To change the picture size



Pressing **ZOOM** repeatedly zoom in or zoom out pictures.

### To change the channel selections



Repeating this operation switches the mode ("TV", "Radio", "Favorite" channel selection (page 70)).

### To change audio language



 
Pressing **AUDIO** repeatedly switches sounds which are available in the current channel.

### To change subtitles (if the service available)




Pressing **SUBTITLE** repeatedly switches subtitles which are available in the current channel.

### To display teletext (if the service available)



 On teletext display, the following operations are available.



To change pages.



To select red command.



To select gray command.



To select yellow command



To select cyan command.


To close, press **TELETEXT** while pressing **SHIFT**.

### To display a digest menu



 A digest menu shows all channels currently broadcasted.

On a digest menu, the following operations are available.



To select a channel.




To change pages.



To view a channel being selected.

To close, press **MENU**.

### To display EPG

 

EPG is a program list of the day per channel.

On EPG, the following operations are available.

“Channel” (on-screen)

To change to another channel.

Select this using **▲ / ▼**, then press **ENTER**.

Channels are listed.

Press **▲ / ▼** to select a channel then press **ENTER**.

Programs of the channel of the day are listed.

“Program” (on-screen)

To view program schedule of the current channel.

Select this using **▲ / ▼**, then press **ENTER**.

Programs of the current channel on the day are listed.

If you select a program and press **ENTER**, you can reserve the program. Select “OK” then press **ENTER**. Your reservation is saved.

To confirm or cancel the program reserved programs, see page **71**.

To close, press **EPG** while pressing **SHIFT**.

### To exit the current mode to return to on-air program



#### Note

- Some channels may not permit these operations.

## TV view operations (continued)

### Customizing channel lineup

#### ■ To customize the channel order

You can swap the positions of 2 channels.

 
- 1 In DTV mode (page 66), press **SETUP**.
- 2 Press **▶** repeatedly to select "DVB-T MENU", then press **ENTER**.
- 3 Press **▲ / ▼** to select "Channel Setup", then press **ENTER**.

- 4 Press **▲ / ▼** to select "Channel Remap", then press **ENTER** twice.


- 5 Press **▲ / ▼** to select a channel to swap, then press **ENTER**.

A mark appears on the channel.


To change the page, press **CH+**.



 - 6 Press **▲ / ▼** to select the other channel to swap, then press **ENTER**.  
The 2 channels are swapped.



 - 7 To save the order, press **▼** repeatedly to select "Exit", then press **ENTER**.  
(or press **EXIT** while pressing **SHIFT**.)



- 8 Press **SETUP** to exit.

#### ■ To set the age of parental protection to all available channels

- 1 In DTV mode (page 66), press **SETUP**.
- 2 Press **▶** repeatedly to select "DVB-T MENU", then press **ENTER**.
- 3 Press **▲ / ▼** to select "Parental Age", then press **ENTER**.

- 4 Press **▲ / ▼** to select the age, then press **ENTER**.

- 5 Press **SETUP** to exit.

The following features are not available while you are viewing "Favorite" channel selections. Select "TV" or "Radio" beforehand.

#### ■ To make a set of favorite channels

- 1 In DTV mode (page 66), press **SETUP**.

- 2 Press **▶** repeatedly to select "DVB-T MENU", then press **ENTER**.

- 3 Press **▲ / ▼** to select "Channel Setup", then press **ENTER**.

- 4 Press **▲ / ▼** to select "Adjust Channel", then press **ENTER** twice.

- 5 Press **▲ / ▼** to select a channel, then press **FAVORITE** while pressing **SHIFT**.

A mark appears on the channel.

The channel will be added in "Favorite" channel selection, which can be selected by pressing **TV/RADIO/FAV** while pressing **SHIFT** (page 68).

To change pages, press **CH+** or **CH-**.

- 6 Repeat step 5 to mark other favorite channels.

- 7 To save the order, press **▼** repeatedly to select "Exit", then press **ENTER** (or press **EXIT** while pressing **SHIFT**).

- 8 Press **SETUP** to exit.

#### Note

- To delete a channel from the "Favorite" selection, at step 5 press **DELETE** while pressing **SHIFT**.

#### ■ To set a parental protect to a channel

- 1 In DTV mode (page 66), press **SETUP**.
- 2 Press **▶** repeatedly to select "DVB-T MENU", then press **ENTER**.
- 3 Press **▲/▼** to select "Channel Setup", then press **ENTER**.
- 4 Press **▲/▼** to select "Adjust Channel", then press **ENTER** twice.
- 5 Press **▲/▼** to select a channel, then press **PROTECT** while pressing **SHIFT**.  
A message appears.
- 6 Input 5-digit password by **number buttons**.
- 7 Press **SETUP** to exit.  
The channel will not be viewable unless you input the password.

#### Note

- To change the password, at step 6 press 9 button five times, and input a new 5-digit password.

#### ■ To view the list of channels reserved on EPG

- 1 In DTV mode (page 66), press **SETUP**.
- 2 Press **▶** repeatedly to select "DVB-T MENU", then press **ENTER**.
- 3 Press **▲/▼** to select "Channel Setup", then press **ENTER**.
- 4 Press **▲/▼** to select "Reserve Channel", then press **ENTER**.
- 5 Press **▲/▼** to select "Start", then press **ENTER**.  
Channels reserved on EPG (page 69) are listed.  
If you want to delete the reservation, press **▲/▼** to select the program, and press **◀/▶** to select "Delete", then press **ENTER**.
- 6 Press **SETUP** to exit.

#### Note

- You can set the time to remind reserved channels. At step 5, select "Notify Time" and press **ENTER**. Set the minute by pressing **▲/▼**, then press **ENTER** twice.





## Others

- Before Calling Service Personnel
- Specifications

## Before Calling Service Personnel

Check the following guide for the possible cause of a problem before contacting service.

### Symptoms and correction

Symptom	Cause	Correction	Page
No power.	• The AC adapter or power plug is disconnected.	• Connect the AC adapter or power plug securely.	<b>16</b>
	• The battery pack has been removed.	• Install the battery pack.	<b>60</b>
	• Battery empty.	• Re-charge the battery.	<b>60</b>
The LCD turned off by itself.	• The automatic LCD off function turned the LCD off.	• Press any button.	<b>21</b>
No picture. (Other than built-in LCD monitor)	• The connected TV is not set to receive DVD signal output.	• Select the appropriate video input mode on the TV so the picture from the player appears on the TV screen.	–
	• The player is not set to the external output mode (AV-OUT).	• Press MODE and switch to the external output mode (AV-OUT).	<b>54</b>
No picture or Sound (When using the TV tuner.)	• The aerial connection is improperly positioned.	• Connect the aerial properly.	<b>66</b>
	• The channel scanning is not set channels available in your area.	• Set by scanning.	<b>67</b>
No sound. (Connected TV or audio system.)	• The equipment connected via the audio/video cable is not set to receive DVD signal output.	• Select the correct input mode of the audio receiver so you can listen to the sound from the player.	–
	• The volume is too low.	• Adjust the volume by turning the volume control.	<b>19</b>
	• The audio receiver or TV is turned off.	• Turn on the equipment connected with the audio/video cable.	–
	• The setting of output sound format is incorrect.	• Select the proper audio setting.	<b>40, 46 49</b>
The playback picture has occasional distortion.	• The disc is dirty.	• Eject the disc and clean it.	<b>8</b>
	• Player is in fast forward or fast reverse mode.	• Sometimes a small amount of picture distortion may appear. This is not a malfunction.	–
	• The player was moved or given a shock.	• Vibrating or shaking the player during playback may produce distortion. This is not a malfunction. If not restored to usual status, stop playback and start again.	–
	• The disc is not set firmly.	• Remove the disc and set it again.	<b>18</b>
Brightness is unstable or noises are present in the playback pictures. (Other than built-in LCD monitor)	• The effect of copy protection.	• Connect the player directly to the TV. Avoid connecting the player to a VTR or TV/VTR combination.	<b>54</b>
The player does not start playback.	• No disc is inserted.	• Insert a disc.	<b>18</b>
	• An unplayable disc is inserted.	• Insert a playable disc. (Check the disc type, color system and region number.)	<b>9, 10</b>
	• The disc is inserted upside down.	• Insert the disc with the playback side down.	<b>18</b>
	• The disc is not inserted securely.	• Insert the disc securely in the disc holder.	<b>18</b>
	• The disc is dirty.	• Clean the disc.	<b>8</b>
	• The parental lock function is set.	• Cancel the parental lock function or change the parental lock level.	<b>50</b>
	• The player is set to the external input mode (AV-IN).	• To play a disc with the player, NORMAL or AV-OUT needs to be set. Press MODE repeatedly so that you can view playback picture.	<b>54</b>
Playback does not follow the course of the disc's program.	• It is in the repeat playback mode, memory playback, etc.	• These operations may prevent a proper progression of the contents.	–
Buttons do not work.	• Power supply fluctuations or other abnormalities such as static electricity may interrupt correct operation.	• Turn the power on or off with the POWER switch. Or disconnect the power plug and insert it into the wall outlet again.	–

Symptom	Cause	Correction	Page
The remote control does not work properly.	• The remote control is not pointed at the remote sensor of the player.	• Point the remote control at the remote sensor of the player.	15
	• The remote control is too far from the player.	• Operate the remote control within about 3 m.	15
	• The batteries in the remote control are exhausted.	• Replace the batteries with new ones.	15
	• The player's remote sensor is exposed to a strong light source such as direct sunlight or other illumination.	• Avoid the player from being exposed to a strong light source.	15

Others

## Specifications

### Player / Connectors / Liquid crystal display / Supplied accessories

#### Player

Power supply	DC 12 V (Rated current : 2A (Maximum: during battery pack charging)) 100 – 240 V AC, 50/60 Hz (with the supplied AC adapter)
Mass	1.2 kg
External dimensions	240 × 32 × 170 mm (W/H/D)
Signal system	PAL/3.58NTSC
Laser	Semiconductor laser, wavelength 650 nm / 795 nm
Frequency range	DVD linear sound : 48 kHz sampling 4 Hz to 22 kHz 96 kHz sampling 4 Hz to 44 kHz
Operating conditions	Temperature: 5 °C to 35 °C, Operation status: Horizontal

#### Connectors

AV output (AV OUT)	Ø3.5mm mini jack × 1 Video: 1.0 V (p-p), 75 Ω, negative sync., Audio: 2.0 V (rms), 100 Ω
AV input (AV IN)	Ø3.5mm mini jack × 1 Video: 1.0 V (p-p), 75 Ω, negative sync., Audio: 2.0 V (rms), 100 Ω
Audio output (BITSTREAM/PCM)	Coaxial digital terminal (Ø3.5mm) × 1
Headphone terminal	Ø3.5mm stereo mini jack × 2
ANT input	75 Ω, IEC Connector

- The AV input (AV IN) jack is available only for the PAL signal.

#### Liquid crystal display

Panel size	9 inches
Projection system	TN color transmission
Driving system	Amorphous silicon TFT active matrix
Resolution	480 (H) × 234 (V) pixels (effective pixel rate : more than 99.99%)

#### Supplied accessories

Audio/video cable .....	1
Remote control .....	1
Coin-shaped battery (CR2025) .....	1
AC adapter (ADPV16A) .....	1
Power cord .....	1
Battery pack (SD-PBP90E or SD-PBP90F) .....	1
Vehicle adapter (MEDC01AX) .....	1
Headphone .....	1
Outdoors aerial .....	1
Carrying case .....	1

#### Notes

- This model complies with the above specifications.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.



*Memo*



Others

Others





*Memo*



Others



**TOSHIBA**

®

Printed in China



10SD-P90DTSE\_E\_EU\_P73-80

80

07/3/23, 11:19





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>