 
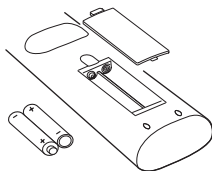 


TOSHIBA

Simple at-a-glance reference of your remote control

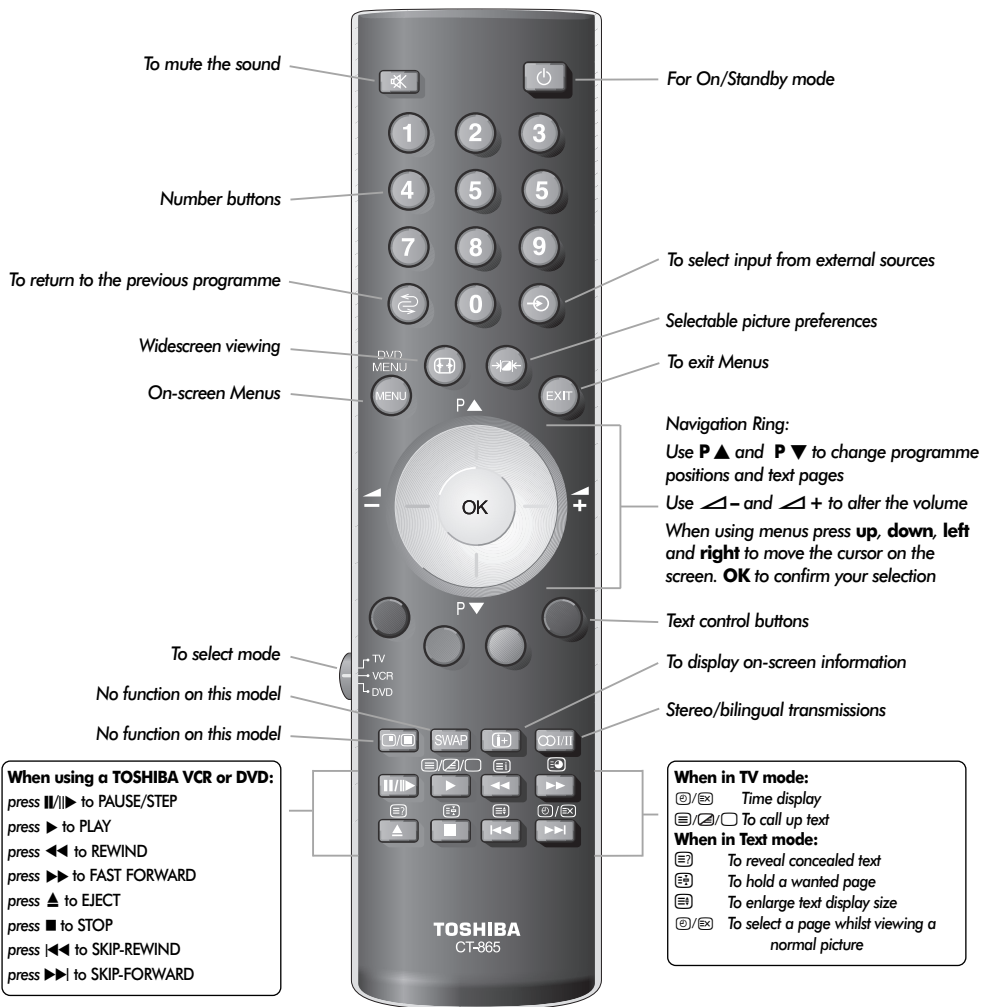

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:
AAA, IEC R03 1.5V.



Printed on recycled paper.
100% Chlorine free.

TOSHIBA

Auto Tune – WL68

 
 
- 1** Plug the aerial directly into the AERIAL INPUT on the television set. Ensure all other products are in standby before continuing.
- 2** Connect the television to the mains, the red LED will light up. The **Quick Setup** screen will appear, this may take a few moments. If the screen does not appear press the standby button on the remote control.
- 3** Using **left** or **right** select your language and press **OK**.
- 4** Using **left** or **right** select your country and press **OK**.



The search will begin for all available stations. The slide bar will move along the line as the search progresses.

You must allow the television to complete the search.

When the search is complete the TV will automatically return to programme position 1 and the **Manual tuning** screen will appear.

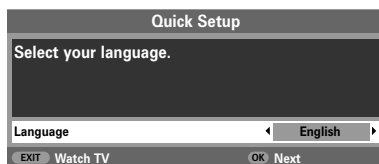

- 5** Press **EXIT**. Auto tuning is now complete. To select programmes press the number buttons.

In some areas of the UK duplicate TV stations are received, simply re-order using the Manual tuning feature. For details of this and further operations plus equipment connections please refer to the TV Owner's Manual.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>