



## Quick Reference Sheet For TK-EX4 (Transmitter / Remote)

Command	Hot Keys	Front Panel Button	Description
Receiver Access Permission	Scroll Lock + Scroll Lock + M + Z (z = 1: Full access (keyboard, mouse and video) to receiver (z = 2: Access Denied (No keyboard or mouse control, blank screen) (z = 3: View only (only video, No Keyboard or mouse control)	<b>Receiver Mode:</b> Video: Receiver can view only (no keyboard or mouse) Control: Receiver has full access (keyboard, mouse and video)	Various levels of access given to the receiver to the remote (transmitter) computer

## Quick Reference Sheet For TK-EX4 (Receiver / Local)

Command	Hot Keys	Front Panel Button	On-Screen Display (OSD)	Description
Select Local / Remote	Scroll Lock + Scroll Lock + → Scroll Lock + Scroll Lock + ←	Press the Select button	—	Toggle between local and remote computer on the receiver
Show OSD Menu	Scroll Lock + Scroll Lock + Space Bar	—	—	Activates the OSD
System Information	—	—	F1	Displays firmware version of the receiver and transmitter, CPU module date and access mode information
Video Setting	—	—	Video Setting	Use left and right arrows to configure the brightness and sharpness [ range: 0-63; default: 0 ]
View Monitor Information	—	—	EDID Setting	Shows the model of the monitors connected to the transmitter and receiver. Select "Read monitor" to refresh monitor information
Password Setting	—	—	Password Setting	Enable/disable password protection [default: disable; password length <= 8 characters] Note: You must press F10 to logout if the password protection is enabled
Auto Logout	—	—	Auto Logout	Enable/Disable and configure auto logout time [range:0-10 minutes; default: 0 ]
Manual Logout	—	—	F10	Manually logout from the OSD
Define Hot key	Scroll Lock + Scroll Lock + H + (Y) (Y) = Scroll Lock, Caps Lock, F12 or Num Lock	—	Hotkey	Define the hot key sequence among 4 alternative keys
OSD Menu Timeout	—	—	OSD Timeout	Specify the timeout for OSD menu [range: 0, 20, 25,30, 35,40, 45,50, 55, 60]; default:0 seconds; 0 = disable]
Console Delay	—	—	Console Delay	Delay time between when the transmitter and receiver have keyboard/mouse control of the computer connected to the transmitter [range: 0, 3, 5, 10, 20, 30 seconds; default: 0 seconds].

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>