



Quick Installation Guide



Table of Contents

Русский	1
 Что нужно сделать в самом начале Порядок установки Управление 	2
Specifications Troubleshooting	

1. Что нужно сделать в самом начале




Содержимое упаковки

- TK-401R/TK-801R/TK-1601R
- Руководство по быстрой установке
- Комплект для монтажа в стойке
- Адаптер источника питания (9V DC 1A) (TK-801R/TK-1601R)


Системные требования

- Клавиатура PS/2
- Мышь PS/2
- VGA монитор
- KVM-кабелей
- Windows 98SE/ME/2000/XP/2003 Server, Linux и Netware

Применение

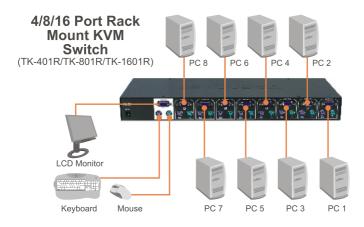

2. Порядок установки

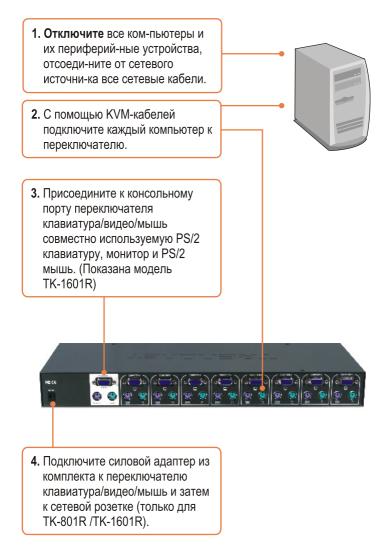

5. Включите присоединенные компьютеры один за одним и дождитесь загрузки рабочего стола на каждом из них.



Установка в стойке

 
Коммутатор может быть установлен в 19-дюймовой стойке EIA стандартного размера, которая располагается в электромонтажном шкафу вместе с другой аппаратурой.

<u>Примечание:</u> если необходимо установить переключатель клавиатура/видео/мышь в аппаратной стойке EIA 19", установите по бокам этого переключателя крепежные скобы из комплекта, привинтите их имеющимися винтами и затем установите переключатель в стойку вместе с аппаратурой, предоставленной изготовителем стойки.

 Приложите крепежные скобы к обе-им сторонам коммутатора и прикрепите их имеющи-мися винтами.



 Аккуратно расположите коммутатор на стойке.
 Выровняйте кронштейн относительно винтовых отверстий на стойке, затем прикрепите коммутатор винтами из комплекта к приборной стойке.

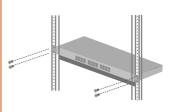

Установка завершена.

3. Управление

<u>Примечание:</u> Для переключения от компьютера к компьютеру используйте кнопка на передней панели.



Кнопки


Переключение от компьютера к компьютеру – использовать кнопки.

Команды с клавиатуры подаются с помощью комбинации трех клавиш:

Команда = ScrLk + ScrLk + управляющая клавиша

После нажатия на клавишу ScrLk успейте нажать на ScrLk опять в течение 2-х секунд. Опять в течение 2-х секунд успейте нажать на управляющую клавишу. Если не нажать на клавишу в течение 2-х секунд, режим использования назначенных клавиш в коммутаторе отключится.

Выбор конкретного порта ПК::

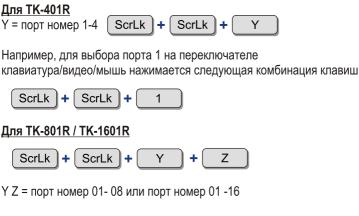

Например, для выбора порта 1 или порта 10 на переключателе клавиатура/видео/мышь нажимается следующая комбинация клавиш

Выбор порта 1 =	ScrLk + ScrLk + 0 + 1	
Выбор порта 10 =	ScrLk + ScrLk + 1 + 0	

Перечень назначенных клавиш приведен на обороте руководства по быстрому монтажу.

Краткое руководство для TK-401R/TK-801R/TK-1601R				
Команда	Горячие клавиши	Кнопки передней панели	Описание	
Выбор только канала ПК	TK-401R Y ScrLk + Y (Y)= однозначный номер порта (1-4) TK-801RTK-1601R ScrLk + Y ScrLk + Y YZ= двухзначный номер порта (01-16) YZ	Нажмите на кнопку конкретного порта для переключения на него.	Выбор активного канала ПК	
Следующий пониженный канал	ScrLk + ScrLk + A (стрелка вверх)		Выбор пониженного канала ПК	
Следующий повышенный канал	ScrLk + ScrLk + + (стрелка вниз)		Выбор повышенного канала ПК	
Включение- выключение звукового сигнала Autoscan	ScrLk + ScrLk + B		Включение-выключение звукового сигнала в режиме Autoscan.	
Сброс переключателя клавиатура/видео/ мышь	ScrLk + ScrLk + END			
Autoscan	ScrLk + ScrLk + S		Автосканирование каждого подключенного канала для быстрого просмотра на экране каждого канала	
Автосканирование с заданным временем задержки	ScrLk) + ScrLk) + S + X (X)= 5-99 секунд		Автосканирование каждого подключенного канала для быстрого просмотра на экране каждого канала с интервалом в X секунд.	
Autoscan - стоп	Нажать любую кнопку на клавиатуре	Нажать любую клавишу	Завершение автосканирования.	

Specifications

Management:	TK-401R: 4 computers TK-801R: 8 computers TK-1601R: 16 computers		
Console Port Connectors: (all female)	1 x PS/2 keyboard 6-pin mini din 1 x PS/2 mouse 6-pin mini din 1 x VGA HDB15 15-pin		
PC Port Connectors: (all female)	4/8/16 x PS/2 keyboard 6-pin mini din 4/8/16 x PS/2 mouse 6-pin mini din 4/8/16 x VGA HDB 15-pin		
VGA Resolution:	1920 x 1440		
Port Selection:	Push Button and Hot-Key Commands		
Auto-Scan Intervals:	5 ~ 99 seconds		
External AC Power Adapter:	9V DC, 1A (TK-801/TK1601 only)		
Dimensions:	<u>TK-401R</u> 202 x 104 x 45mm (8.0 x 4.1 x 1.8 in.) <u>TK-801R</u> 407 x 165 x 45mm (16.0 x 6.5 x 1.8in.) <u>TK-1601R</u> 406 x 165 x 85 mm (16.0 x 6.5 x 3.4 in.)		
Weight:	TK-401R: 835g (1.84lb.) TK-801R: 1.9 kg (4.2 lbs) TK-1601R:2.65 kg (5.85 lbs)		
Operating Temperature:	0°C ~ 40°C (32°F ~104°F)		
Storage Temperature:	-20°C ~ 60°C (-4°F ~ 140°F)		
Humidity:	0%~90%, Non-Condensing		
Certifications:	FCC and CE		

Q1: Do I need to use the included external AC adapter?

A1: It is recommended that you use the included external AC adapter with the TK-801R/TK-1601R KVM switch.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 ports are working properly by testing it with another mouse or keyboard. Once you confirm that the PS/2 ports are functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect or disconnect the KVM cables while the computers are turned on?

A3: Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the interface is Hot-Pluggable.

$\ensuremath{\mathsf{Q4}}\xspace$: Will the KVM switch restore the keyboard settings when switching between computers?

A4: Yes, the KVM switch will restore the keyboard settings when switching between computers. (i.e.: Cap lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: You can switch PCs by pressing the push button on the KVM switch or by using the Hot-Key commands. Go to Section 3 Operation for more information.

If you still encounter problems or have any questions regarding the TK-401R/TK-801R/ TK-1601R please contact Trendnet's Technical Support Department.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-401R/TK-801R/TK-1601R - 2-Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment. WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, Power Supply, and Cables carry a 1 Year Warranty

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.

Download from Www.Somanuals.com. All Manuals Search And Download.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com

TRENDNET

20675 Manhattan Place Torrance, CA 90501 USA



Copyright @2006. All Hights Reserved. THENDRet.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com