




Customer Experience Center  
1-800-331-4331

***COROLLA***

2009  
Quick Reference Guide

Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit [www.ToyotaGuide.com](http://www.ToyotaGuide.com). This user-friendly website makes learning all about your new vehicle fun and easy.

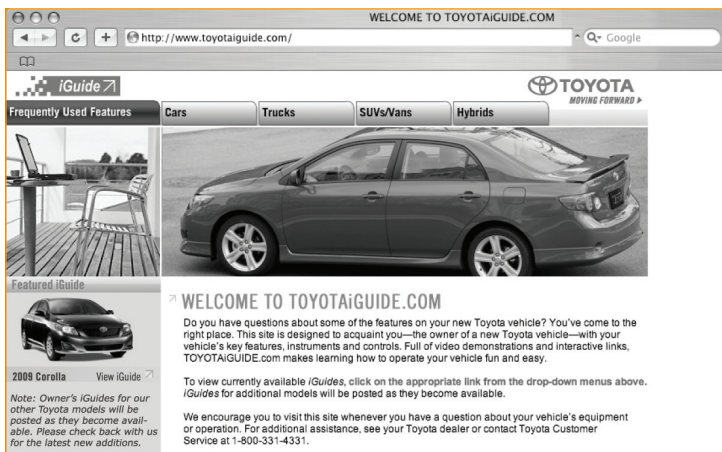

## [www.ToyotaGuide.com](http://www.ToyotaGuide.com)

This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

# 2009 Corolla Quick Reference Guide

## OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>

## FEATURES/OPERATIONS

Air Conditioning/Heating	14
Audio	12-13
<b>Auto lock functions<sup>2</sup></b>	<b>9</b>
Automatic Transmission	8
Auxiliary storage	18
Clock	16
Cruise control	15
Cup holders	18
Door locks-Power	17
Light control-Instrument panel	18
Lights & turn signals	11
Moonroof	17
Multi-information display	15
Parking brake	8
Power outlets	14
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	10
Telephone controls (Bluetooth®)	16
Tilt and telescopic steering wheel	17
Windows-Power	10
Windshield wipers & washers	10

## SAFETY AND

## EMERGENCY FEATURES


Child comfort guide	19
Doors-Child safety locks	20
Seat belts	19
Seat belts-Shoulder belt adjustment	19
Spare tire & tools	21
Tire Pressure Warning System	20
Trunk-Internal release	20

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

# OVERVIEW

## Instrument panel

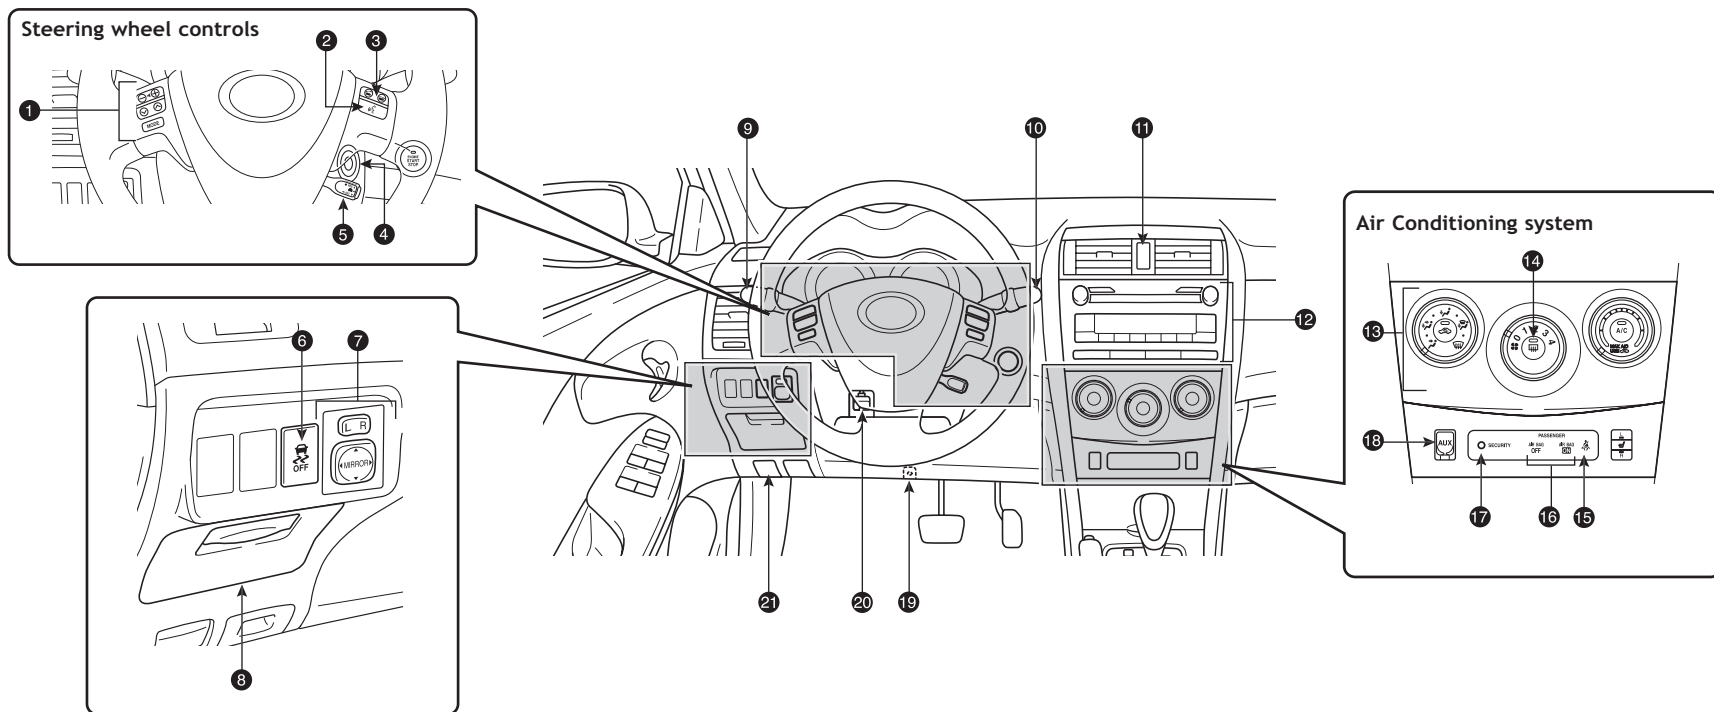

- ❶ Steering wheel audio controls<sup>1,2</sup>
- ❷ Voice command button<sup>1</sup>
- ❸ Telephone controls<sup>1</sup>
- ❹ Engine switch (mechanical key)<sup>1</sup>
- ❺ Cruise control<sup>1</sup>
- ❻ VSC/TRAC OFF switch<sup>1</sup>
- ❼ Power rearview mirror control
- ❽ Auxiliary storage
- ❾ Headlight, turn signal and front fog light<sup>1</sup> controls
- ❿ Wiper and washer controls
- ⓫ Emergency flasher button
- ⓬ Audio system<sup>2</sup>
- ⓭ Air Conditioning controls
- ⓮ Outside rearview mirror<sup>1</sup>/Rear window defogger button


- ⓯ Front passenger seat belt reminder light
- ⓰ "AIR BAG ON" and "AIR BAG OFF" indicator
- ⓱ Engine immobilizer indicator
- ⓲ AUX adapter
- ⓳ Tire Pressure Warning System reset
- ⓴ Tilt and telescopic steering control
- ⓵ Hood lock release lever

<sup>1</sup> If equipped


<sup>2</sup> Vehicles with navigation system: for details, refer to the "Navigation System Owner's Manual."

## Instrument cluster

### Optitron type meters

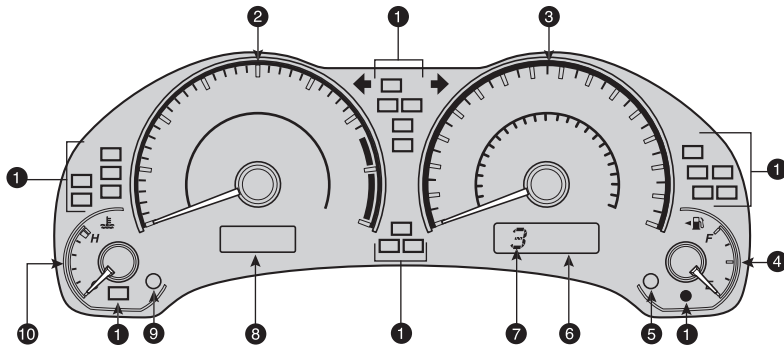



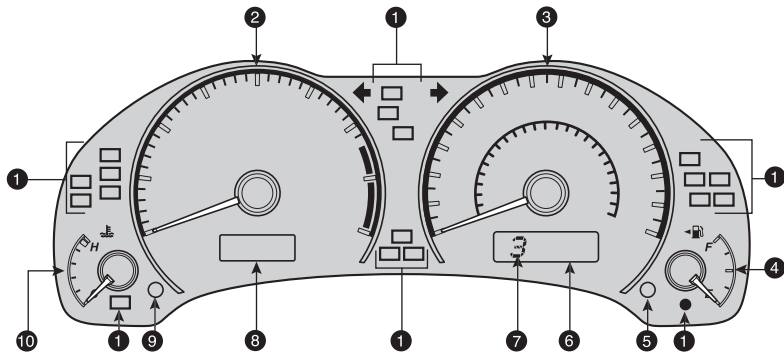












### Non-optitron type meters



- ① Service indicator and reminder
- ② Tachometer
- ③ Speedometer
- ④ Fuel gauge
- ⑤ Trip meter reset/Instrument panel light control
- ⑥ Odometer and two trip meters
- ⑦ Automatic Transmission shift range display (if equipped)
- ⑧ Multi-information display
- ⑨ Display button
- ⑩ Engine coolant temperature





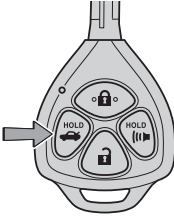

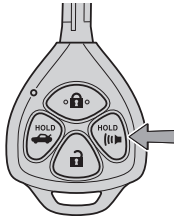

## Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2009 Owner’s Manual.


- BRAKE** Brake system warning<sup>1</sup>
-  Driver seat belt reminder (alarm will sound if speed is over 12 mph)
-  Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
-  Charging system warning<sup>1</sup>
-  “AIR BAG ON” and “AIR BAG OFF” indicator<sup>1</sup>
-  Electric power steering warning<sup>1</sup>
-  Malfunction/Check Engine indicator<sup>1</sup>
-  Low fuel level warning
-  Open door warning
-  SRS Airbag warning<sup>1</sup>
-  Low Tire Pressure Warning<sup>1</sup>
-  Headlight low/high beam indicator
-  Turn signal indicator
-  Fog light indicator
-  Slip indicator<sup>1</sup>
- CRUISE** Cruise control indicator
- ABS** Anti-lock Brake System warning<sup>1</sup>
- VSC OFF** “VSC OFF” indicator<sup>1</sup>
-  Low engine oil pressure warning<sup>1</sup>
- MAINT REQD** Engine oil replacement reminder<sup>1</sup>


<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.
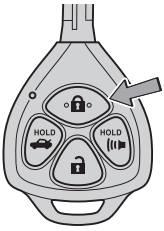
### Keyless entry (if equipped)


<p><b>Locking operation</b></p>  <p>Push </p>	<p><b>Unlocking operation</b></p>  <p>Push ONCE: Driver door TWICE: All doors </p> <p><b>NOTE:</b> If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.</p>
<p><b>Trunk lid operation</b></p>  <p>Push and hold </p>	<p><b>Panic button</b></p>  <p>Push and hold </p>

### Fuel tank door release and cap


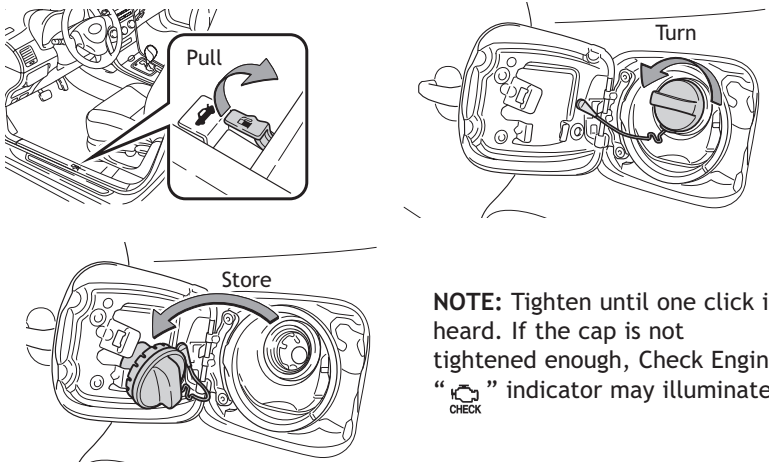


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

### Hood release

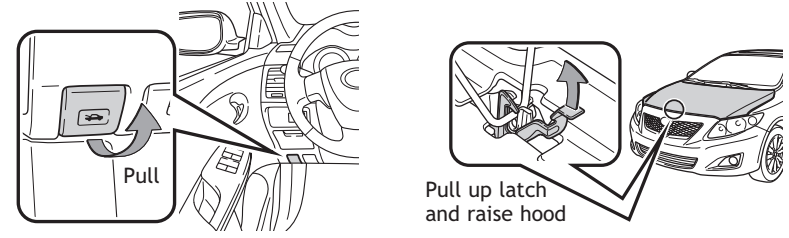

### Engine maintenance

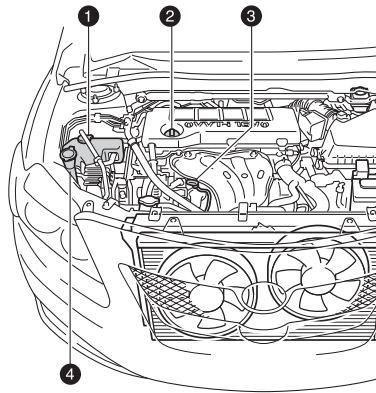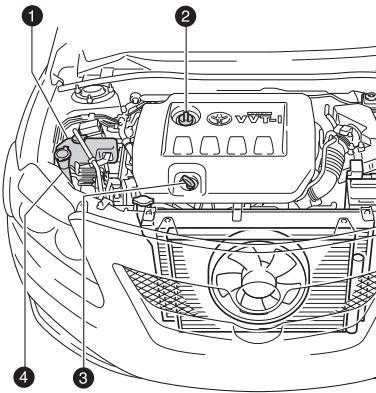
<p><b>4 cylinder (2AZ-FE) engine</b></p> 	<p><b>4 cylinder (2ZR-FE) engine</b></p> 
--	--

- 1 Engine coolant reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

# FEATURES/OPERATIONS

## Automatic Transmission (if equipped)

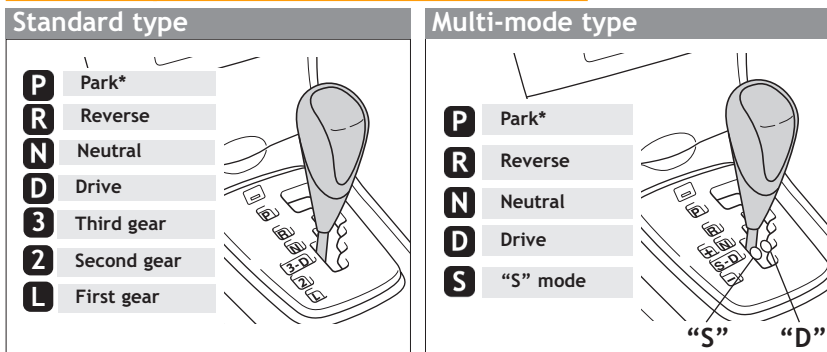

\* The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

### "S" (Sequential) mode


Shift the shift lever to "S" position from "D" position.

#### Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Parking brake

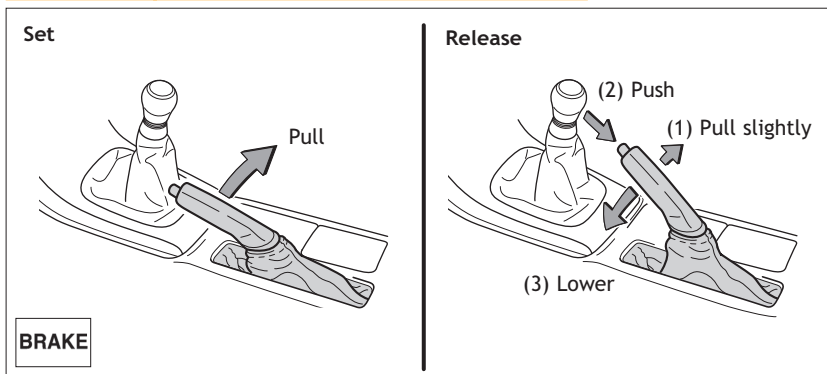

## Auto lock functions (if equipped)

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from "Park."
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into "Park."
- Doors unlock when the driver's door is opened within 10 seconds after setting the engine switch or "ENGINE START STOP" switch OFF.

Refer to the *Owner's Manual* for more details.


## Seat adjustments-Front

### Manual seat




- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle


## Seat adjustments-Rear

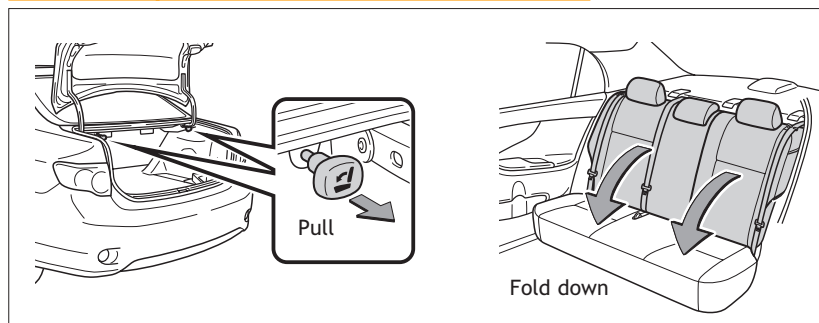


Seats-Head restraints

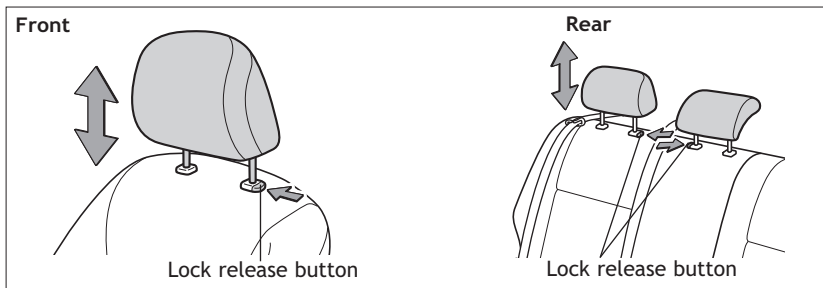

Windshield wipers & washers

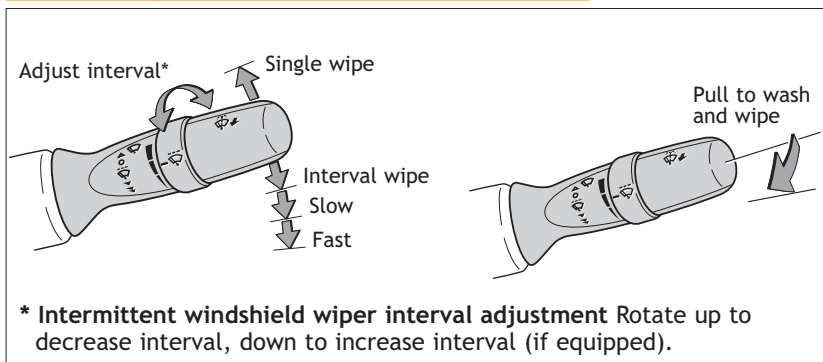


Windows-Power (if equipped)

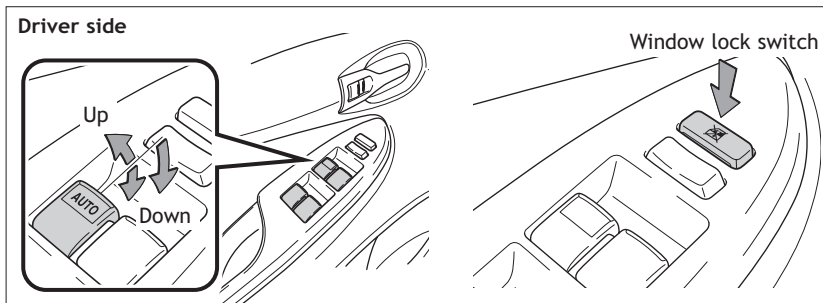


**Automatic operation (driver side only)** Push the switch completely down and release to fully open. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


Lights & turn signals

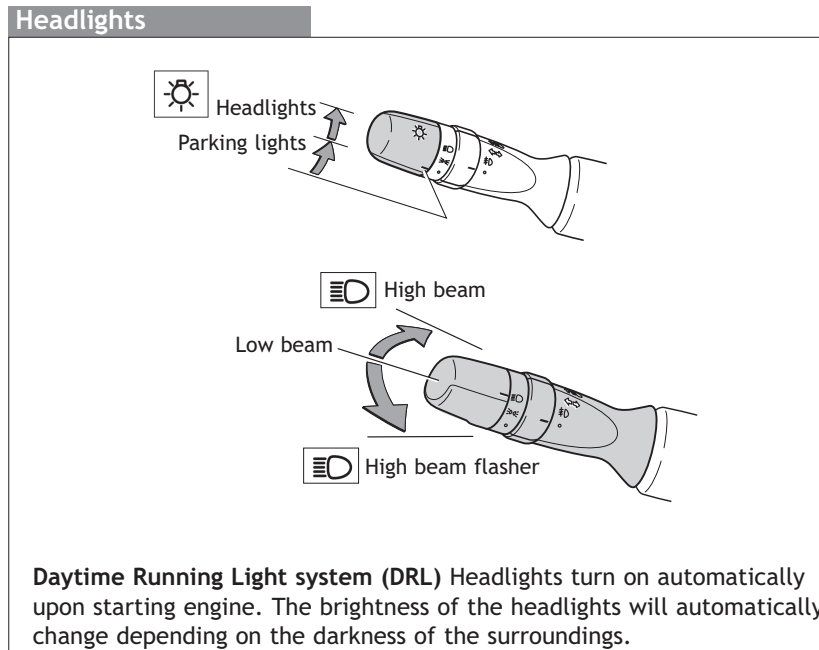

Front fog lights (if equipped)

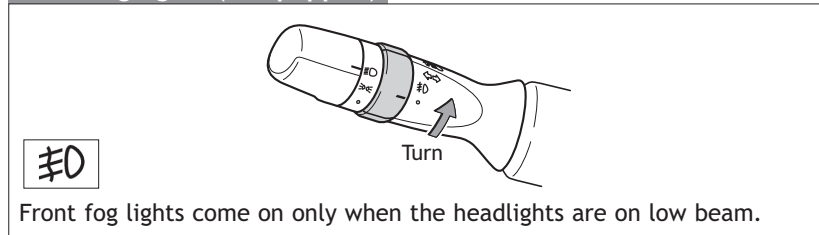


Turn signals

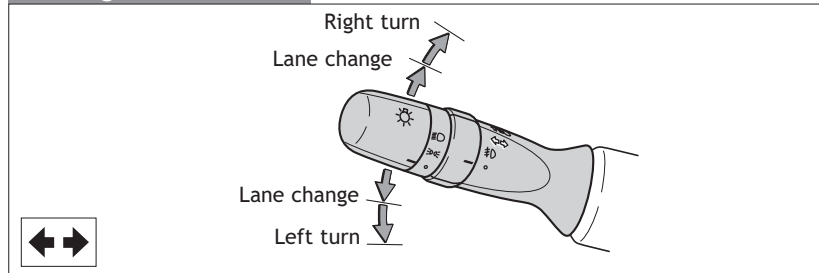




Audio

Type 1 functions

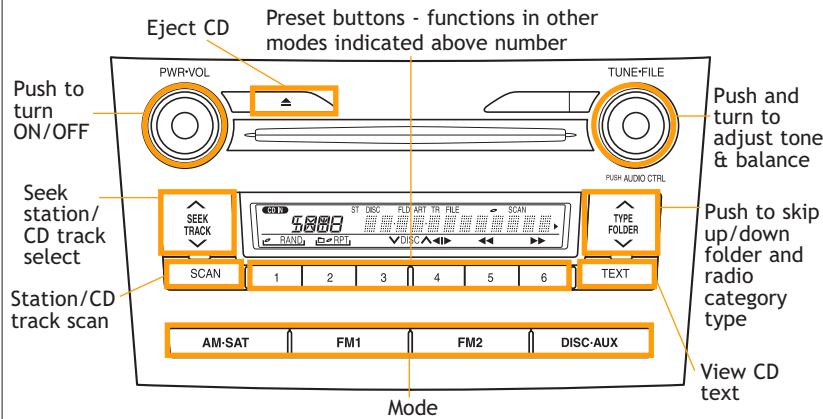

Type 2 other functions

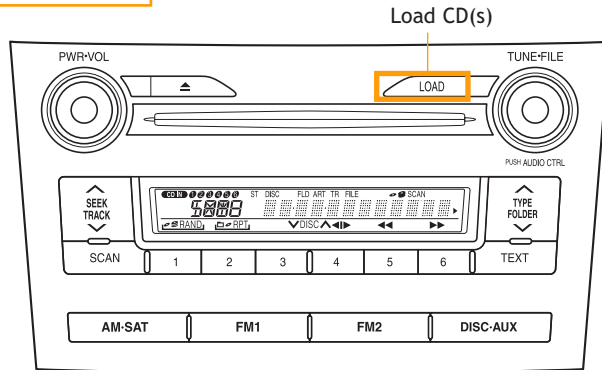

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Type 2)

- To load one disc Push "LOAD" and insert one disc.
  - To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.
- To select a file (MP3/WMA only) Turn "TUNE-FILE."

RADIO


To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX audio jack




Steering wheel switches (if equipped)

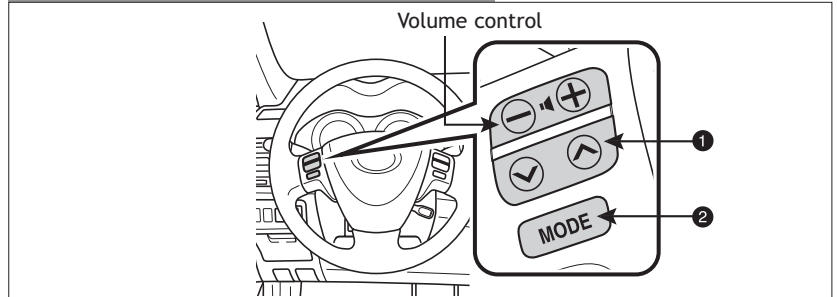

- 1 "V A"  
-In radio mode Push to select a preset station; push and hold to seek the next strong station.  
-In CD mode Push to skip up or down to next/previous track.
- 2 "MODE"  
Push to turn audio ON and to select an audio mode. Push and hold to turn the audio system "OFF."


## Air Conditioning/Heating

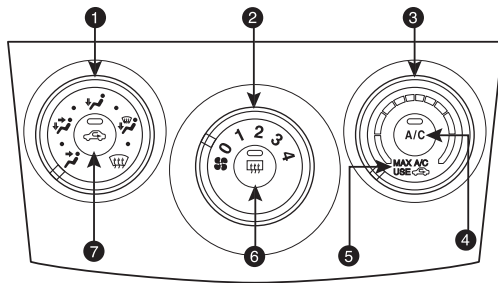


- 1 Airflow vent  
In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- 2 Fan speed
- 3 Temperature
- 4 Air Conditioning ON/OFF
- 5 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- 6 Outside rearview mirror/Rear window defogger
- 7 Fresh or recirculated cabin air

## Power outlets

### Front console (if equipped)

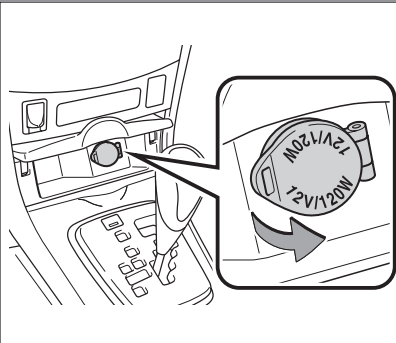


### Center console

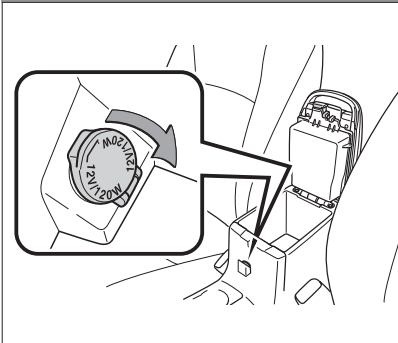


Designed for 12V car accessories.  
The engine switch must be in the “ACC” or “ON” position.

## Cruise control (if equipped)

### Turning system ON/OFF

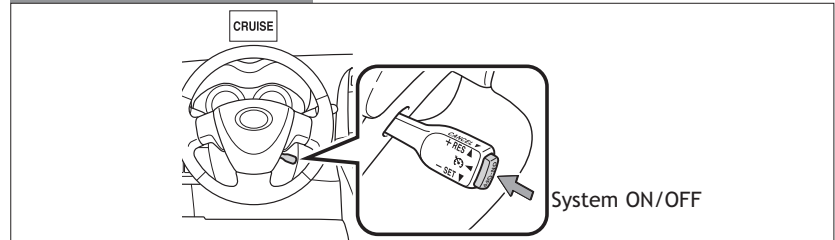


### Functions

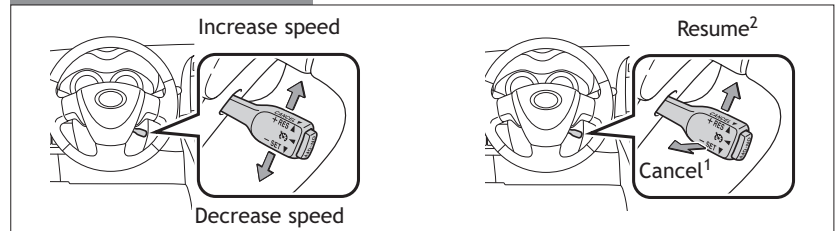

- <sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.
- <sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Multi-information display

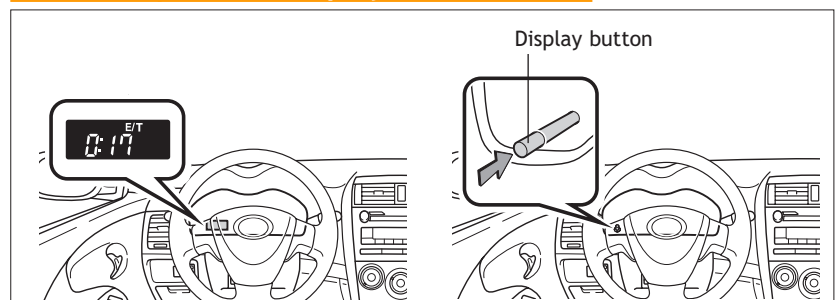


Push the display button to change information in the following:

- (1) Clock
- (2) Outside temperature
- (3) Current gas mileage
- (4) Average gas mileage\*
- (5) Miles left on remaining fuel
- (6) Average vehicle speed from engine start\*
- (7) Running time from engine start\*

\* Push and hold display button to reset.


**Telephone controls (Bluetooth®) (if equipped)**

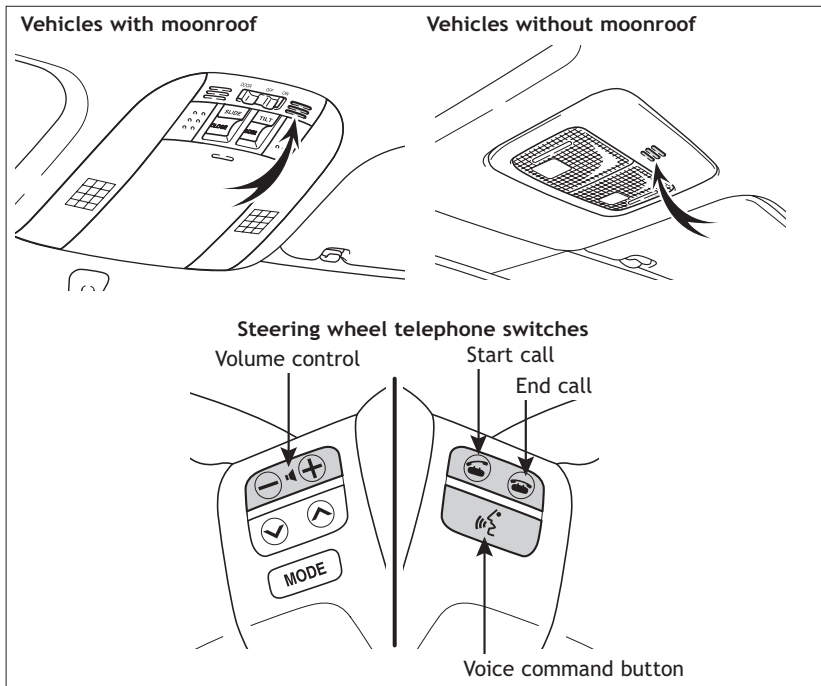

Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to the *Owner's Manual* for more details.

**Clock**

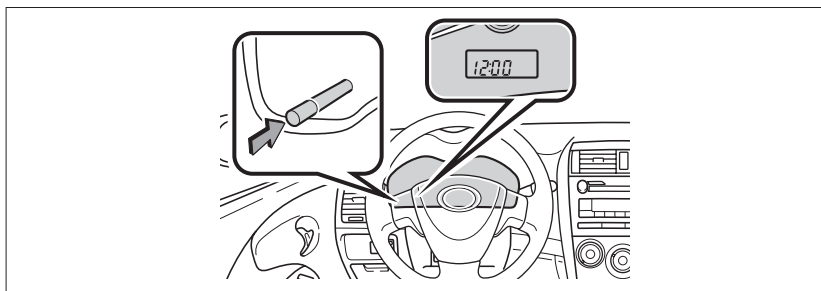


- (1) Push and hold the display button to set the clock.
- (2) While flashing, press button repeatedly to adjust minutes.
- (3) Wait five seconds to adjust the hour.
- (4) Wait another five seconds for process to complete.

**Moonroof (if equipped)**

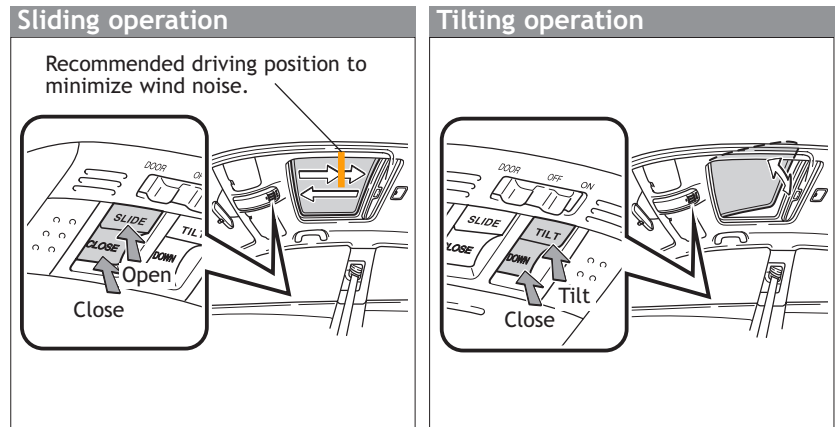


**Tilt and telescopic steering wheel**

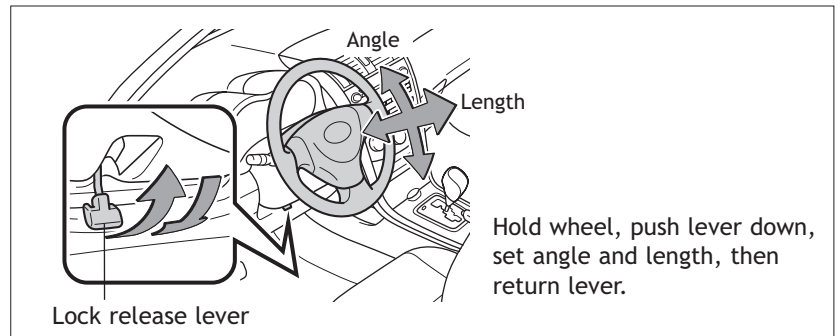


**Note:** Do not attempt to adjust while the vehicle is in motion.


**Door locks-Power(if equipped)**

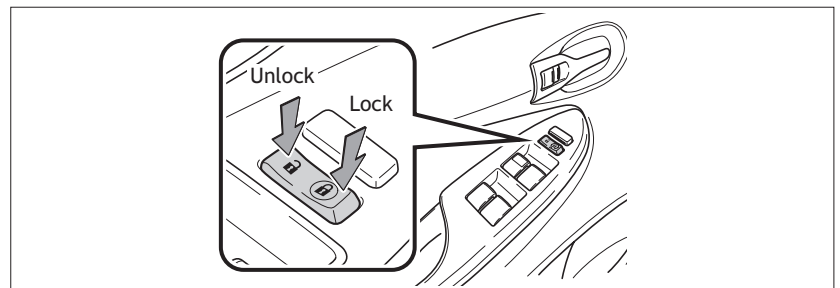


Light control-Instrument panel

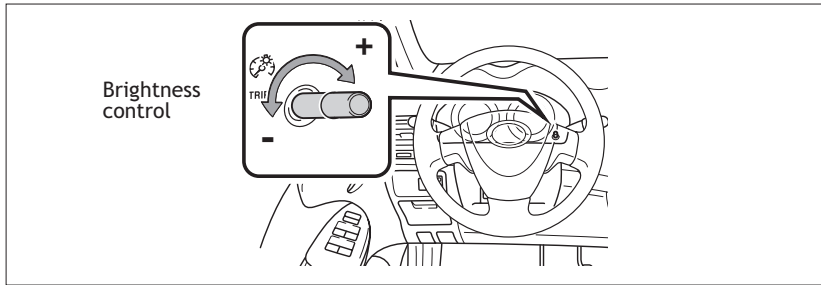


Cup holders

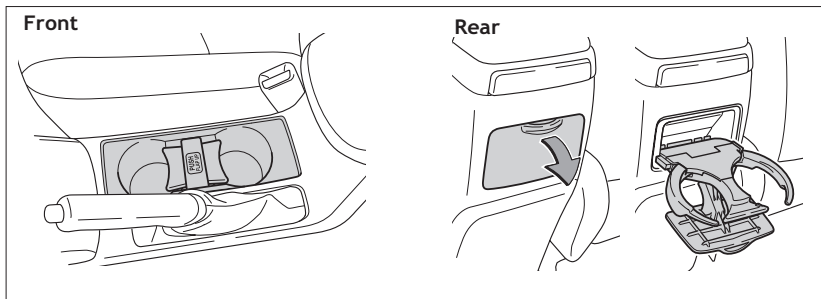


Auxiliary storage

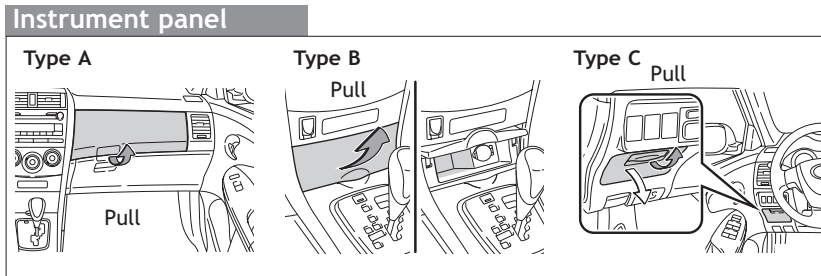

Overhead console

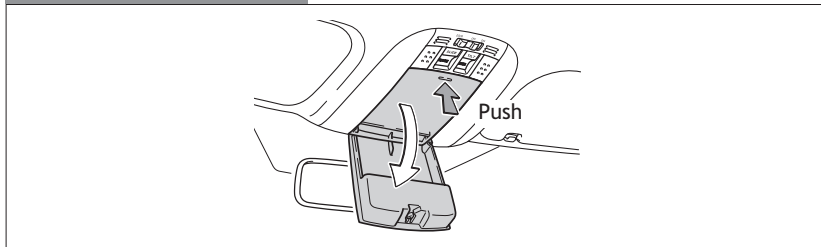


Seat belts

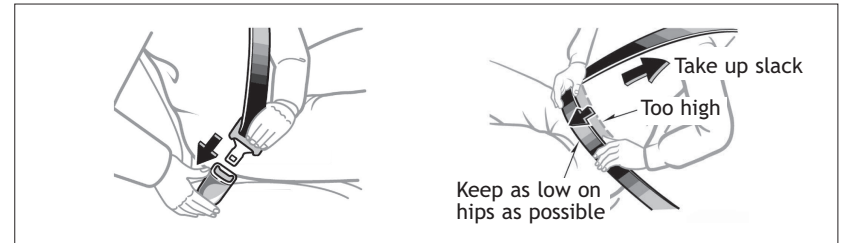


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt adjustment

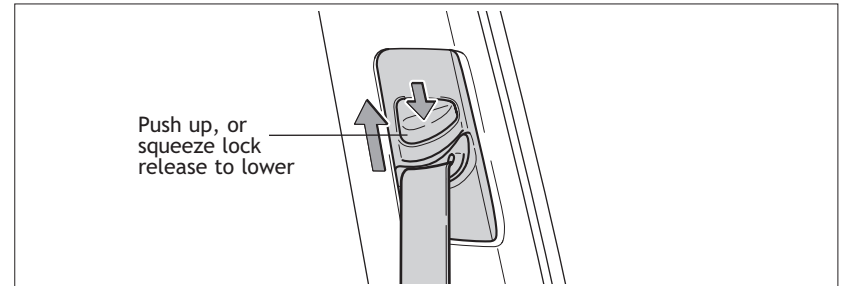

Child comfort guide

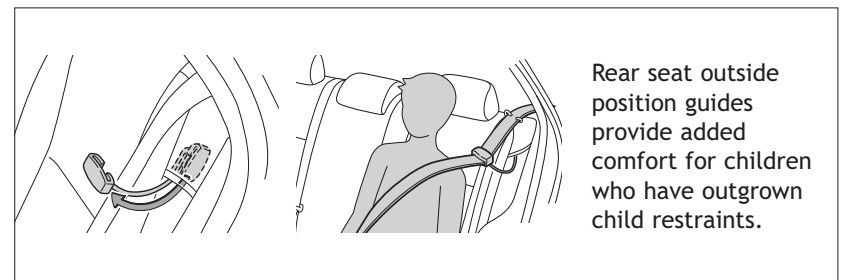

## Tire Pressure Warning System

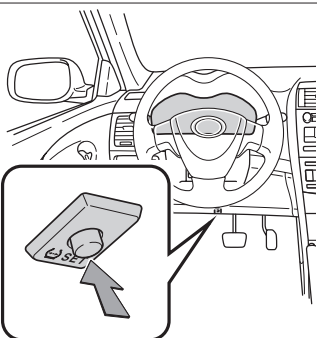


### System reset initialization

1. Push and hold “(SET)” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

If tire pressure becomes critically low on any of the tires, indicator comes on. Pushing “(SET)” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.


Refer to the *Owner's Manual* for more details.

## Trunk-Internal release

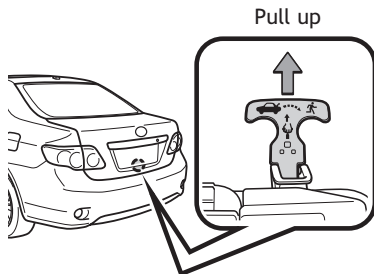

## Doors-Child safety locks


Rear door

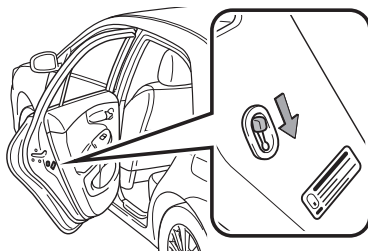


Moving the lever to “LOCK” will allow the door to be opened only from the outside.

## Spare tire & tools

### Tool location

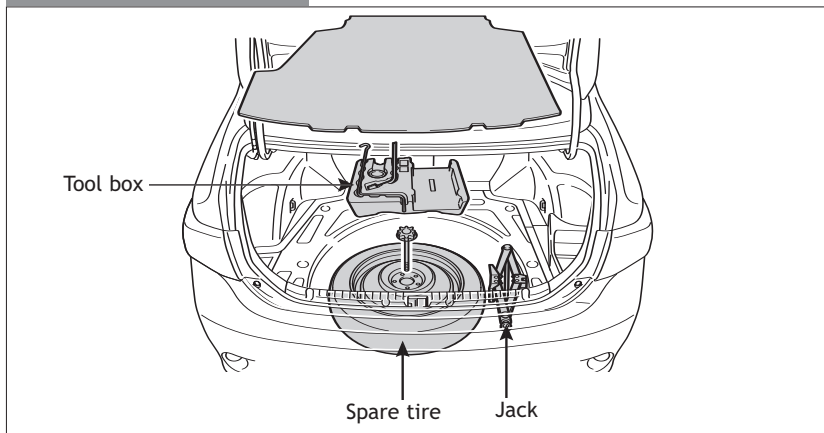

### Removing the spare tire

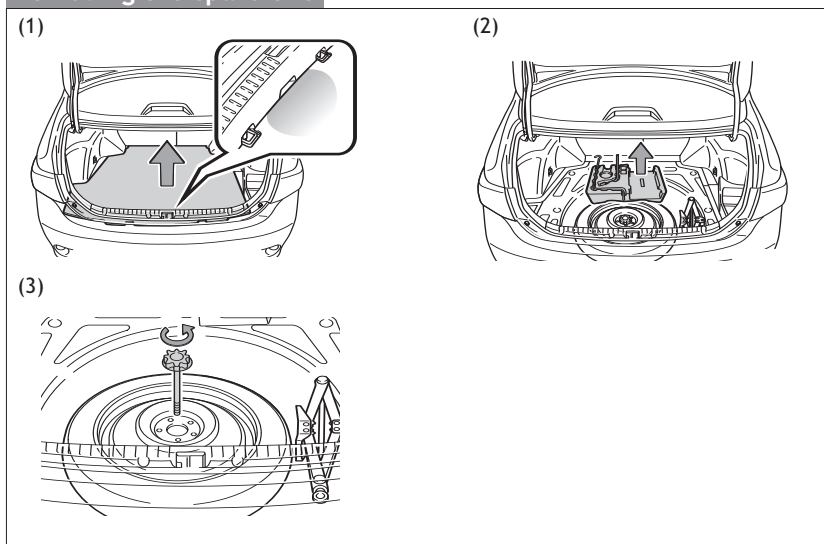

- (1) Remove the luggage floor cover.
- (2) Remove the tool tray.
- (3) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>