

DTC	P1335	Crankshaft Position Sensor Circuit Malfunction (During engine running)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335 (Crankshaft Position "A" Circuit Malfunction) on page [DI-74](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335	If conditions (a) through (c) are met: (a) NE \geq 1,000 rpm (b) NE signal is not detected for over 50 m sec. (c) Not during cranking	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Signal plate • ECM

WIRING DIAGRAM

Refer to DTC P0335 on page [DI-74](#).

INSPECTION PROCEDURE

Refer to DTC P0335 on page [DI-74](#).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>