

EMAIL US

<<http://www.scion.com/>> , "Contact"

CHAT

On weekdays you can chat with a Scion Customer Advocate.

<<http://www.scion.com/>> , "Have a Question?" or "Contact"

CALL US

For the Scion Customer Experience dial 1.866.70.SCION.

2006



MAILING ADDRESS

Scion
19001 S. Western Ave.
D102, P.O. Box 2742
Torrance, CA 90509-2742
USA

OUR WEBSITE

<<http://www.scion.com/>>



Scion xB

Pocket Reference Guide

©2005 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.
00452-PRG06-XB

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

2006 SCION xB

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION xB.

! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description of SCION xB operations. Every xB owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

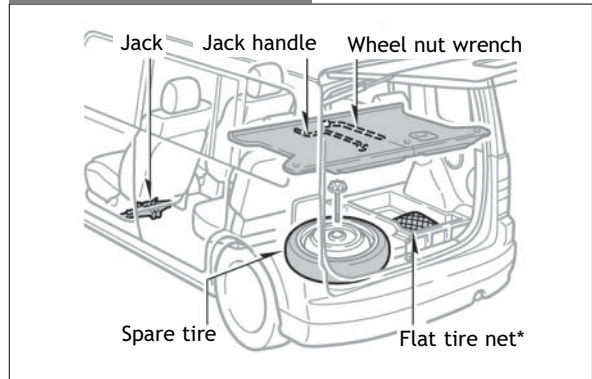

Removing the spare tire

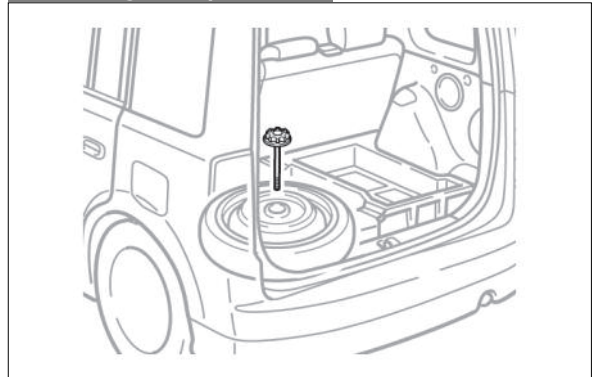

Loosen the bolt and remove it.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.


*Flat tire will not fit into spare tire compartment. Use net to secure flat tire, and refer to your *Owner's Manual* for more details

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	8
Fuel tank door release and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	7
FEATURES/OPERATIONS	
Air conditioning/Heating	14
Automatic transmission	9
Clock	14
Cup holders	15
Door locks	10
Grocery bag hooks	15
Light control-Instrument panel	14
Lights & turn signals	12
Luggage storage box	15
Manual transmission	9
Parking brake	10
Seat adjustments-Front	10
Seat adjustments-Rear	11
Seats-Head restraints	11
Tilt steering wheel	11
Windows	13
Windshield wiper & washer	13
SAFETY AND EMERGENCY FEATURES	
Doors-Child safety locks	16
Seat belts	16
Seat belts-shoulder belt anchor	16
Spare tire & tools	17

OVERVIEW

Instrument panel

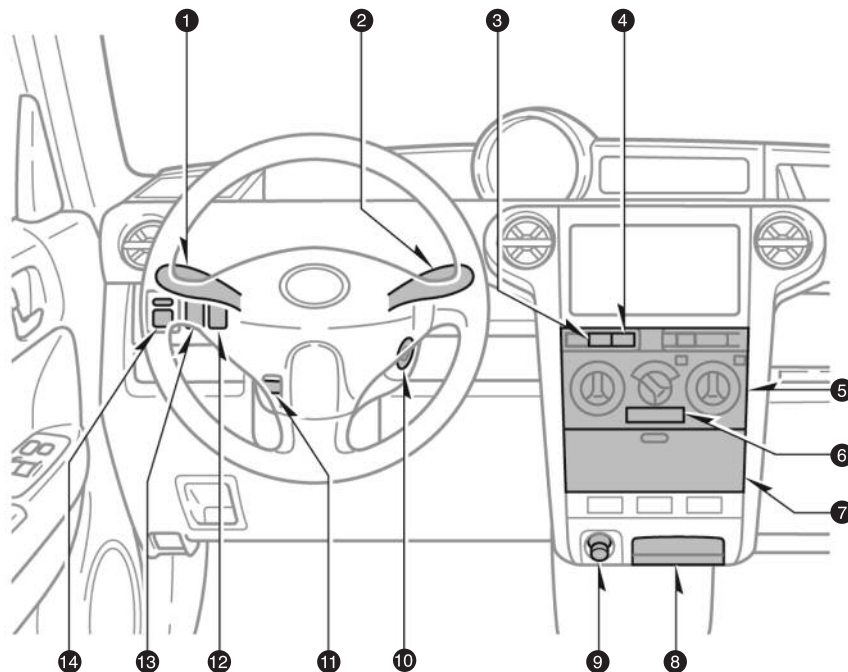

① Headlight and turn signal controls

② Wiper and washer controls

③ Rear window defogger switch

④ Emergency flasher switch

⑤ Air conditioning controls

⑥ Front passenger seat belt reminder light

⑦ Auxiliary box

⑧ Ashtray

⑨ 12V DC Power outlet/Cigarette lighter

⑩ Ignition


⑪ Tilt steering lock release

⑫ Traction control system off




 


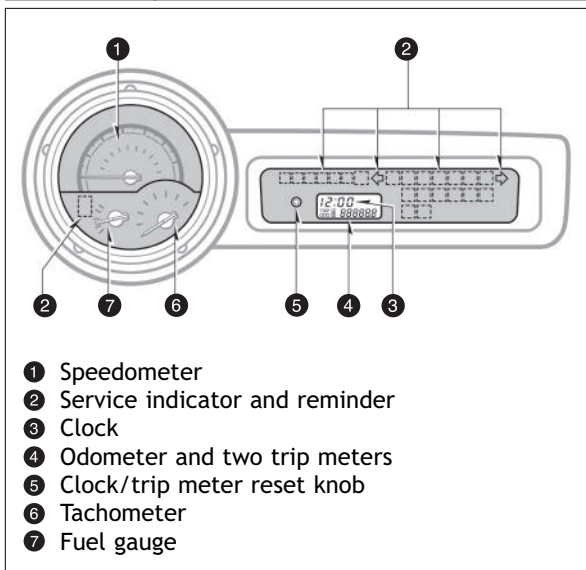


⑬ Instrument panel light control





 
 




⑭ Power rear view mirror controls

Instrument cluster



Indicator symbols

-  Brake system warning¹
-  Driver seat belt reminder¹
-  Front passenger seat belt reminder¹
-  Charging system warning¹
-  Malfunction/Check Engine indicator¹
-  Low engine oil pressure warning¹
-  Low fuel level warning¹
-  Open door warning¹
-  Airbag SRS warning¹

-  Blue: Low engine coolant temperature indicator²
 Red: High engine coolant temperature warning¹
-  Engine oil replacement reminder¹
-  Turn signal indicators
-  Headlight high beam indicator
-  Vehicle Stability Control/Traction Control warning¹
-  Headlight indicator
-  Overdrive-off indicator
-  Slip indicator
-  Traction control system off indicator
-  Anti-lock Brake System warning¹


CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2006 Owner’s Manual.


² For details, refer to “Engine coolant temperature indicator and warning light” Section 1-6, 2006 Owner’s Manual.

Fuel tank door release and cap

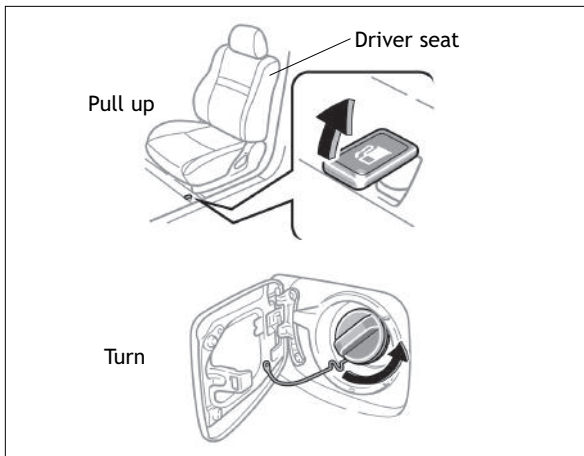


NOTE: If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Hood release

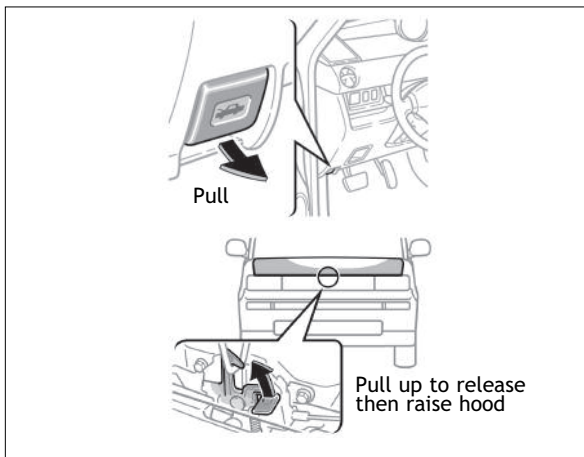

Keyless entry

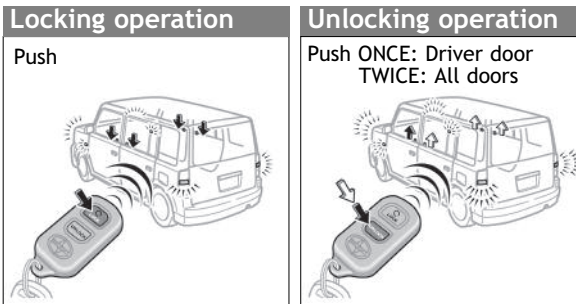


NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

Alarm operation




Engine maintenance

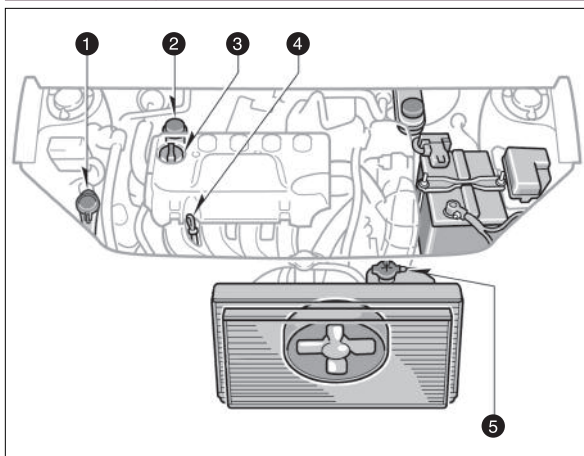

- ① Windshield washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick
- ⑤ Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

Automatic transmission (if equipped)

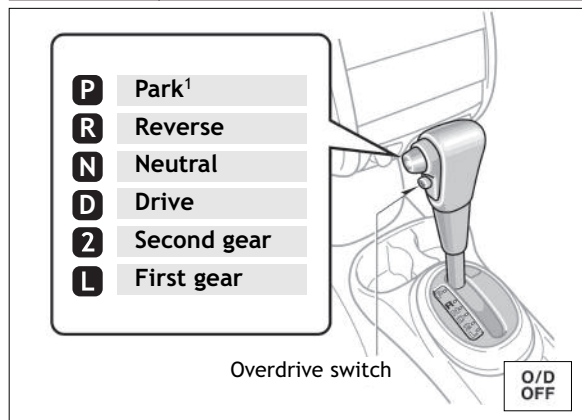

¹The ignition must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Overdrive switch

To turn "ON" or "OFF" Depress the overdrive switch to choose either three-speed ("OFF") or four-speed ("ON") operation. During normal driving conditions, always drive with overdrive "ON," this allows the transmission to shift automatically into four-speed operation at higher speeds, improving fuel economy. If the indicator light on the instrument cluster is illuminated, overdrive is "OFF."


Manual transmission (if equipped)

For safety, the engine will not start unless the clutch pedal is FULLY depressed.

Parking brake

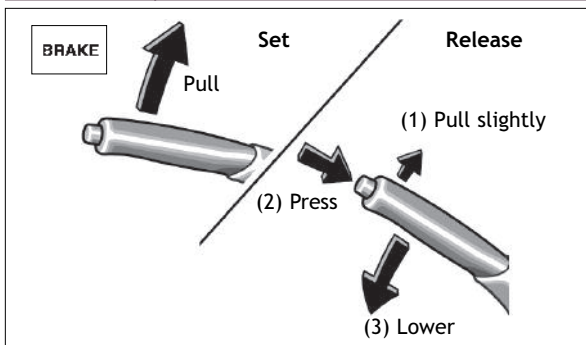


Door locks

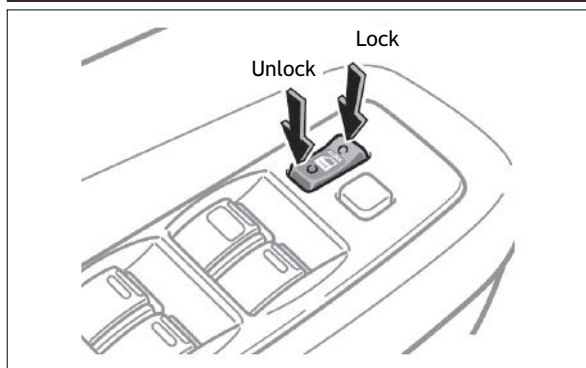


Seat adjustments-Front




Seat adjustments-Rear

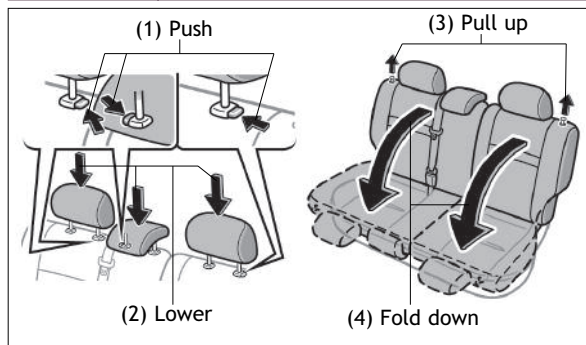

Seats-Head restraints

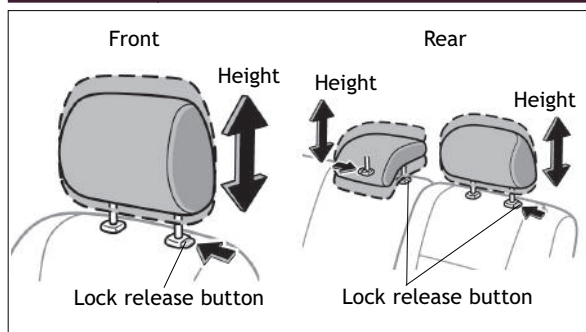

Tilt steering wheel

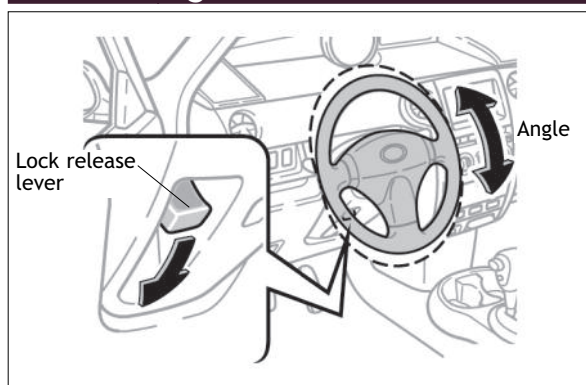


Hold wheel, push lever down, set angle then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

Headlights

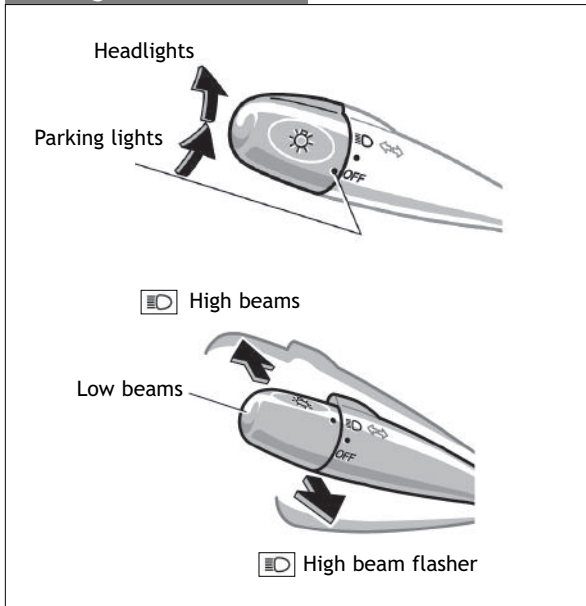


Turn signals

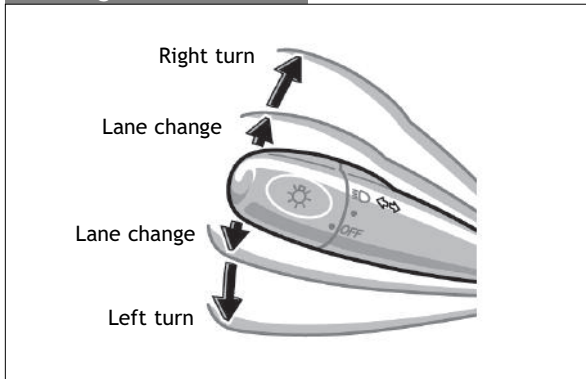


Windshield wiper & washer


Front

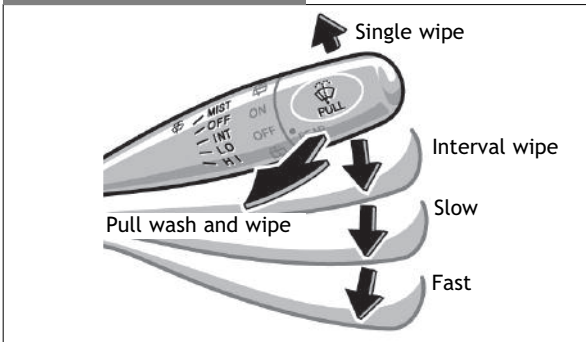

Rear

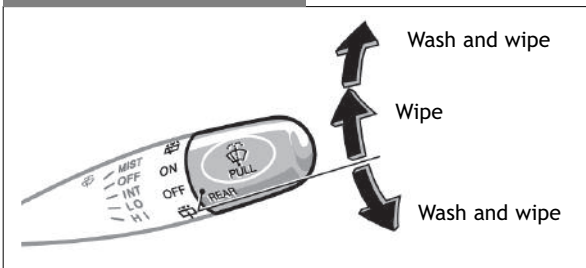


Windows

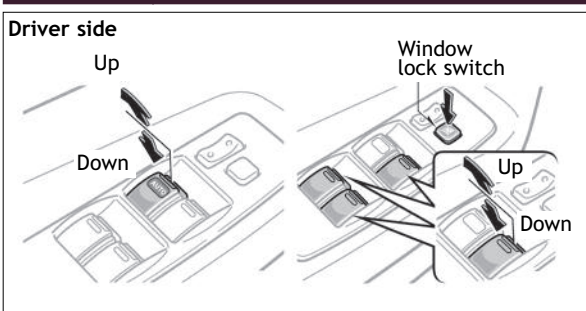


Window operation

Automatic down operation (driver side only) Push the switch completely down and release to fully open. To stop window mid-way, lightly push the switch in the opposite direction.


Light control-Instrument panel

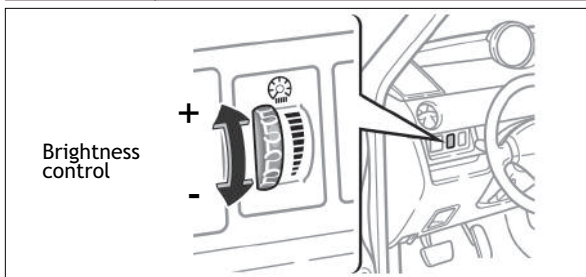

Cup holders

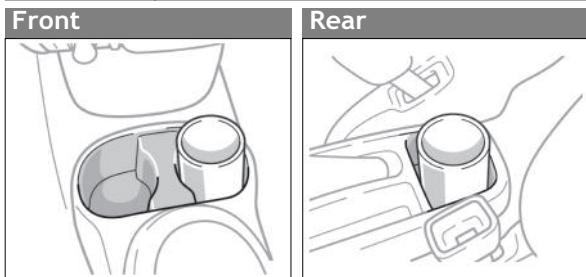


Air conditioning/Heating

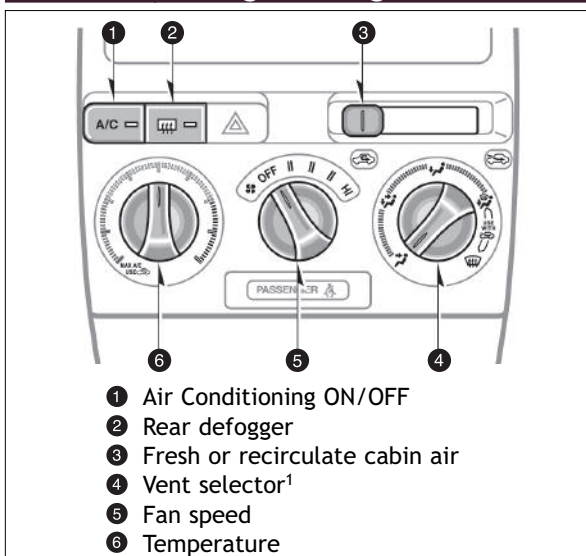

¹ “” or “”, use fresh air to reduce window fogging.


Clock

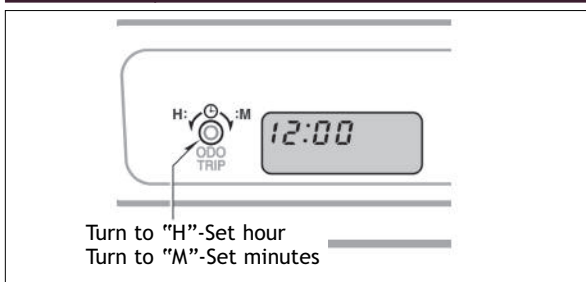

Grocery bag hooks




Luggage storage box

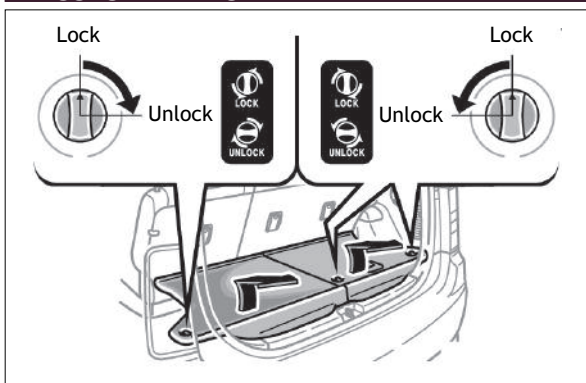


SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks

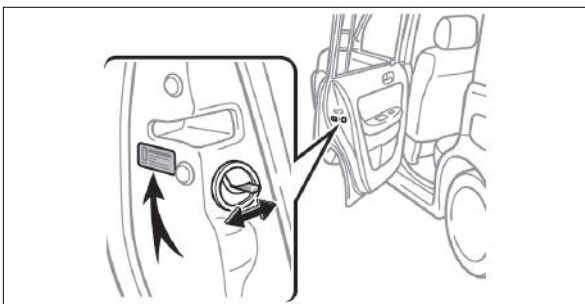

Move the lever to "LOCK," allowing the door to be opened only from the outside.


Seat belts

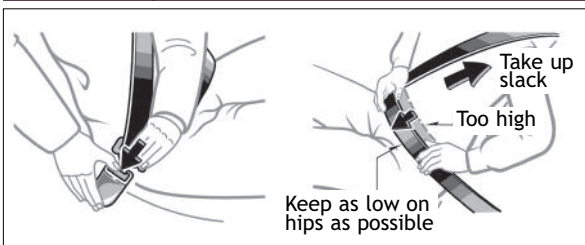

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

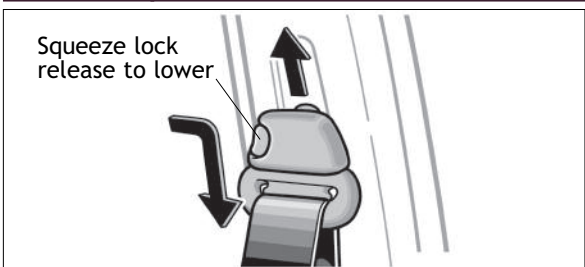

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>