


TRICITY BENDIX

*OPERATING & INSTALLATION
INSTRUCTIONS*

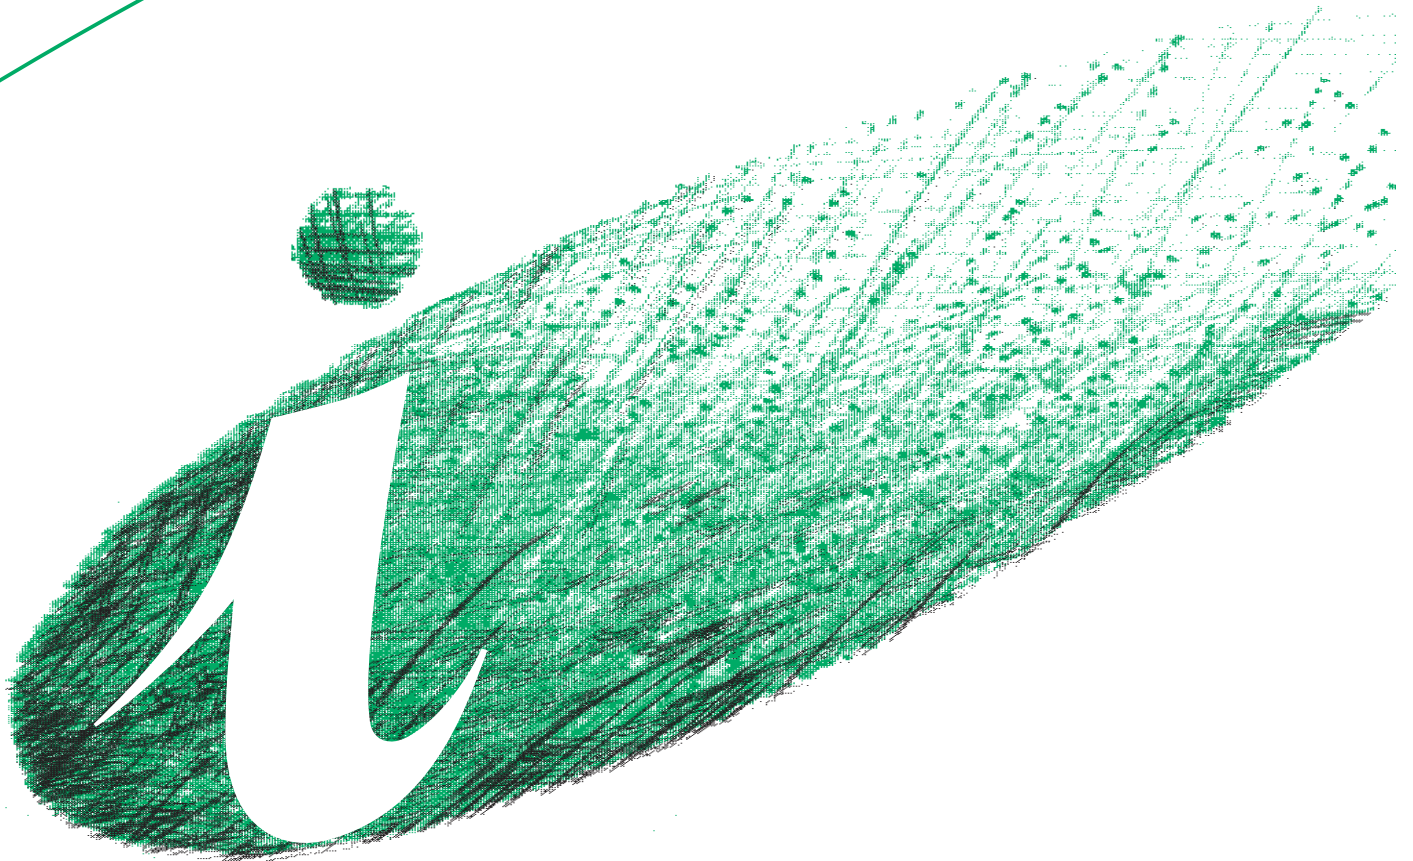

BUILT IN OVEN

TBS 749

Important Safety Instructions



These warnings are provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these **WARNINGS**, contact the Customer Care Department.

Installation

The oven must be installed according to the instructions supplied. Any electrical work must be undertaken by a qualified electrician/competent person.

This oven is heavy and care must be taken when moving it. Do not try to move the appliance by pulling the door handle.

Remove **all packaging**, both inside and outside the oven, before using the appliance. After installation, please dispose of the packaging with due regard to safety and the environment.

It is dangerous to alter the specifications or modify the appliance in any way.

During Use

This oven has been designed for cooking edible foodstuffs only and **must not** be used for any other purposes.

Never line any part of the oven with **aluminium foil**. Do not allow heatproof cooking material, e.g. roastings bags, to come into contact with oven elements.

Never place plastic or any other material which may melt in or on the oven.

Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Do not hang towels, dishcloths or clothes from the oven or its handle. They are a **safety hazard**.

Do not use this oven if it is in contact with water and never operate it with wet hands.

Always cook with the oven door closed.

Use any oven proof cookware which will withstand temperatures of 270 C.

Take **great care** when heating fats and oils as they will ignite if they become too hot.

Always use oven gloves to remove and replace food in the oven. Similarly always use oven gloves to remove and replace the grill pan handles, before and after grilling.

Always remove the grill pan handles when grilling.

Ensure that you **support** the grill pan when removing it from the oven.

Take care to follow the recommendations given for tending the food when grilling.

Always stand back from the oven when opening the oven door, to allow any build-up of steam or heat to release.

Stand clear when opening the drop down oven door. **Do not** allow it to fall open – support the door using the door handle, until it is fully open.

Ensure that all control knobs are in the **OFF** position when not in use.

Do not leave cookware containing foodstuffs, e.g. fat or oil in or on the oven in case it is inadvertently switched **ON**.

When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooking appliance.

Child Safety

This appliance is designed to be operated by adults. Young children **must not** be allowed to tamper with the controls or play near or with the appliance.

Accessible parts, especially around the grill area, become hot when the cooker is in use. Children should be **kept away** until it has cooled.

The front of the oven gets hot during use : always keep small children away.

Maintenance and Cleaning

Only clean this oven in accordance with the instructions.

The oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

For safety reasons, do not clean the appliance with a steam or high-pressure cleaner.

Always switch off at the electrical supply prior to carrying out any cleaning or maintenance work.

Service

You must not attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Refer to your local TRICITY BENDIX Service Force Centre. Always insist on genuine TRICITY BENDIX spare parts.

Disposal of an old appliance

Make the appliance unusable, by cutting off the cable, and remove any door catches, to prevent small children being trapped inside.

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred, always ensure that the book is left with the appliance in order that the new owner can get to know the functions of the appliance and the relevant warnings.

Table of contents

FOR THE USER		FOR THE INSTALLER	31
Important Safety Instructions	3	Technical information	31
YOUR BUILT-IN OVEN	6	Fitting the oven into an "in column" or "under counter" cabinet	32
BEFORE THE FIRST USE	7	Electrical connections	33
THE ELECTRONIC PROGRAMMER	8	Choice of electrical connections	34
To set the time of day	8		
To set the minute minder	8		
To set the timer to switch off only (Immediate start - Automatic stop)	9		
To set the timer to switch the oven on and off (Deferred start - Automatic stop)	9		
OVEN CONTROLS	10		
The function selector	10		
The temperature control	10		
The neon indicator lights	10		
THE OVEN CAVITY	11		
Oven accessories	12		
The cooking levels	12		
THE DIFFERENT COOKING SETTINGS	13		
COOKING FUNCTIONS	14		
Fan oven	14		
Thermal grilling	16		
Roasting meat	17		
Preheating	18		
Conventional oven	19		
Grill	20		
HINTS FOR SUCCESSFUL COOKING	21		
COOKING GUIDES	22		
CLEANING AND CARE	24		
Programming semi-automatic cleaning ...	26		
Programming fully automatic cleaning	26		
REPLACING THE OVEN LIGHT	27		
IF SOMETHING DOESN'T WORK ?	28		
SERVICE AND SPARE PARTS	29		
GUARANTEE CONDITIONS	30		

Guide to use the Instruction Book

This section explains standard symbols used throughout to make it easier for the User to find information i.e



Safety instructions

1.2.3.

Step by step instructions for an operation




Hints and tips



Environmental information

YOUR BUILT-IN OVEN


General view

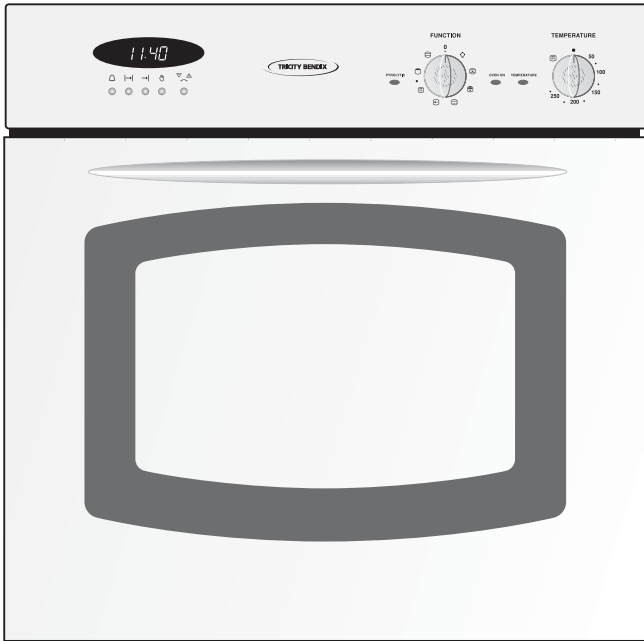

Control panel with electronic timer, function selector and temperature control


Ergonomic oven door handle

Control panel

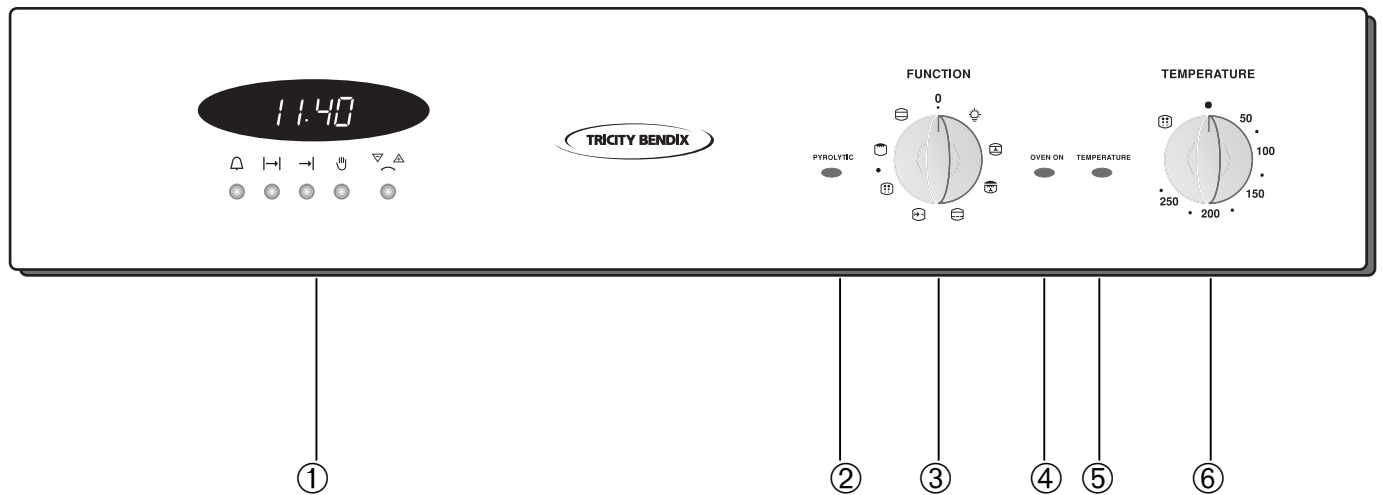

- ① Electronic timer
- ② Pyrolytic cleaning indicator light
- ③ Function selector
- ④ Oven on indicator light
- ⑤ Temperature indicator light
- ⑥ Temperature control


BEFORE THE FIRST USE

 Remove **all packaging**, both inside and outside the oven, before using the appliance.


First cleaning


Remove the accessories and wash in warm and soapy water. Then rinse and dry carefully.

First heating up

 In order to remove possible production residues, clean the appliance and heat up the oven without food once prior to first use. Ensure that the room is well-ventilated. Some unusual odours may be emitted for a short while. This is normal.


How to proceed ?

1. Remove all accessories from the oven.
2. Remove any labels and protective film from the front of the oven.
3. Set the time of day (refer to "THE ELECTRONIC PROGRAMMER" chapter).
4. Set the function selector to conventional oven  and the temperature control to position 270 C.
5. Heat the oven for an hour to remove the odour from the insulation.

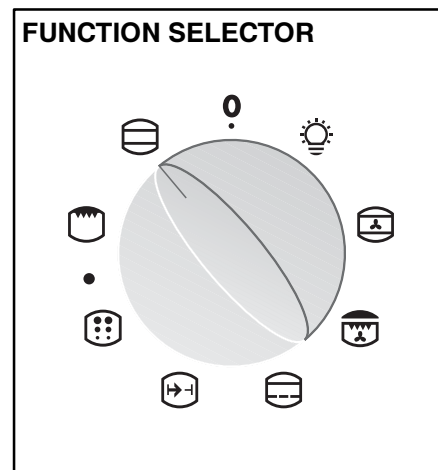

The cooling fan

A cooling fan keeps the oven surrounds (control panel, timer...) cool. It starts up as soon as the oven is switched on. It is perfectly normal to hear the cooling fan running for a few minutes after the oven is turned off.

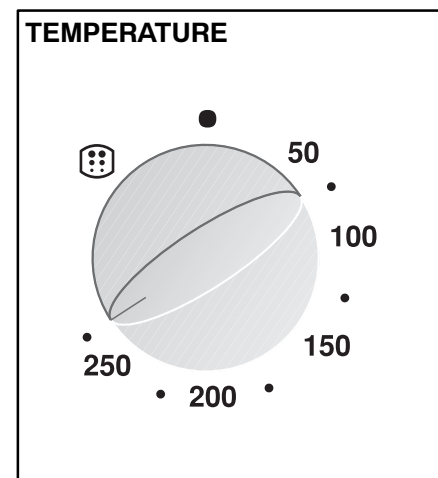

THE ELECTRONIC PROGRAMMER

Symbol displayed when a programme is in operation

Symbol displayed when the child safety is in operation




Auto symbol : indicates the automatic operation

1st button : time setting, minute minder, alarm switch off

2nd button : cooking or pyrolytic cleaning duration

3rd button : cooking or pyrolytic cleaning end

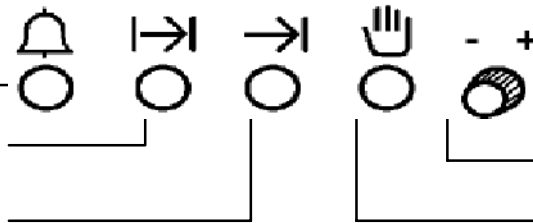


Time setting knob

4th button : manual function


To set the time of day

Press buttons and and at the same time turn the time setting knob until the correct time of day is displayed.

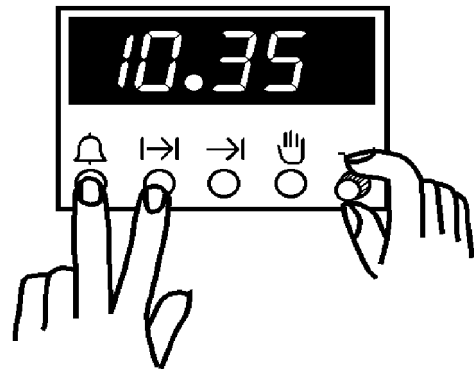

Manual function

Press button to set the oven for manual function.

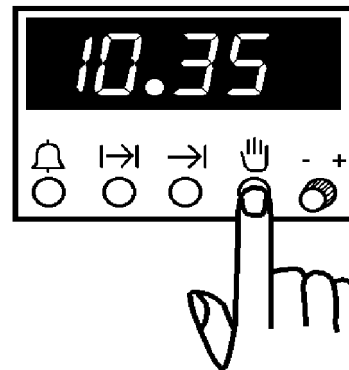


To set the minute minder

Press button and at the same time turn the time setting knob until the duration time is displayed (maximum 23 hours, 59 minutes). After a few seconds the time of day will show in the display.

To check the number of minutes remaining, press the button. At the end of the timed period an alarm will sound. To switch off the alarm press button .


The minute minder does not stop the cooking when the duration has elapsed. To stop the oven set the temperature control on and the function selector on 0.

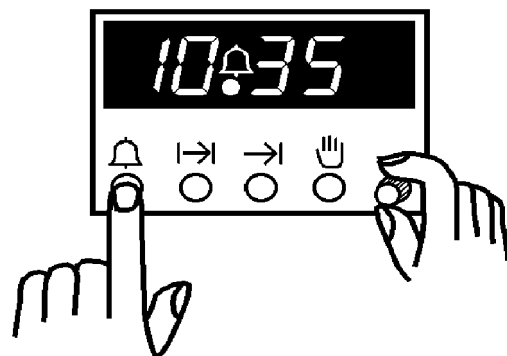

To set the timer to switch off only

(Immediate start - Automatic stop)


This is useful if you want to begin cooking immediately but have the oven switched off automatically.

1. Set the function selector knob and the temperature control knob on the required settings.
2. Place the dish in the oven.
3. Press button  and, at the same time, turn the time setting knob until the required cooking duration is displayed.

At the end of the cooking time the oven will switch off, an alarm will sound.


Turn the function and temperature knobs on the Stop position (temperature control on ● and function selector on 0).

To switch off the alarm press button .

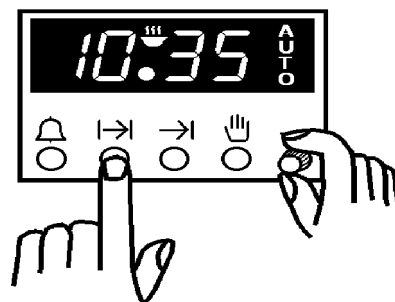

To set the timer to switch the oven on and off


 
(Deferred start - Automatic stop)

1. Ensure the clock is showing the right time of day.
2. Carry out steps 1, 2 and 3 as explained in "To set the timer to switch off only".
3. Press button  and at the same time turn the time setting knob until the end cooking time is displayed.


 
At the end of the cooking time the oven will switch off, an alarm will sound.

Turn the function and temperature knobs on the Stop position (temperature control on ● and function selector on 0).

To switch off the alarm press button .

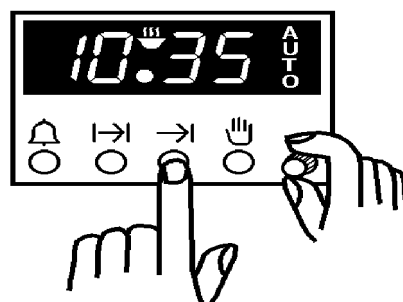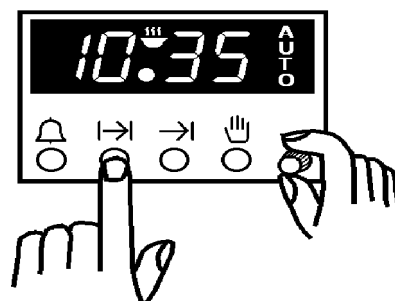

To cancel a programme

1. Press button  and, at the same time, turn the time setting knob until the cooking duration is set on "0".
2. If the end cooking time has been set too, press button  and at the same time, turn the time setting knob until the end cooking time is set on "0".

Child safety

To prevent a child switching on the oven during your absence, your oven is equipped with a "locking system".

When the oven is switched off press at the same time the buttons "COUNTDOWN" and "COOK TIME" : "On" is displayed.

Immediately turn the time setting knob clockwise with one step only : "Of" is displayed. The child safety symbol is displayed after a few seconds.











To deactivate the child safety, repeat this operation. The child safety symbol disappears : you can now use your oven.



OVEN CONTROLS

The function selector


To obtain the desired cooking mode, turn the function selector :

Oven light	
Fan oven	
Thermal grilling	
Roasting meat	
Preheating	
Conventional oven	
Top element	
Grill	
Full grill	
Pyrolytic cleaning	

Once a function has been selected, an appropriate temperature must be set for the oven to heat up.

To switch off the oven turn the temperature control to ● and then the function selector to 0.

The oven light comes on as soon as the function selector is turned. The light remains on during cooking.

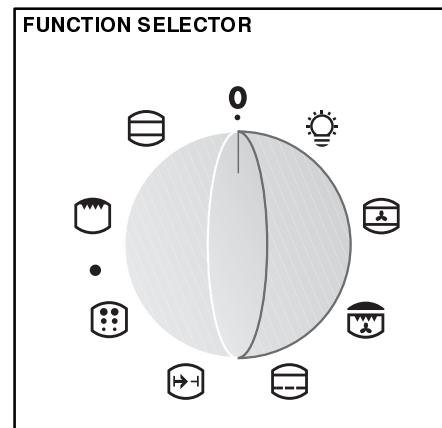

The temperature control

The temperature is selected by turning the temperature control knob clockwise. The knob is graduated from 50 C to 270 C.

The neon indicator lights


Oven on


The indicator light comes on when the appliance is switched on, and goes out when the function selector is in the Off position (0).

Temperature

The indicator light comes on while the oven is pre-heating and goes out when the required temperature is reached. It switches on and off during cooking to indicate that the temperature is being maintained.


Pyrolytic cleaning

The indicator light comes on when the function selector is on the "pyrolytic cleaning" setting .

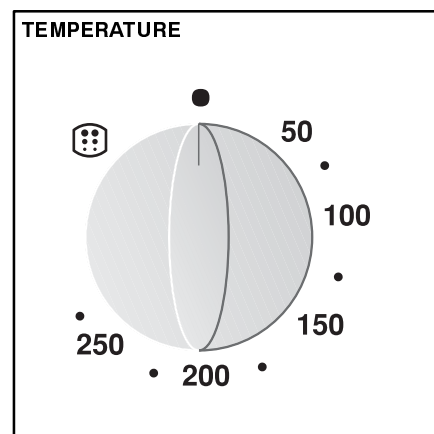

After use ensure the knobs are on Off-position (temperature control to ● and function selector to 0).

THE OVEN CAVITY

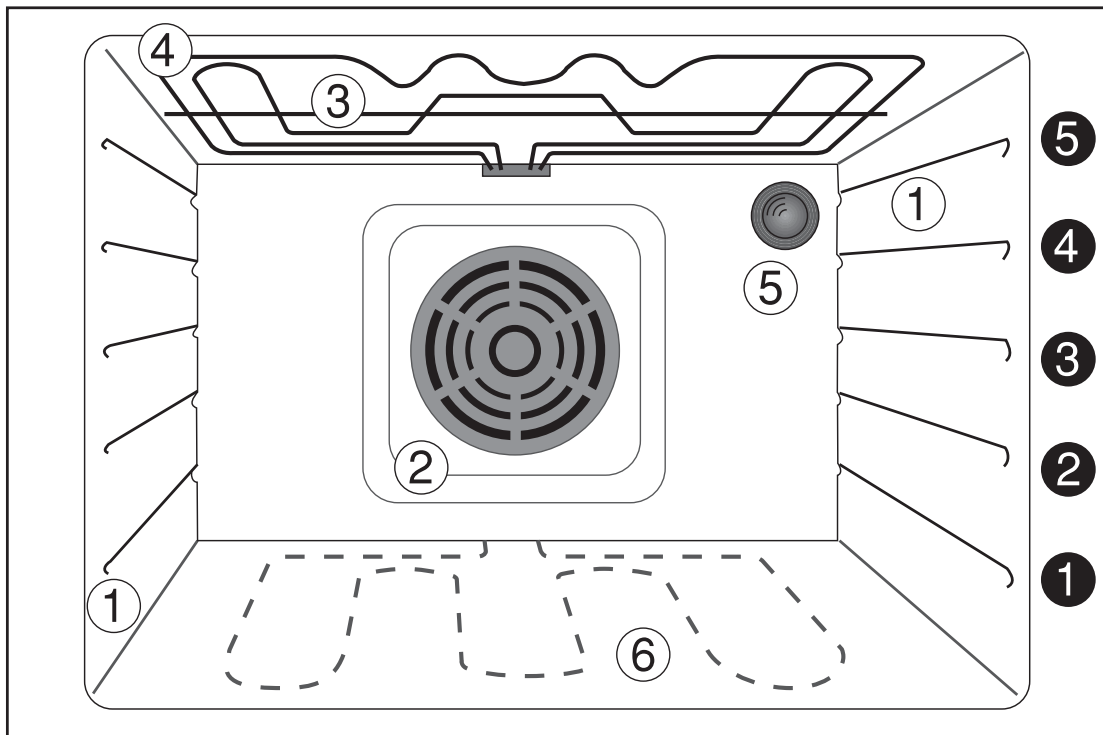

- ① Shelf runners
- ② Fan
- ③ Roof
- ④ Grill elements
- ⑤ Oven light
- ⑥ Lower heating element (under the base panel)

❶ to ❷ Cooking levels

Oven accessories



In addition to the accessories supplied with your oven, use only ovenware that is ovenproof to very high temperatures (follow manufacturers' instructions).

Your oven is equipped with :

2 wire shelves

1 grill pan


The wire shelves

Dishes, cake tins and so on can be placed on these shelves.


It can be used high side up or low side up to adjust the position of your dishes in relation to the source of heat.

For very heavy dishes (4 kg or more), always use the shelf high side up.

The wire shelf

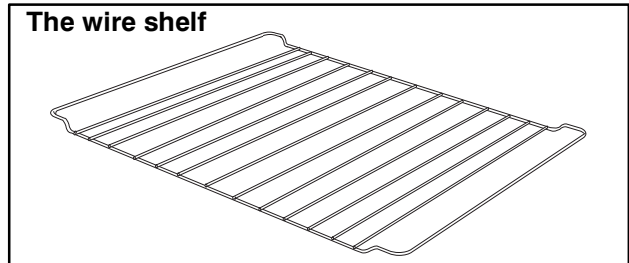

High side up

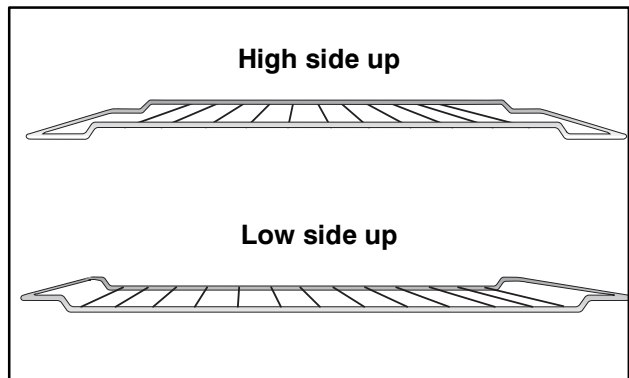


Low side up

The grill pan


The grill pan is supplied with 1 grid and 2 handles.

The grill pan

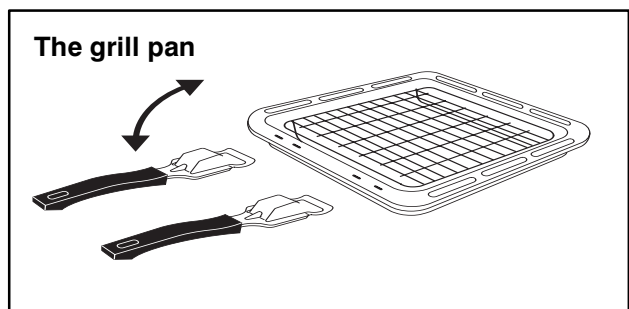

The cooking levels

The oven has five cooking levels which are counted from 1 to 5 (from the bottom upwards).

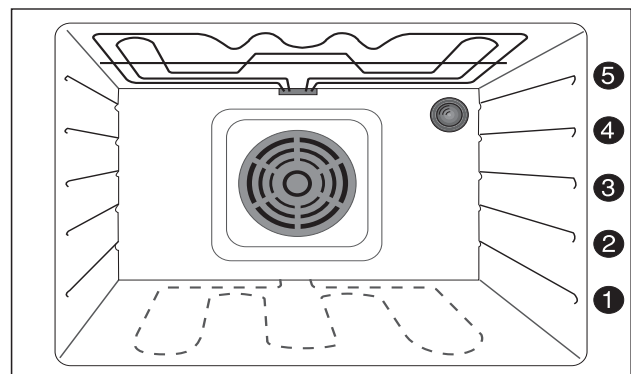


THE DIFFERENT COOKING SETTINGS

Turn the control clockwise to select the following cooking functions :

Fan oven

The air inside the oven is heated by the top and bottom elements.

The fan circulates hot air to maintain an even temperature inside the oven. Select any temperature between 50 C and 270 C.

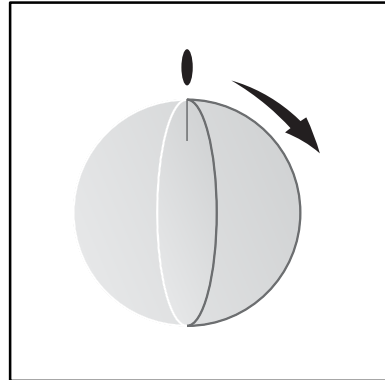

Thermal grilling

This cooking method combines the fan with the grill element. It replaces the rotisserie in your oven and is ideal for roasting meat and poultry on one level. It is also perfect for "au gratin" dishes.

Roasting meat

Ideal for roasting meat and poultry in a roasting dish.

Preheating

For preheating the oven when the recipe needs it.


Turn the control anti-clockwise to select the following cooking functions :

Conventional oven

This method uses the top and bottom element and is ideal for all types of cooking. It is also suitable for re-heating dishes prepared in advance. To ensure a uniform distribution of heat, you should cook on one level only.

Grill

For grilling meat, toasting or browning dishes.

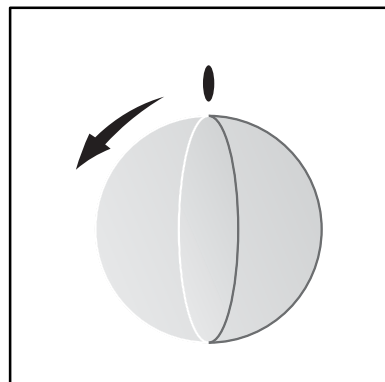

COOKING FUNCTIONS



Fan oven

Dishes can be cooked on **one or several levels** using the fan oven. The circulation of hot air produces an even cooking temperature. Fan oven cooking is ideal for all types of dishes.

The advantages of fan oven

Faster preheating :

As the fan oven quickly reaches temperature, it is not usually necessary to preheat the oven although you may find that you need to allow an extra 5-7 minutes on cooking times.

Lower temperatures :

Fan oven cooking generally requires lower temperature than conventional cooking. Follow the temperatures recommended in the charts or remember to reduce temperatures by about 20-25 °C for your own recipes which use conventional cooking.

Even heating for baking :


The fan oven has uniform heating on all runner positions. This means that batches of the same food can be cooked in the oven at the same time. However, the top shelf may brown slightly quicker than the lower one. This is quite usual. There is no mixing of flavours between dishes.

Cooking frozen dishes

With fan oven cooking, you can put frozen food (ready-cooked food, meat, chicken) straight into the oven **without thawing**. There is no need to preheat the oven in this case : simply reduce the temperature slightly at the start of cooking.

With commercial frozen foods, refer to the cooking instructions for conventional oven cooking on the packaging.

How to proceed ?

1. Turn the function selector to  and then the temperature control on the required temperature.

Refer to cooking guides.

Cooking the same type of food on two levels

Which accessories to use ?

In most cases, use wire shelves on runners ① and ③.

See cooking charts.

Cooking different types of dishes on two levels

The multi-level position makes it possible for you to cook a complete meal at once. To do so, be guided by the following recommendations :

The various dishes should require similar temperatures.



Overall cooking time should be the same as the longest cooking time required.

Different dishes may be placed inside or removed from the oven at different times. This depends on the cooking time required for each of them, and possibly on the order in which they are to be served.

Take care not to open the oven door while another dish could suffer (for instance, a cake starting to rise).

Remember that certain dishes rise in cooking, so leave enough space between shelves.

Meat and poultry should preferably be placed on shelf ① so as not to spit on other dishes.

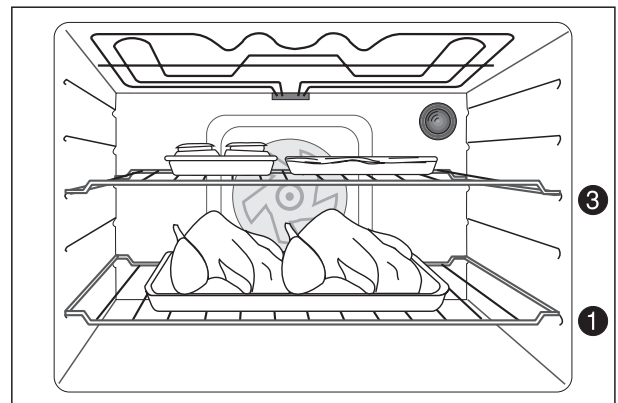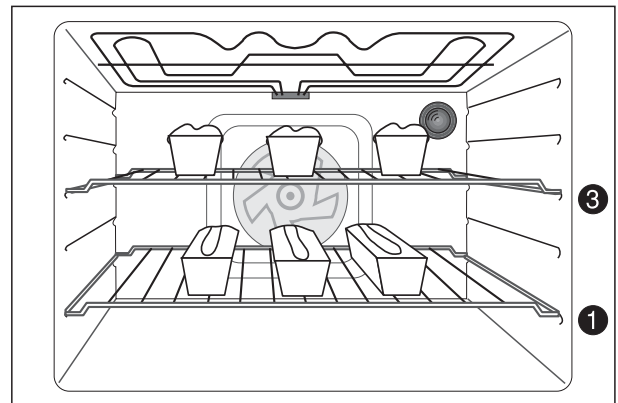



Defrosting

The fan oven operates without heat and circulates the air, at room temperature, inside the oven. This increases the speed of defrosting. However, please note that the temperature of the kitchen will influence the speed of defrosting.

This function is particularly suitable for delicate food which could be damaged by heat, e.g. cream filled gateaux, iced cakes, pastries, bread and other yeast products.

How to proceed ?

1. Turn the oven function selector to .
2. Ensure the temperature control knob is in the Off position .

Hints and tips

Cover food with a lid, aluminium foil or plastic film to prevent drying out during defrosting.

ALWAYS COOK THOROUGHLY IMMEDIATELY AFTER THAWING.

Frozen food should be placed in a single layer when ever possible and turned over half way through the defrosting process.

Only joints of meat and poultry up to 2 kg (4 lb.) are suitable for defrosting in this way.



Thermal grilling




Thermal grilling is used with the door closed. Never leave the grill unattended when cooking.

Thermal grilling offers an alternative method of cooking food items normally associated with conventional grilling. The grill element and the oven fan operate alternately, circulating hot air around the food. The need to check and turn the food is reduced. Thermal grilling helps to minimize cooking smells in the kitchen.


With the exception of toast and rare steaks, you can thermally grill all the foods you would normally cook under a conventional grill. Cooking is more gentle, therefore food generally takes a little longer to cook with thermal grilling compared with conventional grilling. One of the advantages is that larger loads can be cooked at the same time.

The pre-heating is not necessary for this cooking mode.

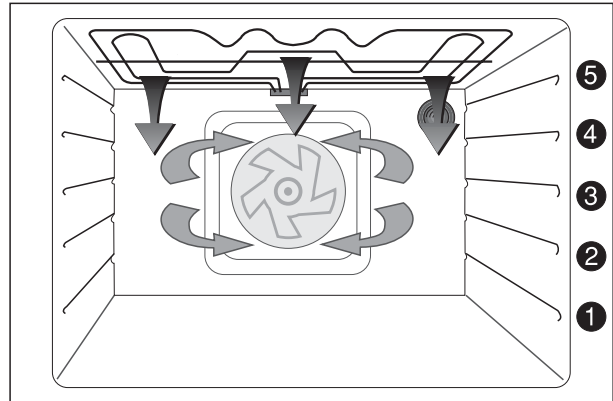


How to proceed ?

Grilling

1. Prepare the food to be grilled.
2. Place the food directly on the grill pan grid.
3. Set the function selector to  and then the temperature control to the required temperature (see cooking guides).
4. Place the grill pan on runner ③ or ④ depending on the thickness of the food being grilled.
5. When one side is browned, turn the meat over without piercing it to avoid losing juices. For poultry and sausages, piercing before cooking is recommended.
6. Cook the other side.
7. Season when cooking has finished.

Cooking time depends on the thickness of the meat and not on its weight.

Browning toppings

1. Set the function selector to  and then the temperature control to the required temperature (see cooking guide).
2. Place the dish containing the food on the shelf. The closer the food is to grill element the faster the browning will occur.
3. Leave the dish under the grill for a few minutes until the food is bubbling and browned.



Roasting meat


This position is ideal for cooking meat.

Spitting of fat, smoking and odours are considerably reduced.

Meat is evenly browned and tender, while the oven stays cleaner longer.

How to proceed ?

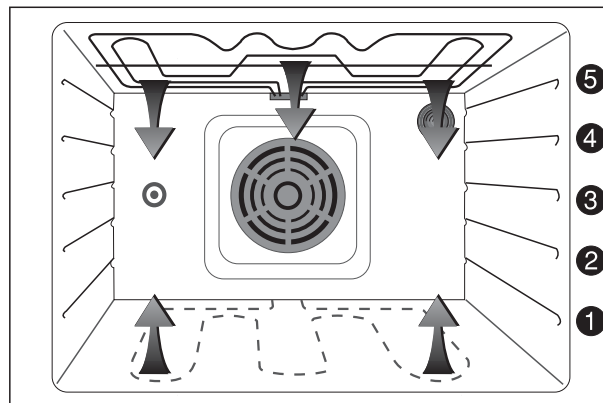

1. Preheat the oven by putting the selector in the position  and then the thermostat on the temperature required.
2. Place the meat in the oven, then, without changing the temperature position, place the selector in the  position, for roasting meat.




Preheating

This function is suitable for preheating the oven when you have to roast meat (see cooking guide).

How to proceed ?

1. Turn the function selector to  and the temperature control knob to the required temperature (see cooking guides). The temperature control indicator will light up and remain lit until the required temperature has been reached.
2. When the temperature indicator light goes out, turn the function selector to the roasting meat position .
3. Place the dish in the oven.

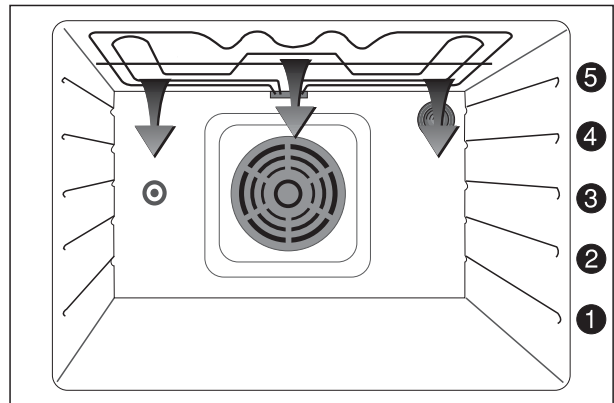


Conventional oven


Ideal for all types of cooking, especially baking, fish, terrines and vegetable based dishes.

The oven should be pre-heated.

To ensure even heat distribution, we recommend you cook on one level only.

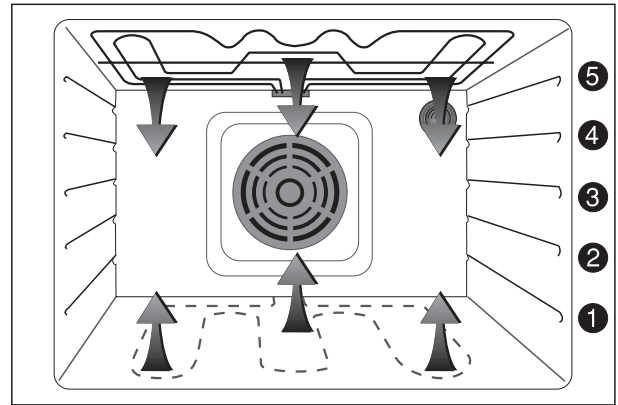

How to proceed ?

1. Pre-heat the oven by setting the function selector to  and the temperature control to the required temperature. See the cooking guide.

Pre-heating time :

Approximatively 6^{1/2} minutes to reach 150 C.

Approximatively 9 minutes to reach 200 C.

2. Place the dish in the oven as soon as the temperature indicator light goes out.

Grill




Use the grill with the oven door closed to prevent damage to the control panel.

Never leave the grill unattended when cooking.


Preheat for 3 to 5 minutes.

This cooking mode is ideal for cuts of meat (pork chops, sausages,...) which stay tender and juicy, for toasting or for browning toppings on prepared dishes, preferably hot (e.g. macaroni cheese).

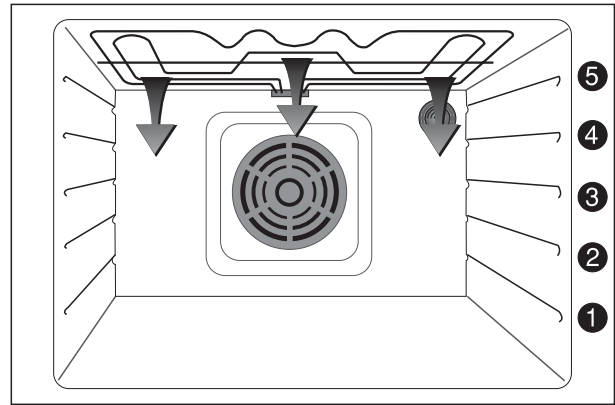

How to proceed ?

Grilling


1. Prepare the food to be grilled.
2. Set the function selector to  and then the temperature control to the required temperature (see cooking guides).

When grill element has become red :

3. Put the grill pan on the shelf. Use shelf level ③ or ④ depending on the thickness of the food being grilled.
4. When one side is browned, turn the meat over without piercing it to avoid losing juices. For poultry and sausages, piercing before cooking is recommended.
5. Cook the other side.
6. Season when cooking has finished.

Cooking time depends on the thickness of the meat and not on its weight.

Browning toppings



1. Set the function selector to  and then the temperature control to the required temperature (see cooking guide).
2. Place the dish containing the food on the shelf. The closer the food is to grill element the faster the browning will occur.
3. Leave the dish under the grill for a few minutes until the food is bubbling and browned.

HINTS FOR SUCCESSFUL COOKING

Choice of ovenware

The thickness, conductivity and colour of ovenware affect the cooking results.

- A) Aluminium, earthenware, oven glassware and aluminium with a non-stick interior **reduce** cooking and base browning. These materials are recommended for light, soft textured cakes and roasts.
- B) Enamelled cast iron, anodized aluminium, zinc-plated iron, porcelain, aluminium with a non-stick interior and coloured exterior **increase** cooking and base browning. These materials are recommended in particular for tarts, quiches and crispy baking that should be browned beneath as well as on top.

If you see	What to do ?
<p>Top too dark Bottom too light not cooked enough</p> 	<p>Use a tin or dish type B or place in lower runner</p>
<p>Top too light Bottom too dark overcooked</p> 	<p>Use a tin or dish type A or place in higher runner</p>

During cooking, certain dishes increase in volume, so remember to choose a container big enough : ideally, the uncooked dish should take up only two thirds of the container, leaving the upper third free for expansion.

To avoid excessive spitting, use high-sided dishes for roasting meat and poultry, or ovenproof glass roasting trays with a lid, appropriate to the size of the joint.

Condensation and steam

When food is heated it produces steam in the same way as a boiling kettle. The oven is vented to allow some of this steam to escape. However, always stand back from the oven when opening the door to allow any build up of steam or heat to release.

If the steam comes into contact with a cool surface on the outside of the oven, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not caused by a fault on the oven.

To prevent discolouration, regularly wipe away condensation and also soilage from surfaces.

Practical tips

To help keep the oven clean, a baking sheet can be placed on the shelf under the container to protect the base from spillage.

Pierce the skin of poultry or sausages with a fork before cooking, to avoid the skin swelling and bursting with the heat.

Leave as little fat as possible around joints of meat to avoid spitting and reduce the fat content.

For tender joints of meat, turn halfway through cooking and add a little hot water to the dish to produce a tasty gravy and reduce spitting onto the walls of the oven.


Do not exceed the temperature settings recommended in the cooking guide for meat.

To save energy

 
 
Cook several dishes one after another, if possible, to save the energy needed to pre-heat the oven each time. Whenever possible, do not hesitate to cook 2 or 3 cakes or tarts, for example, at the same time.


 


 


 





 





 


 


 





 


 
 

 






COOKING GUIDES

The preheating of the oven is necessary for following cooking settings :

For cooking setting  preheating mode  time : approx. 6 minutes to reach 150 C
time : approx. 9 minutes to reach 200 C

 For cooking setting  preheating mode  time : approx. 8 minutes to reach 200 C

Position of the wire shelf :  high side up
 low side up

Dish	Pre-heat	Cooking	Level of cooking (runner)	Shelf position	Temperature selector	Cook time (minutes)	Recommended accessories
Keeping warm			2		70 - 90 C	-	-
MEAT							
Beef (1/2 kg)			2		180 - 200 C	20 - 35	Wire shelf, earthenware dish
Lamb (1/2 kg)			2		180 - 200 C	20 - 35	Wire shelf, earthenware dish
Pork (1/2 kg)			2		180 - 200 C	30 - 40	Wire shelf, earthenware dish
Veal (1/2 kg)			2		180 - 200 C	30 - 40	Wire shelf, earthenware dish
Poultry (1/2 kg)			2		180 - 200 C	15 - 20	Wire shelf, earthenware dish
FISH							
Fish			2		180 C	30 - 35	Wire shelf, earthenware dish
Fish filets			2		180 C	15 - 20	Wire shelf, earthenware dish
VEGETABLES							
Stuffed tomatoes			2		200 C	25 - 30	Wire shelf, oven glassware dish
Lasagnes			2		200 C	55 - 60	Wire shelf, oven glassware dish
HORS D'OEUVRE							
Cheese soufflé			2		200 C	35 - 40	Wire shelf, soufflé tin
Pizza			3		220 C	18 - 22	Wire shelf
Pizza			3 and 1		180 - 200 C	15 - 18	Wire shelf
Quiche			1		200 - 220 C	35 - 40	Wire shelf, pie tin
Quiche			3 and 1		180 C	40 - 45	Wire shelf

Dish	Pre-heat	Cooking	Level of cooking (runner)	Shelf position	Temperature selector	Cook time (minutes)	Recommended accessories
BAKING							
Sponge cake			3		160 - 180 C	35 - 40	Wire shelf, sandwich tin
Fruit cake			2		160 - 180 C	50 - 60	Wire shelf, cake tin
Fruit cake			3 and 1		140 - 160 C	50 - 60	Wire shelf, cake tin
Victoria Sandwich Cake			3		160 - 180 C	35 - 40	Wire shelf, cake tin
Fruit tart (short pastry)			3		200 - 220 C	30 - 45	Wire shelf, pie tin
Fruit tart (short pastry)			3 and 1		180 C	30 - 35	Wire shelf, pie tin
Fruit tart (puff pastry)			3		180 C	30 - 40	Wire shelf, pie tin
Fruit tart (puff pastry)			3 and 1		160 - 180 C	20 - 25	Wire shelf, pie tin

Cooking guide with grilling

Use the grill with the oven door closed and never leave unattended when cooking.

Dish	Pre-heat	Cooking	Level of cooking (runner)	Shelf position	Temperature selector	Cook time (minutes)	Recommended accessories
GRILLING 3 minutes of preheating							
Pork chops			5		240 C	10 - 20	Grill pan on wire shelf
Sausages			5		240 C	8-12 per side	Grill pan on wire shelf
Chicken joints			4		240 C	15 - 20	Grill pan on wire shelf
Steak			4		240 C	12 - 20	Grill pan on wire shelf
THERMAL GRILLING							
Potatoes			3		200 C	20 - 25	Wire shelf, earthenware dish

Only your experience will enable you to determine the correct settings for your personal cooking needs. The temperatures are intended as a guide only. It may be necessary to increase or decrease the temperature to suit individual requirements.

CLEANING AND CARE



The oven door is hot during pyrolytic cleaning. Children must be supervised at all times and should be kept away from the appliance.

Cleaning of the pyrolytic enamel oven

The principle

The walls of the oven are made of special high temperature enamel which is shiny in appearance and smooth to the touch.

During the pyrolytic cleaning, the temperature of the oven reaches approximately 500 C. The food and grease splatters are carbonised and wiped away as ash residue when the interior is completely cold. Smoke is filtered out by a catalyser.

The safety

The pyrolytic cleaning is perfectly safe : a safety lock prevents any accidental opening of the door as soon as the temperature in the oven approaches 300 C.


Beyond 300 C, the door remains locked even if the cleaning cycle is interrupted (by a power failure or deliberately). You will not be able to open the door again until the oven has cooled.

During the cleaning cycle, a fan operates. Ventilation continues even after the cleaning cycle until the oven has cooled sufficiently.

Pyrolytic cleaning can only be carried out under the control of the programmer.

Regular maintenance

After cooking, remember to wipe off any splashes or stains with a damp sponge.

For better visibility when cleaning the oven, set the selector to  position.


In the event of spills on the bottom panel, soak the panel but do not scrape it and avoid abrasive cleaning products that risk damaging surfaces (enamel, varnish, lacquer).

Periodic maintenance

After a cleaning cycle, wipe up the ash residue left by the pyrolytic cleaning process. Do not hesitate to run a cleaning cycle as often as necessary. We recommend you to run a pyrolytic cycle once per month. This is just an indication : the frequency is related to the dirty level.

Run the cleaning cycle immediately after cooking to take advantage of the residual heat in the oven. The cleaning process will mean the oven is unavailable for use for approximately 2 hours 30 minutes.

How to proceed ?

1. Empty the oven of all accessories (oven shelves, grill pan). The high temperature during the pyrolytic cycle could damage them as well as the cavity.
2. If necessary, remove all excess soilage which could cause too much smoke to be absorbed by the catalyser.
3. Close the oven door.
4. Set the function selector and temperature controls on the pyrolytic  position .
5. Programme the pyrolytic cleaning in semi automatic or fully automatic operation (see following page).
6. Once the pyrolytic cycle time is over :
Return the control knobs to their OFF positions (temperature control on ● and then function selector on 0).
The “**Pyrolytic** and **Power on** ” neon indicators switch off and the door unlocks when the temperature inside the oven is cool enough.

Cleaning the accessories

Clean them with a warm washing up liquid solution. Rinse and dry carefully.

Cleaning the control panel and the oven door


After using the oven, clean the control panel and the oven door with a damp sponge. Rinse and dry carefully.

For stainless steel models

⚠ During the cleaning of stainless steel surfaces, always rub horizontally.



To clean the front of the oven in stainless steel, only use proprietary stainless cleaners and follow the cleaner manufacturer's recommendations.

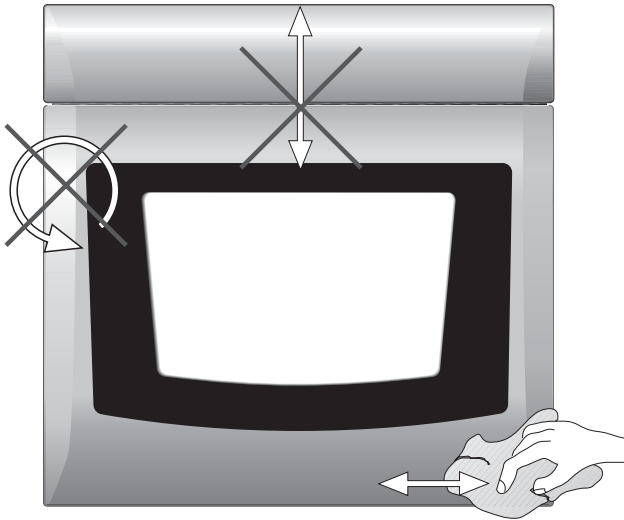Never use scouring powder or cream or sharp utensils which could damage the stainless steel.

 



Programming semi-automatic cleaning

Immediate start - Automatic stop

1. Set function selector and thermostat controls on the pyrolytic  positions : **P1.30**,  and **AUTO** are displayed (pyrolysis lasting : 1 hour 30 minutes).


If your oven is badly soiled, you may increase the time :

2. Press button  and, at the same time, turn the time setting knob to increase the duration time of the pyrolytic cleaning (maximum time is three hours).

Once the pyrolytic cycle time is over : **P0.00** and **AUTO** flash, pilot light  disappears.



3. Turn the function and temperature knobs on the Stop position (temperature control on ● and function selector on 0) : **AUTO** disappears. The current time of the day reappears.

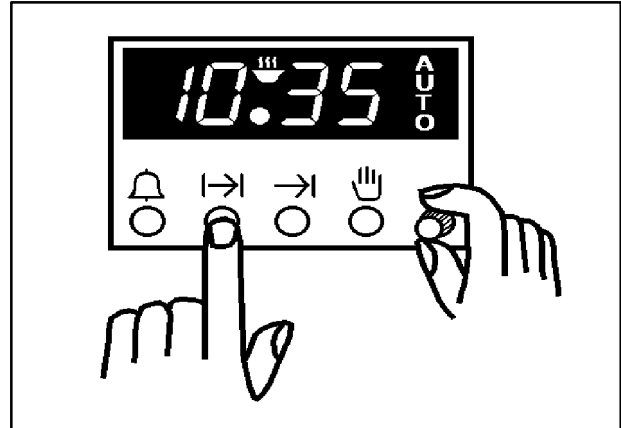It is perfectly normal for the oven door to remain locked after the end of the cleaning process, until the oven has cooled down sufficiently.

 




Programming fully automatic cleaning


Deferred start - Automatic stop


1. Set function selector and thermostat controls on the pyrolytic  positions : **P1.30**,  and **AUTO** are displayed (pyrolysis lasting : 1 hour 30 minutes).

If your oven is badly soiled, you may increase this time :

2. Press button  and, at the same time, turn the time setting knob to increase the duration time of the pyrolytic cleaning (maximum time is three hours).


 
3. Press button  and at the same time turn the time setting knob until the end pyrolytic cleaning time is displayed.  disappears.

 Pilot light  will be displayed when it is time to start the pyrolytic cleaning cycle.

4. Once the pyrolytic cycle time is over : **P0.00** and **AUTO** flash, pilot light  disappears.

5. Turn the function and temperature knobs on the Stop position (temperature control on ● and function selector on 0) : **AUTO** disappears. The current time of the day reappears.

It is perfectly normal for the oven door to remain locked after the end of the cleaning cycle, until the oven has cooled down sufficiently.

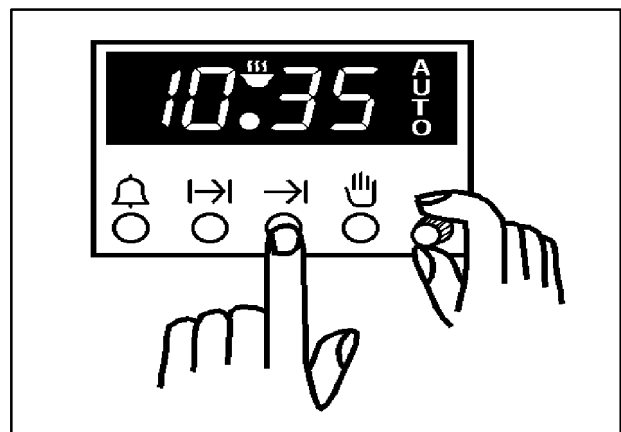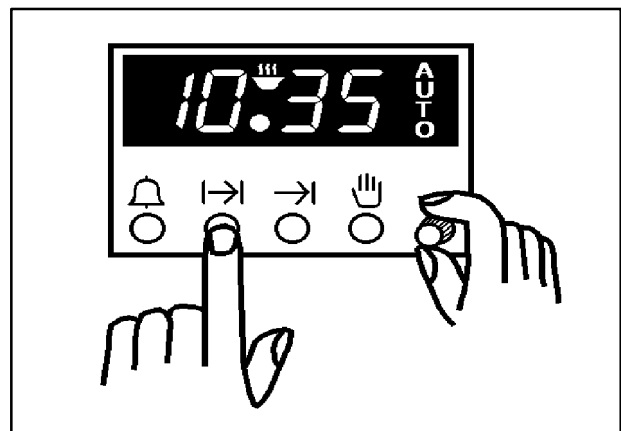

REPLACING THE OVEN LIGHT




Ensure the oven is disconnected from the electrical supply before changing the bulb.

The 25 W - E14 (230/240 V) screw-in bulb is a **special “heat-resistant” bulb** capable of withstanding temperatures up to 300 C. Replacement bulbs are available through your local Service Force Centre.

The bulb is located at the back innerside of the oven and can be reached from inside the oven.

To replace the bulb :

1. Unscrew the bulb protection cover (turn anti-clockwise).
2. Unscrew the bulb anti-clockwise.
3. Screw in a new bulb.
4. Screw in the bulb protection cover carefully.

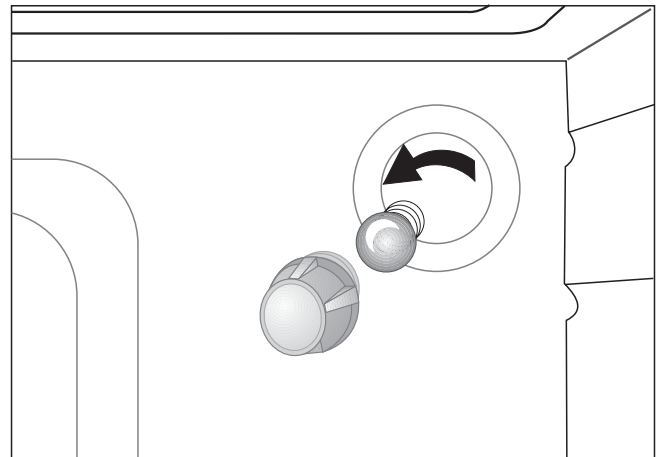

SOMETHING NOT WORKING ?

Please carry out the following checks on your appliance before calling a service Engineer. It may be that the problem is a simple one, which you can solve yourself without the expense of a service call.



If the oven shows any sign of a fault, we recommend you do not use it. Disconnect the oven from the mains or remove the fuse on the appropriate circuit.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO ?
The oven does not work.	The oven is not wired in or switched on at the socket. There is a power failure.	Switch on at the socket. Check power supply and fuse.
The oven does not heat (the time on the electronic programmer is correctly set).	The child safety has been set.	Desactivate the child safety.
The results of cooking are unsatisfactory.	Insufficient preheating. Temperature is too high or too low. Wrong shelf position. Wrong type of dish. Temperature is incorrectly set. Cooking time is incorrect. Cooking function selector is in the wrong position. The shelf or oven dish are not in the centre of the oven.	Consult cooking guides. Adjust temperature and shelf position to suit personal preferences. Select correct function. Centre the shelf or oven dish in the oven.
The oven smokes.	The oven is dirty. Food has spilled over. Food (meat) is spitting excessively. Wrong selected function.	Clean the oven once cooking has finished (see section on cleaning). Use a larger dish. Reduce temperature setting. Consult cooking guides.
Steam and condensation settle on the food and the oven cavity.	The dish has been left inside the oven too long.	Leave dishes inside the oven no longer than 15-20 minutes after the cooking is completed.

If the problem still persists after these checks, contact the Service Force Centre.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

SERVICE AND SPARE PARTS

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning :

08705 929929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "SOMETHING NOT WORKING ?

When you contact the Service Force Centre you will need to give the following details :

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

Customer Care Department

For general enquiries concerning your TRICITY BENDIX appliance or for further information on TRICITY BENDIX products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.tricity-bendix.co.uk

Customer Care Department

Tricity Bendix
55-77 High Street
Slough
Berkshire
SL1 1DZ

Tel : 08705 950 950 *

* calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

STANDARD GUARANTEE CONDITIONS

We, TRICITY BENDIX, undertake that if, within 12 months of the date of purchase, this TRICITY BENDIX appliance or any part thereof is proved to be defective by any reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that :

The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.

The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

All service work under this guarantee must be undertaken by a TRICITY BENDIX Service Force Centre.

Any appliance or defective part replaced shall become the Company's property.

This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours, in which case a **premium** will be charged.

Exclusions

This guarantee does not cover :

Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulb or removable parts of glass or plastic.

Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the European Community (EC) or European Free Trade Area.

Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

Products of TRICITY BENDIX manufacture which are not marketed by TRICITY BENDIX.

European Guarantee

If you should move to another country within EUROPE then your guarantee moves with you to your new home subject to the following qualifications :

The guarantee starts from the date you first purchased your product.

The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

This guarantee relates to you and cannot be transferred to another user.

Your new home is within the European Community (EC) or European Free Trade Area.

The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

The electricity supply complies with the specifications given on the rating plate.

The product is installed taking into account regulations in your new country.

Before you move, please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the Local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 20 13
Germany	Nürnberg	+49 (0)800 234 7378
Italy	Pordenone	+39 (0)800117511
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Slough	+44 (0)1753 219898

FOR THE INSTALLER

Technical information

Oven type	See rating plate
Electrical connections	230 / 240 V 50 Hz
Required protection fuse for the oven	13 Amps

Oven ratings

Oven	Electric
Maximum electrical power	3000 W / 3200 W
Grilling	Electric
Grilling power	2900 W (230 V)
Oven lighting	25 W (230 V)
Type of cleaning	Pyrolytic



Aperture dimensions of the oven

Height	580 mm
Width	540 mm
Depth	546 mm

The rating plate

The rating plate is situated on the lower front frame of the oven and can be seen upon opening the oven door.

This information (model, product number, serial number) should be quoted in any communication or if the Service Force Centre is contacted.

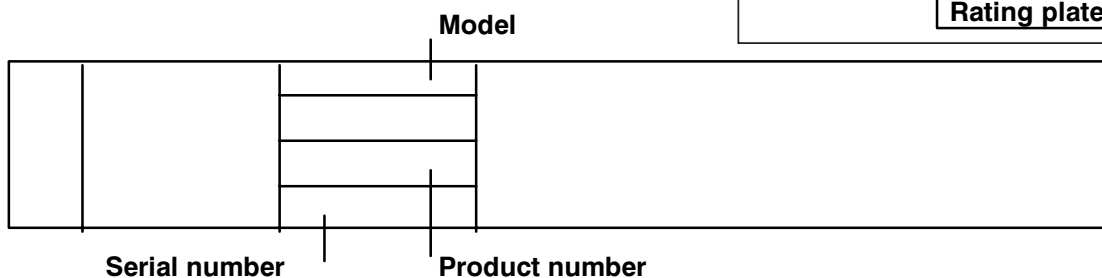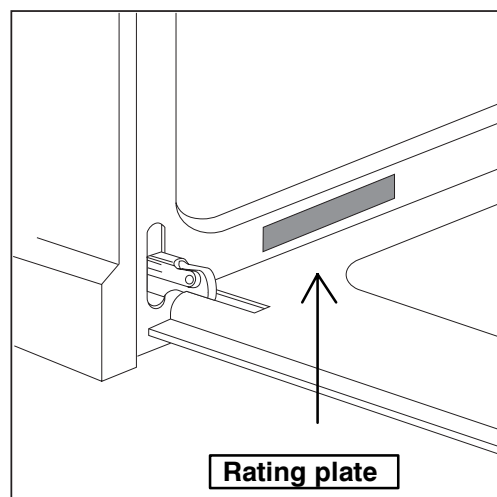

The **CE** mark meets the requirements laid down in directives : electromagnetic compatibility 89/336,
CE mark 93/68 and low voltage 73/23.

Fitting the oven into an “in column” or “under counter” cabinet

Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

Building-In :

This appliance is classed as a **type Y** in terms of protection against overheating of surround areas.

The surround or cabinet into which the oven will be built must comply with the following specifications :

this oven must be fitted in a closed cabinet to ensure correct air flow for cooling purposes,




the dimensions must be as shown in the relevant diagram,

to avoid overheating a minimum of 5 mm must separate the oven frame from adjacent partitions (doors of furniture, etc...),

adjacent partitions and their coverings must be capable of resisting a temperature of at least 100 C.

The oven must be correctly installed to ensure electrical safety. During installation and maintenance, the oven must be disconnected from the power supply, and fuses must be removed.

The oven must be installed in a level and stable housing cabinet which must be properly assembled and firmly secured to the wall or floor. The oven is secured to its surrounding unit by two side stability screws. They are supplied in a plastic bag inside the oven.

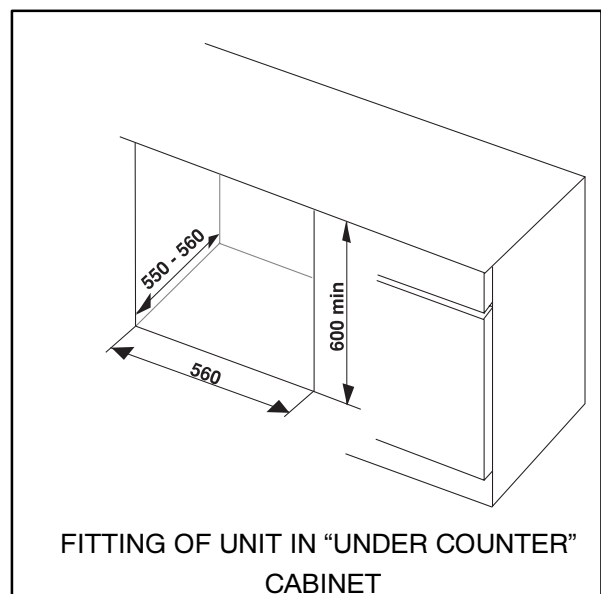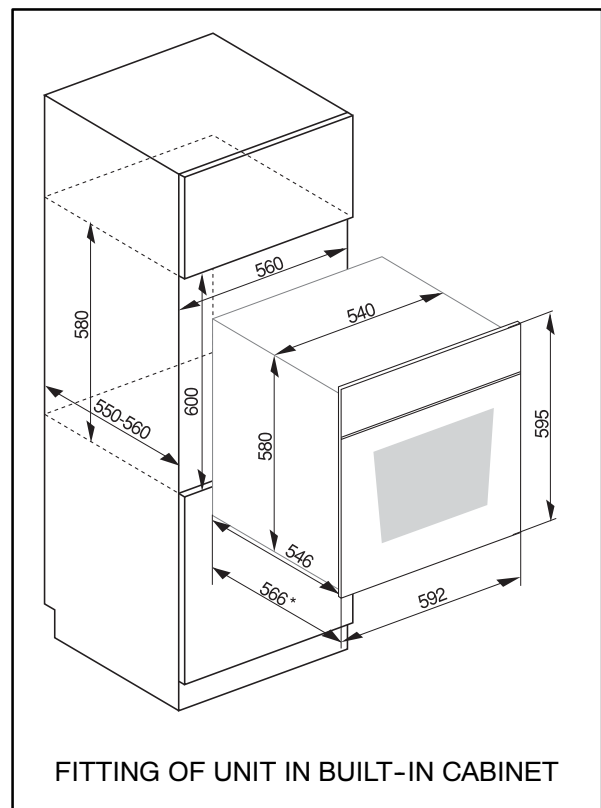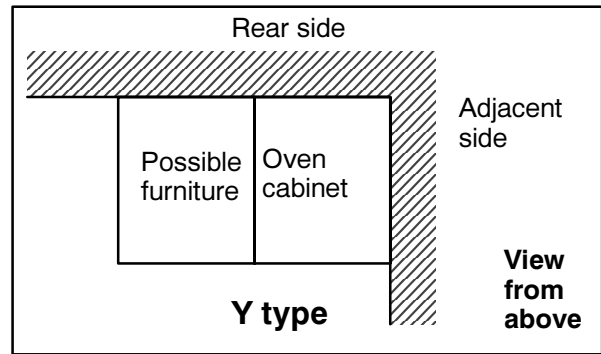

Electrical connections



Connecting the appliance to the electricity supply must be carried out by a qualified electrician or competent person. The oven must be earthed in accordance with current regulations (Earth = yellow and green).

Fuse capacity : 13 Amps

Before connecting the oven, check that :

the electrical wiring is in good condition,

the fuses and the domestic power supply are of sufficient capacity to support the oven (see rating plate),

the plug or double pole switch used to connect the oven is accessible once the appliance is installed.

Fixed connection :

In the event of a fixed connection, it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current rules.

The switch must not break the yellow and green earth cable at any point.

Fitting a plug :

If a plug is fitted, the wires in the mains lead are coloured in accordance with the following code :

green and yellow : Earth

blue : Neutral

brown : Live

The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol or coloured green and yellow,

The wire coloured blue must be connected to the terminal "N" or coloured black,

The wire coloured brown must be connected to the terminal marked "L" or coloured red,

Upon completion there must no cut or stray strands of wire present and the cord clamp must be secure over the outer sheath.

Connecting cable

Use a H05 RR-F type cable with a minimum cross-section of 2.5 mm² or 2.5 mm² PVC twin and earth cable .

The cable should be connected according to recommendations and the securing screws should be tight. The protective conduction (Earth cable) should be longer than the wires carrying the current. The power cable should be held firmly in place by the cable clamp.

Whatever method of connection is employed, the appliance must be earthed in accordance with current regulations.

If the oven is to be connected to an existing cooker control unit, it will be necessary to down rate the protective fuse to 15 amp.

Choice of electrical connections

There are two possible ways to connect your cooker, please choose from the most appropriate after reading the descriptions :

It is recommended that this appliance is wired with suitably rated cable (min 13 A), into fixed wiring using a double pole isolator with at least 3 mm contact separation in all poles and neutral, located within 2 m of the appliance. If this fixed wiring circuit is only supplying the cooker, then a fuse of 13 A (or circuit breaker) should be incorporated. When the circuit combines oven and hob, then wire and fuse rating should be increased accordingly.

Subject to Regional Electricity Company regulations if you wish to connect the oven and hob to the power supply you may use one of the following methods :

If you wish to connect an oven and a hob to a cooker point you can :

- by connecting the oven and hob separately to the cooker point. Oven and hob units should be separately connected to a control panel. In this case the cooker should be operated from 6 mm² twin core, and earth, PVC insulated multicore cable. See Fig. 1.

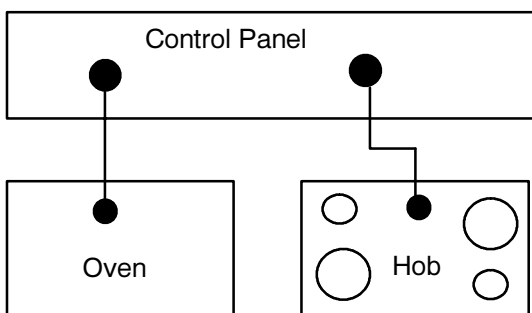


Fig. 1

- by connecting the cooker point to the hob and then connecting the hob to the oven. Provided that the hob manufacturer permits it, connect the oven to the hob and the hob to the cooker point using the same cabling as described above. Check the hob terminal block is large enough to take two cables and is of suitable rating. See Fig. 2.

NOTE : 13 amp cable is not suitable for connecting this application.

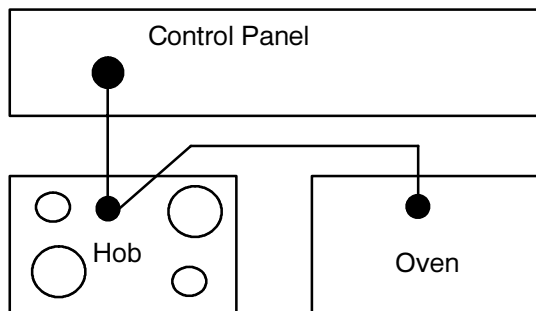


Fig. 2

NOTE : it is good practice to :

- fit an Earth Leakage Circuit breaker to your house wiring,
- wire your appliance to the latest IEE regulations.

TRICITY BENDIX

Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ

Consumer care telephone number 08705 950950

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>