

 
TRICITY

T2TSS11

T2TSS11B

T2TSS11C

T2TSS11R

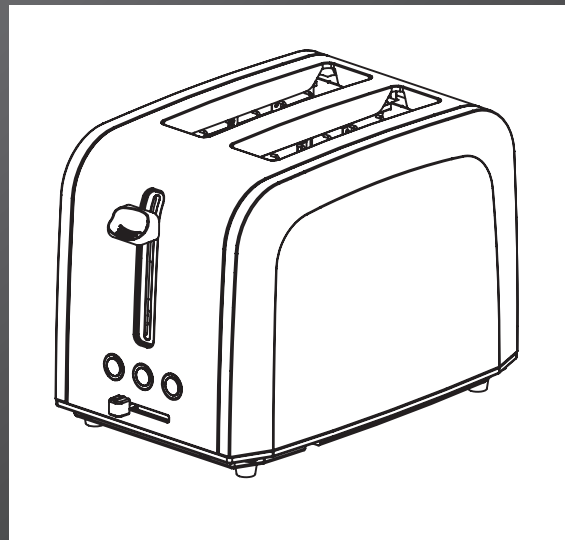

2 Slice Electric Toaster

Instruction Manual

Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.

Read all the instructions.

Do not touch the body of the toaster when it is hot.

Disconnect the appliance at the mains supply when filling or emptying the toaster, before cleaning, adjusting or removing any components, and when it is not in use.

As a safety feature, the carriage lever will not stay down when the appliance is disconnected from the mains.

Do not immerse the appliance, connecting cord or plug in water or liquids.

Do not cover the appliance when it is in use, or has recently been used.

Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.

Do not insert oversize items, foil packages or metal implements in the toaster wells.

The use of accessory attachments not recommended by the appliance manufacturer may cause injury.

Do not let the connecting cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.

Do not attempt to change the appliance connecting cord. Refer this to qualified service personnel as specialist tools are necessary.

If any part of this appliance is visibly damaged or malfunctions in any way, or the connecting cord or mains plug is

broken do not continue to use it. Take it to a qualified service centre for service and repair.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use the toaster without the crumb tray in place.

Do not use this appliance for other than the intended use.

This appliance is for indoor domestic use only. Do not use it outdoors.

Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**THE TOASTER SHOULD NEVER BE
UNATTENDED WHILE IN USE**

PRELIMINARIES

Unpack your toaster carefully. Retain the packaging so that you can transport the appliance safely at a later date.

Before using your toaster check that the voltage marked on the rating plate under the toaster and the base matches your mains voltage:

Please read all the instructions in this User Guide with particular reference to the safety notes.

 
Unpacking Your Toaster

Unpack your toaster carefully. Retain the packaging so that you can transport the appliance safely at a later date.

Before using your toaster check that the voltage marked on the rating plate under the toaster matches your mains voltage.

Please read all the instructions in this User Guide with particular reference to the safety notes.

Features and Controls

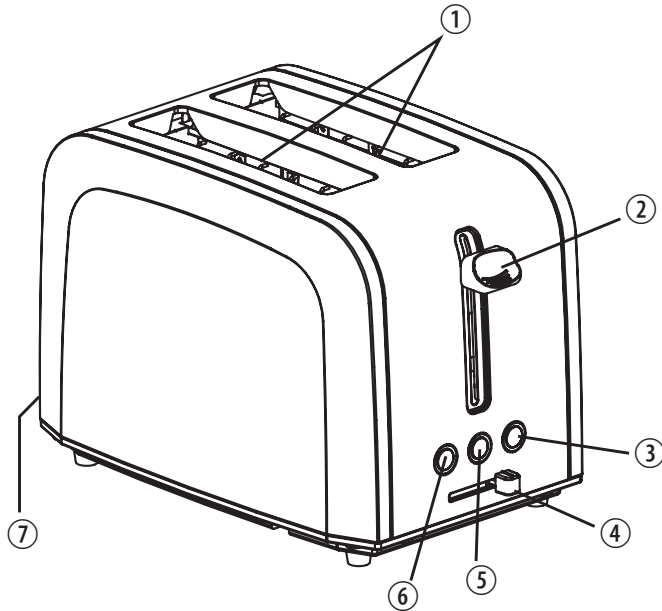

KEY

- | | |
|-------------------|------------------------|
| 1. Toasting Slots | 4. Toast Timer Control |
| 2. Carriage Lever | 5. Defrost Button |
| 3. Reheat Button | 6. Cancel Button |
| | 7. Crumb Tray |

Operation

Using Your Toaster

Place the toaster on a stable, level surface.

Your toaster can be used to toast a wide variety of bread. Fresh and wholemeal breads take longer to toast, so these items will need to be set at a higher setting than lighter types of bread. As personal preference plays a great part, we suggest that you try different settings. Try the lower settings first, gradually increasing the timer setting until you find the right one for your circumstances.

Ensure that the mains socket is switched off at the wall and connect the appliance cord to the wall socket. Now switch on the power.

Place the bread into the toaster bread wells.

Set the toast timer control to the desired setting.

Press the carriage down gently until it latches. The power indicator will light and the toasting cycle will commence. If the mains power to the appliance is off, the carriage lever will not stay down.

When the bread has toasted, the carriage will 'pop up' and the toaster will switch off. The toast can now be safely removed from the toaster.

If you have toasted small slices, you can remove these items more easily by manually raising the carriage to its higher position.

At any time the toasting cycle can be stopped by pressing the **CANCEL** button. The toast will pop up and the toaster will switch off.

Note: If you interrupt the toasting cycle, always use the **CANCEL** button. Do NOT force the carriage lever up or you may damage the appliance.

Never attempt to remove bread while it is toasting. Press **CANCEL** first.

Operating Features Of Your Toaster

Toast Timer Control

 
Move this control to the right (higher setting) to increase toasting time and to the left to decrease the time (lower setting).

Defrost

Frozen sliced bread may be defrosted and toasted in one operation. Adjust the control to the preferred setting, press the DEFROST button and then press the carriage lever to switch on the toaster. The Frozen indicator will glow and the bread will toast as normal. During this cycle extra time is added to compensate for the frozen bread.


Reheat

Use the REHEAT button to reheat toasted bread that has cooled. Press the REHEAT button and then press the carriage lever to switch on the toaster. The Reheat indicator will glow and the bread will be briefly reheated. The toaster will then switch off.

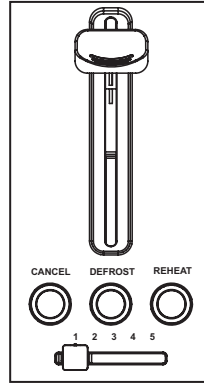


High-lift facility

 This is useful if you are toasting small slices of bread. After the bread has toasted, lift the carriage lever upward and take out the toast.

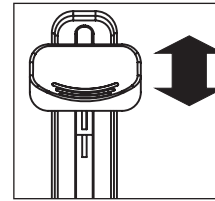

Crumb Removal

 Empty the crumb tray at least once a week. This will minimise the build up of toast crumbs and other debris. Switch the toaster off at the mains supply and allow it to cool. The crumb tray is located at the side of the toaster opposite the controls. Grip the handle and slide out the crumb tray. After emptying, replace the tray before using the toaster.

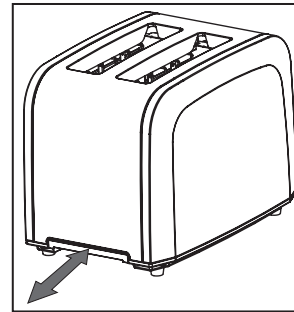

Cleaning & Storage

Unplug the toaster from the mains socket. If the toaster is hot allow it to cool fully. Wipe the outside with a soft cloth. If necessary, the body of the toaster may be wiped clean with a slightly damp (not wet) cloth.

Do not immerse any part of the appliance in water or liquids when cleaning and never use abrasive cleaners or scourers.

When not in use ensure that the appliance is switched off at the mains

Warranty

Your appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights.

Specifications

Voltage Rating: 220 - 240VAC, 50Hz

Power Consumption: 90-1050W

Weight: 1.5 Kg

THIS APPLIANCE MUST BE EARTHED



TRICITY

Tesco Stores Ltd, Delamare Road,
Cheshunt, Herts, EN8 9SL



UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>