





TROY-BILT® TRACTOR

**Models 3312GR
3312GRS
3212GR
3214GR
3114GR**

Attention Owner . . .
Save this parts list with your
Owner/Operator Manual for
future reference.

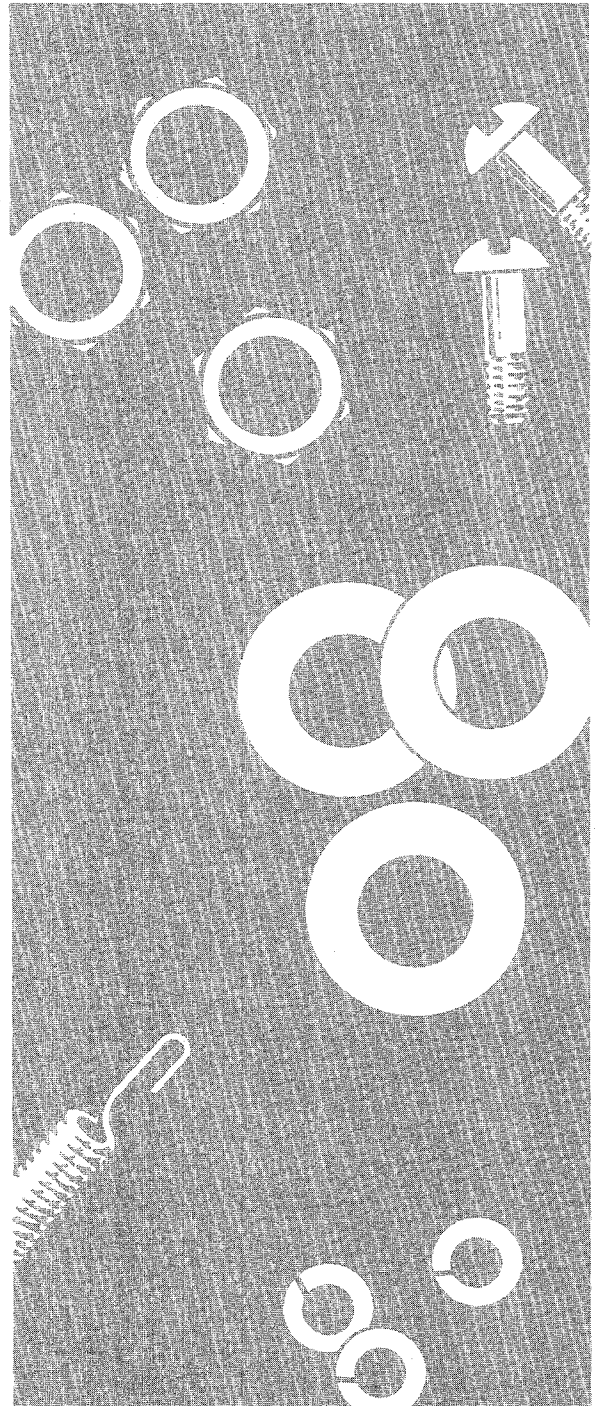

PARTS LIST

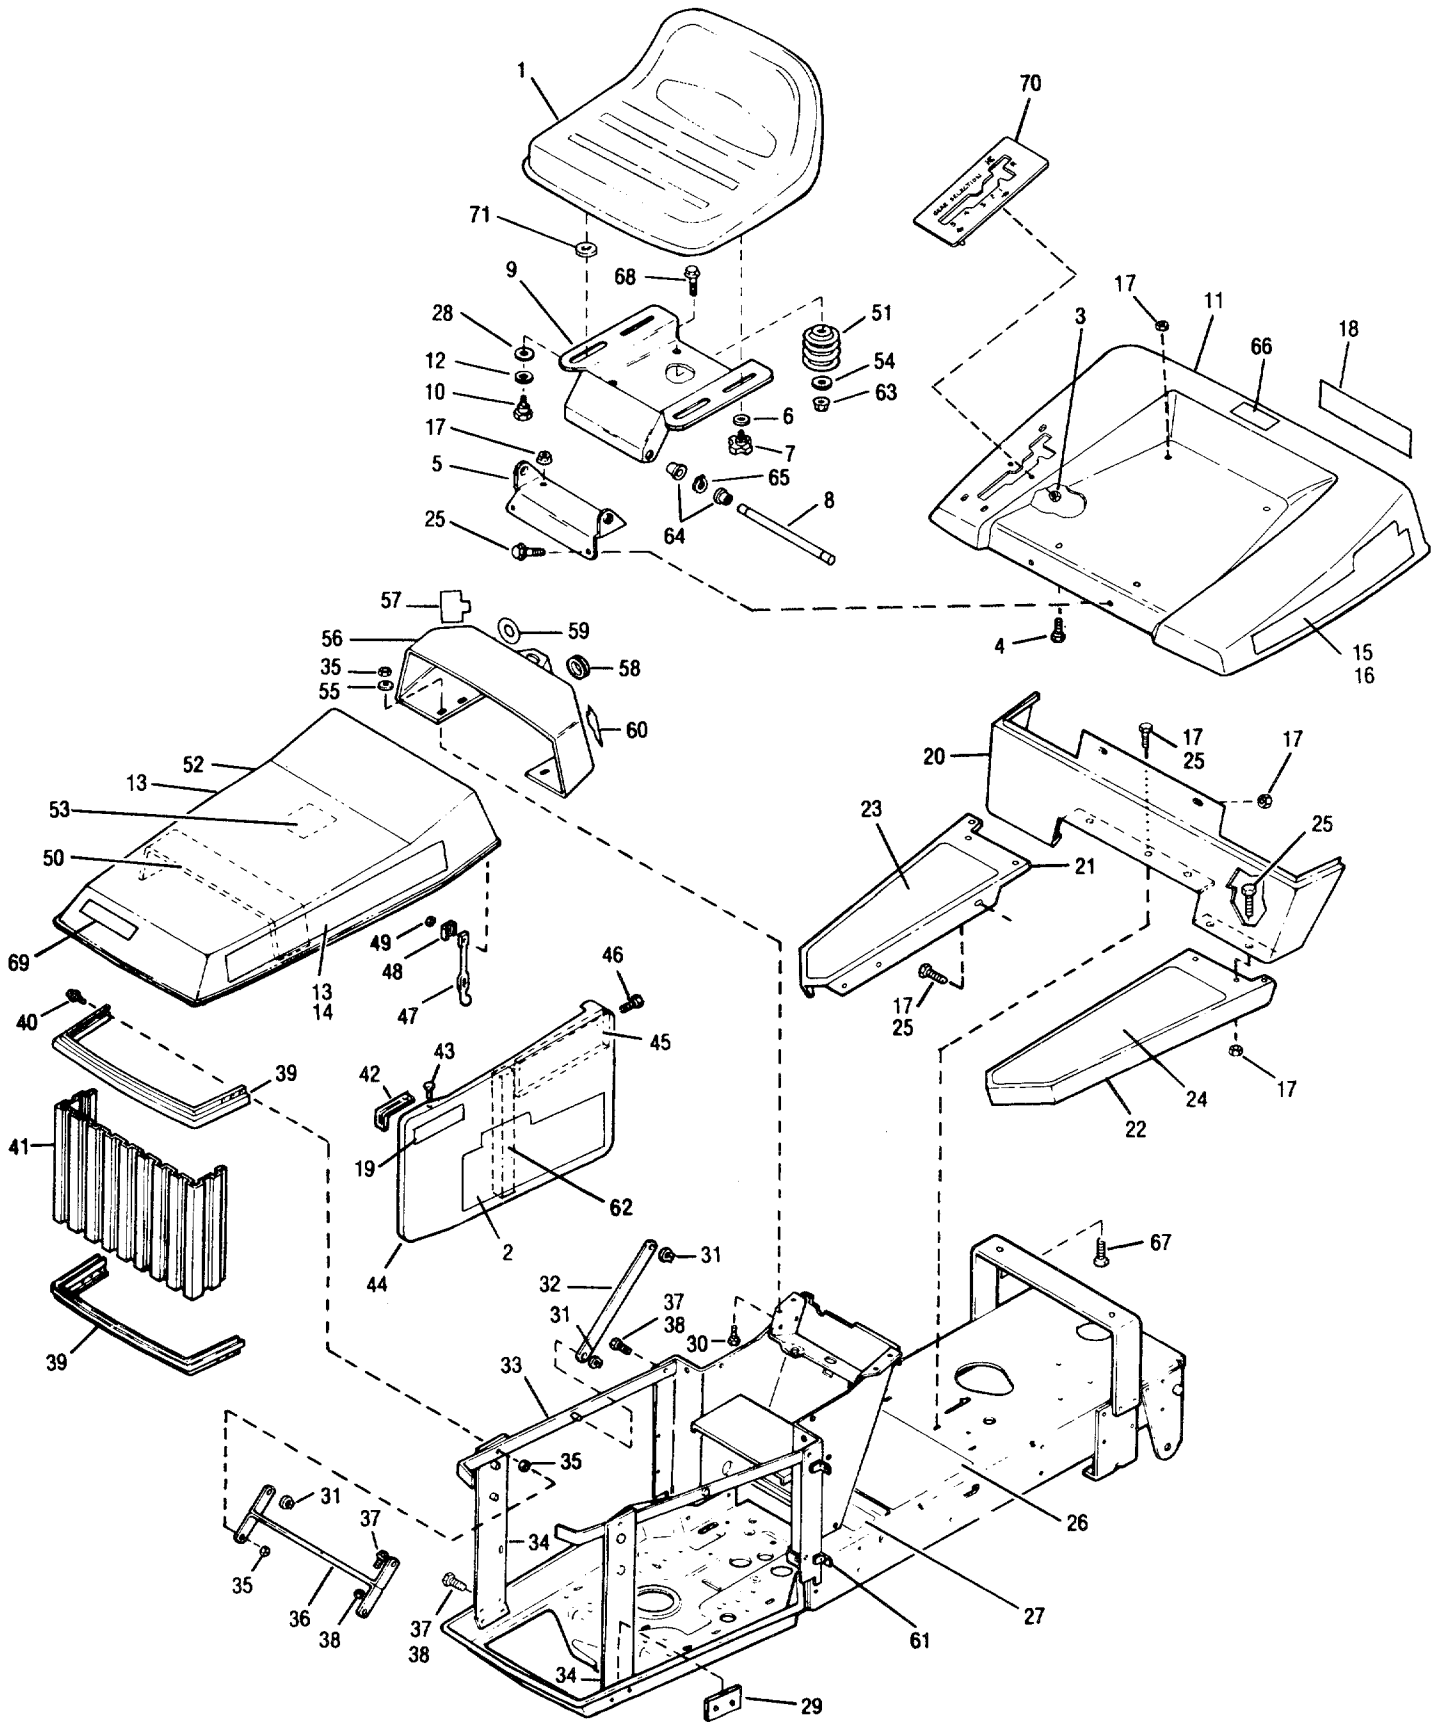


BODY WORK AND TRIM ASSEMBLY

MODELS 3312GR, 3312GRS, 3212GR, 3214GR & 3114GR

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1756861	Seat. See (D) (F)	1	35	B1734398	Lock Nut 1/4-20	8
	B1759105	Seat. See (E)	1	36	B1742458GAR	Hinge Link	2
2	B1757281	Side Cover Decal L.H. See (A)	1	37	B1186309	Flange Lock Screw 1/4-20 x 5/8	12
	B1757282	Side Cover Decal R.H. See (A)	1	38	B1186389	Flange Lock Nut 1/4-20	12
	B1757941	Side Cover Decal L.H. See (B)	1	39	B1742493GAW	Grille Cap. See (A)	2
	B1757940	Side Cover Decal R.H. See (B)	1		B1742493GAR	Grille Cap. See (B)	2
3	B1750532	Nut, Self Threading	6	40 •		Hex Hd. Screw 1/4-20 x 1	2
4	B1736098	Carr. Bolt 5/16-18 x 5/8 (Grade 5)	2	41	B1742494GAW	Grille. See (A)	1
5	B1756466STB	Pivot Bracket	1		B1742494STB	Grille. See (B)	1
6 •		Flat Washer 3/8	2	42	B1743566	Side Cover Guide. See (D)	4
7	B1734269	Knob	2		B1753912	Side Cover Guide. See (C) (E) (F)	4
8	B1755622	Rod	1	43	B1186059	Pop Rivet. See (D)	8
9	B1755620STB	Seat Support Ass'y	1		B1756629	Pop Rivet. See (C) (E) (F)	8
10	B1754125	Shoulder Bolt	2	44	B1743554GAW	L.H. Side Cover. See (A)	1
11	B1756154GAR	Rear Fender	1		B1743554GAR	L.H. Side Cover. See (B)	1
12	B1705793	Washer, Nylon	2		B1743553GAW	R.H. Side Cover. See (A)	1
13	B1757280	Hood Decal R.H. See (A)	1		B1743553GAR	R.H. Side Cover. See (B)	1
	B1757937	Hood Decal. See (B)	1	45	B1744065	Sealing Block. See (D) (F)	2
	B1759100	Hood Decal R.H. & L.H. See (E)	2	46 •		Phil. Hd. Machine Screw #10-24 x 5/8	4
14	B1757279	Hood Decal L.H. See (A)	1	47	B1727127	Rubber Latch	2
	B1757937	Hood Decal. See (B)	1	48	B1727126	Clip	2
15	B1757286	Fender Decal R.H. See (C)	1	49	B1185985	Keps Nut #10-24	2
	B1757284	Fender Decal R.H. See (D)	1	50	B1744067	Sealing Strip. See (D) (F)	1
	B1757942	Fender Decal R.H. See (E)	1	51	B1755449	Comp. Spring	2
	B1757944	Fender Decal R.H. See (F)	1	52	B1744051GAW	Hood Assembly. See (A)	1
16	B1757285	Fender Decal L.H. See (C)	1		B1744051GAR	Hood Assembly. See (B)	1
	B1757283	Fender Decal L.H. See (D)	1	53	B1756876	Service Instrument Decal	1
	B1757943	Fender Decal L.H. See (E)	1	54	B1701055	Flat Washer	2
	B1757945	Fender Decal L.H. See (F)	1	55 •		Flat Washer 1/4	4
17	B1186391	Flange Nut 5/16-18	15	56	B1753039	Instrument Panel	1
18	B1757254	Fender Decal. See (A)	1	57	B1756871	Throttle Decal. See (D) (F)	1
	B1757936	Fender Decal. See (B)	1		B1755931	Throttle Decal. See (C) (E)	1
	B1759102	Fender Decal. See (E)	1	58	B1756739	Cap	2
19	B1757278	Side Cover Decal. See (A)	2	59	B1755932	Decal, Ignition	1
20	B1743987GAR	Running Board Support	1	60	B1755933	Choke Decal	1
21	B1751805GAR	R.H. Running Board	1	61	B1742934	Angle Speed Nut	4
22	B1751803GAR	L.H. Running Board	1	62	B1754614	Strip, Seal. See (D) (F)	2
23	B1756888	R.H. Foot Pad. See (C) (E)	1	63	B1186393	Fl. Nut 3/8-16	2
	B1757915	R.H. Foot Pad. See (D) (F)	1	64	B1755779	Bearing	4
24	B1756890	L.H. Foot Pad	1	65	B1185257	Retaining Ring	2
25	B1186330	Flange Lock Screw 5/16-18 x 7/8	9	66	B1757366	Fuel Decal	1
26	B1756889	Center Foot Pad	1	67	B1736098	Carr. Bolt 5/16-18 x 5/8	2
27	B1755946	Instruction Decal	1	68	B1186347	Fl. Screw 3/8-16 x 1	2
28	B1706782	Wave Washer	2	69	B1757276	Decal, Model. See (A)	1
29	B1754415	Spacer, Plate	2		B1759101	Decal, Model. See (B) (G)	1
30 •		Hex Hd. Screw 1/4-20 x 5/8 (Grade 5)	4	70	B1756740	Quadrant	1
31	B1747836	Retaining Ring	6	71	B1893445	Washer	2
32	B1742459GAR	Hinge Link	2				
33	B1758587GAR	Hinge Strap Assembly	2				
34	B1752914GAW	Grille Support Assembly. See (A)	2				
	B1752914STB	Grille Support Assembly. See (B)	2				

• Common Hardware — Purchase Locally (Specify Grade 5 for screws and bolts)

- (A) Tractor Models 3212GR & 3114GR
- (B) Tractor Models 3312GR & 3214GR
- (C) Tractor Model 3212GR
- (D) Tractor Model 3114GR
- (E) Tractor Model 3312GR & 3312GRS
- (F) Tractor Model 3214GR
- (G) Tractor Model 3312GRS

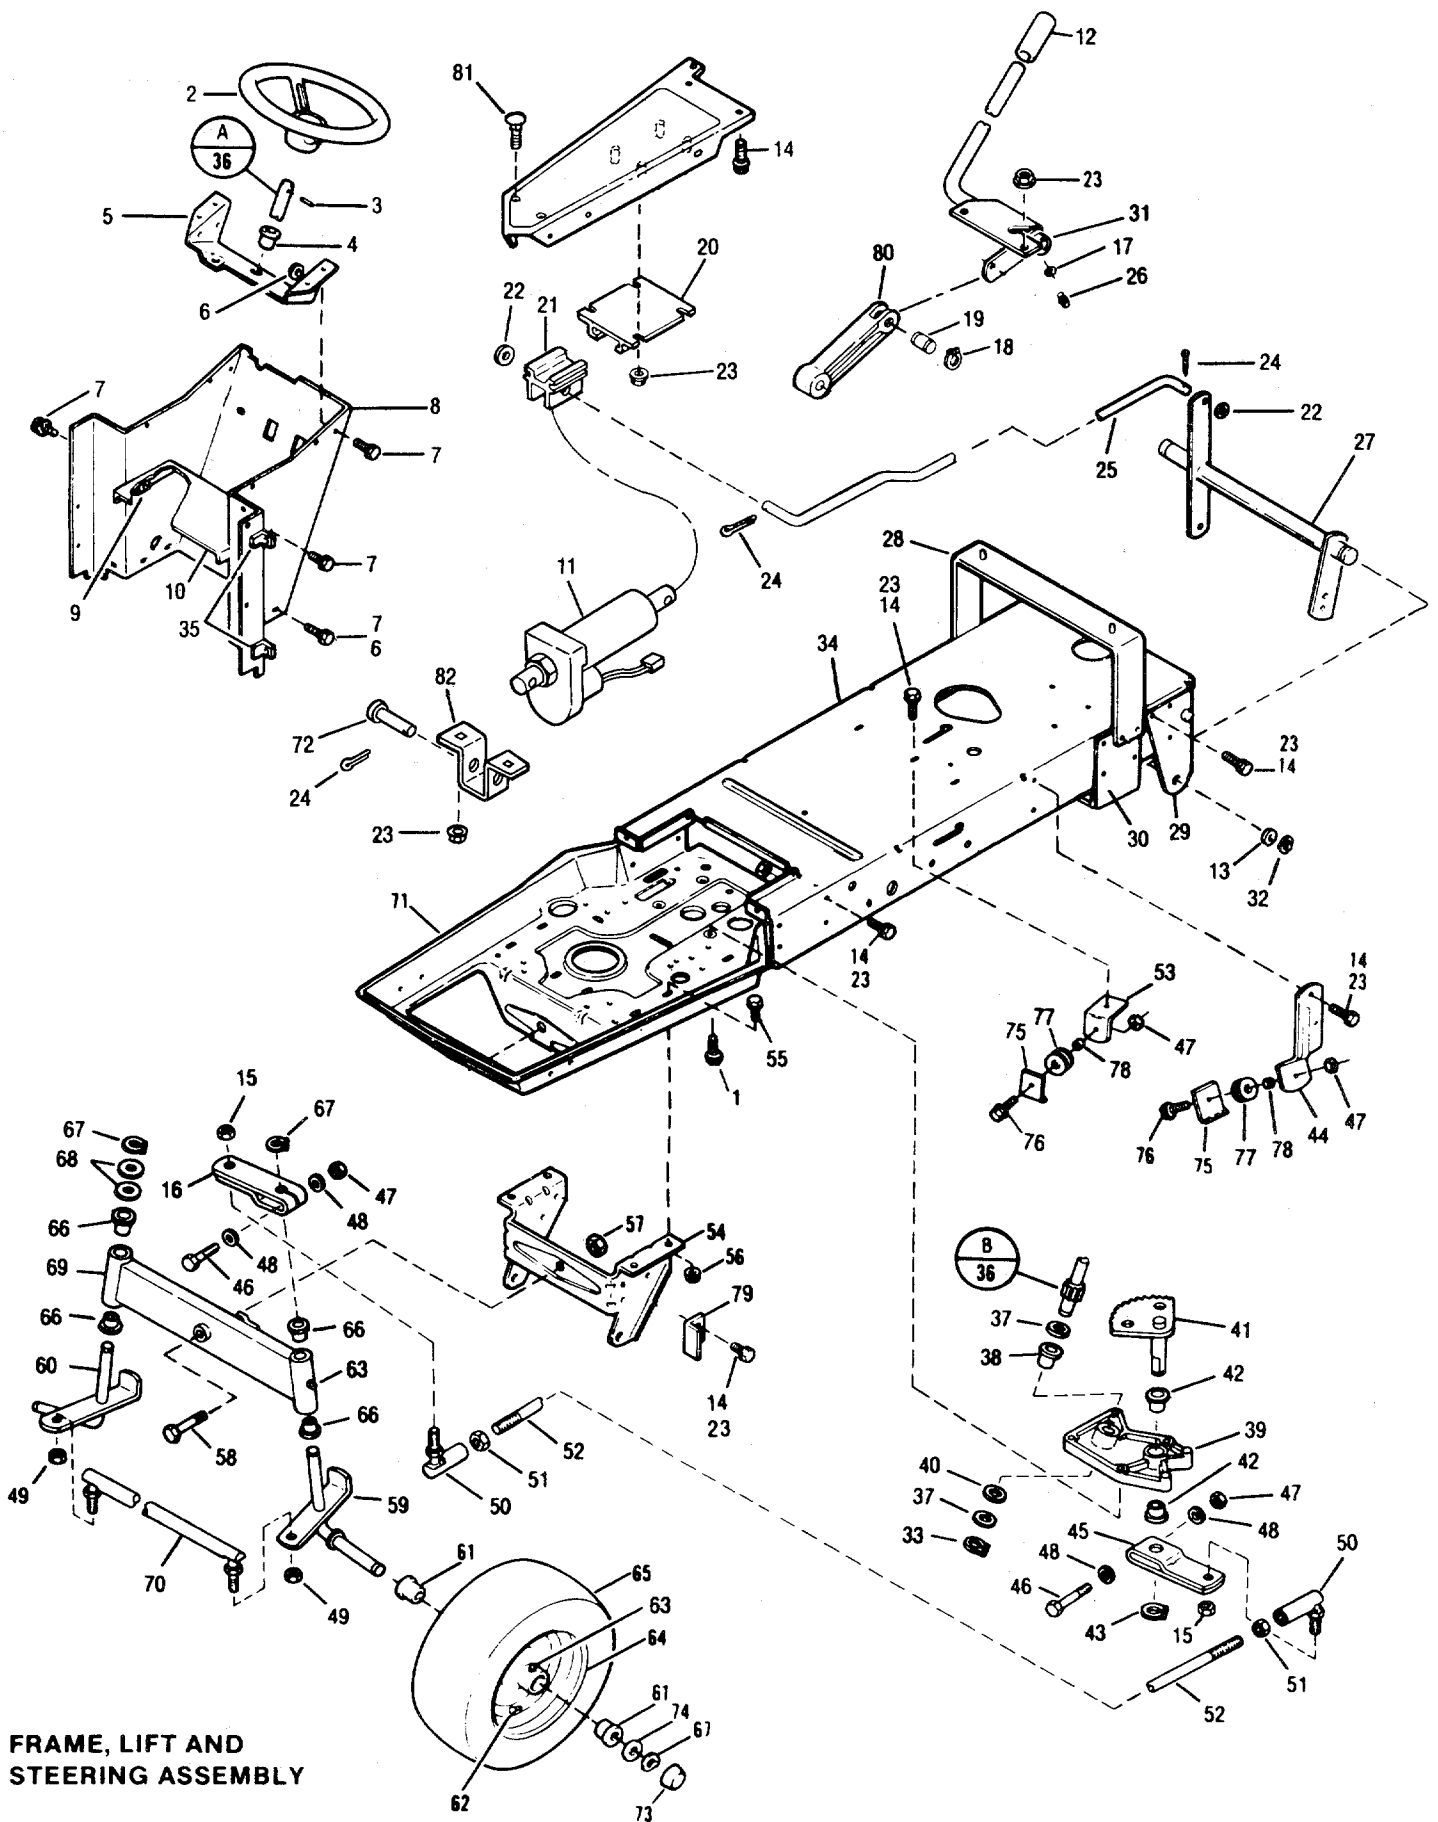

FRAME, LIFT AND STEERING ASSEMBLY


MODELS 3312GR, 3312GRS, 3212GR, 3214GR & 3114GR

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1724491	Thd Screw 5/16-18 x 3/4	4	44	B1747315GAR	Bracket	1
2	B1756862	Steering Wheel	1	45	B1750581	Spindle Arm Assembly	1
3 •		Roll Pin 1/4 x 2-1/4	1	46 •		Hex Head Screw 3/8-16 x 2-1/4	2
4	B1185632	Flange Bearing	1	47	B1733398	Hex Lock Nut 3/8-16	4
5	B1756608	Steering Shaft Support	1	48	B1708755	Flat Washer 3/8	4
6	B1186389	Flange Nut 1/4-20	5	49	B1110150	Lock Nut 3/8-24	2
7	B1186309	Flange Screw 1/4-20 x 5/8	13	50	B1716180	Ball Joint	2
8	B1758724GAR	Instr. Panel Support	1	51	B1186247	Jam Hex Nut 1/2-20	2
9	B1185456	U Type Speed Nut 1/4-20	4	52	B1750499GAR	Steering Rod	1
10	B1756073GAR	Battery Support	1	53	B1747316GAR	Bracket	1
11	B1750450	Actuator. See (D) (F)	1	54	B1750811GAR	Attachment Bracket	1
12	B1753539	Handle Grip. See (C) (E)	1	55	B1186345	Fl. Hex Screw 3/8-16 x 3/4	4
13	B1185830	Flat Washer	4	56	B1186393	Flange Hex Nut 3/8-16	4
14	B1186330	Fl. Lock Screw 5/16-18 x 7/8	33	57	B1758231	Lock Hex Nut 5/8-11	1
15	B1750957	Lock Jam Nut 1/2-20	2	58	B1758232	Hex Hd. Screw 5/8-11 x 2-1/2	
16	B1750495	Steering Arm	1			(Grade 5)	1
17	B1805368	Washer. See (C) (E)	1	59	B1750486GAR	L.H. Spindle Assembly	1
18	B1185427	Retaining Ring. See (C) (E)	2	60	B1750490GAR	R.H. Spindle Assembly	1
19	B1747189	Pin. See (C) (E)	1	61	B1720327	Bushing	4
20	B1758272	Stationary Guide.		62	B1718086	Valve Stem	2
		Incl. Ref. No. 21	1	63	B1185976	Grease Fitting	4
21	B1758272	Sliding Guide. Incl. Ref. No. 20	1	64	B1757420GAW	Wheel (Incl. Ref. 61 & 63).	
22 •		Flat Washer 1/2	2			See (A)	2
23	B1186391	Flange Lock Nut 5/16-18	42		B1757981	Wheel (Incl. Ref. 61 & 63).	
24 •		Cotter Pin 1/8 x 1	3			See (B)	2
25	B1751070	Lift Rod	1	65	B1756864	Tire 15 x 6.00-6	2
26	B1185803	Grease Fitting. See (C) (E)	1	66	B1742133	Flange Bearing	4
27	B1754950GAR	Lift Shaft Assembly	1	67	B1185388	Retaining Ring	4
28	B1754944GAR	Fender Support Assembly	1	68	B1701447	Washer	A/R
29	B1749801GAR	Rear Panel Assembly	1	69	B1750494GAR	Front Axle Assembly	1
30	B1740984GAR	Axle Support	2	70	B1750841GAR	Tie Rod	1
31	B1749028GAR	Lift Lever Assembly. See (C) (E)	1	71	B1742343GAR	Front Frame	1
32	B1185388	Retaining Ring	2	72	B1706419	Clevis Pin. See (D) (F)	1
33	B1177567	Retaining Ring	1	73	B1744444	Wheel Cap	2
34	B1755847GAR	Rear Frame	1	74	B1185830	Special Washer	A/R
35	B1742934	Angle Bracket Speed Nut	4	75	B1747320	Cable Guide	2
36	B1758726	Steering Shaft	1	76 •		Hex Screw 3/8-16 x 1-1/4	2
37	B1730375	Shim Washer	A/R	77	B1756177	Pulley	2
38	B1747303	Flange Bearing	1	78	B1747322	Spacer	2
39	B1750594	Steering Support Assembly	1	79	B1751715GAR	Bracket	2
40	B1715301	Thrust Washer	1	80	B1754179	Push Link	1
41	B1750501	Sector Gear Assembly	1	81	B1736098	Carr. Bolt 5/16-18 x 5/8.	
42	B1185386	Flange Bearing	2			See (D) (F)	2
43	B1113527	Retaining Ring	1	82	B1750307	Lift Bracket. See (D) (F)	1

• Common Hardware — Purchase Locally
(Specify Grade 5 for screws and bolts)

- (A) Tractor Models 3212GR & 3114GR
- (B) Tractor Models 3312GR & 3214GR
- (C) Tractor Model 3212GR
- (D) Tractor Model 3114GR
- (E) Tractor Model 3312GR & 3312GRS
- (F) Tractor Model 3214GR

MODELS 3214GR & 3114GR

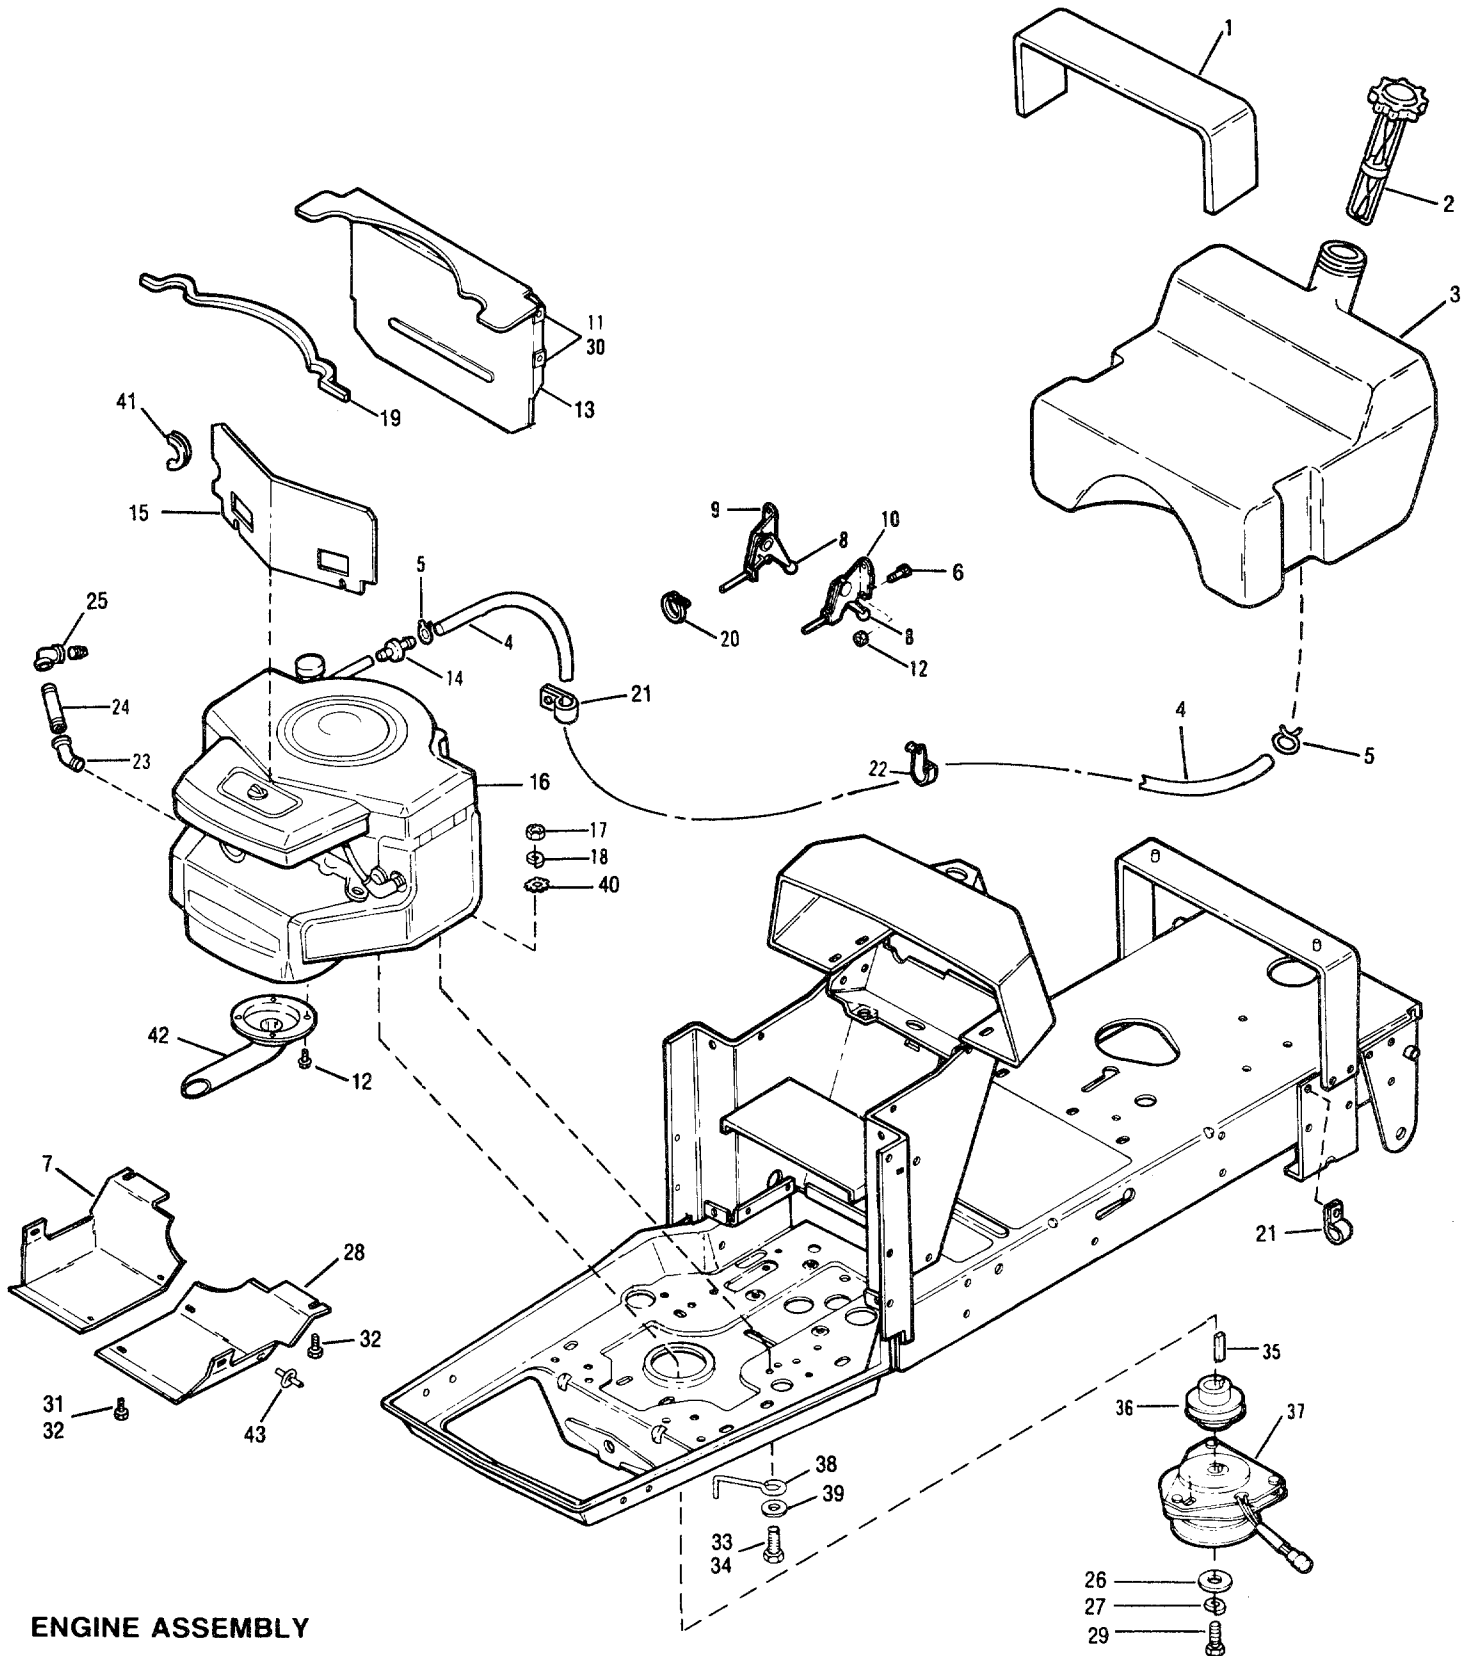


ENGINE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1744390	Fuel Tank Pad	1	22	B1745366	Cable Hanger	3
2	B1756044	Fuel Gauge	1	23	B1743683	Street Elbow, 45°	1
3	B1756460	Fuel Tank (Incl. Ref. 2)	1	24	B1743685	Pipe Nipple	1
4	B1752795	Fuel Line	1	25	B1743684	Elbow, 90°	1
5	B1750687	Hose Clamp	2	26	B1744455	Special Washer	1
6	B1750962	Screw 10-24 x 5/8	4	27 •		Lock Washer 7/16	1
7	B1754564STB	R.H. Heat Shield	1	28	B1754563STB	L.H. Heat Shield	1
8	B1737118	Knob	2	29	B1744454	Hex Screw 7/16-20 x 3 (Grade 5)	1
9	B1755904	Throttle Control	1				
10	B1755903	Choke Control	1	30	B1185986	Speed Nut #10-24	5
11 •		Phil. Hd. Screw #10-24 x 5/8	8	31	B1186389	Fl. Nut 1/4-20	2
12	B1185712	Thd. Cut Screw #10-24 x 1/2	4	32	B1186307	Fl. Screw. 1/4-20 x 3/8	4
13	B1752882GAR	Heat Shield. (Model 3114GR)	1	33 •		Screw, Hex Hd. 5/16-18 x 2	1
	B1752882STB	Heat Shield. (Model 3214GR)	1	34 •		Screw, Hex Hd. 5/16-18 x 1-1/2	3
14	B1727491	Fuel Filter	1	35	B1187474	Sq. Key 1/4 x 2-1/2	1
15	B1754578GAR	Heat Shield. (Model 3114GR)	1	36	B1747148	Sheave	1
	B1754578STB	Heat Shield. (Model 3214GR)	1	37	B1755341	Electric Clutch	1
16	*	Engine, B&S 14 H.P. Model 400707	1	38	B1754787	Clutch Retainer	1
17 •		Hex Nut 5/16-18	4	39 •		Flat Washer 5/16	1
18 •		Lock Washer 5/16	4	40 •		Lock Washer 5/16	1
19	B1732137	Sealing Strip	1	41	B1754612	Trim	1
20	B1735531	Wire Tie	3	42	B1754887STB	Exhaust Pipe	1
21	B1747738	J-Clip	2	43	B1740752	Rivet, Pop 1/8	2

• Common Hardware — Purchase Locally (Specify Grade 5 for screws and bolts)

* Engine warranty service and repair parts are available from your local authorized Briggs & Stratton engine dealer.

MODELS 3312GR, 3312GRS & 3212GR

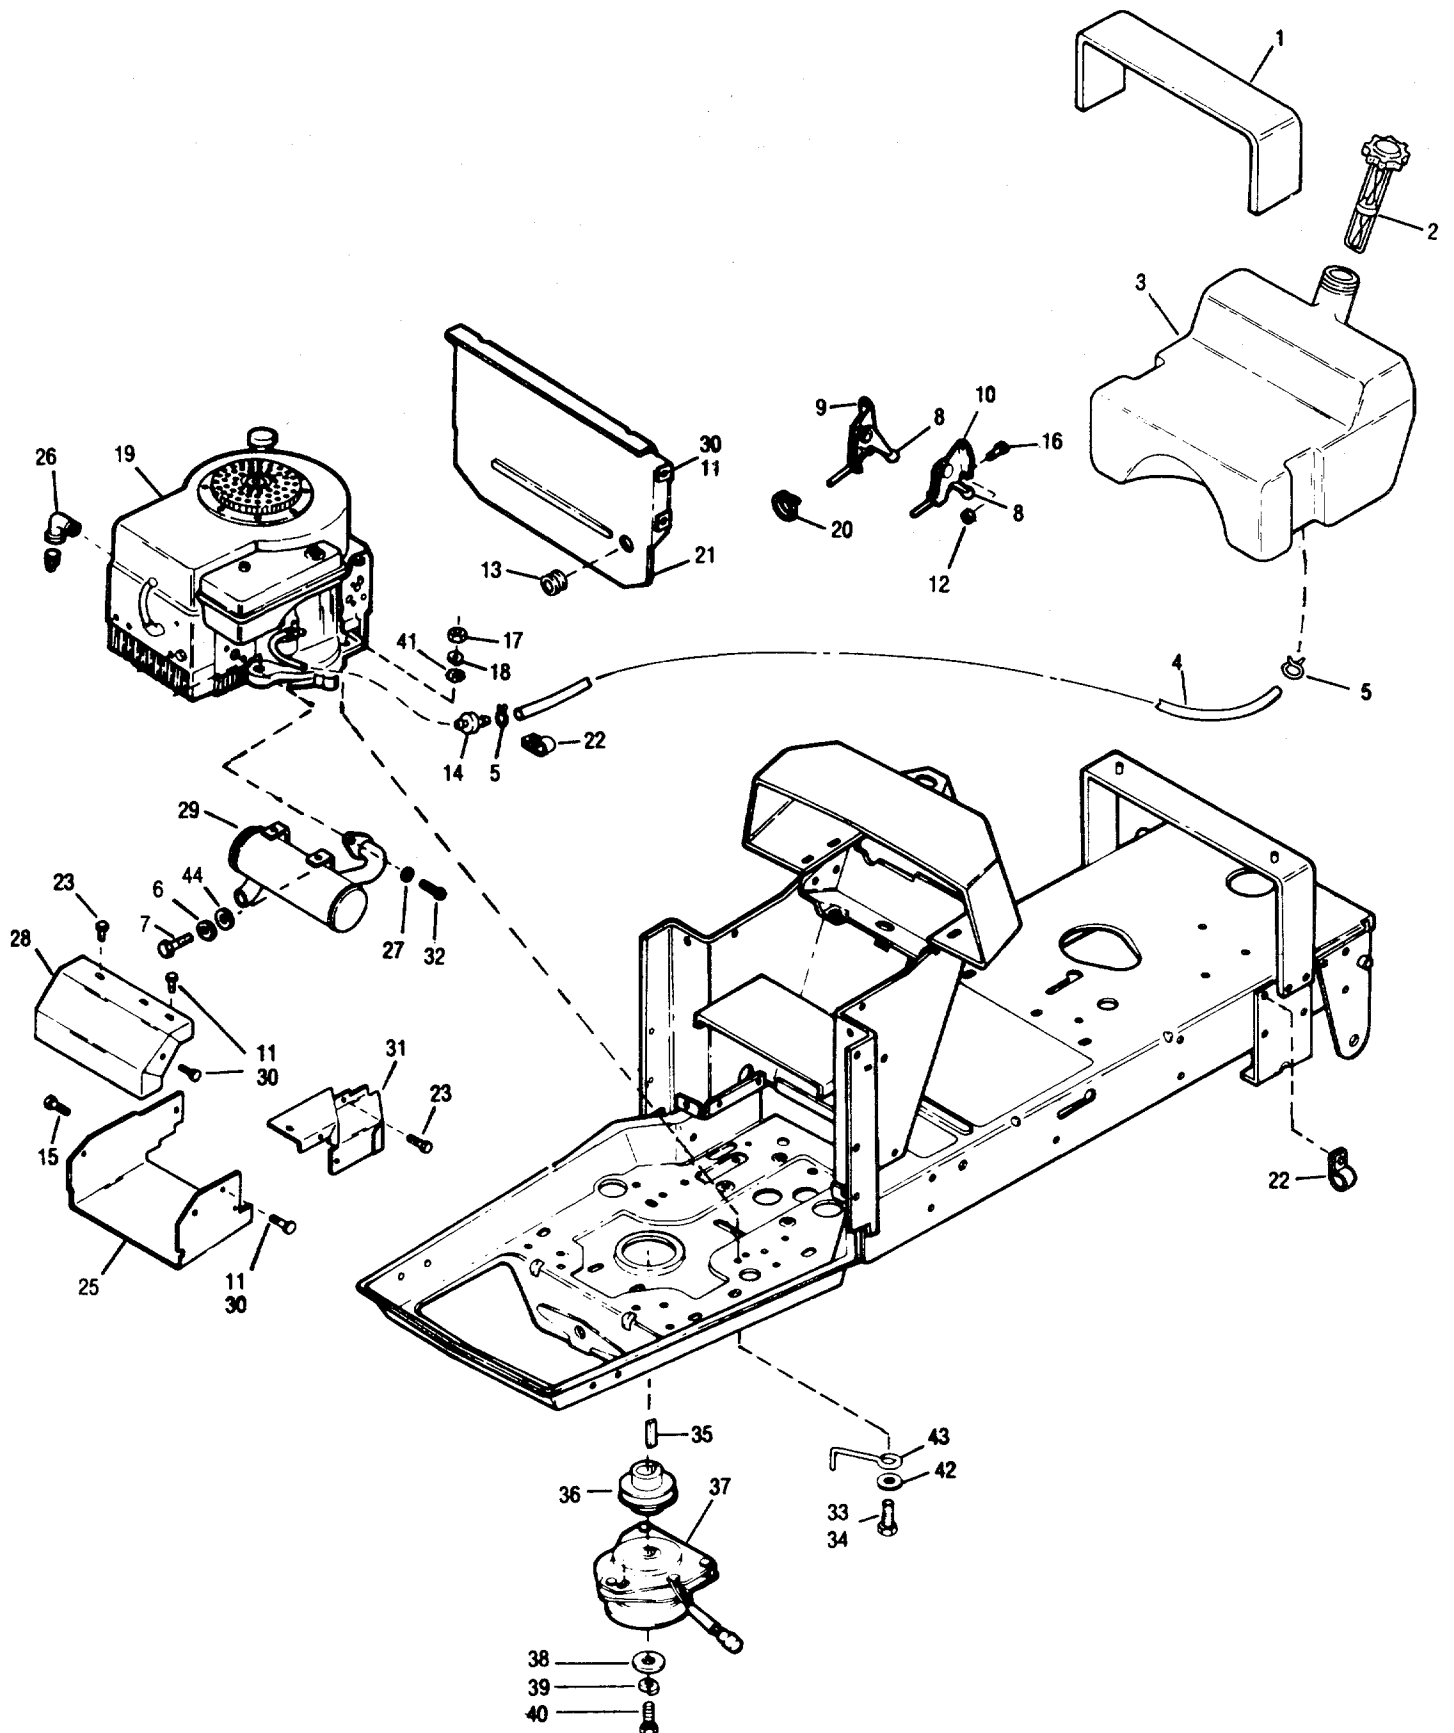


MODELS 3312GR, 3312GRS & 3212GR

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1744390	Fuel Tank Pad	1	22	B1747738	J-Clip	3
2	B1756044	Fuel Tank Gauge	1	23	B1186309	Fl. Screw 1/4-20 x 5/8	3
3	B1756460	Fuel Tank (Incl. Ref. 2)	1	25	B1752909STB	Heat Shield	1
4	B1752795	Fuel Line	1	26	B1752912	Elbow, 90°	1
5	B1750687	Hose Clamp	2	27	B1185140	Lock Washer, Special	2
6 •		Washer, Lock 1/4	1	28	B1752911STB	Heat Shield	1
7 •		Hex Screw 1/4-20 x 1	1	29	B1752890	Muffler	1
8	B1737118	Knob	2	30	B1185986	Speed Nut #10-24	9
9	B1755926	Throttle Control	1	31	B1752910STB	Heat Shield	1
10	B1755927	Choke Control	1	32	B1747993	Socket Hd. Screw 5/16-18 x 3/4	2
11 •		Phil. Hd. Screw #10-24 x 5/8	9	33 •		Screw, Hex Hd. 5/16-18 x 2	1
12 •		Keps Nut #10-24	4	34 •		Screw, Hex Hd. 5/16-18 x 1-1/2	3
13	B1748014	Grommet	1	35	B1187474	Sq. Key 1/4 x 1-1/2	1
14	B1727491	Fuel Filter	1	36	B1747148	Sheave	1
15	B1186330	Fl. Screw 5/16-18 x 7/8	1	37	B1755341	Electric Clutch	1
16	B1750962	Screw #10-24 x 5/8	4	38	B1744455	Special Washer	1
17 •		Hex Nut 5/16-18	4	39 •		Lock Washer 7/16	1
18 •		Lock Washer 5/16	4	40	B1744454	Hex Hd. Screw 7/16-20 x 3 (Grade 5)	1
19	*	Engine, B&S 12 H.P. Model 281707	1	41 •		Lock Washer 5/16 (L.H. Rear)	1
20	B1735531	Wire Tie	3	42 •		Flat Washer 5/16	2
21	B1752883GAR	Heat Shield (Model 3212GR)	1	43	B1754787	Clutch Retainer	1
	B1752883STB	Heat Shield (Model 3312GR)	1	44	B1755340	Spacer	1

• Common Hardware — Purchase Locally (Specify Grade 5 for screws and bolts)

* Engine warranty service and repair parts are available from your local authorized Briggs & Stratton engine dealer.

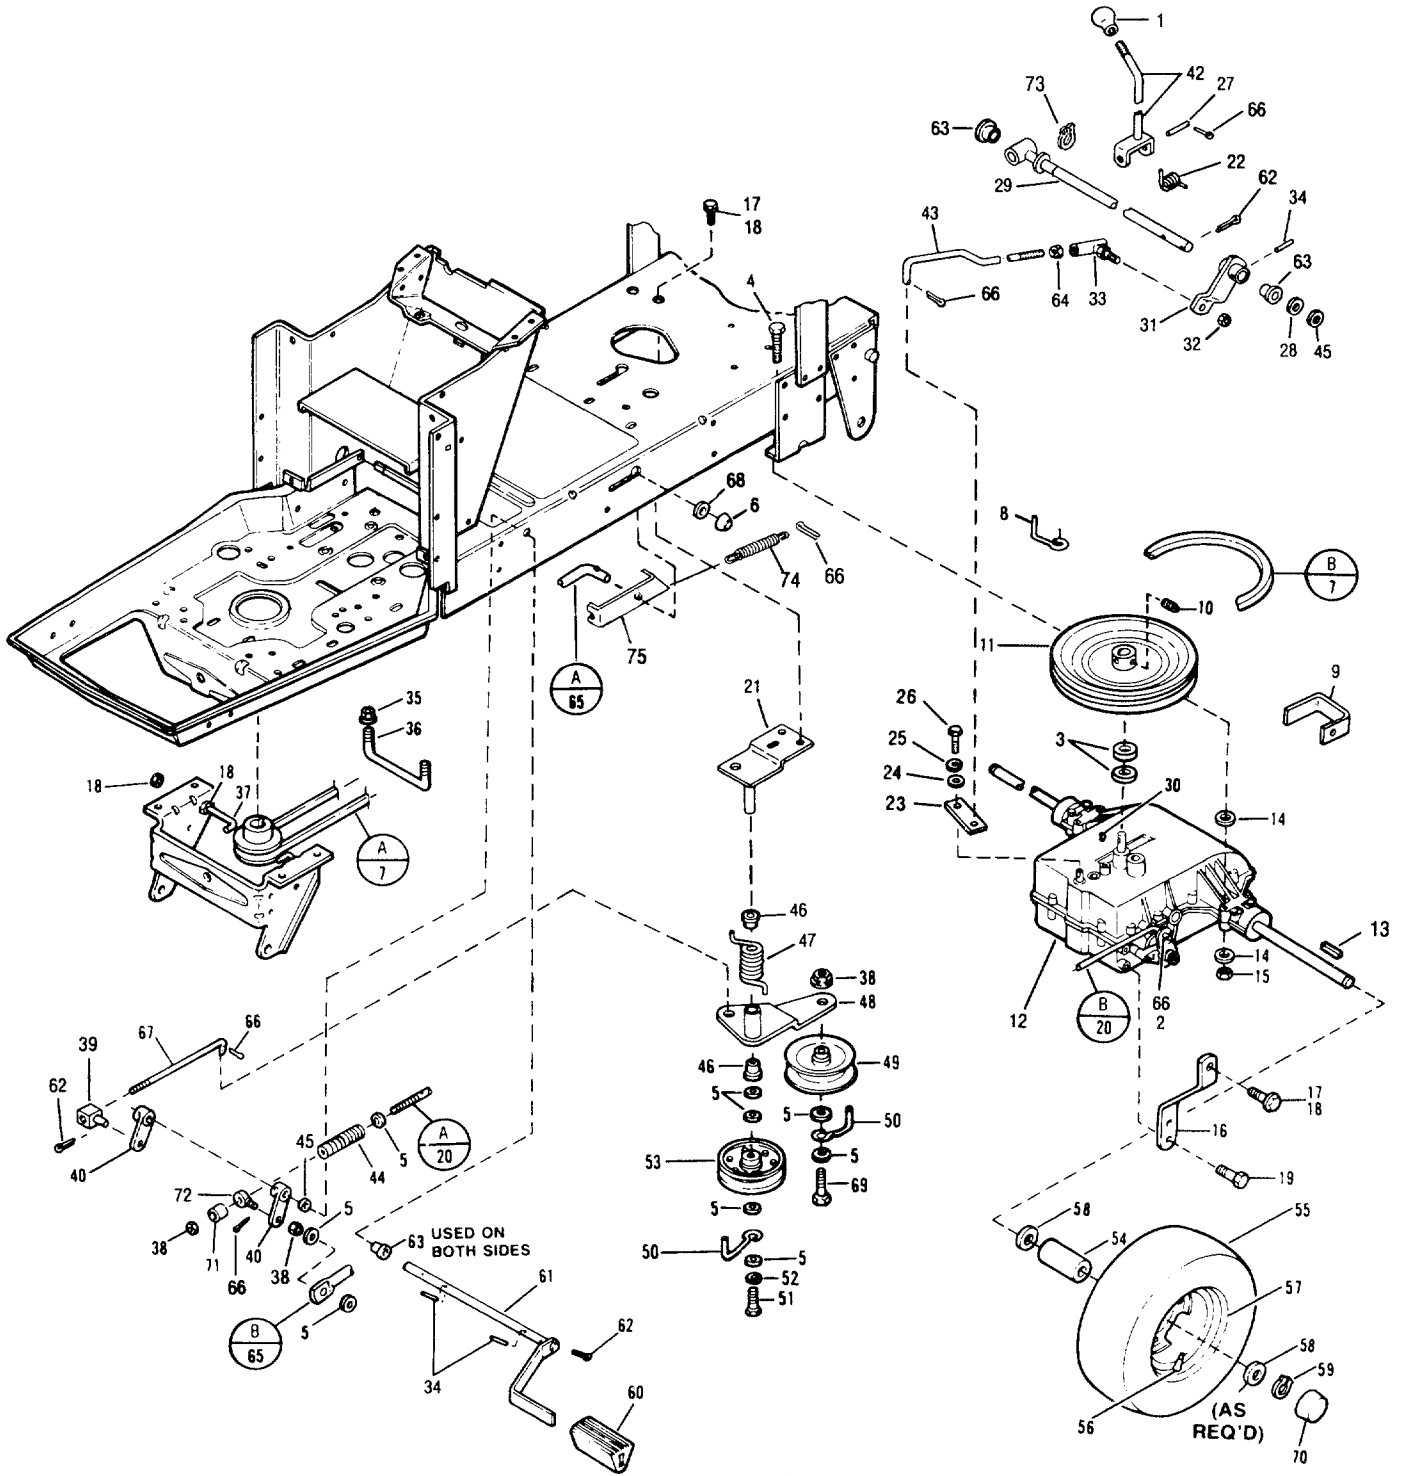


BRAKE AND CLUTCH ASSEMBLY

MODELS 3312GR, 3312GRS, 3212GR, 3214GR & 3114GR


REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1756877	Knob	1	36	B1744320	Belt Guide	1
2	•	Flat Washer 5/16	1	37	B1757291	Belt Guide	2
3	B1705092	Flat Washer	2	38	B1733398	Lock Nut 3/8-16	3
4	•	Hex Hd. Screw 5/16-18 x 2-3/4	4	39	B1748491	Pivot	1
5	•	Flat Washer 3/8	9	40	B1751880	Arm Ass'y	2
6	B1747186	Push on Cap	1	42	B1756047	Shift Lever Ass'y	1
7	B1747188	V-Belt (96.88)	1	43	B1752523	Shift Rod. See (D) (F)	1
8	B1752798	Belt Guide Rod	1		B1754660	Shift Rod. See (C) (E)	1
9	B1750297	Belt Guide	1	44	B1728908	Compression Spring	1
10	B1185596	Set Screw	2	45	•	Flat Washer 5/8	2
11	B1743640	Transmission Sheave	1	46	B1715538	Nylon Bushing	2
12	*	5-Speed Peerless Transmission		47	B1751809	Torsion Spring	1
		Model 801-046. See (D) (F)	1	48	B1746941GAR	Idler Arm Ass'y	1
	*	5-Speed Peerless Transmission		49	B1726660	Idler	1
		Model 920-011. See (C) (E)	1	50	B1725555	Belt Guide	2
13	B1104335	Sq. Key 3/16 x 2	2	51	•	Hex Hd Screw 3/8-16 x 2-1/4	1
14	•	Flat Washer 5/16	8	52	•	Lock Washer 3/8	1
15	B1732499	Lock Nut 5/16-18	4	53	B1756151	Idler	1
16	B1742103GAR	Transmission Support	1	54	B1742054	Spacer	2
17	B1186330	Fl. Lock Screw 5/16-18 x 7/8	3	55	B1756867	Tire 20 x 8.00-10	2
18	B1186391	Fl. Nut 5/16-18	7	56	B1718086	Valve Stem	2
19	B1724491	Thd. Form Screw 5/16-18 x 3/4	2	57	B1757422GAW	Wheel Disc. See (A)	2
20	B1746943	Brake Rod	1		B1757986	Wheel Disc. See (B)	2
21	B1751808GAR	Idler Support Ass'y	1	58	B1747998	Washer 3/4	A/R
22	B1750526	Torsion Spring	1	59	B1185388	Retaining Ring	2
23	B1743606	Transmission Arm. See (D) (F)	1	60	B1728694	Foot Rest	1
	B1754661	Transmission Arm. See (C) (E)	1	61	B1756049	Brake Pedal Ass'y	1
24	•	Flat Washer 1/4	1	62	•	Cotter Pin 1/8 x 1	3
25	•	Lock Washer 1/4	1	63	B1714233	Nylon Bushing	4
26	•	Hex Screw 1/4-28 x 1/2		64	•	Jam Nut 5/16-24	1
		(Grade 5)	1	65	B1751063	Brake Lock Rod	1
27	B1750946	Pin	1	66	•	Cotter Pin 1/8 x 5/8	6
28	B1705093	Washer	A/R	67	B1746942	Clutch Rod	1
29	B1750539	Shaft Ass'y	1	68	B1893445	Washer, Flat 3/8	1
30	•	Woodruff Key 3/16 x 3/4	1	69	•	Screw Hex Hd 3/8-16 x 1-3/4	1
31	B1750299	Shift Arm Ass'y. See (D) (F)	1	70	B1747873	Wheel Cap	2
	B1754663	Shift Arm Ass'y. See (C) (E)	1	71	B1713783	Spacer	1
32	•	Lock Nut 5/16-24	1	72	B1749904	Eye Bolt	1
33	B1752524	Ball Joint	1	73	B1177567	Retaining Ring	1
34	B1120210	Roll Pin 3/16 x 1.00	3	74	B1729482	Ext. Spring	1
35	B1186389	Fl. Lock Nut 1/4-20	4	75	B1755584GAR	Interlock Bracket	1

- Common Hardware — Purchase Locally (Specify Grade 5 for screws and bolts)
 - * Peerless transmission warranty service and repair parts are available from your local authorized Tecumseh Power Products engine dealer.
- (A) Tractor Models 3212GR & 3114GR
 (B) Tractor Models 3312GR & 3214GR
 (C) Tractor Model 3212GR
 (D) Tractor Model 3114GR
 (E) Tractor Model 3312GR & 3312GRS
 (F) Tractor Model 3214GR

MODELS 3214GR & 3114GR

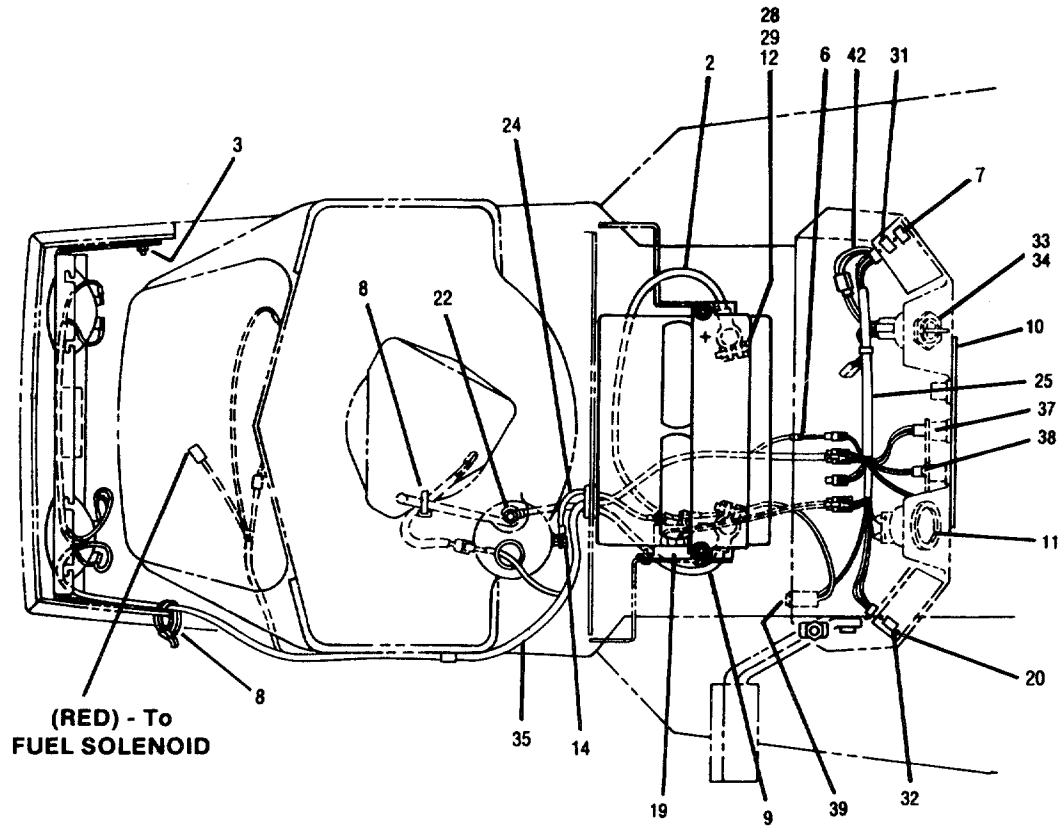


MODELS 3312GR, 3312GRS & 3212GR

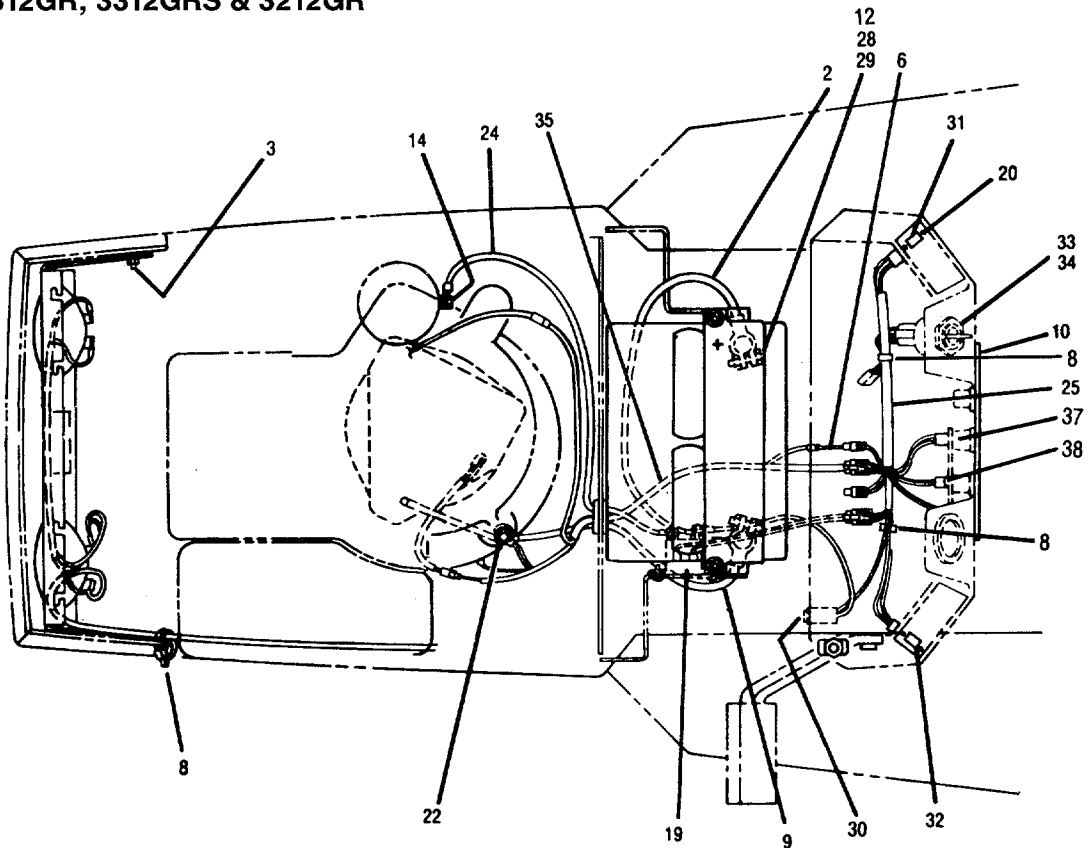

**MODELS 3214GR & 3114GR SHOWN
MODELS 3312GR, 3312GRS & 3212GR SIMILAR**

MODELS 3214GR, 3114GR, 3312GR, 3312GRS & 3212GR

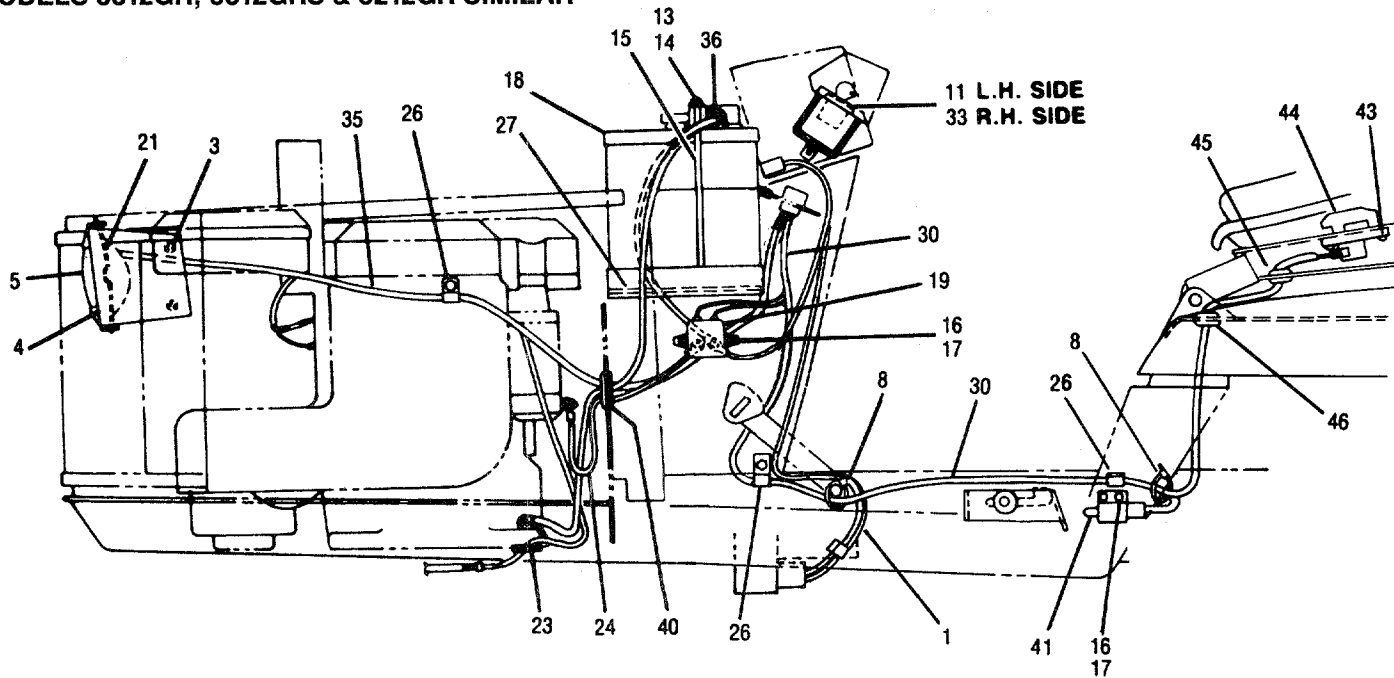


REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.	REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	B1751088	Harness, Lift. See (A) (C) (D)	1	25	B1752134	Console Wiring Harness	1
2	B1756074	Battery Cables (Pos.)	1	26	B1747738	J-Clip	3
3	B1186389	Flange Lock Nut 1/4-20	4	27	B1756630	Rubber Pad	1
4	B1744021STB	Light Support	1	28 •		Lock Washer	2
5	B1726435	Headlight	2	29 •		Screw 1/4-20 x 5/8	2
6	B1755616	Diode Ass'y	1	30	B1756076	Interlock Harness	1
7	B1753874	Switch, El. Lift. See (A) (C) (D)	1	31	B1754608	PTO Switch	1
8	B1735531	Wire Tie	5	32	B1754856	Light Switch	1
9	B1756075	Battery Cable (Neg.) See (A) (B) (C)	1	33	B1754250	Ignition Switch	1
	B1754220	Battery Cable (Neg.) See (D)	1	34	B1753986	Ignition Key	2
10	B1756872	Lense	1	35	B1752136	Harness, Engine. See (A) (C)	1
11	B1754550	Hour Meter (Optional)	1		B1752908	Harness, Engine. See (B)	1
12 •		Hex Nut 1/4-20	2		B1758466	Harness, Engine. See (D)	1
13 •		Flat Washer 1/4	2	36	B1755802	Cover	1
14	B1734398	Hex Lock Nut 1/4-20	3	37	B1751572	Bulb	3
15	B1752586	J-Bolt	2	38	B1186020	Thd. Cut Screw 6-32 x 3/8	1
16 •		Phil. Hd. Screw #10-24 x 5/8	4	39	B1743516	Replacement Fuse, 30A	1
17	B1185985	Nut #10-24	4	40	B1752809	Grommet	1
18	B1752840	Battery	1	41	B1751328	Switch, Interlock	1
19	B1752137	Solenoid	1	42	B1747353	Harness, El. Lift. See (A) (C) (D)	1
20	B1750963	Screw 6-32 x 1/2	4	43	B1755349	Pan Hd. Screw 1/4-20 x 1/2	2
21	B1744022	Retainer	2	44	B1752506	Switch	1
22 •		Hex Nut 5/16-18	1	45	B1755487	Grommet	1
23	B1748014	Grommet	1	46	B1754934	Grommet	1
24	B1722081	Starter Cable. See (A) (C)	1				
	B1741506	Starter Cable. See (B)	1				
	B1752841	Starter Cable. See (D)	1				



• Common Hardware — Purchase Locally
(Specify Grade 5 for screws and bolts)

(A) Tractor Model 3114GR
(B) Tractor Models 3312GR, 3312GRS, & 3212GR
(C) Tractor Model 3214GR (Serial No. B030100101-B03019999)
(D) Tractor Model 3214GR (Serial No. B030200101-B03029999)

WIRING DIAGRAM

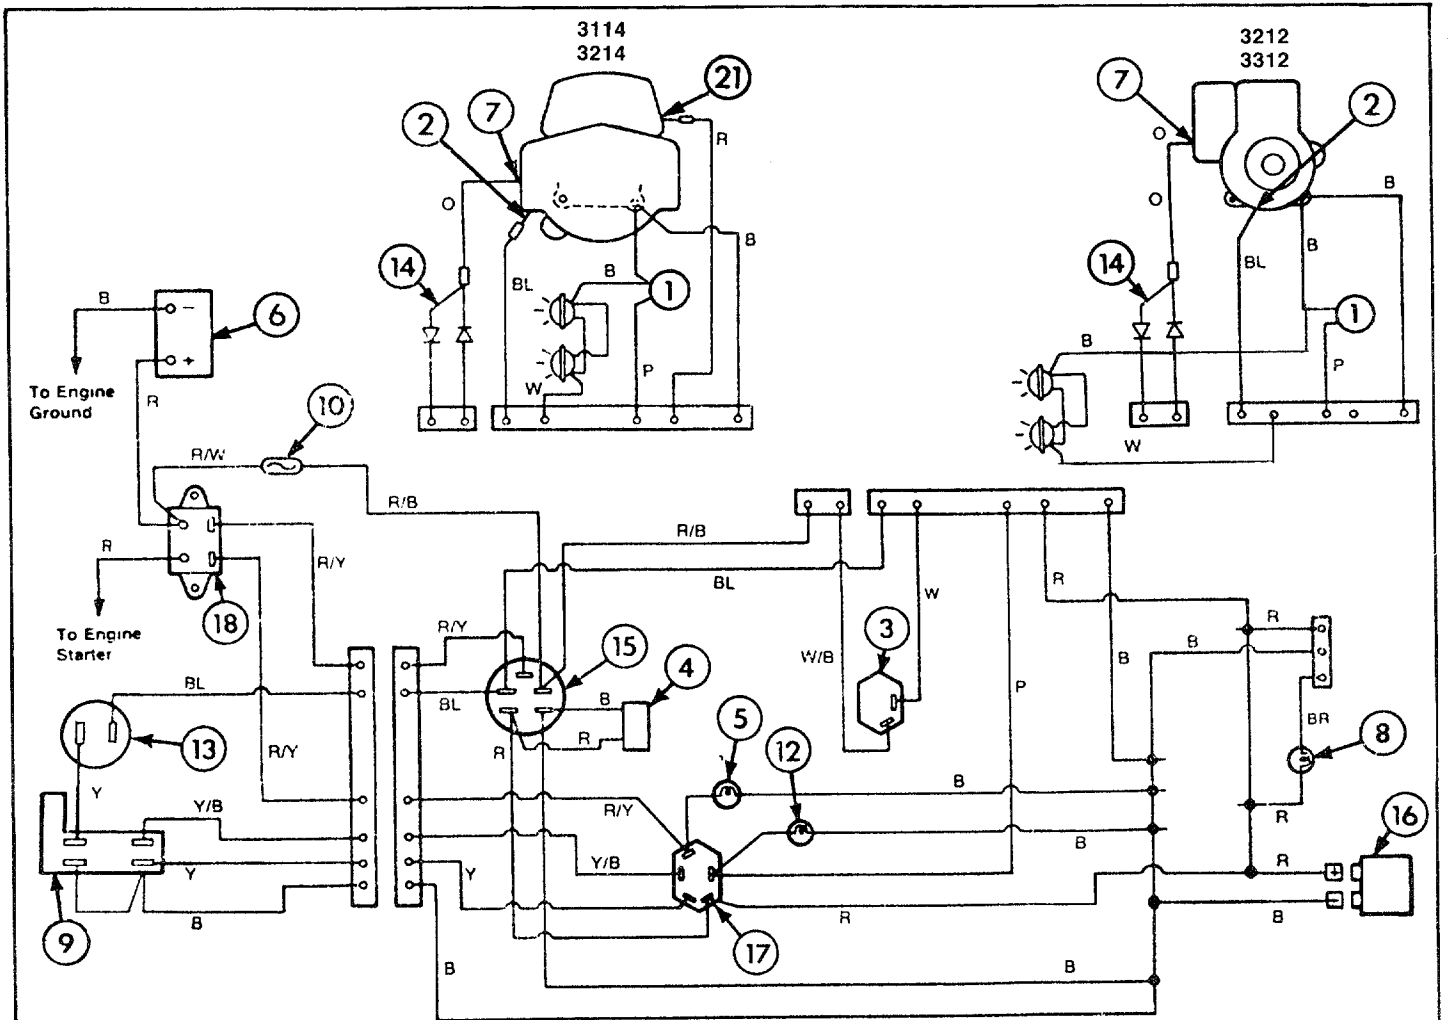

1. Electric Clutch
2. Magneto
3. Light Switch
4. Accessory Plug
5. Starter Light
6. Battery
7. Alternator
8. Battery Light (Optional)
9. Brake Switch
10. Fuse 30A
11. Not Used
12. PTO Light
13. Seat Interlock Switch
14. Diode Assembly
15. Ignition Switch
16. Hour Meter
17. PTO Switch
18. Solenoid
19. Lift Motor (14 HP)
20. Lift Switch (14 HP)
21. Fuel Solenoid

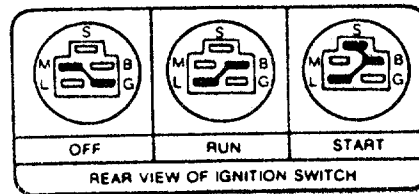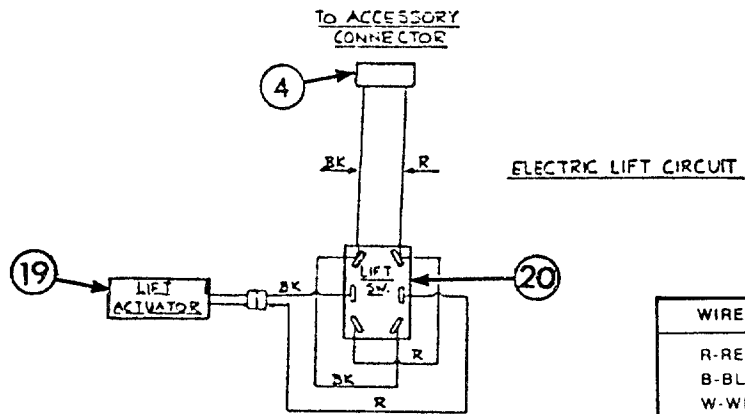

WIRE COLOR CODE

- R-RED
- B-BLACK
- W-WHITE
- O-ORANGE
- Y-YELLOW
- P-PURPLE
- BL-BLUE
- R/W-RED-WHITE
- Y/B-YELLOW BLACK
- R/B-RED-BLACK
- W/BL-WHITE-BLUE
- R/Y-RED-YELLOW
- BR-BROWN

PARTS ORDERING INFORMATION

Parts for your unit may be ordered from your local servicing dealer or directly from the factory. When ordering parts the following information is required:

1. The SERIAL NUMBER of your unit.
2. The MODEL NUMBER of your unit.
3. The PART NUMBER (not the REF. NO.) of the part.
4. The PART DESCRIPTION of the part.
5. The QUANTITY needed.



CAUTION

**WE URGE USING ONLY GENUINE
TROY-BILT REPLACEMENT PARTS,
WHICH MEET ALL OF THE LATEST
REQUIREMENTS. REPLACEMENT
PARTS MANUFACTURED BY OTHERS
COULD PRESENT SAFETY HAZARDS
EVEN THOUGH THEY MAY FIT ON
TROY-BILT PRODUCTS.**

Troy-Bilt Manufacturing Co., 102nd Street & 9th Ave., Troy, New York 12180
Call Toll-Free: 1-800-833-6990

Garden Way Canada, Inc., 1515 Matheson Blvd., Unit B11, Mississauga, Ontario L4W 2P5
Local calls only (416 Area Code): 624-8423 • From Ontario & Quebec Provinces call Toll-Free: 1-800-387-3351
From Western Canada & Maritime Provinces call Toll-Free: 1-800-387-3316

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>