 


FEATURES

- 2 Power Options
- 7 Functions
- 27 MHz
- Range up to 65'/20m

CONTENTS



(1) CRASH BUGGY™ 6.0V Dual Power™ Vehicle (1) Stunt Dummy Figure (with seat belt)




(1) Transmitter



(1) 6.0V DP[™] Power Clip


This vehicle can operate on 2 different power systems: the included $6.0 \text{V DP}^{\text{\tiny TM}}$ Power Clip, which uses 4 "AA" (not included); and the 6.0 V Jet Turbo $^{\circ}$ rechargable NiCd battery pack. You'll find detailed instructions about both systems in this Owner's Manual.

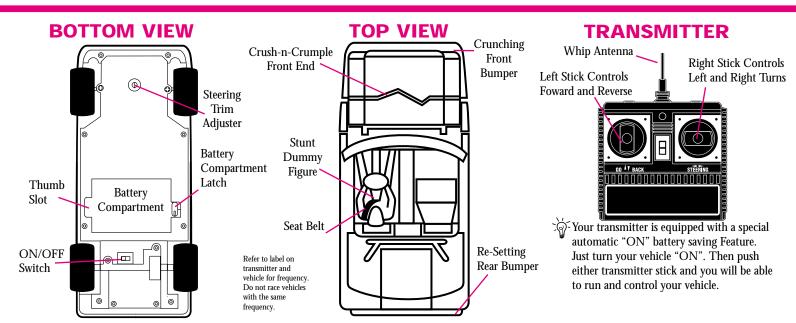


POWER OPTION ONE - 5.0V DP™ POWER CLIP


14 "AA" BATTERIES NOT INCLUDED!

 - 1. Slide lid of Power Clip in direction of arrows to open. Insert 4 "AA" batteries, with polarity (+/-) as shown inside Power Clip. Replace lid.
- **2.** Release battery compartment latch.
- **3.** Insert Power Clip into battery compartment and slide Power Clip toward thumb slot. Turn latch to lock.
- **4.** To remove Power Clip: turn latch, slide Power Clip toward latch and lift out.



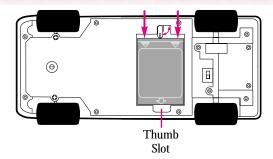

IMPORTANT BATTERY INFORMATION

 

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if vehicle will not be used for a long period of time.
- For best performance, we recommend alkaline batteries.

Battery Contacts


- Bent or dirty contacts may result in loss of power.
- If battery does not fit correctly, gently bend back metal contact as shown in diagram.

Estimated run time with 6.0V DP Power Clip: 80-90 minutes per set of batteries.

POWER OPTION TWO - 6.0V JET TURBO® RECHARGEABLE NICD BATTERY PACK

Please read "Battery Charging/Care" on the next page.

- **1.** Release battery compartment latch.
- **2.** Insert battery pack into battery compartment and slide battery pack toward thumb slot. Turn latch to lock.
- **3.** To remove battery pack: turn latch, slide battery pack toward latch and lift out.

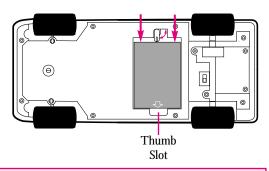


Estimated run time with 6.0V Jet Turbo Battery Pack: 25-30 minutes per full charge.

NOTE: The "AA" batteries used in the 6.0V DP Power Clip will gradually lose power over their lifetime. You will notice a decrease in performance as this occurs. The 6.0V Jet Turbo rechargeable NiCd battery pack will run at a sustained high power level for virtually its entire run time.

TRANSMITTER

 - **1.** Slide battery door open.
- **2.** Install one 9-volt battery with polarity (+/-) as shown inside battery compartment.
- **3.** Replace battery door.



BATTERY CHARGING/CARE - 6.0V JET TURBO® BATTERY IBATTERIES AND CHARGER NOT INCLUDED!

- This economical system is the only rechargeable NiCd battery pack and charger made to power your Tyco® R/C vehicle.
- Rechargeable up to 1000 times!
- This vehicle uses a Nickel-Cadmium rechargeable battery pack. Must be recycled or disposed of properly.
- **1.** Plug wall pack charger into standard wall outlet.
- **2.** Click the battery pack into the charger. Make certain the battery pack is secure in charger.
- **3.** To disconnect, push the red button on the side of charger and simultaneously slide battery pack out.
- 4. After charging for 4 hours, the battery will feel warm. This condition is normal for fully charged batteries.
- 5. New battery packs must be charged for 5½ hours the first two times charged. Subsequent charges will require only 4 hours. Charging the battery pack for more than 4 hours will not give you a longer running time. 4 hours is all that is required for a fully charged battery pack.
- Unlike alkaline batteries, where the power loss is gradual, a NiCd (Nickel-Cadmium) battery will run for its normal running time and then lose most of its power at once. It is now time to recharge the battery pack.
- **7.** After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools before recharging. Recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged.

CAUTIONS:

- DO NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- DO NOT RECHARGE BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- DO NOT DISASSEMBLE THE BATTERY PACK. THIS PACK IS A SEALED RECHARGEABLE NICKEL-CADMIUM BATTERY.
- DO NOT DISPOSE OF THE BATTERY PACK IN FIRE.
- EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE CHARGING
- DO NOT USE THE 6.0V DP POWER CLIP WITH THE 6.0V JET TURBO CHARGER.

SPECIAL NOTE TO ADULTS:

- The battery charger is age-graded for ages 8 and over; the battery charger should not be operated in the presence of children under 8 years of age without adult supervision. Adult supervision is recommended.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the transformer until the damage has been
- This toy is not intended for children under 3 years old. The transformer is not a toy.







ALSO AVAILAB

Tyco R/C 6.0V Jet Turbo NiCd **Battery Pack and Charger**


Your Tyco R/C 6.0V Jet Turbo Battery Pack will work in ALL of the cool Tyco R/C 6.0V Jet Turbo vehicles—like REBOUND® 4x4 and TANTRUM®.



This vehicle uses a "Nickel-Cadmium rechargeable battery pack. Must be recycled or disposed of properly."

Note: If you have any questions about proper disposal of Nickel-Cadmium batteries, contact your local county office of solid waste management (or other appropriate local office) for information.

SPECIAL CONTROLS & DRIVING MODES

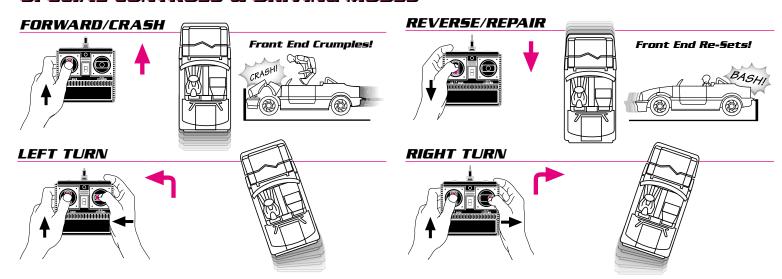

ECIAL CRASH AND REPAIR FEATURES

- To crash your "vehicle", just drive it FORWARDS into a wall or other sturdy obstacle. When the front bumper hits, the front end of your vehicle will crush and crumple!
- **2.** To "repair" your Crash Buggy, just drive your vehicle BACKWARDS into a wall or other sturdy obstacle. When the rear bumper hits, your vehicle will repair itself! Now you're ready for more race-n-crash fun!
- **3.** The stunt dummy can work two different ways. If you DON'T belt him in with the special seat belt, he'll go flying when you crash! If you DO belt him in, he'll stay safe and sound in his seat! If he's not wearing the belt, make sure it's not left loose in the drivers seat – it might keep flying out.
- Remember: if the stunt dummy flies out of the vehicle, you'll need to replace him by hand. First complete step No. 2. Then press down on the steering wheel and snap the stunt dummy back into place.

To belt the stunt dummy in:

- 1. First make sure the vehicle is re-set into its "un-crashed" form. Then press down on the steering column till it snaps in place. Insert one end of the lap belt into slot **①**.
- 2. Put the stunt dummy in the seat with his arms raised above his head.
- 3. Insert the other end of the lap belt into slot ②. Slip the shoulder belt through the stunt dummy's arms and then lower his arms, inserting the steering wheel into the column.
- 4. Insert the end of the shoulder belt into slot **3**. Make sure the belt is securely attached at all three points!



THE VEHICLE COULD LEAVE MARKS ON THE WALL WHEN IT CRASHES. USE CAUTION! DON'T AIM YOUR VEHICLE AT PEOPLE, ANIMALS OR FRAGILE OBJECTS!

PLEASE REMEMBER:

OPERATING YOUR VEHICLE

Quick Reference

This section is only a quick reference guide. Please read this entire manual thoroughly before operating your vehicle.

- (a) Insert 4 "AA" batteries in the 6.0V DP Power Clip and then install in vehicle;
 - (b) Give your 6.0V Jet Turbo battery pack a full charge and then install in vehicle.
- Turn vehicle switch "ON."
- (a) If using 6.0V DP Power Clip: your vehicle will lose power gradually as the "AA" batteries weaken. When your vehicle begins to run slowly or stops altogether it is time to change the "AA" batteries.
 - (b) If using 6.0V Jet Turbo Rechargeable NiCd battery pack: after its normal running time, your vehicle will lose most of its power at once.
- Turn vehicle switch "OFF." Replace or recharge batteries for more action!

Tips & Hints

- The radio circuitry in your vehicle and transmitter is sensitive. Do not store vehicle or transmitter near heat or in direct sunlight. If any moisture is present after use, remove moisture from vehicle using a clean dry cloth. Avoid operating in snow.
- Turn vehicle switch to the "OFF" position and remove Power Clip (or battery pack) when not in use.
- When your vehicle runs erratically, the problem is usually the result of interference caused by high tension wires, CB radios, or other R/C vehicles running nearby on the same frequency as yours. You may have to choose an alternative place to race.

Safety Precautions

Adults, this toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

Caution

- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched "ON."
- If this toy is being operated in the presence of children under 5 years of age, adult supervision is recommended.
- To avoid accidental operation, remove Power Clip (or battery pack) when not in use.



1 Radio interference is caused by the presence of another radio controlled vehicle operating on the same frequency as your vehicle. Multiple vehicles should NOT BE OPERATED ON THE SAME FREQUENCY at the same




Radio interference can be caused by the operation of your vehicle near HIGH VOLTAGE ELECTRICAL WIRES, LARGE STEEL REINFORCED CONCRETE BUILDINGS AND PASSING TRUCKS WITH CB RADIOS. Avoid these if possible.





5- For best results, hold antenna up, not pointed down toward R/C vehicle. If you drive your vehicle TOO FAR
AWAY FROM THE
TRANSMITTER, your signal
strength will become weak and vehicle will not function properly
The maximum range for the
vehicle should be between 30'/10m to 65'/20m, when operating outdoors.

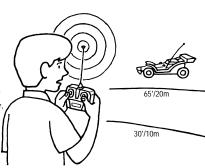

TROUBLESHOOTING

PROBLEM? - SOLUTIONS!

SYMPTOM PROBABLE CAUSE CORRECTION Vehicle runs slowly or will not run Loose battery connection or vehicle switch · Check battery connector and vehicle not ON. · Weak or uncharged rechargeable NiCd · Charge battery or replace. · Weak "AA" batteries (Power Clip) or 9-volt · Replace with fresh alkaline battery. transmitter battery · Radio interference likely. Erratic operation or only short range possible. · Change location (see point 3 - Tips & Short rechargeable NiCd battery life. · Battery not fully charged. · Recharge vehicle battery. · Vehicle will take several hours to dry. Vehicle doesn't work after going through Water in the electronics area. Allow to dry overnight before trying again. water or snow. Avoid driving in water and snow.

PRODUCT: WARRANTY: CRASH BUGGY™ Radio Control Vehicle. 90-Day Limited Warranty, Details inside. Valid only in U.S.A. For ages 5 and over.

CONSUMER INFORMATION

AGE GRADE: ASSEMBLY REQUIRED: BATTERIES REQUIRED: 1 9-Volt (Transmitter): 4 "AA" OR 1 6.0V

Rechargeable NiCd Battery Pack (Vehicle). CRASH BUGGY™ Radio Control Vehicle, Stunt Dummy Figure, Seat Belt, Power Clip Transmitter.

YOU CAN TELL IT'S MATTEL! CALL us to II-free or write



with comments or questions about our toys or service. Monday-Friday. 8:00 a.m.-5:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing. Consumer Affairs Department, 636 Girard Avenue East Aurora, NY 14052 USA

1 (888) 557-TYCO



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963

We are dedicated to quality products.

@ 1998 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A. **PRINTED IN CHINA**. All Rights Reserved. @ and $^{\intercal \! \! M}$ designate U.S. trademarks of Mattel, Inc.

Retain this address for future reference: Mattel U.K., Ltd., Meridian West, Leicester LE3 2WT. Mattel Australia Pty., Ltd., Richmond, Victoria 3121 - Consumer Advisory Service: 1800 800 812 (valid only in Australia). Mattel Fast Asia Limited, 930 Ocean Centre, Harbour City, HK, China. In Britain 49 MHz is not available. 27 MHz can be raced against 40 MHz vehicles

COMPLIANCE WITH FCC REGULATIONS
THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

1. This Device Must not cause harmful interference.
2. This Device Must accept any Harmful interference that may cause undesired operation.
This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection. against such interference.

against such illemented.c.

CAUTION: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com