



©2002 Ultimate Chopper. All rights reserved.

40UC01B01

INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. To protect against the risk of electrical shock, do not put base of Ultimate Chopper™ (CH-1, CH-1S, CH-1B, CH-1K, CH-1N)* in water or other liquid.
2. Close supervision is necessary when any appliance is used by or near children.
3. **Always unplug from outlet when not in use**, before putting on or taking off parts, before removing food from bowl and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord.
4. If power supply cord is damaged, because special tools are required, Ultimate Chopper™ will repair or replace the cord at its discretion.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, **or is dropped or damaged in any manner**. Return appliance for examination, repair, and/or mechanical or electrical adjustment.
7. Make sure motor has completely stopped before removing Chopper Lid. If the machine does not stop, do not use it. Call **1-800-554-6061** for assistance.
8. The use of attachments, including canning or ordinary jars, not recommended or sold by Ultimate Chopper, LLC may cause fire, electrical shock, or risk of injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of counter or table or touch hot surfaces.
11. Keep hands and utensil away from the cutting blade while chopping food and out of container while blending to reduce the risk of severe injury to persons or damage to food chopper. A scraper may be used but only when the chopper or blender is not running.
12. **BLADES ARE SHARP. HANDLE CAREFULLY.**
13. To reduce the risk of injury, never place blades on base unless the bowl or jar is properly attached.
14. Do not use Start Lever if lever becomes detached from the base.

15. Do not attempt to defeat the Chopper Lid interlock mechanism.
16. Be sure Chopper Lid is securely locked in place before operating appliance.
17. Do not use an extension cord with this unit. Doing so may result in fire, electrical shock, or personal injury.
18. Always operate blender with cover in place.
19. When blending hot liquids, remove center piece of two-piece cover.
20. As the motor is very powerful, do not operate the Ultimate Chopper™ continuously for longer than 45 seconds at a time. If necessary, allow the Chopper to cool down for a minimum of 15 minutes before next use.
21. This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

*All references to Ultimate Chopper™ include all models.

BEFORE FIRST USE: Carefully wash Chopper Lid, Chopping Blade and Chopping Bowl per instructions on page 5.

DO NOT WASH BASE UNIT. HANDLE CAREFULLY WHEN CLEANING.

SAVE THESE INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK OR FIRE, DO NOT ATTEMPT TO DISASSEMBLE ULTIMATE CHOPPER™ UNIT. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.

NOTICE: This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTE: The input power rating is based on the Chopper (all models) configuration. Use with any other attachment may result in less than rated input power.

FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS

 
1. Place the box containing your Ultimate Chopper™ on a flat, sturdy surface before unpacking. Be sure the box is right side up.
2. Remove top foam piece and carefully lift Ultimate Chopper™ unit from box.
3. Remove Instruction Manual and The Ultimate Recipe Book from box.
4. Place the Ultimate Chopper™ on a counter or table and read the instructions thoroughly before using the machine.
5. Save the shipping cartons and foam blocks. You may want to use them at a later date.
6. To assemble and operate the Ultimate Chopper™, follow the “Chopper Assembly And Operation” instructions on pages 3 and 4 of this Instruction Booklet.

Before using for the first time: Wash all parts according to the “Cleaning and Maintenance” section on page 5 of this booklet to remove any dust or residue.

USE CAUTION WHEN HANDLING CHOPPER BLADE.

CHOPPER ASSEMBLY AND OPERATION


CHOPPER MODE

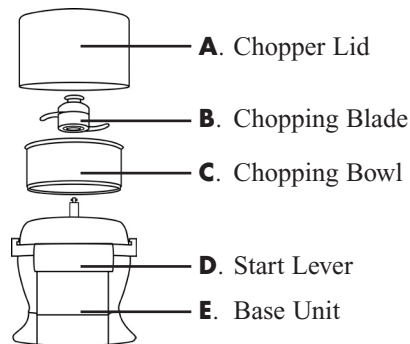

CHOPPER ASSEMBLY


DO NOT PLUG IN ULTIMATE CHOPPER® UNIT UNTIL COMPLETELY ASSEMBLED AND READY FOR OPERATION.

 1

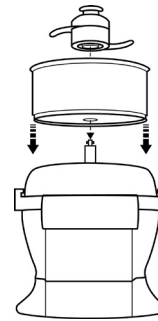


Firmly press Chopping Bowl (C) onto Base Unit (E). Carefully place Chopping Blade (B) onto center shaft of Base Unit until it clicks into position.

 2

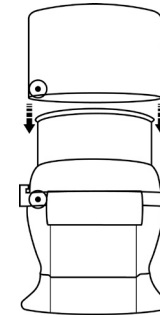

Add Chopper Lid (A) to Base Unit by aligning blue dot on Chopper Lid with blue dot on Base Unit (as shown).

 
3

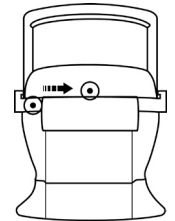

Twist Chopper Lid counter-clockwise until it clicks into place. The Ultimate Chopper™ will not start unless the Chopper Lid is locked into place.


CHOPPER OPERATION

 1

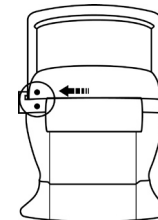


Remove Chopper Lid by turning it clockwise. Add desired amount of food into Chopping Bowl. **BE CAREFUL NOT TO TOUCH CHOPPER BLADE.** Do not fill Chopping Bowl with more than recommended of food quantity. Replace Chopper Lid and turn counterclockwise until it clicks into place.

 2

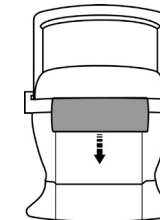

Plug unit into outlet. Press and hold Start Lever (D) to begin chopping. Release Start Lever to stop. To avoid overheating unit, do not hold down Start Lever for more than 3 seconds at a time.

 3

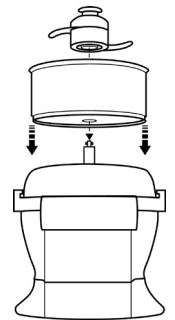

Unplug unit. Remove Chopper Lid by turning clockwise. Carefully remove Chopping Blade by pressing and holding center button while pulling straight up. Hold Base Unit with one hand while slowly removing Chopping Bowl to avoid spilling contents.

CLEANING AND MAINTENANCE

1. Always unplug your Ultimate Chopper™ from the electrical outlet before cleaning. Before first use and after every use, clean each part thoroughly. Periodically, check all parts before reassembly. If any part is damaged or cracked, **DO NOT USE ULTIMATE CHOPPER™**.
2. Like all plastic products, please be sure to wash Chopper Lid, Chopping Blade an Chopping Bowl by hand in warm soapy water. Rinse and dry thoroughly. **Chopping Blade is sharp. Handle carefully when cleaning.** The Chopping Blade may be washed in a dishwasher. **DO NOT** clean using “Heat Dry” or “Sanitize” settings, as it may cause damage to the Chopping Blade.
3. To clean Base Unit, use a damp cloth to remove any residue, and dry thoroughly. **NEVER SUBMERGE THE BASE UNIT IN WATER OR OTHER LIQUID, OR PLACE IN A DISHWASHER.**
4. Any servicing of the Ultimate Chopper™ should be performed by an authorized service representative.

IMPORTANT REMINDERS:

- Always cut solid foods such as meats, chocolates, etc. into one-inch cubes before using the Ultimate Chopper™; and NEVER chop more than the recommended food quantity at once. Otherwise, you may damage your Ultimate Chopper™.
- To avoid overheating unit, do not hold down Start Lever for more than 3 seconds at a time.
- This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food at one time.

YOU WILL BE ABLE TO CHOP ALMOST ANYTHING, INCLUDING:

*Recommended food load for input power rating. Food load may vary by model number.

FOOD	RECOMMENDED QUANTITY	SUGGESTED TIME (SECS)	FOOD	RECOMMENDED QUANTITY	SUGGESTED TIME (SECS)
Parsley	1oz	6 secs	Chestnuts	6oz	10 secs
Onions	5oz	9 secs	Walnuts	5oz	10 secs
Tomato	6oz	5 secs	Soybeans	8.5oz	10 secs
Garlic	2oz	5 secs	Boiled Eggs	6oz	4 secs
Celery	5oz	7 secs	Meat (Lean)	6oz	6 secs
Almonds	6oz	7 secs	Carrots	5oz	7 secs

ONE YEAR LIMITED WARRANTY

This warranty is available to consumers only. You are a consumer if you own Ultimate Chopper™ that was purchased for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

Ultimate Chopper, LLC warrants your Ultimate Chopper™ to be free of defects in materials or workmanship during normal home use for one year from the date of original purchase.

In the unlikely event your Ultimate Chopper™ should prove defective in material or workmanship, we will repair or replace your unit without charge to you (a shipping and processing fee may apply). To obtain warranty service, please call our Customer Service Center toll-free at 1-800-554-6061.

Your Ultimate Chopper™ has been manufactured to strict specifications and has been designed for use with Ultimate Chopper™ authorized accessories only. These warranties expressly exclude any defects or damages caused by accessories or repair service other than those that have been authorized by Ultimate Chopper, LLC.

These warranties do not cover any damage caused by accident, misuse, shipment or other than ordinary household use.

These warranties exclude all incidental or consequential damages. Some states do not allow the exclusion of or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

THE SHARP FOR LIFE GUARANTEE

If the Chopping Blade should ever become dull or break, for any reason, just return it and we'll replace it FREE, forever.

To obtain guarantee service, please call: 1-800-554-6061.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>