

## WARRANTY INFORMATION

**Ultimate Support Systems** offers a Limited Lifetime Warranty on GS-1000 (#16538) and GS-100 (#13710). For Full Details, Exclusions and Limitations as well as information on Obtaining Warranty Service, please see full warranty details available online at [www.ultimatesupport.com](http://www.ultimatesupport.com).

To purchase the Ultimate Protection Plus Premium Service and Support Plan, please visit [www.ultimatesupport.com](http://www.ultimatesupport.com) or call customer support at **800-525-5628** for more information.

## WARRANTY REGISTRATION

Visit [www.ultimatesupport.com](http://www.ultimatesupport.com) for a quick and convenient process for registering your new Ultimate Support product. Warranty Registration and Proof of Purchase are required for warranty fulfillment. Full Limited Lifetime Warranty and Ultimate Protection Plus Premium Service and Support Plan details are available online under Music Gear & Instrument Stands / Customer Support.

## PLEASE NOTE

**Vintage instruments and instruments** with a nitrocellulose lacquer finish require special care. Sweat, heat, sunlight, environmental pollutants, nitrocellulose and age can create chemical reactions that can not be tested or predicted. At Ultimate Support we care about your instrument and strongly caution against any guitar stand being used for long-term instrument storage.

# ULTIMATE SUPPORT™

THE STRENGTH OF INNOVATION

Product Manual  
for Ultimate Support

## GENESIS SERIES

**GS-1000**


ITEM #16538

**GS-100**

ITEM #13710




# SET-UP

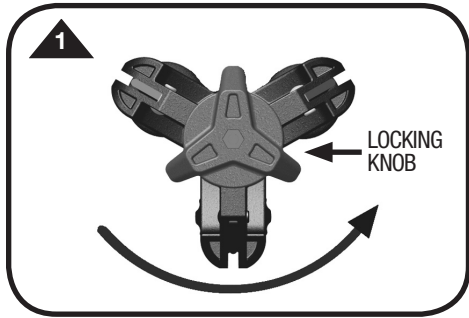


## STEP 1

Turn stand upside-down and locate the RED/GRAY Locking Knob. Turn the Locking Knob ¼ turn counterclockwise to the open position shown above.

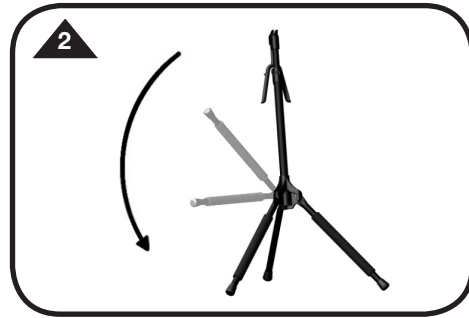


## STEP 2

Turn the stand back to the upright position and fold all three legs down until they stop in the open position. (The legs should move freely to the open position, if they do not, make sure the Locking Knob is in the open position.)

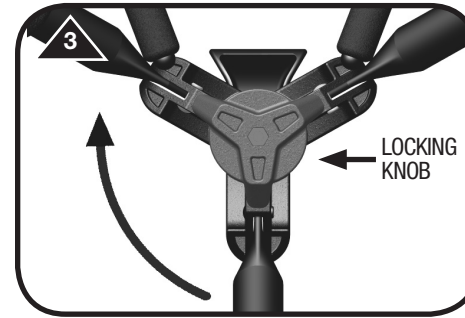


## STEP 3

After all three legs are in the open position turn the RED/GRAY Locking Knob ¼ turn clockwise to the closed position shown above.

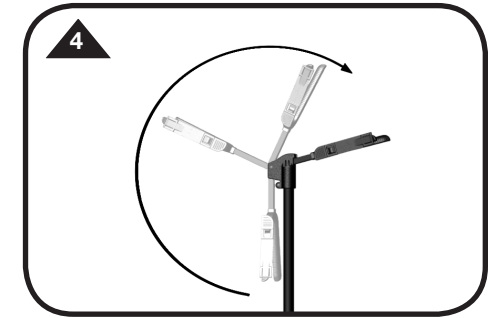


## STEP 4

Rotate the Neck Yoke to the open position shown above. The yoke should firmly snap into position.

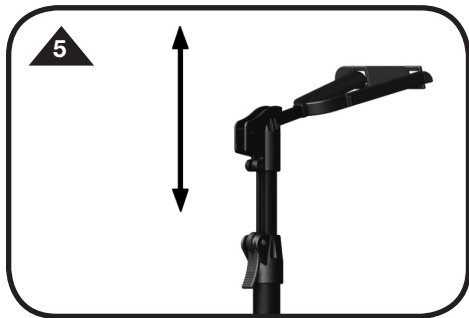


## STEP 5

Flip open the RED/GRAY telescoping Lock Lever at the back of the stand. Adjust the height of the stand until your guitar's bottom edge or instrument cable is about 2 inches from the floor. Flip down the Lock Lever to set the height.

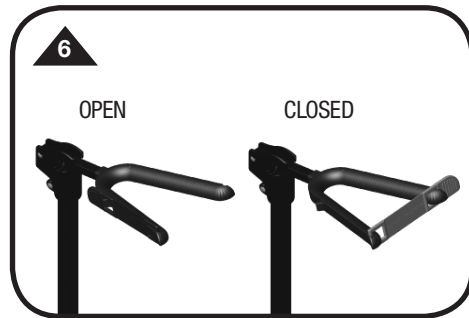


## STEP 6 for GS-100 (#13710)

Unhook the Retention Strap from the open position and pull strap around to the front of the yoke. Stretch the strap over the other end of the yoke to secure guitar.

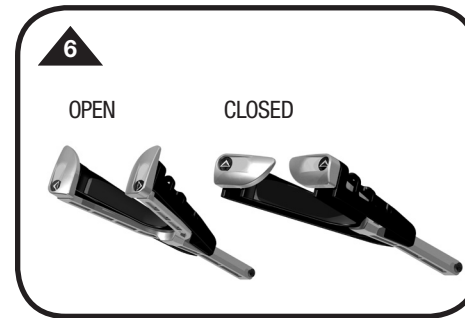

## STEP 6 for GS-1000 (#16538)

Place guitar or bass into the stand and the instrument's weight pulls the yoke closed around the headstock. To remove the instrument, simply lift up to release the security gate.

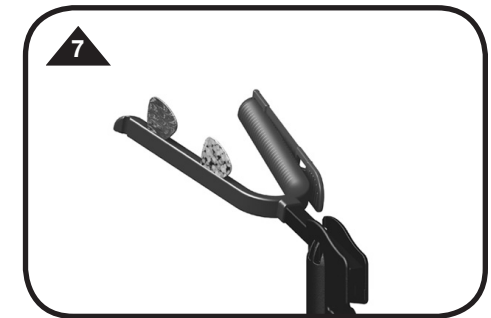

## STEP 7 OPTIONAL: On GS-100

Convenient guitar pick storage slots are located along the top of the yoke.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>