

Warranty Information

Ultimate Support Systems offers a Limited Lifetime Warranty on GS-200 (#13711). For Full Details, Exclusions and Limitations as well as information on Obtaining Warranty Service, please see full warranty details available online at www.ultimatesupport.com. Click on *Music Gear & Instrument Stands > Customer Support > Limited Lifetime Warranty*.

To purchase the Ultimate Protection Plus Premium Service and Support Plan, please visit www.ultimatesupport.com. Click on *Music Gear & Instrument Stands > Customer Support > Protection Plus*. Or call customer support at 800-525-5628 for more information.

Warranty Registration

Visit www.ultimatesupport.com and click on *Music Gear & Instrument Stands > Customer Support > Warranty Registration*. This is a quick and convenient process for registering your new Ultimate Support product. Warranty Registration and Proof of Purchase are required for warranty fulfillment. Full Limited Lifetime Warranty and Ultimate Protection Plus Premium Service and Support Plan details are available online under *Music Gear & Instrument Stands > Customer Support*.

Please Note

Vintage instruments and instruments with a nitrocellulose lacquer finish require special care. Sweat, heat, sunlight, environmental pollutants, nitrocellulose and age can create chemical reactions that can not be tested or predicted. At Ultimate Support we care about your instrument and strongly caution against any guitar stand being used for long-term instrument storage.


ULTIMATE
SUPPORT™

5836 Wright Drive
Loveland, CO 80538
Phone: 970.776.1920
Web Site: www.ultimatesupport.com


Copyright 1999, Ultimate Support Systems, Inc.
All Rights Reserved. Revision 5, 06.17.08
Product Manual Item #13816




Set-up

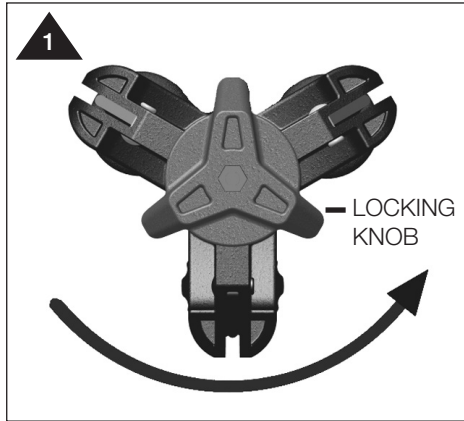


STEP 1
Turn stand upside-down and locate the RED Locking Knob. Turn the Locking Knob $\frac{1}{4}$ turn counterclockwise to the open position shown above.

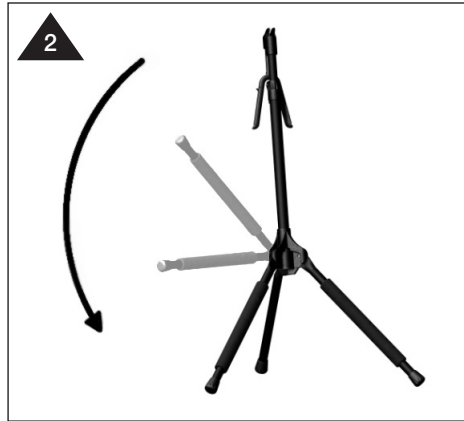

STEP 2
Turn the stand back to the upright position and fold all three legs down until they stop in the open position. (The legs should move freely to the open position, if they do not, make sure the Locking Knob is in the open position.)

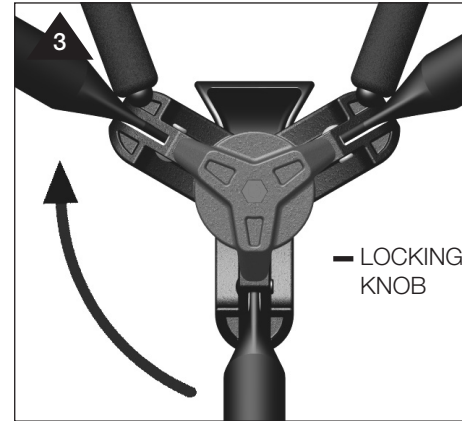


STEP 3
After all three legs are in the open position turn the RED Locking Knob $\frac{1}{4}$ turn clockwise to the closed position shown above.

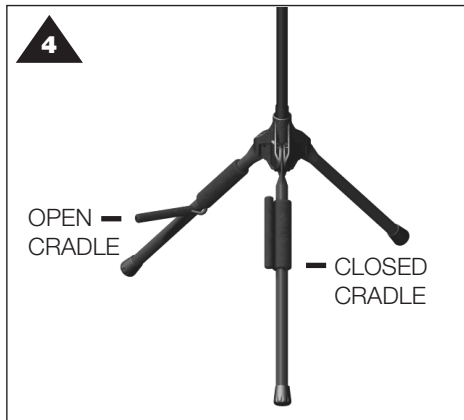

STEP 4
Unfold the cradle pad arms to the open/horizontal position for supporting the body of the guitar.



STEP 5
Rotate the Neck Yoke to the open position shown above. The yoke should firmly snap into position.

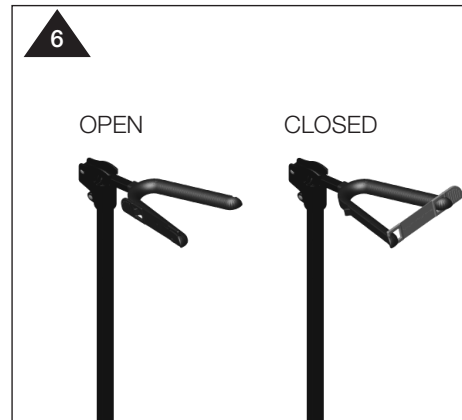

STEP 6
Unhook the Retention Strap from the open position and pull strap around to the front of the yoke. Stretch the strap over the other end of the yoke to secure guitar.



STEP 7
OPTIONAL: Convenient guitar pick storage slots are located along the top of the yoke.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>