

OWNER'S GUIDE

**Covers All 430, 440, 441 and CJ Series
Advanced Security Systems**

REMOTE STARTERS

CAR ALARMS



**ULTRA
START**

www.ultrastarters.com

Note: Some features may not be available on certain models.

FCC/ID Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the part responsible for compliance void the user's authority to operate this device.

Table of Contents


Table Of Contents	Page 2
Feature List	
Option List	
Alarm Functions	Page 3
Service Mode	Page 4
Starter Kill	
Transmitter Programming	Page 5
Battery Replacement	
Alarm Triggered	Page 6
Passive Arming	
Car Jack (CJ series ONLY)	
Notes	Page 7
Warranty	Page 8

Feature/ Option List

- Multi Tone Siren.
- Remote Keyless Entry.
- Trunk/ Rear Hatch.
- Ignition Auto Locks.
- Starter Disable.
- Panic Mode. (Personal Protection)
- Car Finder.
- System Override Protection.(Service Mode)
- Up to 3 Different Transmitter Codes.
- Passive Arming/ Locks.
- Selectable Siren/ Horn Output. (441 series ONLY)
- Car Jack Mode. (CJ series ONLY)


Alarm Functions

Arm

1. Press and release the  button.
2. The park lights will flash and the siren will chirp one time.
3. The doors will lock (optional).





NOTE: *The LED will start flashing within five seconds. If installed, the starter disable will activate.*

Disarm




1. Press and release the  button on the remote transmitter.
2. The park lights will flash and the siren will chirp two times.
3. The doors will unlock (optional).

NOTE: *The LED will stop flashing. If installed, the starter disable will deactivate.*

Silent Arm/Disarm



1. Press and release the  button then press and release the  button to silent arm. The park lights will flash once to confirm.
2. Press and release the  button then press and release the  button to silent disarm. The park lights will flash twice to confirm.

Panic


1. Press and hold the  button on the remote transmitter.
2. The park lights will flash and the siren will sound.
3. Press and release the  or the  button to deactivate*.

*Panic will be active for 60 seconds or until disabled by the remote transmitter.

Trunk

1. Press and hold the  button for 3 seconds.
2. The doors will unlock (optional), continue holding  until the Trunk Release activates.

Car Finder

1. Press and hold the  button for 3 seconds.
2. The park lights will flash and the siren will chirp 5 times.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Service Mode

1. The system must be disarmed and the ignition is turned OFF.
2. Press and release the lock and unlock buttons at the same time, then press and hold the lock button for five seconds.
3. The system will respond with **five chirps** and park light flashes to confirm that the system is in Valet mode.
4. The LED will stay **ON** steady to confirm Valet Mode.

Exit Service Mode

1. Press and release the lock and unlock buttons at the same time, then press and hold the lock button for five seconds.
2. The system will respond with **two chirps** and park light flashes to confirm that the system has exited Valet mode.
3. The LED will turn **OFF**.

Note: If the LED does not turn off, check that all the door's are closed. The LED stays On solid when a door is left opened.



Emergency Service Mode

Emergency Service Mode temporarily disables the alarm system. This feature can be used if the remote is lost or if the system malfunctions.



Press for
5 seconds

ENTERING VALET MODE

1. While the ignition is "On" press and hold the Service button for five seconds. The siren will chirps **five** times.
2. Alarm functions will be disabled and the LED will be **ON** steady. The door-locks and trunk release are still operational.

EXITING VALET MODE

1. While the ignition is "**On**" press and hold the Service button for five seconds. The siren will chirps **two** times.
2. The system returns to normal operation.

Starter Disable

The system has an optional starter disable output that can be connected by your dealer. When the starter disable relay is installed and connected to the system, the vehicle's starter will be disabled when the system is armed.



To activate the starter disable press the lock button on the remote. The system will arm and the starter will no longer operate.

To deactivate the starter disable, press the unlock button and the LEDs will stop flashing and the starter will be re-enabled.

Transmitter Programming

Follow the steps below to program the transmitters to the system's memory

Step 1 - Turn the Ignition key **ON then OFF - Leaving Key Off.**

Step 2 - Press and release the Program Button **twice then press and hold.**

Step 3 - The siren will respond with five chirps to confirm Transmitter Program Mode.

Note: If the siren does not respond, repeat Steps 1&2

Step 4 - Continue to hold the Program Button and press lock button on each of the transmitter's to be programmed (Maximum of 3 Different transmitter codes).

Step 5 - The system will respond with a siren chirp each time a transmitter is programmed.

Exit - After five seconds the system will exit transmitter program mode automatically.

NOTE: You must program ALL of the transmitters to be used at one time. For the owner's security any transmitters not programmed at this time will be erased from memory.

***** This system will store a maximum of three transmitter codes in memory.**

Battery Replacement

The transmitter battery should be changed at least once every year to maintain proper operating range. Replace with a quality 23A 12volt Alkaline battery (OE remote). Replace with two quality 3V lithium batteries (XR remote).

Step #1



Carefully remove the screw from the back of the remote.

Step #2



Remove the top case, then replace the battery.

Step #3



Replace top case and Re-install screw.

Step #4



Test remote for proper operation.

Alarm Triggered

1. When the alarm is triggered by the door, hood, shock etc., the siren will activate in 60 second cycles. After 60 seconds the siren will turn off and the system will return to the armed state.

2. To turn off siren before 60 seconds has expired, press the lock or unlock button.

NOTE: When the alarm is disarmed if the siren chirps three times, this indicates that the alarm has been set off.

Passive Arming

This optional feature will arm your system automatically upon leaving vehicle.

1. Turn ignition off and then open and close door.

2. The LED will flash rapidly indicating system will arm in 30 seconds.

NOTE: If the door is opened during this time, the system will wait for the door to close again to start passive arming.

3. After 30 seconds the system will arm. If the optional Passive Locks feature is programmed "On" the doors will lock when the system arms.

*Use caution when the Passive Locks feature is programmed "On". Do not leave the keys in the ignition.

Car Jack Mode Activation (CJ series ONLY).

1) If the ignition key is On and a door is opened the Car Jack Mode Timer will start. The siren will chirp one every second for 10 seconds then trigger into full alarm.

2) If the timer was activated by accident, within 10 seconds turn the ignition key back to On then press and release the program button one time. The Car Jack Mode Timer will stop.

3) If the timer is not deactivated Car Jack Mode will trigger into full alarm. To deactivate turn the ignition On, then press and release the program button 5 times then press unlock on the remote transmitter.

Emergency Override.

If Car Jack Mode is not deactivated in time, the system will need to be placed into Emergency Override. Turn the ignition key to the On position then press and hold the program button for 20seconds. At this time the customer can bring the vehicle back to the dealer for a system reset.

Notes

WARRANTY

The manufacturer warrants to the original purchaser of their remote starters and alarms, that the product shall be free from defects in material and workmanship. However, should this product be proven to be defective, within a two year period from the original date of purchase, the manufacturer will, without charge to the purchaser (excluding any charges incurred to have the product delivered to the manufacturer), repair or replace any part of the remote starter and/or alarm which the manufacturer agrees to be defective. All warranties apply on to the original purchaser and the vehicle in which it is originally installed. Repairs or replacement of defective modules shall remain at the discretion of the manufacturer. All other parts, components, accessories and/or optional equipment pertaining to the remote starter and alarm are not included in the manufacturer's warranty. **This warranty is non-transferable.** Request for warranty service from any Factory Authorized Dealer **must be accompanied with the original purchase receipt or have product registered by authorized dealer on manufacturer's website.** Failure to comply with any of these conditions may result in warranty being voided.

This warranty does not cover the following: removal and reinstall labour charges, shipping charges, abuse, misuse, or accidental damages to the remote starter and alarm, automobile, and/or parts thereof. This warranty is void upon modification, repairs, or alterations of any part of the System. The manufacturer does not guarantee or insure against theft of the vehicle or its contents. Alarm models are designed only to act as a deterrent against possible theft. This alarm may qualify for auto insurance discounts, contact your Insurance Agent for further information. The manufacturer shall not be held liable for any consequential damages due to breach of this or any other warranty, expressed, or implied. This warranty gives you specific legal rights. Your specific legal rights may vary for each region.

CERTAIN DAMAGES EXCLUDED - The manufacturer expressly disclaims any liability or responsibility for incidental damages caused by the product, including economic loss, loss of use of the product, car rentals, or any other costs relating to the care and custody of the product. The manufacturer disclaims liability or responsibility for any consequential damages caused by the product or resulting from its use, including the cost of repairing or replacing other property damaged by the product or caused by its use, whether or not the product is working properly. The product is intended to deter unauthorized use of the vehicles in which it is installed. The manufacturer does not warrant that the product is fool-safe against theft and/or vandalism and/or human error or misuse. The manufacturer accepts no liability or responsibility for any damage of any kind whatsoever caused to any vehicle in which the product is installed or any resulting damage from its use. The manufacturer accepts no responsibility or liability for any damage resulting to or theft of the vehicle or its contents, caused or alleged to be caused, directly or indirectly, by failure of the product.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>