

007 Remote Wrist Watch

 
Advanced Digital Wrist Watch with Alarm and Remote Starter Control Capabilities.



Warning!!

CARBON MONOXIDE MAY CAUSE SERIOUS INJURY, EVEN DEATH!

It is the sole responsibility of the user to place the system in Service Mode when parking a vehicle equipped with a remote starter in an enclosed area ex: garage, partially enclosed area ex: carport, or when the vehicle is being serviced.

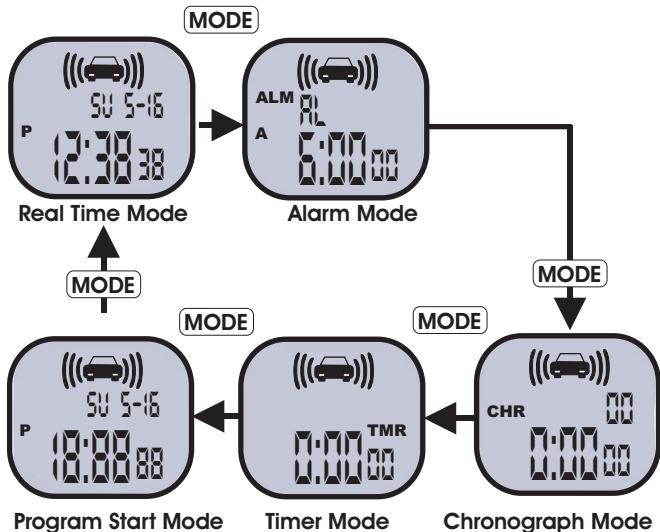


Press and release the **MODE** button to switch from Mode to Mode.

MODE BUTTON

- Default Screen
- Mode Button Once
- Mode Button Twice
- Mode Button Three times
- Mode Button Four times
- Mode Button Five times


MODE SELECT

 - Real Time Mode
- Alarm Mode
- Chronograph Mode
- Timer Mode
- Program Start Mode
- Returns to Real Time Mode

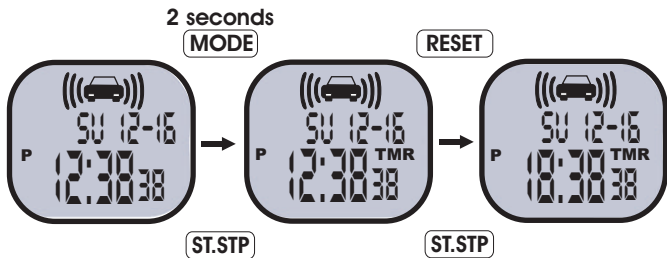


1. Press and hold the **MODE** button to enter the Real Time Setting Mode.
2. Press the **ST.STP** button to select 12 or 24 hour format.
3. Press the **RESET** button to go to the next field, hour digits will begin to flash.
4. While the hour digits are flashing, press the **ST.STP** button to increase the number. Hold the **ST.STP** button to change the number at a greater speed.
5. After you set the 12/ 24 hour format, hour, minute, second, year, month and date, press the **MODE** button to exit.

 3. Dual Time Mode

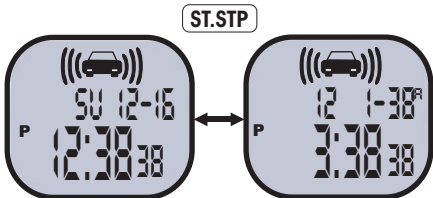

 1. In real time mode, press the **ST.STP** button to switch between the Real Time Mode and Digital Time Mode.
2. Set the Dual Time in the same manner as the Real Time.

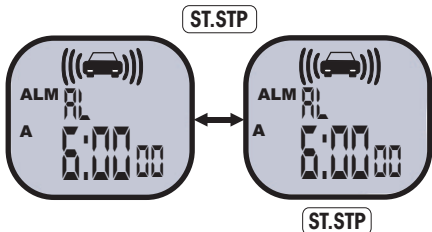

1. In real time mode, press the **MODE** button to enter the Alarm Mode.

 
2. Press the **ST.STP** button to set the alarm ON/OFF.

When the **Bell Icon** is displayed, the alarm will sound at the preset time every day for 30 seconds.

-To stop the alarm, press any button.

If the alarm is ON, the **Bell Icon** will be turned ON in all other modes.

How to Set Alarm Time

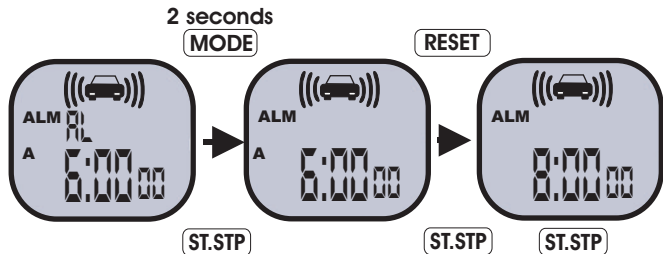

1. In real time mode, press the **MODE** button to enter Alarm Mode.

 
2. Hold the **MODE** button for 2 seconds, the hour digits will begin to flash.

3. While the hour digits are flashing, press the **ST.STP** button to increase the number. Hold the **ST.STP** button to increase the digits at a greater speed.

4. Press **RESET** to enter the next field, minute digits will begin to flash.


5. To set the minute press the **ST.STP** button.

6. After you have set the minute, press the **MODE** button to exit and save.

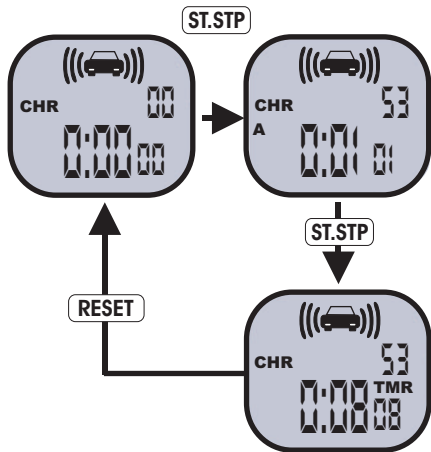


1. In real time mode, press the **MODE** button to enter the Chronograph Mode.
2. Press the **ST.STP** button to start chrono. To stop the chrono, press the **ST.STP** button.

 When the chrono is stopped press the **RESET** button so reset the time to zero
When the chrono time is running, the "CHR" icon will begin to flash in all other modes with the exception of Setting Modes.

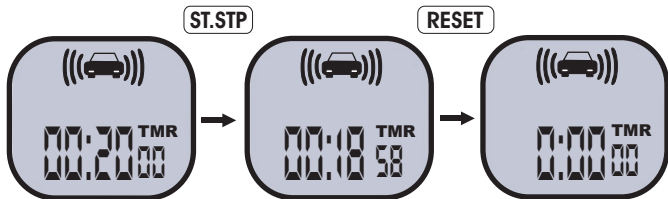


1. In real time mode, press the **MODE** button 3 times to enter Timer Mode.
2. Press the **ST.STP** button to start the timer. To stop, press the **ST.STP** again. If the timer is stopped, press **RESET** to reset the time to the present value. When the timer is running, the **TMR** icon flashes in all other modes with the exception of setting modes.
3. Press the **MODE** button to exit.

 How to Set the Timer

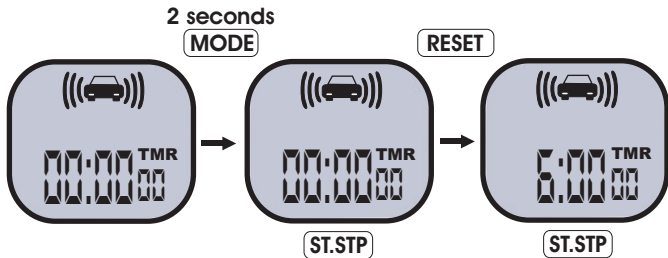


 1. In real time mode, press the **MODE** button to enter the Timer Mode.
2. Hold the **MODE** button for 2 seconds, the hour digits will begin flashing.
3. While the hour digits are flashing press the **ST.STP** button to increase the number. Hold the **ST.STP** button to increase the number at a greater speed.
4. Press **RESET** to go to the next field, minute and seconds will begin flashing.
5. After you have set the minute and seconds, press the **MODE** button to save and exit.

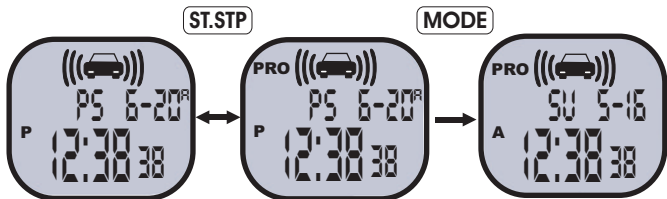

1. In real time mode, press the **MODE** button 4 times to enter the Program Start mode.
2. Press the **ST.STP** button to change the ON/OFF function of the Program Start. When the "PRO" icon is ON, the engine will start and run at the preset time. The remote will beep three times to confirm starting of the engine. The remote start will only activate when the system is armed and within RF operating range.
3. Press the **MODE** button to exit.

 How to Set the Engine Start

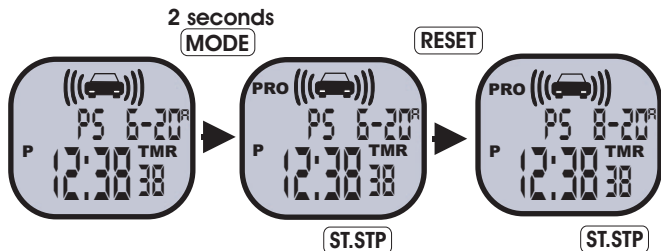

1. Press the **MODE** button to enter the Program Start Mode.
 2. Hold the **MODE** button for 2 seconds, the hour digits will start flashing.
 3. While the digits are flashing, press the **ST.STP** button to increase the number. Hold down the **ST.STP** button to change the number at a greater speed.
 4. To set the minute, press the **RESET** button.
 5. After you set the hours and minutes, press the **MODE** button to exit and save.
- Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

**Button 1**


Arm/ Lock- Press and release.
Panic Mode- Press and hold for 2 seconds.

**Button 2**

Disarm/ Unlock- Press and release
Trunk Release- Press and hold for 2 seconds.

**Light Button**

 Remote Start- Press and release
Remote Stop- Press and hold for 2 seconds.

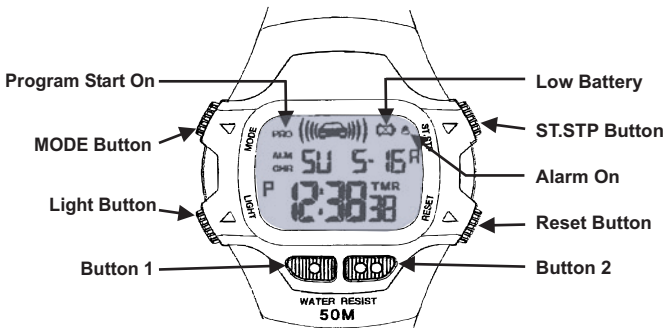

Battery Replacement

Change the battery when the Low battery icon is displayed on the LCD screen. Replace with Lithium **CR2032 Battery**.

*To avoid possible water damage, have the battery changed professionally.

Caution

DO NOT DISASSEMBLE THIS WATCH FOR ANY OTHER REASON THEN TO REPLACE THE BATTERY. REMOVING ANY OTHER COMPONENT(S) WILL VOID THE WARRANTY.

FCC Notice

This device complies with Part 15 of the FCC rules. Operation of this device is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the part responsible for compliance voids the

warranty. Please refer to the user manual for more details.
Downloaded from www.5mmanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>