

**Uniden®**  
**SOUNDS BETTER**

**5.8<sup>GHz</sup>**  
**DIGITAL**  
SPREAD SPECTRUM



ADDITIONAL HANDSET & CHARGER

DSG 5885

Download from [www.50manuals.com](http://www.50manuals.com). All Manuals Search And Download.

OWNER'S MANUAL

# Welcome

Congratulations on your purchase of this Uniden DSS5805 optional handset and charger. This additional handset is for use with the Uniden DSS5855 base. You can place a fully featured cordless handset anywhere in your home where AC power is available to connect the handset charging cradle. The original base will support up to 2 handsets (the original handset and one DSS5805 handset).



The DSS5805 will not be an alternative of the original handset, if the original handset is damaged.

## Important

The DSS5805 will not operate unless it has been registered to a Uniden DSS5855. Before the additional handset can be used, the battery must be charged and it must be registered with the base.

This manual describes only the instructions specific to the additional handset. For detailed operation, refer to the owner's manual supplied with the original unit.

## Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Cordless Handset
- Charger
- Battery Pack (BT-446)  
(Capacity: 800 mAH, 3.6V)
- AC Adapter (AAD-600S)  
(INPUT: 230V-240V AC 50Hz)  
(OUTPUT: 9V DC 210 mA)
- Beltclip
- This Owner's Manual
- Other Printed Material

Uniden Australia Pty Limited  
Service Division  
Toll Free : 1300 366 895

We can also be reached  
at [www.uniden.com.au](http://www.uniden.com.au)

Uniden New Zealand Limited  
Service Division  
Toll Free : 0800 4 UNIDEN  
(0800 4864 336)

We can also be reached  
at [www.uniden.co.nz](http://www.uniden.co.nz)

# Install the Battery Pack

 
 
 
**Charge the battery pack for at least 15-20 hours before completing the installation or using the handset.**

- 1** Press down on the battery cover release and slide the cover down until it comes off.
- 2** Connect the battery pack connector observing the correct polarity (black and red wires) to the jack inside the battery compartment.

Do not exert any force on this connection. It could cause damage to the battery or to the handset. The plastic connectors will fit in only one way.

Once you are certain that you have made a good connection, then insert the battery pack into the battery compartment. Do not pinch the wires.

- 3** Securely close the battery compartment cover by sliding it until it snaps into place.
- 4** Place the handset in the charging cradle with the keypad facing forward.

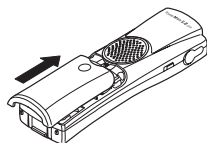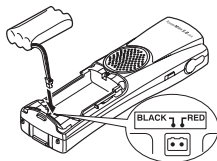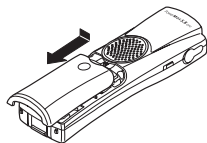

- **Use only the Uniden battery (BT-446) supplied with your phone.** Replacement batteries are also available through the Service Division (See page 1).
- Recharge your handset on a regular basis by returning the handset to the charger after each phone call.



## Battery Information

### Battery use time (per charge)

From fully charged (15-20 hours charge time)

 
- Up to 4 hours continuous use
- Up to 8 days when the handset is in the standby mode

## Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is in the standby mode, "Low Battery" appears on the LCD and none of the keys will operate. If the phone is in use, "Low Battery" appears and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base unit for charging.


## Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on both the handset and base unit once a month. Use a dry cloth or pencil eraser to clean.

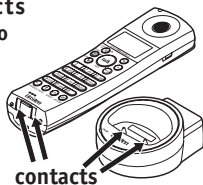

## Connect the Charger

 - 1 Connect the AC adapter to the **DC IN 9V** jack and to a standard wall outlet.
- 2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
- 3 Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the base charging contacts.

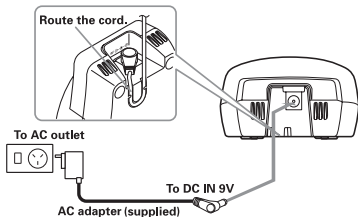

- Use only the supplied AAD-600S AC adapter. Do not use any other AC adapter.
- Place the charger close to the AC outlet so that you can unplug the AC adapter easily.
- "HS2" appears on the display while the handset is charging.



### Polarity of the plug



# Register the Handset

**You need to register the DSS5805 before use.**

To register the additional handset, place the DSS5805 handset on the original unit's base (DSS5855) for at least 5 seconds. The **status** LED on the original base will flash indicating that registration is occurring. After 5 seconds, the DSS5805 handset will be registered.



- In some cases you may need to attempt registration a few times.
- You cannot register the handset when the original phone is in use.

# Call Transfer Feature

You can transfer an outside call to the original unit. For more instructions, see the owner's manual supplied with the original unit.

To transfer a call to the original unit	Press <i>xfer/del</i> during a call. When the original unit receives the transferred call, the DSS5805 handset returns to the standby mode.
To receive a transferred call from the original unit	Press <i>talk/flash</i> or <i>spkr</i> to answer the transferred call.
To cancel the transfer	Press <i>talk/flash</i> or <i>spkr</i> .



- If you transfer a call and it is not picked up after 5 minutes, you hear a beep, and the call will be disconnected.
- Only one handset at a time can talk with an outside caller.



**The earcap of this telephone may attract and retain small metallic objects.**

# Notes

## WARRANTY

### One Year Limited Warranty

**Important:** Evidence of original purchase is required for warranty service.

**Warrantor:** Uniden Australia Pty Limited A.B.N. 58 001 865 498

**ELEMENT OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty, its DSS5805 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Warranty is only valid in original country of purchase.

**PARTS COVERED:** This warranty covers for one (1) year, the Base Unit and Handset only. All accessories (AC Adaptor etc) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

**PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:** In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA PTY LIMITED  
SERVICE DIVISION**

345 Princes Highway, Rockdale NSW 2216  
Ph (02) 9599 3355 Fx (02) 9599 3278  
Toll Free 1300 366 895

[www.uniden.com.au](http://www.uniden.com.au)

**UNIDEN NEW ZEALAND LIMITED  
SERVICE DIVISION**

150 Harris Road, East Tamaki, Auckland  
Ph (09) 273 8383 Fx (09) 274 4253  
Toll Free 0800 4 UNIDEN (4 864 336)

[www.uniden.co.nz](http://www.uniden.co.nz)

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

For use only with models: DSS 5855.

**Uniden®**

Custom manufactured in China.

UZZ01826BZ

**[www.uniden.com.au](http://www.uniden.com.au)**  
**[www.uniden.co.nz](http://www.uniden.co.nz)**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>