

Uniden ALP 9080

CONTAQ I

1-Line Alpha/Numeric Pager



Operating Guide

UPZZ01659ZZ

FCC Information

Your pager might cause TV or radio interference even when it is operating properly. To determine whether your pager is causing the interference, turn it off. If the interference goes away, your pager is causing the interference. Try to eliminate the interference by moving the pager away from the receiver.

If you cannot eliminate the interference, the FCC requires that you stop using your pager.

Modifying or tampering with your pager's internal components can cause a malfunction and void your FCC authorization to operate it. If your pager is not performing as it should, contact your pager service.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause any harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

©1997 Uniden America Corporation All rights reserved.
Printed in the United States of America

Contents

| | |
|---|----|
| Introduction | 2 |
| Using this Owners Guide | 3 |
| Controls | 4 |
| Display Indicators | 5 |
| Belt Clip/Holster | 6 |
| Illuminated Display | 7 |
| Care and Maintenance | 7 |
| Installing and Using a Battery | 8 |
| Installing the Battery | 8 |
| Low Battery Alarm/Warning | 9 |
| Memory Saver | 9 |
| Power On/Off | 9 |
| About Your Pager's Functions | 10 |
| Set the Time and Date | 11 |
| Setting the Time | 11 |
| Setting the Date | 12 |
| Choosing the Alert Type | 13 |
| Using the Alarms | 14 |
| Setting a Time Alarm | 15 |
| Setting the Date Alarm | 16 |
| Choose and Change Options | 17 |
| Time Stamp On or Off | 17 |
| Quick View On or Off | 18 |
| Sample Alert On or Off | 19 |
| Word Wrap On or Off | 20 |
| Managing Message Files | 21 |
| Understanding the Memory Status Reminder | 21 |
| Reading Personal Messages | 22 |
| Receiving/Displaying Messages | 23 |
| Unreadable Message | 25 |
| Message Freeze | 25 |
| Tone Only | 26 |
| Unread Message Reminder | 26 |
| Reading the Mail Drop Message | 27 |
| Adding an Alert to a Mail Drop Message Type | 28 |
| Deleting a Mail Drop Message | 29 |
| Deleting Individual Personal Messages | 30 |
| Deleting All Messages | 31 |
| Adding Personal Memos to the Notebook | 32 |

Introduction

Congratulations on your purchase of the CONTAQ I ALP 9080 one-line alpha/numeric pager. This compact, state-of-the-art pager has many features including:

- 22 Notebook Memo Locations
- A Mail Drop Location
- 19 Personal Message Locations
- Clearvue™ Illuminated Display
- Multiple Alert Tones
- Silent or Vibrate Alerts
- Time/Date Alarms
- Out-of-Range Indicator

To ensure that you understand all of the pager's features and capabilities, please read this Operating Guide carefully before you use the pager.

Visit our internet site:

<http://www.uniden.com>



 
 
 

Using this Owners Guide

- Throughout this Operating Guide the **action** (such as: press a key) is first, followed by a display of the **results**.


Example:

Press , you will see:

RESULTS

- If you want to cancel or exit a mode, press .
- If (while setting any function) you do not press any key for about 8 seconds, the display returns to standby. If this happens, start over at step 1.
- When you see only the  key in a description, you can usually use either the  key to scroll forward or the  key to scroll backward.
- To rapidly change a setting (such as the hour or minutes when setting the time), hold down the  or  key.
- When we say "press this key", press and release the key. If you need to press and hold, we will say that.
- These displays are general representations of what you will see. Your paging service provider may change the mail drop wording.

 
Controls

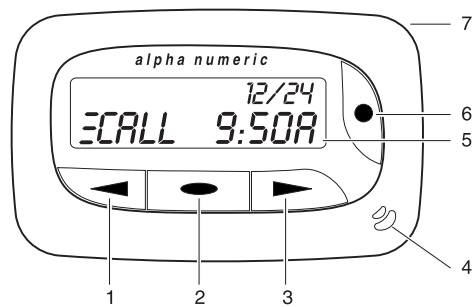

* To stop the page alert, press any key. To light the display, press and hold any key for two seconds.


1. **Backward Scroll Key** (▶)
2. **Enter/Menu Key** (●)
3. **Forward Scroll Key** (◀)
4. **Speaker**
5. **Display** (see next page)
6. **Power/Escape Key** (●) – hold to turn power on/off or press and release to return display to standby.
7. **Strap attachment**

 Display Indicators

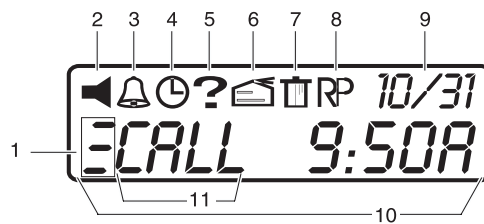




1. Out-of-Range Indicator and first character of the 12-Character Display
2. Alert
3. Alarm
4. Time
5. Options
6. Mail Drop/Info Service Message
7. Delete
8. Repeat
9. Month/Day
10. 12-Character Display
11. Message Status Indicator

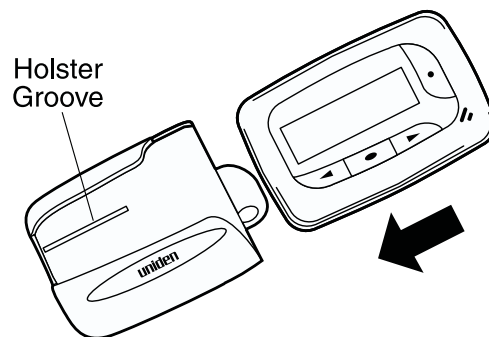Belt Clip/Holster



- Line up the groove on the pager back with the groove on the holster. It fits in the holster only one way.
- Slide the pager into the holster. It fits securely.
- Use the spring clip to attach the holster to your belt or pocket.
- You can view your messages while the pager is in the holster.
- To use the function keys, slide the pager out of the holster.

Illuminated Display

- Turn on your pager.
- At the standby display, press and hold ,  or  for about two (2) seconds.
- The display lights for about five (5) seconds.
- * *Heavy use of the Clearvue™ illumination shortens battery life.*

Care and Maintenance

- Keep the pager dry. If it gets wet, wipe it dry immediately.
- Use and store only in normal temperature environments.
- Keep the pager away from dust and dirt.
- To clean the pager, wipe occasionally with a damp cloth. Do not use harsh chemicals.

 
 

Installing and Using a Battery

Your pager requires one AAA battery for power.

Caution: Always use a battery of the specified size and type.

Installing the Battery

1. Release the battery compartment lock. Slide and lift off the battery cover.
2. Insert a AAA battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Match the dots, slide the battery cover on and slide the lock-tab down.

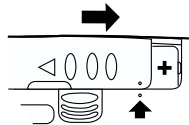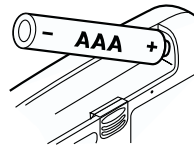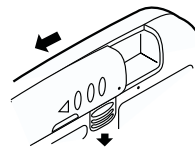

Low Battery Alarm/Warning

If the battery power is low, BATTERY LOW appears in the display once an hour while a low-beep sounds for 4 seconds.



* *When the battery low indicator appears, replace the battery as soon as possible to keep your pager working at peak performance.*

Memory Saver

Your pager's built-in memory saver stores messages and settings for at least two minutes while you change the battery or after the battery loses power.

Power On/Off

- To turn power on, press and hold ● for about a second. If you chose an audio or vibrate alert (page 13), it sounds or buzzes twice.
- To turn power off, press and hold ● for about 2 seconds. You will hear a loud beep.

About Your Pager's Functions

There are six choices in the function menu:

 
- ◀ **Alert Set** - change alert type.
- 🔔 **Alarm Menu** - set alarm for time and date.
- 🕒 **Time Menu** - set the time and date.
- ❓ **Option Menu** - time stamp, quick view, sample alert and word wrap.
- ◀ **Message File** - view and/or delete mail drop and memo messages.
- 🗑️ **Delete All** - deletes all personal and mail drop messages.

Set the Time and Date

Setting the Time

From the standby display, go to Time Set (as shown):


1. To select the hour, press **▶** or **◀** until you reach the hour you want.
2. To store your selection and move to the minutes display, press **●**.
3. To set the minutes and choose between 12 or 24 hour mode, press **▶** or **◀**.
4. To store your selection in memory, press **●**. The display returns to standby.

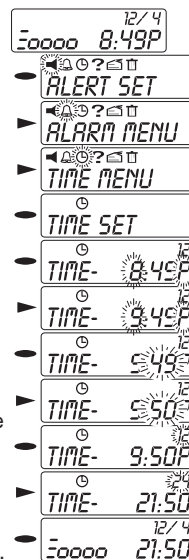

Setting the Date

From the standby display, go to Date Set (as shown):

 1. To select the month, press **▶** or **◀** until you reach the month you want.
2. To store your selection and move to the day display, press **●**.
3. To select the day, press **▶** or **◀** until you reach the day you want.
4. To store your selection in memory, press **●**. The display returns to standby.

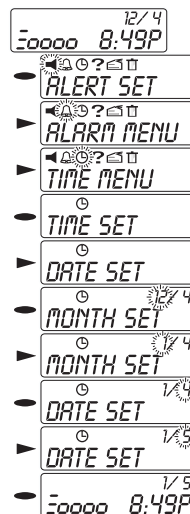


Choosing the Alert Type

Go to the Alert Set Menu (as shown):

To listen to the tones as you select them, set Sample Alert under the Options Menu on page 19.

 1. To cycle through the alert types, press **▶** or **◀**.
2. To store your selection in memory, press **●**.
3. To toggle between Auto Reset (alert tone stops after 8 seconds) and Non-stop (alert tone sounds until you press any key), press **▶** or **◀**.
The Silent alert does not use the Auto Reset or Non-stop options.
4. To store your selection in memory, press **●**.
The standby display returns showing the audio alert symbol (🔊).

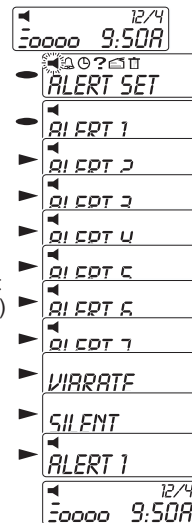

Using the Alarms

You can set the pager to sound an audible or vibrate alarm at the same time every day, and/or at a specific time on a certain date.

When a set alarm time arrives – even if the pager is turned off – the pager repeatedly sounds a unique alert tone (different than any message alert tone pattern) or vibrates for about 20 seconds. To stop the alarm sooner, press any key.

- The bell icon appears in the display when you turn on any one of the two alarms (daily and/or date).
- The bell icon disappears from the display only when both alarms are turned off.


Setting a Time Alarm

To set an alarm for a specific time every day:

Example: Every day at 5:54 p.m.

From the standby display, go to Time Alarm (as shown):

1. To set the alarm on or off, press **▶** or **◀**.
2. To enter your selection, press **●**.
3. To select the hour, press **▶** or **◀** until you reach the hour you want.
4. To store your selection and move to the minutes display, press **●**.
5. To set the minutes, press **▶** or **◀** until you reach the minute you want. Press **●**.
6. To set the alarm alert type (AUDIO ALARM or VIB ALARM), press **▶** or **◀**.
7. To store your selection in memory, press **●**. The display returns to standby.

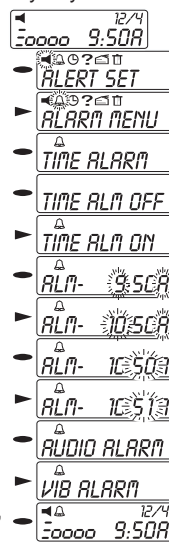


Setting the Date Alarm

To set an alarm for a specific date and time:
 Example: February 14, at 5:54 p.m.

From the standby display, go to Date Alarm (as shown).

 1. To set the alarm on or off, press **▶** or **◀**.
2. To enter your selection, press **●**.
3. To select the month, repeatedly press **▶** or **◀**.
4. To store your choice and move to the next selection, press **●**.
5. To set the day, hour, minutes, and alarm alert type (AUDIO ALARM or VIB ALARM), repeat steps 3 and 4.
6. To store the date alarm settings in memory, press **●**. The standby display appears.

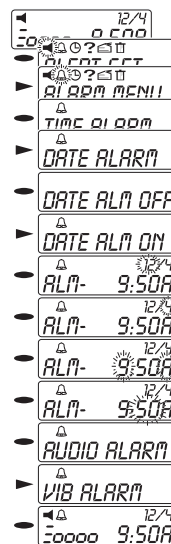

Choose and Change Options

- Time Stamp
- Quick View
- Sample Alert
- Word Wrap

* To "escape" from any Option menu, press ●.

 
* When ? appears above the selected option, that option is on.

Time Stamp On or Off

Time stamp adds the day, time and date that a message came in.

From the standby display, go to Time Stamp (as shown):



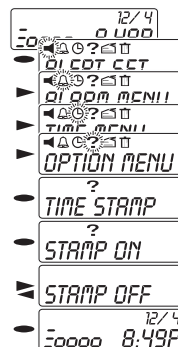

1. Press ●.
The current setting appears.
(The default setting is on.)
2. To change the setting, press ► or ◀.
3. To store the selected setting and return to standby, press ●.




Quick View On or Off

Quick View lets you set your pager to automatically display each message when you receive it.

From the standby display, go to Quick View (as shown):



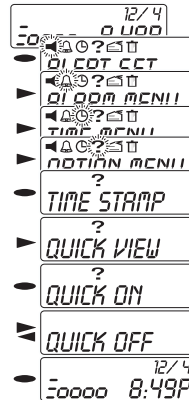

- 1 Press .
The current setting appears.
2. To change the setting, press  or .
3. To store the selected setting and return to standby, press .




Sample Alert On or Off

When you turn Sample Alert on, you can hear or feel a sample of the alert when you are setting it.

From the standby display, go to Sample Alert (as shown):



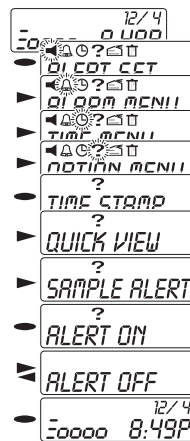

- 1 Press  .
The current setting appears.
(The default setting is on.)
2. To change the setting,
press  or .
3. To store the selected setting
and return to standby, press .



Word Wrap On or Off

If a word in the display is more than 12 characters, Word Wrap prevents breaking it up. To see complete (unbroken) words in the display, turn word wrap on.

From the standby display, go to Word Wrap (as shown):

- 1 Press  .
The current setting appears. (The default setting is on.)
2. To change the setting, press  or .
3. To store the selected setting and return to standby, press .

 
 
 
 


Managing Message Files

There are two types of messages:

- Personal Messages - your pager holds up to 20 personal messages that you can read and delete. If you have a mail drop message, your pager holds up to 19 personal messages.
- Info Service (Mail Drop) Message that you can add an alert to or delete.
- * *The Notebook holds the mail drop message and 22 personal notes that you can enter.*

Understanding the Memory Status Reminder

- No messages to be read or in memory. 
- Unread messages - messages that haven't be read. 
- Messages that have been read. 
- Your pager's memory is full. You need to read and delete your messages. 

 
Reading Personal Messages

Your pager can store up to 20 personal messages, in the order received. *If there is a mail drop message, the pager stores only 19 personal messages.*




 
- If the pager's memory is full when it receives a new message, FULL appears on the display and the new message replaces the oldest message.

* *To prevent the pager from automatically replacing personal messages you want to keep, delete each unwanted message after you read it.*

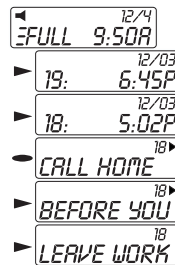- To read the most recent message (20 through 01) from the standby display, press ►.











- To read the oldest message (01 through 20) from the standby display, press ◀.

 
 

 
 
- When you receive or read a message, the pager automatically scrolls through the it – displaying each screen for 8 seconds. Then, the standby display reappears. You can press  or  to move to the next or previous screen. Or, you can press  to immediately review the message.
- Press  to return to the standby display.

Receiving/Displaying Messages




Receiving Messages with Quick View On and Time Stamp Off

1. When the pager receives a message, it beeps (or vibrates) and the message displays on the screen. 
2. To scroll through the message, press . To scroll through other stored messages, press  or . 
- * To delete the message, see pages 29, 30, and 31.
3. To return to the standby display,  . 


Receiving Messages with Quick View Off and Time Stamp On

1. When the pager receives a message, it beeps (or vibrates) for 8 seconds.
To immediately stop the alert, press any key.

2. To see the message, press **▶**.

3. To read the rest of the message, press **◀**, then, **▶**.

4. When you have read the message, you can scroll through the next message by pressing **▶**.

5. To return to the standby display, press **●**.




Receiving Messages With Quick View and Time Stamp On

1. When the pager receives a message, it beeps (or vibrates) for about 8 seconds. 
2. The message automatically appears on the display. If the message is longer than 12 characters, the second part of the message appears after a second. 
3. To stop the alert, press any key. The display shows you have a message in memory. 

Unreadable Message

If a message is received that is partially or totally unreadable, the unreadable characters are replaced with a lower case "u". 

Message Freeze

When viewing a message, press and hold . The message remains as long as you hold .

Tone Only

A “tone only” message doesn’t have any numeric characters.




It could be an unreadable message, an error or a preset message that alerts you to check your voice mail.

Unread Message Reminder

If you are using the Auto Reset alert mode (see Choosing the Alert Type on page 13), and, you do not read a message within 3 minutes, the pager sounds an 8-second series of reminder alert tones. This unread message reminder repeats up to 10 times or until you read that message. If you are using the Non-stop alert mode, the unread message reminder alert sounds continuously until you read that message.

* *If you use Non-stop, the alert sounds until you read the message or your battery runs down.*





Reading the Mail Drop Message

 
- * When you receive a Mail Drop message,  appears in the standby screen.

From the standby display go to Message File (as shown):

- * In the example, Time Stamp is on.

- * The Mail Drop message is 01 in the Notebook.

1. Press .
2. To read all the message, press  or .
3. Press  to return to the standby display.

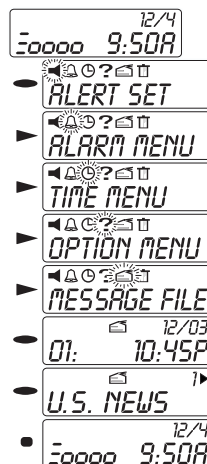

Adding an Alert to a Mail Drop Message Type

 
* In our example, the
TIME STAMP is on.

Follow the steps to go
to the Message File:

1. With the message in the display, press . Two options appear - Alert (?) and Delete (🗑️). The 🗑️ is selected and flashing.
2. To select Alert (?), press . Our example's current setting is ALERT OFF.
3. To change the setting from OFF to ON, press .

* There is no confirmation message. The alert changes to ON and the display returns to the beginning of the message.



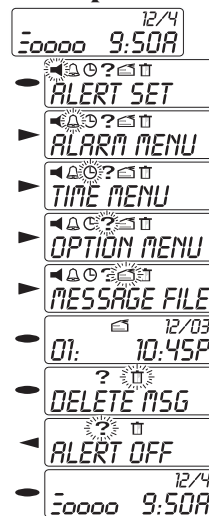



* To Cancel the delete, press .

 


Deleting a Mail Drop Message

In our example,
TIME STAMP is on.




 


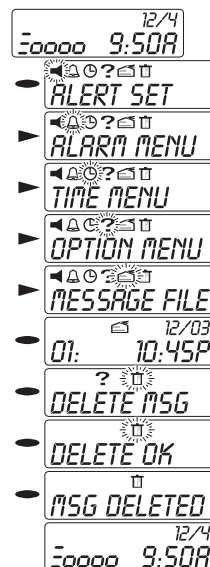

Follow the steps to go
to the message:


1. With the message in the display, press . Two options appear - Alert (?) and Delete (☒). The ☒ is selected and flashing.
2. Press . The confirmation message "DELETE OK?" displays.
- * To Cancel the delete, press ,  or .
3. Press  again.
4. After about 2 seconds, the standby appears.



Deleting Individual Personal Messages





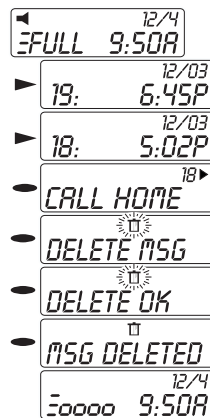

Go to the message that you want to delete (as shown below).


1. Press .
The Delete () option appears. The  flashes.
2. To select Delete (), press .
3. Press .
4. To delete the message, press .
To cancel (not delete the message), press  (escape/cancel).
5. After about 2 seconds, the standby display appears.



Deleting All Messages

From the standby display, go to Delete All (as shown):

1. Press .
DELETE ALL appears.
2. Press .
The confirmation message "DELETE OK?" displays.
- * To Cancel the delete, press ,  or .
3. Press  again.
4. After about 2 seconds, the standby display appears.

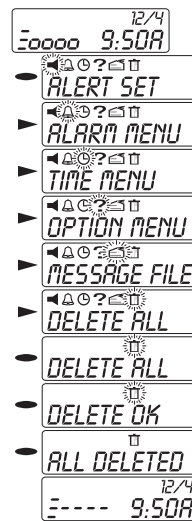








Adding Personal Memos to the Notebook

 
You can enter personal memos into the 22 message files (02 through 23) in the Notebook.

- 02 through 10 have 8 alpha/numeric character capacity
- 11 through 23 have 24 character alpha/numeric capacity
- The alpha/numeric characters are *A* through *Z*, *0* through *9*, *-*, *+*, */*, **, *:*, *?*, *!*, *;*, and ***.
To enter a blank space, select “*_*” (underscore).
When you enter the message, a space appears where the “*_*” was.

To program memos into the Notebook locations:

Go to the Notebook location where you want to enter your memo.

1. Press and hold both  and  for about 2 seconds. The letter *R* flashes.
2. To go to the alpha/numeric character that you want, press either  or .
 - * To repeat a character, press .
3. To select the alpha/numeric character, press .
4. To select the rest of your memo, repeat steps 2 and 3.
5. To enter your memo into the Notebook location, press and hold  until the display stops flashing.

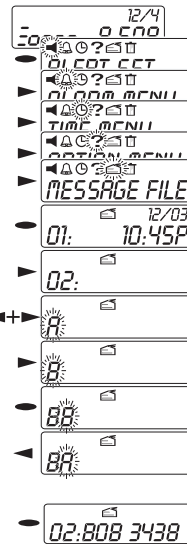

Contaq I ALP9080 Flex™ Two Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for two years, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 24 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped prepaid, by traceable means, or delivered, to warrantor at:

Uniden America Corporation
Pager Repair Department
4700 Amon Carter Boulevard
Fort Worth, TX 76155
(800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday

uniden®

©1997 Uniden America Corporation
All rights reserved.
Printed in the United States of America

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>