
 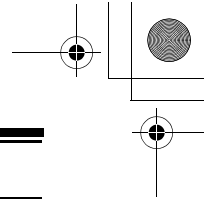


Uniden®

**USC230
OWNER'S
MANUAL**

OWNER'S MANUAL




 
 
 
 
Precautions

 
 
Before you use this scanner, please read and observe the following.

EARPHONE WARNING!



Be sure to use the supplied 8Ω monaural headphone. Use of an incorrect earphone or stereo headset might be potentially hazardous to your hearing. The output of the phone jack is monaural, but you will hear it in both headphones of a stereo headset.

Set the volume to a comfortable audio level coming from the speaker before plugging in the monaural earphone or a stereo headset of the proper impedance (32 Ω). Otherwise, you might experience some discomfort or possible hearing damage if the volume suddenly becomes too loud because of the volume control or squelch control setting. This might be particularly true of the type of earphone that is placed in the ear canal.

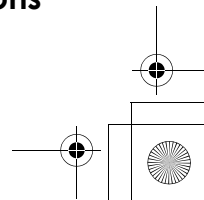



  WARNING!
Uniden **does not** represent this unit to be waterproof.
To reduce the risk of fire or electrical shock, **do not**
expose this unit to rain or moisture.




Motorola®, *PL®*, *Private Line®*, *DPL®*, and *Digital Private Line®* are registered trademarks of Motorola, Inc.


Uniden® and *Bearcat®* are registered trademarks of Uniden America Corporation.

Close Call™ is a proprietary trademarks of Uniden America Corporation.

 Other trademarks used throughout this manual are the property of their respective holders.



Precautions

 

Contents

Precautions	2
Contents	4
Introduction	7
Feature Highlights	10
About This Manual.....	13
How the Scanner's Controls Are Represented in This Manual...	13
Entering Text.....	14
Understanding Scanning	15
Understanding the Scanner's Memory	15
What is Scanning?.....	15
What is Searching?.....	15
What is CTCSS/DCS?.....	16
Using the Scanner at the Racetrack	18
Conventional Scanning.....	18
Where To Get More Information.....	19
Included With Your Scanner	21
Setting Up Your Scanner	22
Using Internal Batteries	22
Using Rechargeable Batteries	22
Using Non-rechargeable Batteries.....	23
Using AC Power	25
Connecting the Antenna	25
Connecting an Earphone/Headphone	26
Connecting an Extension Speaker	26
Attaching the Belt Clip	26
Attaching the Wrist Strap.....	27
Installing the Demo Software.....	27
A Look At The Keypad.....	28
A Look At The Display	31
Using Menu.....	32
Using Func.....	32
Using the Scroll Control.....	32
Basic Operation	33
Turning On the Scanner and Setting the Squelch	33
Scanning Systems.....	33
Scanning Preprogrammed Races.....	34
Before You Get To The Track.....	34
When You Get To The Track.....	34
Selecting Systems to Scan.....	35
Selecting System Channel Groups.....	36
Locking/Unlocking Systems.....	36
Locking/Unlocking Channels	37
Temporarily Holding On a System.....	37
Holding On a Channel	37
Quick-Storing Channels.....	38
Quickly Recalling Channels.....	38
Other Settings	39
Displaying System Information	39
Viewing Memory Used	39
Viewing the Firmware Version	39

Contents

Adjusting the Key Beep	39
Locking/Unlocking the Keypad	39
Turning Power Save On or Off	39
Priority Scan	39
Using the Backlight	40
Initializing the Scanner's Memory	40
Using the PC Control and Cloning Options	41
Connecting Your Scanner to a Personal Computer	41
Cloning the Scanner	42
Using the Menu	43
Programming Radio Systems	45
Quickly Programming Racing Systems	45
Manually Programming Racing Systems	48
Editing the Car	48
Entering/Editing a Car Number	49
Editing a Driver	49
Setting a Car's Quick Key	50
Editing a Car's Channel	50
Deleting a Car	50
Setting Lockout On A Car	51
Programming Conventional Systems	51
Entering/Editing Conventional Channel Groups	52
Entering/Editing Conventional Channels	52
Programming/Editing Optional Settings	54
System-Level Settings	54
Editing the System Name	54
Editing the System Quick Key (Conventional Systems Only)	54
Setting Group Lockout	55
Setting the System Hold Time	55
Setting the Channel Delay Time	56
Setting Data Skip	56
Deleting Systems	57
Copying Systems	57
Group-Level Settings	57
Entering/Editing the Group Name	57
Setting the Group Quick Key	58
Setting Group Lockout	58
Deleting Groups	59
Channel-Level Settings	59
Editing the Channel Name (Conventional Systems Only)	59
Setting Channel Priority	60
Setting Channel Alert	61
Setting CTCSS/DCS	61
Setting Channel Modulation	62
Setting Channel Attenuation	63
Setting the Frequency Step	63
Setting Channel Lockout	64
Deleting Channels	64
Copying/Pasting Channels	65

Contents

Searching and Storing	66
Service Search	66
Changing the step of Air Band	66
Quick Search	66
CTCSS/DCS Search	67
Custom Search	67
Preset Custom Search Range	68
Editing a Custom Search Range	70
Auto Search and Store	70
Selecting a System	71
Storing a System	71
Using the Close Call Feature	72
Setting Close Call Options	73
Close Call Hits	75
Search and Close Call Options	76
Managing Locked-Out Frequencies	76
Unlocking All Frequencies	76
Reviewing Locked Out Frequencies	76
Searching for Subaudible Tones	76
Setting the Maximum Auto Store Value	77
Setting the Modulation Type	77
Setting Attenuation	78
Setting Data Skip	78
Setting the Delay Time	78
Setting the Search Frequency Step	79
Care and Maintenance	80
General Use	80
Location	80
Cleaning	80
Repairs	80
Troubleshooting	81
Specifications	83
Optional Accessories	84
Planning	85
Collecting Information	85
Filling Out The Racing System Worksheet	87
Race Name	87
Car #/Driver-Frequency-Priority-CTCSS/DCS	87
Racing System Worksheet	88
Filling Out The Conventional System Worksheet	89
System Name and Quick Key	89
Group Name and Quick Key	89
Frequency-Alpha Tag-Priority-CTCSS/DCS	89
Conventional System Worksheet	90
Preprogrammed Systems	91
Declaration of Conformity	92

Contents

Introduction

Your USC230 scanner is a state-of-the-art scanner radio with automatic scanning capabilities. You can store frequencies such as racing, police, fire/emergency, marine, air, and other communications into the scanner. You can carry it with you wherever you go, use it at home as a base unit, or install it in your vehicle as a mobile unit.

You can use the scanner's scroll control to quickly select channels and frequencies, and you can automatically program channels in a system using the AutoStore feature.

Use your scanner to monitor:

- Automobile races
- Public safety systems
- Police and fire departments (including rescue and paramedics)
- Business/Industrial radio
- Utilities
- Marine and amateur (ham radio) bands
- Air band
- Railroad

This table lists the frequency ranges, default frequency step and default mode (AM or FM).

To select a band plan from 1, 2 and 3;

1. Make sure the power is turned off.
2. While holding down 1, 2 or 3 (corresponding number of the band plan), turn on the scanner.

Band Plan 1

Frequency Range (MHz)	Mode	Step (kHz)
25.0000 - 29.9950	FM	5
30.0000 - 79.9875	FM	12.5
80.0000 - 82.9900	FM	10
83.0000 - 87.2875	FM	12.5

Introduction

Frequency Range (MHz)	Mode	Step (kHz)
108.0000 - 136.9875	AM	12.5 / 8.33
108.0000 - 136.9916		Selectable
137.0000 - 137.9950	FM	5
138.0000 - 157.9875	FM	12.5
158.0000 - 160.5900	FM	10
160.6000 - 162.5875	FM	12.5
162.6000 - 173.9875	FM	12.5
216.0000 - 224.9950	FM	5
400.0000 - 405.9875	FM	12.5
406.0000 - 439.9937	FM	6.25
440.0000 - 465.9950	FM	5
466.0000 - 469.9900	FM	10
470.0000 - 512.0000	FM	6.25
806.0000 - 960.0000	FM	12.5
1240.0000 - 1300.0000	FM	12.5

Band Plan 2

Frequency Range (MHz)	Mode	Step (kHz)
25.0000 - 49.9950	FM	5
50.0000 - 84.0100	FM	5
84.0150 - 87.2950	FM	20 with 15kHz Offset
108.0000 - 136.9875	AM	12.5 / 8.33
108.0000 - 136.9916		Selectable
137.0000 - 143.9950	FM	5
144.0000 - 145.9875	FM	12.5
146.0000 - 155.9900	FM	10
156.0000 - 157.4250	FM	12.5
157.4375 - 160.5875	FM	12.5
160.6000 - 162.0250	FM	12.5
162.0375 - 173.9875	FM	12.5
216.0000 - 224.9950	FM	5



Introduction

Frequency Range (MHz)	Mode	Step (kHz)
400.0000 - 405.9875	FM	12.5
406.0000 - 439.9937	FM	6.25
440.0000 - 449.9937	FM	6.25
450.0000 - 469.9900	FM	10
470.0000 - 512.0000	FM	6.25
806.0000 - 960.0000	FM	12.5
1240.0000 - 1300.0000	FM	12.5

Band Plan 3

Frequency Range (MHz)	Mode	Step (kHz)
25.0000 - 29.9950	FM	5
30.0000 - 79.9937	FM	6.25
80.0000 - 82.9937	FM	6.25
83.0000 - 87.2937	FM	6.25
108.0000 - 136.9875	AM	12.5 / 8.33
108.0000 - 136.9916		Selectable
137.0000 - 137.9950	FM	5
138.0000 - 157.9937	FM	6.25
158.0000 - 160.5937	FM	6.25
160.6000 - 162.5937	FM	6.25
162.6000 - 173.9937	FM	6.25
216.0000 - 224.9950	FM	5
400.0000 - 405.9875	FM	12.5
406.0000 - 439.9937	FM	6.25
440.0000 - 465.9937	FM	6.25
466.0000 - 469.9937	FM	6.25
470.0000 - 512.0000	FM	6.25
806.0000 - 960.0000	FM	12.5
1240.0000 - 1300.0000	FM	12.5

 Introduction

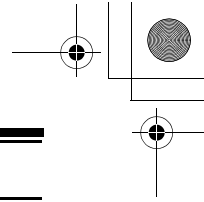

Feature Highlights

General

Close Call™ RF Capture Technology - you can set the scanner so it detects and provides information about nearby radio transmissions. See “Using the Close Call Feature” on Page 72 for more information.

Dynamically Allocated Channel Memory - your scanner's memory is organized so that it more closely matches how radio systems actually work, making it easier to program and use your scanner and determine how much memory you have used and how much you have left.

Preprogrammed Races - your scanner is preprogrammed with Formula 1 races.

Quick Race Programming – lets you quickly and easily enter information about a specific race.

Quick Keys – You can set the scanner so you can select a race or systems and groups by pressing a single key. This makes it easy to listen to or quickly lock out those systems or groups you don't want to scan.

 
 
Quick Car Select – You can set the scanner so you can select and listen to a car by pressing a single key.

Lockout – You can lock out any system, group, frequency, or channel while scanning. If you lock out a system or group, any channels belonging to that system or group are also locked out.




You can lock out up to 200 frequencies. The scanner skips locked-out frequencies while using the Close Call feature or while searching.

CTCSS and DCS Squelch Modes – prevent interference from stations not using the mode you select.

Dropout Delay – You can set whether the scanner pauses at the end of a transmission to wait for a reply. You can set the delay time for each system you scan, and while searching and using the Close Call feature.



Feature Highlights

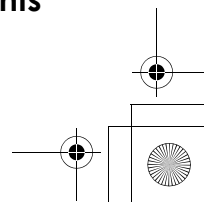  

Attenuator – You can set the scanner's attenuator to reduce the input strength of strong signals by about 18 dB received by the scanner.

Repeater Reverse – You can set the scanner so it switches to the input frequency on a conventional repeater system.

Channel Alert – You can set the scanner so it alerts you when there is activity on any channel you specify.

Memory Check – Lets you see at a glance how much total memory is left.

Frequency Step – Lets you select a frequency step (5, 6.25, 7.5, 8.33, 10, 12.5, 15, 20, 25, 50 or 100 kHz) for manual mode and chain search mode. The scanner's auto step feature lets you set the scanner so it automatically chooses the correct step.

Quick Recall – Lets you quickly select a specific channel by choosing the system, group, and channel.

Scan/Search Delay – You can set the scanner so it remains on a frequency up to 5 seconds after the last transmission to wait for a possible reply.

Text Tagging – You can name each race system, conventional system, group, channel and custom search range using up to 16 characters per name.

Unique Data Skip – Allows your scanner to skip unwanted data transmissions and reduces birdies.

Duplicate Frequency Alert – Alerts you if you try to enter a duplicate name or frequency already stored in the scanner.

Memory Backup – If power is lost or disconnected, the scanner retains the frequencies you programmed in its memory.

Multi Bands – With Aircraft and 800 MHz.

Note: The scanner's frequency coverage is not continuous.

Feature Highlights

Custom Search – Lets you program up to 10 custom search ranges. You can search any of these ranges simultaneously.

CTCSS/DCS Search – Lets the scanner search for CTCSS or DCS tones. You can identify up to 50 CTCSS tones and 104 DCS tones.

Quick Search – Lets you search from the currently-tuned frequency if you are searching a conventional system.

Auto Store

Frequency AutoStore – Automatically stores all active frequencies within a system you select.

Priority

Priority Scan – Priority channels let you keep track of activity on your most important channel(s) while monitoring other channels for transmissions.

Priority Plus – You can set the scanner so it scans only the priority channels

Backlight and Power

LCD Back Light – Makes the display easy to see in dim light. You can adjust the back light so it turns on when you press a key, when squelch breaks during a transmission, or manually.

Low Battery Alert – The scanner alerts you if the batteries need to be recharged or replaced.

Battery Save – You can set the scanner so it reduces the amount of power it needs if there are no transmissions.

Key Controls

Key Lock – You can deactivate the scanner's keys to help prevent accidentally changing the scanner's programming.

Key Beep – You can control whether the scanner beeps when you press a key.

Feature Highlights

PC Control and Cloning

PC Control – You can transfer programming data to and from your scanner and your personal computer, and control the scanner using a computer. This helps you find frequencies listed on the Internet and load them into the scanner.

Clone Mode – You can clone all programmed data, including the contents of the scanner’s memory, menu settings, and other parameters from one USC230 scanner to another USC230 scanner.

About This Manual

The screen displays used in this manual are representations of what might appear when you use your scanner. Since what you see depends on the frequencies for your area and the settings you select, you might notice some differences between what is in this manual and what appears on your scanner.


 
How the Scanner’s Controls Are Represented in This Manual

To help navigate the scanner’s menus, the steps shown in this manual show the displays you see and the keys you press or control you operate to get a desired result.

This example shows you how to use the scanner’s menu to edit an existing system name. It shows you the key to press (**Menu**) to select a menu option and the option you see (**PROGRAM SYSTEM**) when you press **Menu**. It also instructs you to turn the scroll control (shown as **U**) to view a series of choices then select one choice (**EDIT NAME**).

Menu → **PROGRAM SYSTEM** → **E U** →
 Select the system → **E U**
 → **EDIT NAME** → **E**

Feature Highlights

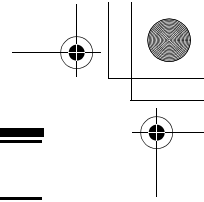


To get the most from this manual, review the contents to become familiar with the basic functions available. If you are new to scanning, be sure to read “Understanding Scanning” on Page 15 for a quick background on the technology. The first thing you’ll need to do is install batteries in the scanner. Then you need to connect the included antenna to the scanner. See “Setting Up Your Scanner” on Page 23 if you need any help doing this.


Entering Text

To enter a letter, turn the scroll control until the character you want appears. To enter a number, press a number key. To enter a decimal point, press **.**



 
To move the cursor to the left, hold **Func** then press **</4** or rotate the scroll control to the left. To move the cursor to the right, hold **Func** then press **6/>** or rotate the scroll control to the right.





 To clear a character, press **No** twice. To clear all characters, press **No** 3 times. To accept an entry, press **E** or press down on the scroll control.



Feature Highlights

   

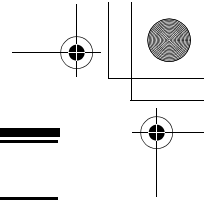 

Understanding Scanning

This section provides you with background on how scanning works. You don't really need to know all of this to use your scanner, but some background knowledge will help you get the most from your USC230.

Understanding the Scanner's Memory

Your scanner's memory is organized in an architecture called *Dynamic Allocated Channel* memory. This type of memory is organized differently and more efficiently than the bank/channel architecture used by traditional scanners. Dynamic Allocated design matches how radio systems actually work much more closely, making it easier to program and use your scanner and determine how much memory you have used and how much you have left.

Instead of being organized into separate banks and channels, your scanner's memory is contained in a *pool*. You simply use as much memory as you need in the pool to store as many frequencies and alpha tags as you need. No memory space is wasted, and you can tell at a glance how much memory you have used and how much remains.


 
 
What is Scanning?

 
 
Unlike standard AM or FM radio stations, most two-way communications do not transmit continuously. Your USC230 scans programmed channels until it finds an active frequency, then stops on that frequency and remains on that channel as long as the transmission continues. When the transmission ends, the scanning cycle resumes until the scanner receives another transmission.

What is Searching?

The USC230 can search each band and up to 10 banks together to find active frequencies. This is different from scanning because you are searching for frequencies that have not been programmed into the scanner. When you select frequency bands to search, the scanner searches

Understanding Scanning

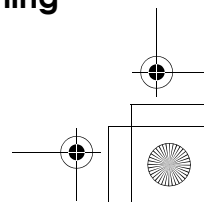



for any active frequency within the lower and upper limits you specify. When the scanner finds an active frequency, it stops on that frequency as long as the transmission lasts. If you think the frequency is interesting, you can program it into the scanner's memory. If not, you can continue to search.

What is CTCSS/DCS?

 
 
 
Your scanner can monitor systems using a Continuous Tone Coded Squelch System (CTCSS) and Digital Coded Squelch (DCS) system, which allow squelch to open only when the tone you have programmed with a specific frequency is received along with a transmission.

CTCSS and DCS are subaudible tone signaling systems sometimes referred to as PL or DPL (Motorola's trademarked terms for Private Line and Digital Private Line respectively). CTCSS and DCS are used only for FM signals and are usually associated with both amateur and commercial two-way frequencies. These systems make use of a special subaudible tone that accompanies a transmitted signal.

CTCSS and DCS are used for many purposes. In many cases, CTCSS and DCS are used to restrict access to a commercial repeater, so that only those units, which transmit the correct tone along with their signal can "talk" to the repeater.

CTCSS and DCS are also used in areas that receive interference where there are several stations with output frequencies close to each other. When this occurs, you might hear multiple communications on the same frequency. The stations might even interfere with each other to the point where it is impossible to clearly receive any of the stations. A scanner equipped with CTCSS and DCS (like your scanner) can code each received frequency with a specific CTCSS or DCS frequency. Then, when you receive multiple signals, you only hear the transmission with the CTCSS or DCS tone you programmed. If you do not receive the correct tone with a signal, the scanner's squelch remains closed and you hear nothing.

Understanding Scanning







You can search for the following CTCSS frequencies and DCS codes.

CTCSS Frequencies (Hz)


67.0	69.3	71.9	74.4	77.0	79.7
82.5	85.4	88.5	91.5	94.8	97.4
100.0	103.5	107.2	110.9	114.8	118.8
123.0	127.3	131.8	136.5	141.3	146.2
151.4	156.7	159.8	162.2	165.5	167.9
171.3	173.8	177.3	179.9	183.5	186.2
189.9	192.8	196.6	199.5	203.5	206.5
210.7	218.1	225.7	229.1	233.6	241.8
		250.3	254.1		



DCS Codes (Octal)

023	025	026	031	032	036	043	047
051	053	054	065	071	072	073	074
114	115	116	122	125	131	132	134
143	145	152	155	156	162	165	172
174	205	212	223	225	226	243	244
245	246	251	252	255	261	263	265
266	271	274	306	311	315	325	331
332	343	346	351	356	364	365	371
411	412	413	423	431	432	445	446
452	454	455	462	464	465	466	503
506	516	523	526	532	546	565	606
612	624	627	631	632	654	662	664
703	712	723	731	732	734	743	754

  

Understanding Scanning

 

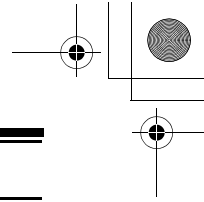 

Using the Scanner at the Racetrack

Keeping up with the action at the racetrack is easy and fun. You can hear drivers communicating with their pit crews, officials communicating with drivers and crews, and track workers communicating with everybody. Each user at the racetrack transmits and receives on one or more frequencies.

The scanner organizes racetrack frequencies by the name of the race you are scanning and by car number. For example, you might hear drivers and their pit crews on the car number frequencies and officials and the news media on the race frequencies. When you are scanning, the scanner stops very briefly on each channel to see if there is activity. If there isn't, the scanner quickly moves to the next channel. If there is, then the scanner pauses on the transmission until it is over.

You can activate one racing system and as many conventional systems as you want at the same time. Within a racing system, each driver can have multiple frequencies stored.


 
 
Conventional Scanning


 
Conventional scanning is a relatively simple concept. Each group of users in a conventional system is assigned a single frequency (for simplex systems) or two frequencies (for repeater systems). Any time one of them transmits, their transmission always goes out on the same frequency.

Today there are still many 2-way radio users who operate using a conventional system:

- Aircraft
- Amateur radio
- LPD/PMR users
- Broadcast AM/FM/TV stations
- Many business radio users

Understanding Scanning

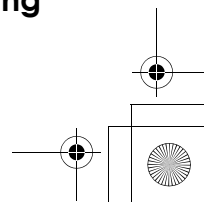

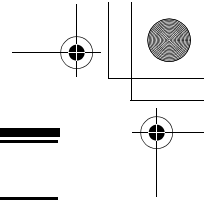

When you want to store a conventional system, all you need to know is the frequencies they operate on. When you are scanning a conventional system, the scanner stops very briefly on each channel to see if there is activity. If there isn't, the scanner quickly moves to the next channel. If there is, then the scanner pauses on the transmission until it is over.

Simplex Operation

Simplex systems use a single frequency for both transmit and receive. Most radios using this type of operation are limited to line-of-sight operation. This type of radio is frequently used at construction job sites, and with inexpensive consumer radios such as LPD/PMR radios. The range is typically 1-5 km, depending upon the terrain and many other factors.


 
 
Repeater Operation


 
Repeater systems use two frequencies: one transmits from the radio to a central repeater; the other transmits from the repeater to other radios in the system. With a repeater-based system, the repeater is located on top of a tall building or on a radio tower that provides great visibility to the area of operation. When a user transmits (on an input frequency), the signal is picked up by the repeater and retransmitted (on an output frequency). The user's radios always listen for activity on the output frequency and transmit on the input frequency. Since the repeater is located very high, there is a very large line of sight.

Where To Get More Information

By itself, this manual really only provides part of what you need to know to have fun scanning – how to program and use the scanner.

Understanding Scanning

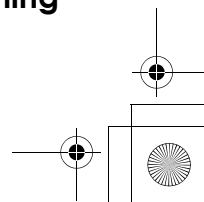

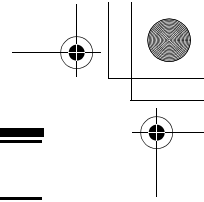

Information On The Internet

The Internet is a great source for current frequencies and information about scanning.

Many web sites have lists of frequencies for your area. You can use a search engine to find and use them.

Make a list of the agencies you want to listen to, then look up the frequencies and systems used by those agencies.

 
 
If you have access to the internet, you may want to visit the following websites for additional information:

www.racescanner.eu




- Race frequency information, programming software and accessories.

<http://groups.yahoo.com/group/USC230>

- A group for people interested in discussing the USC230.



Understanding Scanning

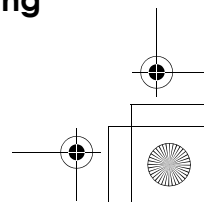  


Included With Your Scanner


If any of these items are missing or damaged, immediately contact your place of purchase.




Scanner

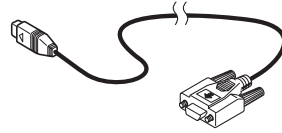


Connection Cable

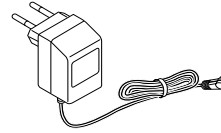


AC Adapter

 


Wrist Strap

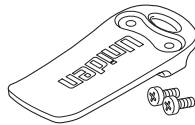


Belt Clip

 

Batteries

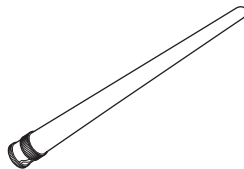

Antennas

 

Owners Manual



Headset

Included With Your Scanner



Setting Up Your Scanner



These guidelines will help you install and set up your new scanner:

- If your scanner receives interference or electrical noise, move the scanner or its antenna away from the source.
- To improve the scanner's reception, use an optional external antenna designed for multi-band coverage. (You can purchase this type of antenna at a local electronics store). If the optional antenna has no cable, use 50-70 Ω coaxial cable for lead-in. A mating plug might be necessary for the optional antennas.
- Use the supplied mono headset for private listening. Read the precautions on the inside front cover of this Owners Manual.
- Do not use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the scanner in direct sunlight or near heating elements or vents.



Using Internal Batteries



You can power your scanner using supplied rechargeable AA batteries.

Using Rechargeable Batteries

Before you use Ni-MH or Ni-Cd batteries, you must charge them.

The scanner has a built-in circuit that lets you recharge Ni-MH or Ni-Cd batteries while they are in the scanner. To charge the batteries;


1. Make sure the power is turned off.
2. Slide the battery compartment cover.




Setting Up Your Scanner



3. Install two batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

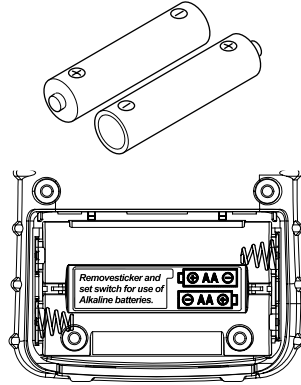

4. Replace the cover.

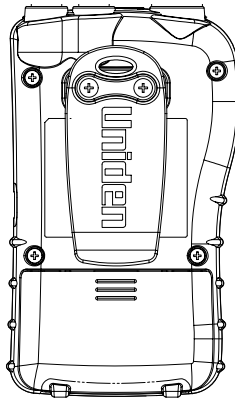

5. Connect the supplied AC adapter to the scanner's DC 6V to charge the batteries. (See "Using AC Power" on page 25.)

Using Non-rechargeable Batteries

You can also use two alkaline batteries to power your scanner. Before you use alkaline batteries, you must remove the sticker in the compartment and move the switch to **REG. ALK. BATT** position.

Setting Up Your Scanner

Cautions:

- Use only fresh batteries of the required size and recommended type.
- When **BATT** flashes and the scanner beeps every 15 seconds, replace both batteries.
- Always remove old or weak batteries. Batteries can leak chemicals that destroy electronic circuits.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

WARNING!

Do not connect either adapter to the scanner if non-rechargeable batteries (such as alkaline batteries) are installed in the scanner and **REG. ALK. BATT./ NI-MH BATT.** is set to **NI-MH BATT** (this is the default setting with the sticker) or if you are unsure of the switch's position. Non-rechargeable batteries will get hot and can even burst if you try to recharge them.

Before you use Ni-MH or Ni-Cd batteries for the first time, charge them for 16 hours to bring them to a full charge. Discharged batteries take about 16 hours to fully recharge.

Notes:

- Ni-MH batteries last longer and deliver more power if you occasionally let them fully discharge. To do this, simply use the scanner until it beeps every 15 seconds and **BATT** flashes.

Setting Up Your Scanner

- To prevent damage to Ni-MH batteries, never charge them in an area where the temperature is above 45°C (113°F) or below 4°C (40°F).
- If you connect an external power source to the scanner with **REG. ALK. BATT./NI-MH BATT.** set to **REG. ALK. BATT.**, the scanner does NOT charge the batteries. Make sure that you use the correct batteries and set **REG. ALK. BATT./NI-MH BATT.** to the correct position when you connect an external power source.

Using AC Power

You can power the scanner using the supplied 6V, 500 mA AC adapter.

To use the scanner on AC power, plug the AC adapter into DC 6V on the side of the scanner then plug the other end into a standard AC outlet.

If rechargeable batteries are installed without removing the sticker, or, after removing, **REG. ALK. BATT./NI-MH BATT.** is set to **NI-MH BATT.**, the adapter powers the scanner and recharges the installed batteries at the same time.

Connecting the Antenna


 
To attach the supplied stub antenna to the connector on the top of your scanner, align the slots around the antenna's connector with the tabs on the scanner's BNC connector. Then slide the antenna's connector down over the scanner's connector and rotate the antenna connector's outer ring clockwise until it locks into place.

Connecting an Optional Antenna

The scanner's BNC connector makes it easy to connect a variety of optional antennas, including an external mobile antenna or outdoor base station antenna.

Note: Always use 50-ohm, RG-58, or RG-8, coaxial cable to connect an outdoor antenna. If the antenna is over 50 feet from the scanner, use RG-8 low-loss dielectric coaxial cable. You can get a BNC adapter at your local electronics store.

Setting Up Your Scanner

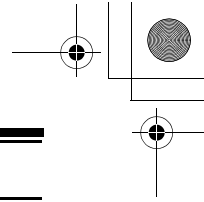

Connecting an Earphone/Headphone

For private listening, you can use the supplied headphone or can plug a 1/8-inch (3.5 mm) mini-plug earphone (not supplied) into the headphone jack on top of your scanner. This automatically disconnects the internal speaker. See "Earphone Warning" at the front of the manual for important information about using an earphone/headphone.

Connecting an Extension Speaker

In a noisy area, an optional amplified extension speaker, positioned in the right place, might provide more comfortable listening. Plug the speaker cable's 1/8-inch (3.5-mm) mini-plug into your scanner's jack.


 
 
WARNING!

 
 
If you connect an external speaker to the scanner's headphone jack, never connect the audio output line to a power supply and ground. This might damage the scanner.

Attaching the Belt Clip

To make your scanner easier to carry when you are on the go, use the supplied belt clip. Use a Phillips screwdriver and the supplied screws to attach the clip to the scanner.

Setting Up Your Scanner

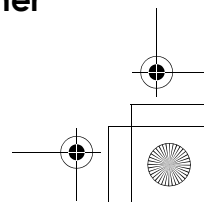



Attaching the Wrist Strap

To keep your scanner safely close at hand, use the supplied wrist strap. Push the small loop on one end of the wrist strap through the lug on the right side of the scanner, then thread the other end of the wrist strap back through the small loop to secure it.

 
Installing the Demo Software

You can operate your scanner using a personal computer and the free demo software available at <http://www.racescanner.eu>



Download the software, then double-click on the install package to begin installation. The USC230 Install program installs the software. You must install the software to use the scanner with your computer.

After you install the USC230 Install program, start it by double clicking on the desktop icon or by selecting it in the Start Programs list.


You can upgrade the included software to a full version by purchasing a registration key at <http://www.racescanner.eu>



Setting Up Your Scanner

  

A Look At The Keypad

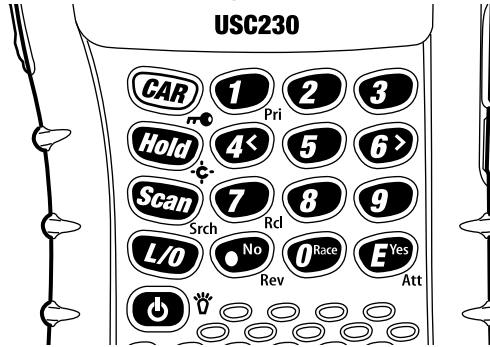





Your scanner's keys have various functions labeled on the key tops and below the keys. To select the function labeled on a key, simply press the key. To select the function labeled below a key, hold down **Func** on the left side of the scanner then press the key. **F** appears on the display.

If your scanner's keys seem confusing at first, the following information should help you understand each key's function.

Key Name	Description
CAR /	CAR – Selects a car in scan mode. Func + – Locks and unlocks the keypad.
Hold /	Hold – Holds the scan or the frequency search. Func + – Quickly selects the Close Call feature (see “Setting Close Call Options” on Page 73).
Scan/Srch	Scan – Scans the stored channels. Func + Srch – Starts quick search or quickly accesses the search menu.

Setting Up Your Scanner


Key Name	Description
L/O	<p>L/O – Lets you lock out a selected channel or skip a specified frequency.</p> <p>[Func] + L/O – Press quickly to lock and unlock a selected system in Scan or Scan Hold mode and review search lockout frequencies in Search or Search Hold mode. Press and hold for more than 2 seconds to unlock all groups and channels in a conventional system.</p>
 / 	<p> – Press and hold for more than 2 seconds to turn the scanner on or off. Press quickly to cancel a prompt.</p> <p>[Func] +  – Turns the display backlight on or off.</p>
1-9, 0/Race	<p>1-9 – Enters a frequency, enters quick key numbers, selects a custom search range in Custom Search mode, and selects systems by quick key in scan mode.</p> <p>0/Race – Selects the race quick key, enters a frequency, and selects a custom search range in Custom Search mode.</p> <p>[Func] + 1-9, 0/Race – Selects groups by quick key in scan mode.</p>
1/Pri	<p>1 – Enters a 1.</p> <p>[Func] + Pri – Selects the priority mode in scan hold mode.</p>

Setting Up Your Scanner

Key Name	Description
4/ <	<p>4 – Enters a 4.</p> <p>[Func] + < – Moves the active character to the left while editing data.</p>
6/ >	<p>6 – Enters a 6.</p> <p>[Func] + > – Moves the active character to the right while editing data.</p>
7/Rcl	<p>7 – Enters a 7.</p> <p>[Func] + Rcl – Displays a series of prompts to quickly select a specific channel in the scan hold mode.</p>
No/ • /Rev	<p>• – Enters a decimal point or dash in a frequency.</p> <p>At a prompt, answers “No.”</p> <p>[Func] + Rev – Monitors the currently-tuned frequency’s reverse frequency.</p>
E/Yes/Att	<p>E – Press to select input and menu items, to quickly edit a channel in Scan Hold Mode, and store a frequency into memory in Search Hold mode.</p> <p>At a prompt, answers “Yes.”</p> <p>[Func] + Att – Turns the scanner’s attenuator on or off for the current channel.</p>

Setting Up Your Scanner

A Look At The Display

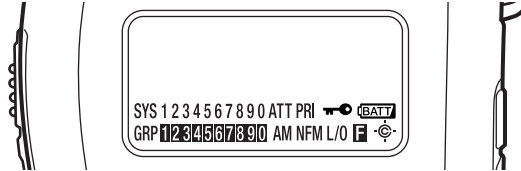

The display has indicators that show the scanner's current operating status. The display information helps you understand how your scanner operates. The dark area shown above the icons in this illustration is the text display area. Information about the currently tuned frequency appears here.

SYS - shows the currently activated system, appears with numbers (1-9). The currently active system indicator flashes.

ATT - appears when the attenuator feature is turned on.

PRI - appears when the priority feature is turned on (see "Priority Scan" on Page 39).

Key - appears when you lock the keypad (see "Locking/Unlocking the Keypad" on Page 39).

BATT - alerts you when the battery power gets low.

GRP - shows the currently activated group, appears with numbers (**0-9**). The currently active group indicator flashes.

AM/FM/NFM - appears to show the type of transmission.


L/O - appears when you manually select a channel you locked out or a skip frequency.

F - appears when you hold down **Func** to select a function.

Close Call - appears when the scanner is set to a Close Call feature mode (see "Using the Close Call Feature" on Page 72).


Setting Up Your Scanner

Using Menu

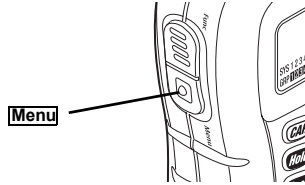


Press **Menu** on the left side of the scanner to enter the menu. See "Using the Menu" on Page 43 for more information about the scanner's menu options.

Using Func

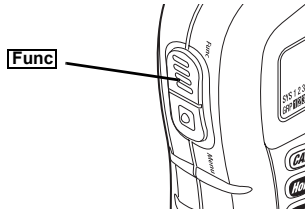



To select the function labeled below a key on the front of the scanner, hold down **Func** on the left side of the scanner, then press that key. To hold on a system while scanning or temporarily stop on a channel while searching, press **Func**. To select a system in Scan or Scan Hold mode, hold down **Func** and rotate the scroll control.

Using the Scroll Control

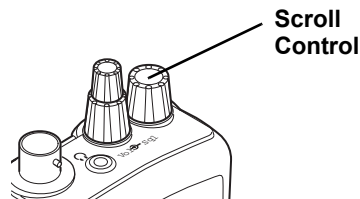

Turn the scroll control on top of the scanner to select a channel or frequency in Hold mode, select menu items in Menu mode, and to select a character while editing a name. You can also press the scroll control down instead of pressing **E** on the keypad to select an item.

 Setting Up Your Scanner

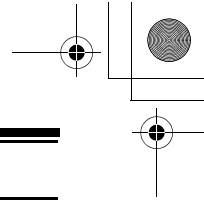

Basic Operation

Turning On the Scanner and Setting the Squelch

Note: Make sure the scanner's antenna is connected before you turn it on.

 
 
1. Turn **SqI** fully counterclockwise.
2. Press and hold **⏻** for about 2 seconds to turn on the scanner, then turn **Vol** clockwise until you hear a hissing sound.
3. Turn **SqI** clockwise until the hissing stops.

Scanning Systems




To begin scanning programmed systems, press **Scan**. The USC230 scans all unlocked systems in all activated quick-key groups.



Notes:

- If no systems are programmed, or all systems are locked out, an error message appears. Program a system or select a system to scan.
- When scanning multiple systems, the USC230 scans systems according to the assigned quick key. Then the race assigned to the next quick key (1, 2, 3, 4, etc.) is scanned. Systems not assigned to a quick key are scanned last. Within a quick key, systems are scanned in the order they were assigned.
- Within a system, channels are scanned according to the assigned channel group, with the same priority as described above for systems.
- The USC230 scans a system for the duration you set using the System Hold Time option (see "Setting the System Hold Time" on Page 55). All unlocked channels are scanned at least one time regardless of the hold time setting.



Basic Operation

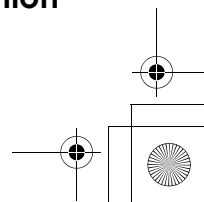  

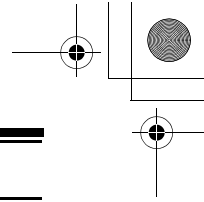 

Scanning Preprogrammed Races

Before You Get To The Track

Each driver's team has several different frequencies they can use during a race. These frequencies can change depending on local interference sources or other frequency issues. Your scanner is preprogrammed with all of the drivers and their possible frequencies that were known when it was manufactured.

Before you leave for the track, check the Internet to see if there are any frequency updates available for your race. You can save time at the track by setting up as much as possible before you leave.

When You Get To The Track

When you arrive at the race, get a list of the actual frequencies in use that race day. These are normally available for sale on the way into the facility. This list will show the actual frequency being used by each driver that day, as well as some other useful frequency information. Then, follow the steps in the sections below to adjust the scanner settings.

Selecting Driver Frequencies


 
 
Follow these steps to select the appropriate frequency for each driver.

1. Press **0** in Scan mode, rotate the scroll control to select the race, then press **E**.
2. Press **CAR**, enter the driver's number, then press **E**. Or press **CAR**, press **E**, rotate the scroll control to select the driver, then press **E**.
3. Rotate the scroll control to select the driver's frequency. If the driver's frequency is not listed, select **NEW FREQUENCY** then enter the correct frequency.
4. Press **Hold** to set the selection.

Holding on a Car

Follow these steps to hold on a car within the currently-selected racing system.

Basic Operation

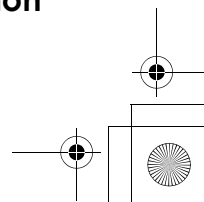

1. Press **0** in Scan mode, rotate the scroll control to select the race, then press **E**.
2. Press **CAR**, enter the driver's number, then press **CAR**. Or press **CAR** twice, rotate the scroll control to select the driver, then press **CAR**. You can select the car's first unlocked frequency.

Selecting Interference Eliminator Codes

Many drivers use special codes in their radios to prevent interference from other nearby radio systems. These codes are commonly referred to as CTCSS, DCS, or subaudible tones. You can use these same codes to prevent interference from other systems.

1. Press **0** in Scan mode, rotate the scroll control to select the race, then press **E**.
2. Press **CAR**, enter the driver's number, press **E** or **CAR**, press **E**, rotate the scroll control to select the driver, then press **E**.
3. Rotate the scroll control to select the driver's frequency, then press **E**.
4. Press **E** to enter the channel setting menu.
5. Rotate the scroll control to select *SET CTCSS/DCS*, then press **E**.
6. Rotate the scroll control to select *CTCSS* or *DCS*, then press **E**.
7. Rotate the scroll control to select the correct CTCSS/DCS value, then press **E**.
8. Press **Hold** to set the selection

Selecting Systems to Scan

To select systems to scan, press **Scan** then press the number button corresponding to the quick key assigned to the system or systems. To stop scanning the system(s), press **Scan** again.

Basic Operation

The SYS indicators on the display show the systems that are currently selected.

To select or lock out a system that is not assigned to a key, press and hold **FUNC** while you rotate the scroll control until the desired system is selected. Then, continue to hold **FUNC** and press **L/O** to either lock out or unlock the system.

Selecting System Channel Groups

Within a system, you can assign groups of channels to a group quick key (see "Setting the Group Quick Key" on Page 58).

Follow these steps to activate or deactivate a channel group within a system while scanning.

1. Press **FUNC** to hold on the system (or hold **FUNC** and rotate the scroll control to select the system).
2. Continue to hold **FUNC** and press the number key corresponding to the channel group you want to activate or deactivate.

Locking/Unlocking Systems

Follow these steps to lock out a system so that it does not scan even if its quick key is selected.

1. While holding down **FUNC**, rotate the scroll control to select the system.
2. Continue to hold down **FUNC** and press **L/O** to lock out the system.
3. Repeat Steps 1 and 2 to unlock a system you have previously locked.

Note: You can unlock only one race at a time. When you unlock a race, the scanner automatically locks the other races.

Basic Operation

Locking/Unlocking Channels

Follow these steps to lock out a channel so that it does not scan even if its system and channel group are selected.

1. While holding down **Func**, rotate the scroll control to select the system where the channel is stored.
2. Release **Func** then press **Hold** within 2 seconds to hold on the system.
3. Rotate the scroll control to select the channel you want to lock or unlock.
4. Press **L/O** to lock or unlock the channel.

You can also lock out an active channel by pressing **L/O** while the scanner is stopped on the channel.

Temporarily Holding On a System


 
To temporarily hold on a system, press and hold **Func**. To hold on a different system, continue to hold **Func** and rotate the scroll control to select the system. Normal scanning resumes 2 seconds after you release **Func**.

Holding On a Channel

To hold on a channel, press **Hold** while the channel is active. To select a different channel, rotate the scroll control. If you scroll past the beginning or end of the current system, the scanner selects channels in the previous or next system. To resume scanning, press **Scan**.

Note: You can select any channel (locked or unlocked).

Basic Operation

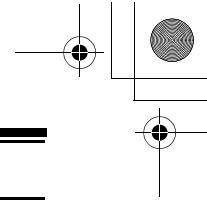

Quick-Storing Channels

1. Hold on an existing channel in any system.
2. Enter the frequency you want to store.
3. To quick-store the channel, press **E**. Otherwise, press **No**.

If you enter a frequency then press **E**, the scanner stores it in the *QCK SAVE GRP* group in a system called *QCK SAVE CNV SYS*. These are created if they do not exist. Then, the scanner prompts you to save other channel settings.

If you pressed **No** in Step 3, the scanner prompts you to select the system and the group where you want to store the frequency.


 
 
Quickly Recalling Channels

1. Press **Hold** to hold on any channel.
2. Press **[Func] + Rcl**. The scanner prompts you to select the system where the channel is stored.
3. Rotate the scroll control to select the system, then press **E**. The scanner prompts you to select the channel group where the channel is stored.
4. Rotate the scroll control to select the group, then press **E**.

If you selected a conventional system, the scanner prompts you to select a channel. Rotate the scroll control to select the channel, then press **E** to hold on that channel.

Otherwise, if you selected a racing system, the scanner automatically selects an active channel from the car group and holds on that group.

Basic Operation

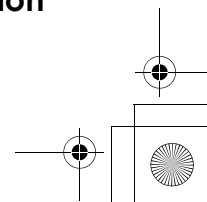

Other Settings

Displaying System Information

Viewing Memory Used

Menu → **SEE SCANNER INFO** → **E** → **% MEMORY USED** → **E**

A bar showing the percent of memory used appears. Press any key to return to the previous menu.

Viewing the Firmware Version

Menu → **SEE SCANNER INFO** → **E** → **FIRMWARE VERSION** → **E**

Press any key to return to the previous menu.

Adjusting the Key Beep

Menu → **ADJUST KEY BEEP** → **E**

- **OFF**: The scanner is silent when you press a key.
- **ON**: The scanner beeps when you press a key.

Locking/Unlocking the Keypad

Press and hold down **Func** then **CAR/☛** to lock or unlock the keypad.

Turning Power Save On or Off

Menu → **SET BATTERY SAVE** → **E**

- **ON**: The scanner goes into low-power mode when you monitor a conventional channel that has no activity.
- **OFF**: Power save is off.

Priority Scan

Menu → **SET PRIORITY** → **E**

Or, while holding on any channel, press **Func** + **1/Pri** to select one of these priority modes:

Other Settings

- **OFF:** Normal scanning
- **ON:** While scanning, the scanner interrupts every 2 seconds and checks the priority channels in each unlocked system. Priority channels in lower priority key numbered systems (starting from 1) have highest priority. *PRI* appears when you select this mode.
- **PLUS ON:** The scanner only scans priority channels in unlocked systems. *PRI* flashes when you select this mode.

Using the Backlight

Menu → **SET BACKLIGHT** → **E**

- **10 SEC** The backlight stays on for 10 seconds after you press **Func** + **☞**.
- **30 SEC** The backlight stays on for 30 seconds after you press **Func** + **☞**.
- **SQUELCH** The backlight turns on when the squelch opens then stays on for 5 seconds.
- **KEYPRESS** The backlight turns on when any key is pressed then stays on for 10 seconds.
- **INFINITE** The backlight turns on when you press **Func** + **☞** then stays on until you press **Func** + **☞** again.

Pressing any key while the backlight is on extends the backlight period. Pressing **Func** + **☞** while the backlight is on turns off the backlight.

Initializing the Scanner's Memory

Important! This deletes all preprogrammed data except for the band plan and custom search range.

To initialize the scanner's memory, turn off the scanner. Then, press **2, 9**, and **Hold** while turning it on.

Notes:

- If you initialize the scanner after changing the band plan, custom search range is adjusted to match to the band plan.

Other Settings

- If you want to program the deleted data again, use the PC Control and cloning options (see page 41).

Using the PC Control and Cloning Options

Use the included connection cable to connect your scanner to another USC230 scanner or your personal computer.


Menu → **↻ XFER INFORMATION** → **E**

- **PC CONTROL** Lets you set the baud rate your scanner uses to communicate with a personal computer. See “Connecting Your Scanner to a Personal Computer”.
- **WIRED CLONE** Lets you set your scanner as a master or a slave, letting you transfer programming to or from another USC230 scanner. See “Cloning the Scanner” on Page 42.

Connecting Your Scanner to a Personal Computer

To connect your scanner to a personal computer, you must first set the scanner's baud rate (the rate at which data is transferred between the scanner and the computer, in bits per second (bps)).

Hint: If you have trouble transferring data between your scanner and your computer, try setting the baud rate to a slower setting.

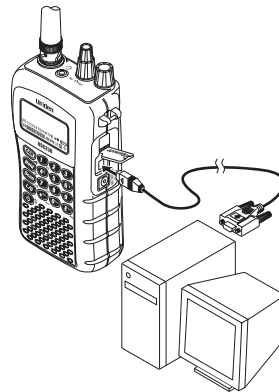


Menu → **↻ XFER INFORMATION**

→ **E** →

↻ PC CONTROL → **E** → **↻**

- **OFF** The baud rate is not set.
- **9600 BPS** The baud rate is set to 9600 bps.
- **19200 BPS** The baud rate is set to 19,200 bps.

 Other Settings




- **38400 BPS** The baud rate is set to 38,400 bps.
- **57600 BPS** The baud rate is set to 57,600 bps.

Cloning the Scanner


To clone (copy) data from one USC230 scanner to another USC230 scanner, you must first connect the scanners to each other using the included connection cables and a DB9 null modem adapter and DB9 gender changer (neither included), available at most computer stores. Then you must set one scanner as the master (source) and the other as the slave (destination).

Plug the smaller end of each of the included connection cables into **Remote** on the right side of each scanner. Then connect the other end of the cables together using the null modem connector and gender changer.

 Then set up both scanners.



 Menu → ↻ **XFER INFORMATION** → **E** →
 ↻ **WIRED CLONE** → **E** → ↻



- **MASTER** This will be the master (source) scanner.
- **SLAVE** This will be the slave (destination) scanner.

 
(Master scanner) **E** → **CLONE MASTER PRESS SCAN KEY**

(Slave scanner) **E** → **CLONE SLAVE PRESS SCAN KEY**

When you are ready to clone the scanner, press **Scan** on the slave scanner first, then on the master scanner. The master scanner checks the connection between the two scanners, then transfers its data to the slave scanner.

When the transfer is complete, **COMPLETE** appears on both scanners. If the transfer did not work, **ERROR** appears on the master scanner.

Other Settings



Using the Menu

The scanner's menu lets you select options that let you set up and use the scanner.

To use the menu, press **Menu** on the left side of the scanner. In most cases, the current menu position appears on the upper line of the menu. Menu items and a place to input information appear on the lower line of the menu. To select a menu item, turn the scroll control on top of the scanner clockwise or counterclockwise. When the menu item you want to select appears, press **E** or press the scroll control down to select it. To back up a level or return to the previous level, press **Menu**. To exit the menu mode, press **⏻**.

This table shows the available menu options and where you can find more information about how to use them.

Menu Item	Lets You ...	See ...
--M E N U-- PROGRAM SYSTEM	Set up the scanner's scan options.	"Programming Radio Systems" on Page 45.
--M E N U-- SRCH/CLOCALL OPT	Set up the scanner's Close Call option.	"Using the Close Call Feature" on Page 72.
--M E N U-- SEARCH FOR ...	Set up the scanner's search option.	"Searching and Storing" on Page 66.
--M E N U-- CLOSE CALL	Set up the scanner's Close Call operation.	"Setting Close Call Options" on Page 73.

Using the Menu

Menu Item	Lets You ...	See ...
<p>-- M E N U -- SET PRIORITY</p>	Set up priority options.	"Priority Scan" on Page 39.
<p>-- M E N U -- SET BACKLIGHT</p>	Set up backlight options.	"Using the Backlight" on Page 40.
<p>-- M E N U -- ADJUST KEY BEEP</p>	Set up key beep options.	"Adjusting the Key Beep" on Page 39.
<p>-- M E N U -- SET BATTERY SAVE</p>	Set up battery save options.	"Turning Power Save On or Off" on Page 39.
<p>-- M E N U -- SEE SCANNER INFO</p>	View information about your scanner.	"Displaying System Information" on Page 39.
<p>-- M E N U -- XFER INFORMATION</p>	Transfer information between it and your personal computer.	"Installing the Demo Software" on Page 27 and "Using the PC Control and Cloning Options" on Page 41.

Using the Menu

Programming Radio Systems

To edit an existing system, use the menu to navigate to the system setting you want to change. This section assumes you are programming a new system.

Programming radio systems is completed in two major steps. Don't skip either step!

1. Plan the system.
2. Program the system into your scanner according to the plan you prepared in Step 1.

To make planning easier, planning worksheets are included in the back of this manual for each system type. Copy the worksheets, then use them to plan out how you will program the scanner.

Important! Before you start programming your scanner, make sure the batteries are fresh or fully charged. If the scanner loses power while you program it, its memory might be corrupted which will require you to reinitialize it (see "Initializing the Scanner's Memory" on Page 40). All information programmed in the scanner, including preprogrammed systems, might be lost.

General Notes

- You can store up to 200 systems.
- The number of system channels you can have is limited only by the amount of scanner memory remaining.
- You can store up to 20 channel groups per conventional system.
- Total channels are limited to about 2500.
- Channels that have text tags use more memory than those that do not. If you use a text tag for every channel, total channels are reduced from 2500 (1600 is typical).

Quickly Programming Racing Systems

You can use the menu system to program a racing system (see "Manually Programming Racing Systems" on

Programming Radio Systems

Page 48). Or you can follow the onscreen prompts as described in this section to quickly program your scanner. These prompts are designed to help you quickly enter a new race from a frequency list purchased at the track (if the system is not already preprogrammed into your scanner). When you complete Steps 5 and 6, almost all cars will use the default settings for the other steps.

1. While scanning, press **0**. Then rotate the scroll control to select **NEW RACE**, then press **E**.

SELECT RACE
NEW RACE

2. Enter the name of the race, then press **E**.

NAME THE RACE
-
SYS
GRP

3. Enter the first car number (up to 3 digits), then press **E**.

ENTER CAR NO
-
SYS
GRP

4. Enter the first driver name (up to 12 characters), then press **E**.

ENTER DRIVER
-
SYS
GRP

5. Enter the driver's frequency, then press **E**.

ENTER FREQUENCY
-
SYS
GRP

6. Set the CTCSS/DCS code, then press **E**

SET CTCSS/DCS
OFF

7. Press **E** to enter advanced options (Steps 8-11) or press
 - to skip to Step 12.

ADVANCED OPTIONS
YES="E" / NO="."

Programming Radio Systems

- | | |
|--|--|
| <p>8. Set the modulation type (<i>AUTO</i> is almost always the correct choice), then press E</p> | <p><i>SET MODULATION</i>
<i>AUTO</i></p> |
| <p>9. Set the attenuator (turn it on to eliminate interference from other sources), then press E</p> | <p><i>SET ATTENUATOR</i>
<i>OFF</i></p> |
| <p>10. Set the channel priority (turn it on if you want the scanner to interrupt operation every few seconds to check for transmissions by this driver), then press E</p> | <p><i>SET PRIORITY</i>
<i>OFF</i></p> |
| <p>11. Set alert (turn it on if you want the scanner to sound a special alert when this car transmits), then press E</p> | <p><i>SET ALERT</i>
<i>OFF</i></p> |
| <p>12. If you have another frequency to enter for this driver, press E then repeat from Step 5. Otherwise, press No</p> | <p><i>ANOTHER FREQ FOR THIS DRIVER?</i></p> |
| <p>13. To enter another car in this race, press E then repeat from Step 3. Otherwise, press No</p> | <p><i>ANOTHER CAR FOR THIS RACE?</i></p> |
| <p>14. When you finish, press Scan to begin scanning the race</p> | <p><i>COMPLETE</i>
<i>PRESS SCAN KEY</i></p> |

Programming Radio Systems

Manually Programming Racing Systems

Menu → PROGRAM SYSTEM → E
 ↻ NEW SYSTEM → E → ↻ RACING → E →
 CONFIRM? → E

The scanner creates an empty racing system, with a default name of *SYSTEM NNN R*. *NNN* increments as you add new systems. *R* indicates that this is a racing system.

Refer to the appropriate section to set system-wide options:

- See “Editing the System Name” on Page 54
- See “Setting Group Lockout” on Page 55
- See “Setting the System Hold Time” on Page 55
- See “Setting the Channel Delay Time” on Page 56
- See “Setting Data Skip” on Page 56
- See “Editing the Car” on Page 48
- See “Deleting Systems” on Page 57
- See “Copying Systems” on Page 57

Editing the Car

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E

Follow these steps to enter the car options.

Rotate the scroll control to select one of the following options. Then refer to the appropriate section to set or change a car setting.

- See “Entering/Editing a Car Number” on Page 49.
- See “Editing a Driver” on Page 49.
- See “Setting a Car’s Quick Key” on Page 50.
- See “Editing a Car’s Channel” on Page 50.
- See “Deleting a Car” on Page 50.
- See “Setting Lockout On A Car” on Page 51.

Programming Radio Systems

Entering/Editing a Car Number

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

EDIT CAR NO → E

1. Rotate the scroll control to select the first digit, then press **0-9** to enter the correct digit.
2. Repeat Step 1 to enter or correct the second and third digits if necessary, Then press **E** or press down on the scroll control to accept the setting.

Hints:

- Each car number can be up to three digits.
- Press **•** to delete the entire car number.

Editing a Driver

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

EDIT DRIVER → E

1. Rotate the scroll control to select the first letter.
2. Press and hold down **Func** then rotate the scroll control once to select the next letter.
3. Repeat Steps 1 and 2 until you have entered the driver's name. Then press **E** or press down on the scroll control to accept the setting.

Hints:

- Each driver's name can be up to 12 characters. Abbreviate as necessary to fit.
- Press **•** twice to delete the current character.
- Press **•** three times to clear the entire driver name.

Programming Radio Systems

Setting a Car's Quick Key

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

SET QUICK KEY → E

After selecting this option, press **0-9** or rotate the scroll control to assign the car to a quick key or press **No** to assign the car to no quick key, then press **E**.

Hints:

- You can assign as many cars to the same quick key as you want.
- To be scanned, a car's quick key must be activated and the system must be unlocked.

Editing a Car's Channel

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

EDIT CHANNEL → E

Deleting a Car

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

DELETE CAR → E

The scanner prompts you to confirm deletion. To confirm, press **E**. To cancel, press **No**.

Note: Deleted cars cannot be restored. You must re-enter them.

Programming Radio Systems

Setting Lockout On A Car

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT CAR → E ↻

Select the car → E ↻

SET LOCKOUT → E

This setting determines whether the scanner will scan this car when it is enabled. Select your setting, then press **E**.

LOCKOUT - the car is not scanned.

UNLOCKED - the car is scanned.

Note: The default setting is Unlocked.

Programming Conventional Systems

Menu → PROGRAM SYSTEM → E ↻

NEW SYSTEM → E ↻ → CONVENTIONAL →

E → CONFIRM? → E

The scanner creates an empty conventional system, with a default name of **SYSTEM NNN C**. **NNN** increments as you add new systems. **C** indicates that this is a conventional system.

Refer to the appropriate section to set system-wide options:

- See “Editing the System Name” on Page 54
- See “Editing the System Quick Key (Conventional Systems Only)” on Page 54
- See “Setting Group Lockout” on Page 55
- See “Setting the System Hold Time” on Page 55
- See “Setting the Channel Delay Time” on Page 56
- See “Setting Data Skip” on Page 56
- See “Deleting Systems” on Page 57
- See “Copying Systems” on Page 57
- See “Entering/Editing Conventional Channel Groups” on Page 52

Programming Radio Systems

Entering/Editing Conventional Channel Groups

To enter channels in a conventional system, first set up a channel group (or groups) to hold the channels. Then, enter the channel and channel parameters in the group(s).

Setting Up a Channel Group

↻ → *EDIT GROUP* → **E** →

↻ → *NEW GROUP* → **E**

The scanner creates a group with a default name of *GROUP NN. NN* increments by one for each new group you create within a system.

Refer to the appropriate section to set group-wide options:

- See “Entering/Editing the Group Name” on Page 57
- See “Setting the Group Quick Key” on Page 58
- See “Deleting Groups” on Page 59
- See “Setting Group Lockout” on Page 55
- See “Entering/Editing Conventional Channels” on Page 52

Entering/Editing Conventional Channels


 
↻ → *EDIT CHANNEL* → **E** →

↻ → *NEW CHANNEL* → **E** → *INPUT FREQUENCY*

Enter the frequency for the channel, then press **E**. Then, refer to the appropriate section to change a channel setting:



- See “Editing the Channel Name (Conventional Systems Only)” on Page 59
- See “Setting Channel Priority” on Page 60
- See “Setting Channel Alert” on Page 61
- See “Deleting Channels” on Page 64
- See “Copying/Pasting Channels” on Page 65

Programming Radio Systems


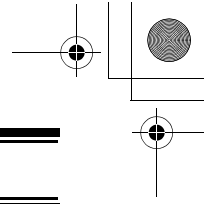



To program another channel within the same group, press **Menu**, then repeat the above.

  To create another channel group and enter more channels, press **Menu** four times, then proceed from "Setting Up a Channel Group" on Page 52.



Programming Radio Systems

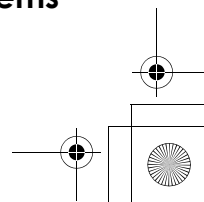  

Programming/Editing Optional Settings

This section details the instructions for each of the optional programming steps referred to in "Programming Radio Systems" on Page 45. Use the instructions in the appropriate section to enter or edit a setting.

System-Level Settings

These settings apply to the entire system.

Editing the System Name

Menu → PROGRAM SYSTEM → E ↻

Select the system → E

EDIT NAME → E

Follow these steps to enter/edit the system name.

1. Rotate the scroll control to select the first letter.
2. Press and hold down **Func** then rotate the scroll control once to select the next letter.
3. Repeat Steps 1 and 2 until you have entered the system name. Then press **E** or press down on the scroll control to accept the setting.

Hints:

- Each system name can be up to 16 characters. Abbreviate as necessary to fit.
- The default system names include **C** (conventional) or **R** (race) in the 16th position to indicate the system type:
- Press **•** twice to delete the current character.
- Press **•** three times to clear the entire alpha tag.

Editing the System Quick Key (Conventional Systems Only)

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT SYS OPTION → E ↻

SET QUICK KEY → E

Programming/Editing Optional Settings

After selecting this option, press **1-9** to assign the system to a quick key or press **No** to assign the system to no quick key, then press **E**.

Hints:

- You can assign as many systems to the same quick key as you want.
- To be scanned, a system's quick key must be activated and the system must be unlocked.

Setting Group Lockout

[Menu] → PROGRAM SYSTEM → **E** ↻
 Select the system → **E** ↻
 EDIT SYS OPTION → **E** ↻
 SET LOCKOUT → **E**

This setting controls whether the system is scanned when its quick key is enabled. Rotate the scroll control to select your setting, then press **E**.

LOCKED - the system is not scanned

UNLOCKED - the system is scanned

Note: You can also lock or unlock a system by pressing **[Func]**, selecting the system, then pressing **[Func]** + **L/O**.

Setting the System Hold Time

[Menu] → PROGRAM SYSTEM → **E** ↻
 Select the system → **E** ↻
 EDIT SYS OPTION → **E** ↻
 SET HOLD TIME → **E**

This setting controls how many seconds the scanner scans a system before moving to the next unlocked system. Enter a value from 0-255, then press **E** to save the setting.

Programming/Editing Optional Settings

Notes:

- If you select 0, the scanner stays on the system for a minimal time (only long enough to check current system activity).
- The default setting is 2 seconds for each system.
- All unlocked channels will be scanned at least once regardless of this setting.
- The scanner moves to the next system after the hold time expires, any current transmission ends, and the channel delay time expires.

Setting the Channel Delay Time

Menu → PROGRAM SYSTEM → E ↻
 Select the system → E ↻
 EDIT SYS OPTION → E ↻
 SET DELAY TIME → E

This setting controls how many seconds the scanner waits after a transmission ends before resuming scanning. Select a value from 1-5 or OFF, then press E.

Notes:

- The default setting is 2 seconds for each system.
- This setting applies to all channels within the system.

Setting Data Skip

Menu → PROGRAM SYSTEM → E ↻
 Select the system → E ↻
 EDIT SYS OPTION → E ↻
 SET DATA SKIP → E

This setting controls how the scanner behaves when it stops on a channel that has a data signal.

ON - the scanner stops briefly on the channel, but then immediately resumes scanning automatically. Press E to select.

OFF - the scanner remains on the channel until the transmission stops. Press E to select.

Programming/Editing Optional Settings

Notes:

- This setting is ignored for AM channels.
- The default setting for this feature is *ON*.

Deleting Systems

Menu → *PROGRAM SYSTEM* → **E** ↻
Select the system → **E** ↻
DELETE SYSTEM → **E**

The scanner prompts you to confirm deletion. To confirm, press **E**. To cancel, press **No**.

Notes:

- Deleted systems cannot be restored. You must re-enter them.
- You cannot restore preloaded systems.

Copying Systems

To copy a system including all settings, groups, and channels:

Menu → *PROGRAM SYSTEM* → **E** ↻
Select the system → **E** ↻
COPY SYSTEM → **E** → *NEW SYS NAME*

Enter a name for the copied system, then press **E**.

Group-Level Settings

The settings in this section apply to all of the channels stored in the current group.

Entering/Editing the Group Name

Menu → *PROGRAM SYSTEM* → **E** ↻
Select the system → **E** ↻
EDIT GROUP → **E** ↻
Select the group → **E** ↻
EDIT NAME → **E**

Programming/Editing Optional Settings

Follow these steps to enter/edit the group name.

1. Rotate the scroll control to select the first letter.
2. Press and hold down **[Func]** then rotate the scroll control once to select the next letter.
3. Repeat Steps 1 and 2 until you have entered the group name. Then press **E** or press down on the scroll control to accept the setting.

Hints:

- Each group name can be up to 16 characters. Abbreviate as necessary to fit.
- The group and system name alternate in the top line of the display when the scanner stops on a channel.
- Press **•** twice to delete the current character.
- Press **•** three times to clear the entire alpha tag.

Setting the Group Quick Key

[Menu] → PROGRAM SYSTEM → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Select the group → **E** ↻

SET QUICK KEY → **E**

After selecting this option, press **0-9** to assign the group to a quick key or press **No** to assign the system to no quick key, then press **E**.

Hints:

- You can assign as many groups to the same quick key as you want.
- To be scanned, a group's quick key must be activated.

Setting Group Lockout

[Menu] → PROGRAM SYSTEM → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Programming/Editing Optional Settings

Select the group → **E** ↻
SET LOCKOUT → **E**

This setting determines whether the scanner will scan this group when it is enabled. Select your setting, then press **E**.

LOCKOUT - the group is not scanned.
UNLOCKED - the group is scanned.

Note: The default setting is Unlocked.

Deleting Groups

Menu → **PROGRAM SYSTEM** → **E** ↻
Select the system → **E** ↻
EDIT GROUP → **E** ↻
Select the group → **E** ↻
DELETE GROUP → **E**

The scanner prompts you to confirm deletion. To confirm, press **E**. To cancel, press **No**.

Note: Deleted groups cannot be restored. You must re-enter them.

Channel-Level Settings

These settings affect only the channel you are programming.

Editing the Channel Name (Conventional Systems Only)

Menu → **PROGRAM SYSTEM** → **E** ↻
Select the system → **E** ↻
EDIT GROUP → **E** ↻
Select the group → **E** ↻
EDIT CHANNEL → **E** ↻
Select the channel → **E**
EDIT NAME → **E**

Follow these steps to enter/edit the channel name.

1. Rotate the scroll control to select the first letter.

Programming/Editing Optional Settings

2. Press and hold down **Func** then rotate the scroll control once to select the next letter.
3. Repeat Steps 1 and 2 until you have entered the channel name. Then press **E** or press down on the scroll control to accept the setting.

Hints:

- Each channel name can be up to 16 characters. Abbreviate as necessary to fit.
- The channel name appears on the second line of the display when the scanner stops on a channel.
- If you do not enter a channel name, the scanner displays the frequency when it stops on a channel.
- Press **•** twice to delete the current character.
- Press **•** three times to clear the entire alpha tag.
- Channel names take up extra memory. To maximize channels, use channel names only where necessary.

Setting Channel Priority

Menu → PROGRAM SYSTEM → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Select the group → **E** ↻

EDIT CHANNEL → **E** ↻

Select the channel → **E** ↻

SET PRIORITY → **E**

This setting controls whether the scanner treats the channel as a priority channel while scanning. Select your setting, then press **E**.

ON - when you turn on the Priority feature, the channel will be scanned every 2 seconds. **P** appears at the end of the default name.

OFF - the channel will not be treated with priority.

Note: The default setting is **OFF**.

Programming/Editing Optional Settings

Setting Channel Alert

Menu → PROGRAM SYSTEM → E ↻
Select the system → E ↻
EDIT GROUP → E ↻
Select the group → E ↻
EDIT CHANNEL → E ↻
Select the channel → E ↻
SET ALERT → E

This setting controls whether the scanner will alert you when the channel becomes active. Select your setting, then press **E**.

ON - the scanner beeps when the channel becomes active.

OFF - no alert sounds.

Note: The default setting is **OFF**.

Setting CTCSS/DCS

Menu → PROGRAM SYSTEM → E ↻
Select the system → E ↻
EDIT GROUP → E ↻
Select the group → E ↻
EDIT CHANNEL → E ↻
Select the channel → E ↻
SET CTCSS/DCS → E

This setting controls how a subaudible CTCSS or DCS is used for the channel. Select your setting, then press **E**.

OFF - any signal opens squelch.

SEARCH - the scanner searches for and displays any CTCSS or DCS tone that accompanies the transmission.

CTCSS - the scanner only opens squelch if the CTCSS tone you select is also present with the signal. The scanner then prompts you to scroll to the desired tone.

Programming/Editing Optional Settings

DCS - the scanner only opens squelch if the DCS tone you select is also present with the signal. The scanner then prompts you to scroll to the desired tone.

SET LOCKOUT - the scanner does not stop on the channel if the tone you select is present. The scanner prompts you to select a CTCSS or DCS tone.

Notes:

- The default setting is **OFF**.
- See "What is CTCSS/DCS?" on Page 16 for a complete list of CTCSS and DCS tones.

Setting Channel Modulation

Menu → **PROGRAM SYSTEM** → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Select the group → **E** ↻

EDIT CHANNEL → **E** ↻

Select the channel → **E** ↻

SET MODULATION → **E**

This setting controls the demodulation method used for the channel. Select your setting, then press **E**.

AUTO - the scanner uses the default modulation for the frequency (see the table at the front of the manual).

AM - the scanner uses AM (amplitude modulation) for the frequency.

FM - the scanner uses FM (frequency modulation) for the frequency.

NFM - the scanner uses narrowband FM for the frequency.

Note: The default setting is **AUTO**.

Programming/Editing Optional Settings

Setting Channel Attenuation

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT GROUP → E ↻

Select the group → E ↻

EDIT CHANNEL → E ↻

Select the channel → E ↻

SET ATTENUATOR → E

This setting controls whether the scanner attenuates signals on this channel. Select your setting, then press **E**.

ON - the channel is attenuated by about 18 dB.

OFF - the channel is not attenuated.

Notes:

- The default setting is **OFF**.
- You can also toggle this setting by holding on the channel and pressing **Func** and **E**.

Setting the Frequency Step

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT GROUP → E ↻

Select the group → E ↻

EDIT CHANNEL → E ↻

Select the channel → E ↻

SET STEP → E

This setting selects the frequency step used for setting the channel's. Select your setting, then press **E**.

AUTO - the step is based on the band (see the table at the front of the manual)

5.0 KHZ, 6.25 KHZ, 7.5 KHZ, 8.33 KHZ, 10.0 KHZ, 12.5 KHZ, 15.0 KHZ, 20.0 KHZ, 25.0 KHZ, 50.0 KHZ, 100.0 KHZ

- The scanner uses the selected step.

Note: The scanner defaults to **AUTO**.

Programming/Editing Optional Settings

Setting Channel Lockout

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT GROUP → E ↻

Select the group → E ↻

EDIT CHANNEL → E ↻

Select the channel → E ↻

SET LOCKOUT → E

This setting determines whether the scanner will scan this channel when its system and group are enabled. Select your setting, then press **E**.

LOCKOUT - the channel is not scanned.

UNLOCKED - the channel is scanned.

Notes:

- The default setting is Unlocked.
- You can also lock or unlock a channel by selecting it while scanning or holding, then pressing **L/O**. See "Basic Operation" on Page 33.

Deleting Channels

Menu → PROGRAM SYSTEM → E ↻

Select the system → E ↻

EDIT GROUP → E ↻

Select the group → E ↻

EDIT CHANNEL → E ↻

Select the channel → E ↻

DELETE CHANNEL → E

The scanner prompts you to confirm deletion. To confirm, press **E**. To cancel, press **No**.

Note: Deleted channels cannot be restored. You must re-enter them.

Programming/Editing Optional Settings

Copying/Pasting Channels

To copy a channel including all settings:

Menu → *PROGRAM SYSTEM* → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Select the group → **E**

EDIT CHANNEL → **E** ↻

Select the channel → **E**

COPY CHANNEL → **E**

The scanner copies the channel into a copy buffer.

To paste the channel into the same or another system:

Menu → *PROGRAM SYSTEM* → **E** ↻

Select the system → **E** ↻

EDIT GROUP → **E** ↻

Select the group → **E**

EDIT CHANNEL → **E** ↻

PASTE CHANNEL → **E**

Then, if necessary, edit the channel you copied to give it a unique name and other settings.

Note: The paste option appears only if you have previously copied a channel from a system of the same type you are currently editing.

Programming/Editing Optional Settings

Searching and Storing

Service Search

The Air Service Search feature allows you to scroll through the preprogrammed services.

1. Press **Menu**.
2. Turn the scroll control until *SEARCH FOR...* appears, then press **E**.
3. Turn the scroll control until *SERVICE SEARCH* appears, then press **E**.
The scanner starts Air Service Search.

Changing the step of Air Band

1. Press **Menu**.
2. Turn the scroll control until *SRCH/CLOCALL OPT* appears, then press **E**.
3. Turn the scroll control until *AIR BAND STEP* appears, then press **E**.
4. Turn the scroll control, then press **E** to select *12.5 KHZ* or *8.33 KHZ*.

Quick Search

Quick Search lets you search from the currently-tuned frequency.

Press **Func** and **Scan/Srch** to start quick search. *QUICK SEARCH?* appears. *QUICK SEARCH HOLD* appears if you press **Hold**. Press **E** to start quick search or **No** to go to the search menu.

Searching and Storing

CTCSS/DCS Search

CTCSS/DCS Search lets you search for CTCSS or DCS tones when it finds an active frequency in search and Close Call modes. You can identify up to 50 CTCSS tones and 104 DCS codes.

Turning this option on lets the scanner search for CTCSS/DCS tones. If the scanner detects the tone, it displays the tone's frequency and DCS code.

1. Press **Menu** then turn the scroll control until **SRCH/CLOCALL OPT** appears. Then press **E**. One of the search feature options appear.
2. Turn the scroll control until **CTCSS/DCS SEARCH** appears, then press **E** to select it.
3. Turn the scroll control until **ON** appears to turn on CTCSS/DCS search or until **OFF** appears to turn it off, then press **E**.

Custom Search

Custom Search lets you program and search 10 custom search ranges. You can search any of these ranges simultaneously and select each custom search range you set. During custom search, the scanner searches starting with the lowest frequency in the search range you select to the highest frequency in the range.

Notes:

- Search ranges are preset. See "Editing a Custom Search Range" on Page 70 to change the range.
 - You cannot turn off all custom search ranges.
1. Press **Menu** then turn the scroll control until **SEARCH FOR ...** appears, then press **E**. Or, press **Func** + **Scan/Srch**, then select **No**. One of the search feature options appear.

Searching and Storing

2. Turn the scroll control until **CUSTOM SEARCH** appears, then press **E** to select it. The scanner starts custom search of the custom search range you selected, stopping on any transmission it finds and displaying the frequency. Turn the scroll control to change the search direction. An arrow appears, showing the current search direction.

To turn search ranges on or off, press **0** and **1-9**.
 To hold searching, press **Hold**. To resume searching, press **[Func]** then press **Scan/Srch** or **Hold** again.

To lock out a frequency found while searching, press **L/O**. **SEARCH LOCKOUT?** appears. Press **E** to lock out the frequency or **No** to continue monitoring.

If you turn off the active custom search range, the scanner skips to the next custom search range and continues searching.

Note: If all frequencies in all active custom search ranges are locked out, **ALL LOCKED!** appears and the scanner does not stop.

Preset Custom Search Range

The preset frequency ranges are as follows:

BAND PLAN 1

Custom	Frequency (MHz)		
Custom 1	25.0000	-	87.2875
Custom 2	108.0000	-	136.9875
Custom 3	137.0000	-	173.9875
Custom 4	216.0000	-	224.9950
Custom 5	400.0000	-	405.9875
Custom 6	406.0000	-	439.9937
Custom 7	440.0000	-	469.9900
Custom 8	470.0000	-	512.0000
Custom 9	806.0000	-	960.0000
Custom 10	1240.0000	-	1300.0000

Searching and Storing

BAND PLAN 2

Custom	Frequency (MHz)		
Custom 1	25.0000	-	87.2950
Custom 2	108.0000	-	136.9875
Custom 3	137.0000	-	173.9875
Custom 4	216.0000	-	224.9950
Custom 5	400.0000	-	405.9875
Custom 6	406.0000	-	439.9937
Custom 7	440.0000	-	469.9900
Custom 8	470.0000	-	512.0000
Custom 9	806.0000	-	960.0000
Custom 10	1240.0000	-	1300.0000

BAND PLAN 3

Custom	Frequency (MHz)		
Custom 1	25.0000	-	87.2937
Custom 2	108.0000	-	136.9875
Custom 3	137.0000	-	173.9937
Custom 4	216.0000	-	224.9950
Custom 5	400.0000	-	405.9875
Custom 6	406.0000	-	439.9937
Custom 7	440.0000	-	469.9937
Custom 8	470.0000	-	512.0000
Custom 9	806.0000	-	960.0000
Custom 10	1240.0000	-	1300.0000

Note: If you want to adjust the preset custom search range to match to the band plan you have selected, initialize the scanner. However, initializing the scanner deletes all the preprogrammed data other than the band plan. (See page 40)

Searching and Storing

Editing a Custom Search Range

You can edit up to 10 custom search ranges. The names of the custom search ranges appear on the display. The default custom search range names appear as *CUSTOM 1*, *CUSTOM 2*, and so on.

1. Press **Menu** then turn the scroll control until *SEARCH FOR ...* appears. Then press **E**. Or press **Func** and **Srch**, then **No**. One of the search feature options appear.
2. Turn the scroll control until *EDIT CUSTOM* appears, then press **E** to select it.
3. Turn the scroll control until the name of the custom search range you want to edit appears, then press **E** to select it. The following options appear as you turn the scroll control.

EDIT NAME - lets you edit the custom search range's name

EDIT SRCH LIMIT - lets you view and select the frequency ranges to search. The scanner prompts you to enter the upper and lower search limits.

SET DELAY TIME - lets you set the amount of time the scanner will delay before continuing to search after a transmission ends

SET MODULATION - lets you set the custom search range's modulation type

SET ATTENUATOR - lets you set whether the scanner will attenuate reception by 18dB during search

SET DATA SKIP - lets you set whether the scanner will skip data transmissions during search

SET STEP - lets you set the custom search range's step (the gap between frequencies)

4. Select the option you want to change for the custom search range you selected, then press **E**.

Auto Search and Store

Your scanner's Auto Store feature lets you search for new frequencies in custom search ranges or within a service search range.

Searching and Storing

Selecting a System

To store frequencies you find during Auto Store, you must first select a system where the frequencies will be stored.

1. Press **Menu** then turn the scroll control until **SEARCH FOR ...** appears. Then press **E**. One of the search feature options appear.
2. Turn the scroll control until **SEARCH AND STORE** appears, then press **E** to select it.
3. Turn the scroll control until the system where you want to store the frequencies appears, then press **E** to select it.

Note: You cannot select a racing system.

If no systems are programmed, or all systems are locked out, **NO SYSTEM STORED** appears.

Storing a System

 
 
You can store frequencies into the system you selected in "Selecting a System". Otherwise, the scanner stores frequencies in a new group it creates.

1. Follow Steps 1-3 under "Selecting a System". A search option appears.
2. Turn the scroll control until the type of search you want appears, then press **E** to select it. A search band appears.

If all systems are locked out, **ALL LOCKED!** appears and the scanner does not store any frequencies.



When you select a search range, the scanner looks for active frequencies within that range and **SEARCH AND STORE** appears on the display's lower line and the system name and search range name appear on the display's upper line. When the scanner finds an active transmission, it checks to see if the frequency has already been stored in the system. If the frequency has already been stored, the scanner continues to search. If the frequency has not been stored, it stores the frequency into a group named **FOUND CHANNELS**, then resumes searching. The scanner creates this group if it does not already exist.

Searching and Storing



 
 
Using the Close Call Feature

Your scanner's Close Call™ feature lets you set the scanner so it detects, displays the frequency of, and lets you hear a nearby strong radio transmission. You can set the scanner so the Close Call feature works "in the background" while you are scanning other frequencies, turn off normal scanning while the Close Call feature is working, or turn off the Close Call feature and use the scanner normally. You can set the scanner so it alerts you when the Close Call feature finds a frequency. You can also set the frequency band where you want the scanner to look for transmissions.




To turn Close Call detection on (CC DND, CC PRI) or Off, press **[Func]** then . When the feature is on,  appears on the display and normal operation is briefly interrupted about every 2 seconds.

Notes:

- CC DND (Do Not Disturb) - The scanner checks for a Close Call hit every 2 seconds only if the scanner is not currently stopped on a transmission. If the scanner is on a transmission the scanner waits until the signal ends to perform a Close Call check. This prevents breaks in audio during Close Call checks.
- CC PRI - Close Call works even if there is a transmission. Checks for a Close Call hit every 2 seconds.
- The Close Call feature works well for locating the source of strong local transmissions such as mobile and handheld two-way radios in areas with no other strong transmission sources. Several factors affect Close Call performance, however. Performance is increased with higher transmit power, receive antenna tuned to the target band, and a low background RF level. Other than the antenna, you have no control over these factors, but they explain why performance might vary by both location and time.
- The Close Call feature cannot detect satellite dishes or any transmitter with a frequency above or below the frequency ranges listed under "Setting Close Call Options" on Page 73.



Using the Close Call Feature

   

- The Close Call feature works better with some types of transmissions than others. It might not correctly display frequency information for transmitters using a highly directional antenna (such as an amateur radio beam antenna) or if there are many transmitters operating at the same time in the same area.

Setting Close Call Options

1. Press **Menu** then turn the scroll control until **CLOSE CALL** appears. Then press **E**. Close Call feature options appear.
2. Turn the scroll control to select an option.
 - **CLOSE CALL ONLY**: Lets you set the scanner only for Close Call searching. The scanner does not scan frequencies or channels when this option is turned on. To select this option, press **E**.
 - **CC AUTO STORE**: Lets you select whether the scanner automatically stores Close Call hits into channels. If you turn this option on, the scanner starts Close Call mode and stores any Close Call hits, up to the maximum you specified in the Max Auto Store setting. If the scanner stores more hits than this setting, it stops Autostore operation. Turn the scroll control to display an option, then press **E**.
 - **SET CC MODE**: Lets you select the Close Call mode. If you turn this option on (CC DND, CC PRI), the scanner sets itself to its Close Call settings about once every 2 seconds. Turn the scroll control to display an option, then press **E**. You can also toggle this setting by pressing **Func** then \odot .


 
Notes:

- CC DND - Close Call does not work while monitoring a transmission.
- CC PRI - Close Call works even if there is a transmission.

Using the Close Call Feature

- **SET CC OVERRIDE:** Lets you select how the Close Call feature works with other scanning activities. If you turn this option off, when the scanner detects a Close Call signal, **CC FOUND!** and **E TO LISTEN** appear for about 3 seconds. Press **E** when this appears to jump to and hold on the frequency.
If this option is turned on, the scanner overrides the current channel and goes to the Close Call hit. The scanner displays **CC FOUND! PRESS ANY KEY**. When you press a key, the frequency is displayed. Turn the scroll control to display an option, then press **E**.
- **SET CC ALERT:** Lets you select how the scanner alerts you when it receives a Close Call signal. You can select any of the following options.
BEEP+LIGHT (the scanner beeps and the backlight turns on when it receives a Close Call signal)
LIGHT (the backlight turns on when it receives a Close Call signal)
BEEP (the scanner beeps when it receives a Close Call signal)
NONE (the scanner does not alert)
Turn the scroll control to display an option, then press **E**.
- **SET CC BANDS:** Lets you select the Close Call band settings. You can turn the following bands on or off.
VHF LOW (25.0000 - 87.2875 MHz)
AIR BAND (108.0000 - 136.9916 MHz)
VHF HIGH (137.0000 - 224.9950 MHz, except for 174.0000 - 215.9999 MHz)
UHF (400.0000 - 512.0000 MHz)
800MHZ+ (806.0000 - 960.0000 MHz)
Use the scroll control to select a band, press **E**, then use the scroll control to select **ON** or **OFF** and press **E**. Turning off undesired bands speeds up Close Call operation. (The Close Call feature does not work for frequencies greater than 960 MHz.)



Using the Close Call Feature

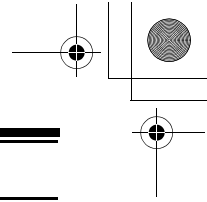




Close Call Hits

When the scanner detects a Close Call hit, it alerts you according to the Override and Alert settings in the previous section. While listening to a Close Call hit, you can press **Hold** to hold on the hit frequency, press **E** to quickly save the frequency into memory, press **L/O** to lock out the frequency from Close Call and Search operation, or wait for the transmission to end. If you are in Close Call Only or Close Call Override mode, and you do not press any key, the scanner returns to its previous operation after the transmission ends and the set delay time expires.

  If you are holding on the frequency, press **Hold** again to resume the previous operation.



Using the Close Call Feature

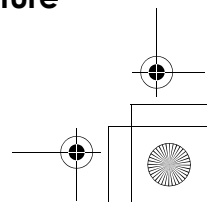  

Search and Close Call Options

The settings in this section affect custom searches, service searches, and Close Call operation.

Managing Locked-Out Frequencies

While searching or during Close Call operation, if you press **L/O** while the scanner is stopped on a frequency, that frequency is locked out of these modes. You can lock out up to 200 frequencies.

Note: Locking out a frequency does not lock out a channel that contains that frequency.

Unlocking All Frequencies

Menu → **↶** *SRCH/CLOCALL OPT* → **E** **↶**
FREQ LOCKOUTS → **E** **↶** → *UNLOCK ALL* → **E**

The scanner prompts you to confirm deletion. To confirm and delete all locked-out frequencies, press **E**. Otherwise, to cancel, press **No**.

Reviewing Locked Out Frequencies

Menu → **↶** *SRCH/CLOCALL OPT* → **E** **↶**
FREQ LOCKOUTS → **E** **↶** → *RVW SEARCH L/O* → **E**

The scanner displays the first locked-out frequency and prompts you to unlock the frequency. Press **E** to unlock the frequency. Or, rotate the scroll control or press **No** to select a different frequency. To exit the review, press

Menu.

Searching for Subaudible Tones

Menu → **↶** *SRCH/CLOCALL OPT* → **E** **↶**
CTCSS/DCS SEARCH → **E**

This setting controls whether the scanner will search for a subaudible tone when it stops on a transmission during search or Close Call operation.

OFF The scanner does not search for subaudible tones.

ON The scanner searches for and displays any subaudible tone found.

Search and Close Call Options

Note: This feature does not operate when the scanner is in AM modulation mode.

Setting the Maximum Auto Store Value

Menu → **↶** *SRCH/CLOCALL OPT* → **E** **↶**
MAX AUTO STORE → **E**

This value sets how many hits the scanner will automatically store when it is in either Search and Store or Close Call Auto Store mode.

Use the number keys to enter a value from 1 - 256, then press **E**.

When the scanner reaches the maximum number of hits you set, it stops the auto-store operation.

Setting the Modulation Type

Menu → **↶** *SRCH/CLOCALL OPT* → **E** **↶**
SET MODULATION → **E**

This setting controls the modulation type used for quick search and Close Call operations. Select your setting, then press **E**.

AUTO Uses the default setting for the current frequency (see the table at the front of the manual)

AM Uses AM (amplitude modulation)

FM Uses FM (frequency modulation)

NFM Uses narrowband FM

Search and Close Call Options

Setting Attenuation

Menu → ↻ *SRCH/CLOCALL OPT* → **E** ↻
SET ATTENUATOR → **E**

This setting controls the attenuator for quick search, service search and Close Call operation. Select your setting, then press **E**.

OFF The attenuator is off.

ON Reception is attenuated by about 18 dB.

Note: Turn on this setting if you are near other strong signal sources. Attenuation sometimes helps to reduce interference and desensitization that strong signals create.

Setting Data Skip

Menu → ↻ *SRCH/CLOCALL OPT* → **E** ↻
SET DATA SKIP → **E**

This setting controls how the scanner behaves when it detects a constant-level transmission during quick search or Close Call operation. Select your setting, then press **E**.

OFF The scanner remains on the transmission until it ends.

ON The scanner quickly resumes searching or Close Call operation.

Notes:

- If you are trying to test the Close Call feature with a nearby transmitter and you do not talk into the transmitter, the scanner will detect this as data and will skip the frequency when Data Skip is on. Turn the feature off or talk into the transmitter.
- The default for this feature is **ON**.

Setting the Delay Time

Menu → ↻ *SRCH/CLOCALL OPT* → **E** ↻
SET DELAY TIME → **E**

This setting determines how long the scanner waits after a transmission ends before resuming quick search, service search or Close Call operation. Select your setting, then press **E**.

Search and Close Call Options

OFF The scanner resumes immediately when the transmission ends.

1-5 SEC The scanner waits the set amount of time after the transmission ends before resuming.

Note: The default setting is 2 seconds.

Setting the Search Frequency Step

Menu → **↻** **SRCH/CLOCALL OPT** → **E** **↻**
SET STEP → **E**


 
This setting selects the frequency step used for setting the channels. Select your setting, then press **E**.

AUTO The step is based on the band (see the table at the front of the manual)

5.0 KHZ, 6.25 KHZ, 7.5 KHZ, 8.33 KHZ, 10.0 KHZ, 12.5 KHZ, 15.0 KHZ, 20.0 KHZ, 25.0 KHZ, 50.0 KHZ, 100.0 KHZ The scanner uses the selected step.

Note: The scanner defaults to **AUTO**.

Search and Close Call Options

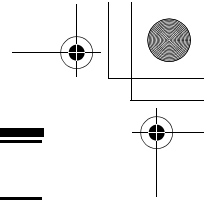


Care and Maintenance

General Use

- Turn the scanner off before disconnecting the power.
- Always write down the programmed frequencies in the event of memory loss.
- If memory is lost, simply reprogram each channel.
- Always press each button firmly until you hear the entry tone for that key entry.


Location

 - Do not use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the unit in direct sunlight or near heating elements or vents.
- If the scanner receives strong interference or electrical noise, move it or its antenna away from the source of the noise. If possible, a higher elevation might provide better reception.
- Also try changing the height or angle of the antenna.




Cleaning

 - Disconnect the power to the unit before cleaning.
- Clean the outside of the scanner with a mild detergent.
- To prevent scratches, do not use abrasive cleaners or solvents. Be careful not to rub the LCD window.
- Do not use excessive amounts of water.





Repairs

 Do not attempt any repair. The scanner contains no user serviceable parts.



Care and Maintenance

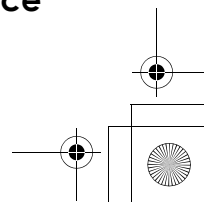 

Troubleshooting

If your USC230 is not performing properly, try these steps.

Problem	Possible Cause	Suggestion
The scanner doesn't work.	The scanner might not be receiving any power.	Make sure the AC adapter is connected to an AC outlet and the scanner.
		If there is a wall switch that controls power to the AC outlet where you connected the AC adapter, make sure it is on.
Improper reception.	The antenna might need to be adjusted.	Check the antenna connection or move or reposition the antenna.
		Move the scanner.
		You might be in a remote area that could require an optional multi-band antenna. Check with your dealer or local electronics store.
Scan won't stop.	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On the Scanner and Setting the Squelch" on Page 33.
	The antenna might need to be adjusted.	Check the antenna connection.
	One or more channels might be locked out.	Make sure the channels you want to scan are not locked out.
	The channel's frequency might not be stored in memory.	Make sure the channel's frequency is stored in the scanner's memory.

Troubleshooting

Scan won't start.	The channel might not be active.	Wait for a transmission on the channel.
	You must press Scan to scan.	Press Scan .
	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On the Scanner and Setting the Squelch" on Page 33.
	One or more channels might be locked out.	Make sure the channels you want to scan are not locked out.
	The antenna might need to be adjusted.	Check the antenna connection.

Troubleshooting

Specifications

Dynamic Allocation Capacity
(with Name Assigned To Each System, Group, and
Channel):

Systems: 200 max

Groups:

Conventional Systems 20 per system

Racing Systems No Limit

Channels: up to 2500

Attenuation: 18 dB (nominal), 10 dB (limit)

Frequency Range (MHz): See page 7 to 9

Operating Temperature:

Normal -20°C to +60°C

Close Call -10°C to +60°C

Scan Rate: 100 channels per second
(conventional mode)

Search Rate: 300 steps per second (5 kHz step only)

Scan Delay: 0-5 seconds

Audio Output: .. 320mW nominal into 8Ω internal speaker

30 mW nominal into 32Ω headphone

6 mW nominal into 64Ω earphone

Power Requirements:

2 AA Alkaline Batteries (3V DC),
or 2 AA Rechargeable Ni-MH Batteries (2.4V DC),
or AC Adapter (6 VDC 500mA) (AD-671)

Antenna: 50 Ω (Impedance)

External Jacks:

Antenna Jack BNC Type

Headphone Jack 3.5mm

DC Power Jack (EIAJ TYPE-2 Center Positive) 5.5mm


 
Remote Jack 4 Pin Mini

Size: 72.4 mm (W) x 34.5 mm (D) x 138.5 mm (H)


Weight: 179.3 g

Features, specifications, and availability of optional
accessories are all subject to change without notice.


Specifications

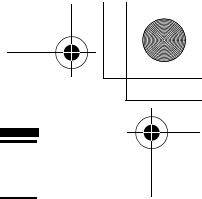



Optional Accessories

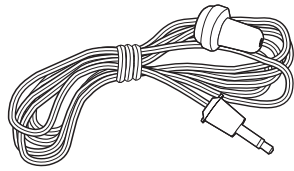



Earphone

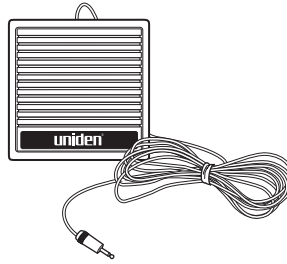

External Amplified Speaker

  

Optional Accessories

  

Planning

Collecting Information

Getting your scanner programmed and scanning takes a few steps. This help guides you through these steps that will make it easier for you to start scanning.

 
1. Collect information about the system(s) you want to monitor.

Do you want to listen to your favorite driver at the track? How about your local police and fire departments, the highway patrol, ambulance service, and aircraft? You might even want to listen to race officials as they dispatch the pace car.

Make a list of the drivers, tracks, and agencies you want to listen to, then look up the frequencies and systems they use. The Internet is a great source for current frequencies and information about scanning. Here are a few useful sites:







- <http://www.racescanner.eu> - Race frequency information, programming software and accessories.
 - Before you start to program your scanner, decide how you want to organize the frequencies you want to scan. For example, some areas are best organized by geographic location (east, north, south, west, central, etc), while others are best organized by agency (police, sheriff, ambulance, fire, etc.). You might even find it easier to organize a mixture of frequencies (north, southeast, and west for police but fire all in one group for example).
2. Organize the system information using these system worksheets included in this appendix.
 - Use "Racing System Worksheet" on Page 88 to organize info about racing frequencies.
 - Use "Conventional System Worksheet" on Page 90 to organize info about conventional frequencies.
 3. Follow the instructions in "Filling Out The Racing System Worksheet" on Page 87 and "Filling Out The Conventional System Worksheet" on Page 89 to program your scanner.



Planning



Tips:

        - Before you start, make as many copies of the worksheets as you think you'll need. You can also go to the download section of <http://www.racsescanner.eu/download> and download the worksheets there.
- All worksheet instructions assume that you have completed the critical Step 1 (collecting the system information). Don't skip this step.
- Use a pencil to fill out the worksheets. This lets you change information if necessary.







Filling Out The Racing System Worksheet

Race Name



Fill in the name of the race you want to scan. For example, you can enter "Formula 1" here.



Car #/Driver-Frequency-Priority-CTCSS/DCS

  Fill in the details for each car number and driver, frequency, whether the car number/driver is a priority car number/driver, and information about the car number/driver's CTCSS/DCS information (if any) you want to store for this race.



Planning

  

  

Filling Out The Conventional System Worksheet

System Name and Quick Key

Fill in a name that describes the system you want to create. For example, you can enter "Dallas Police" or "Amateur Radio" here. If you want to store more than one type of frequency, you can enter "Mixed."

Fill in the key you want to press to quickly activate/deactivate the system. You can assign the same quick key to multiple systems.

 
Group Name and Quick Key

Each worksheet documents the settings for one channel group within a system. If you have fewer channels in the group than fits on the page, you can skip a line and enter an additional group of channels (enter the group info in the line you skipped). If you have more channels for the group than will fit on the page, use additional pages.

Fill in the key you want to press with **Func** to quickly activate/deactivate the channel group. You can assign the same quick key to multiple groups within a system.

Frequency-Alpha Tag-Priority-CTCSS/DCS

Fill in the details for each channel you want to store in this channel group.



Planning



Preprogrammed Systems

Your scanner is preprogrammed with frequencies used at races within the Formula 1.

By default, one of the racing systems are unlocked, and your scanner begins to scan them when you turn it on. To speed up scanning, you can lock out systems that are beyond your reception area (typically no more than a few kilometers using the supplied stub antenna).

Follow these steps to lock out systems:.


 
1. Press and hold **[Func]**.
2. While continuing to hold **[Func]**, rotate the scroll control to select a system you want to lock out.
3. While continuing to hold **[Func]**, press **L/O** to lock out the system.
4. Repeat Steps 2, 3, and 4 to lock out additional systems.

The preprogrammed systems provide a starting point; you will want to find out more information about your local radio systems so you can customize the programming to better suit your listening preferences.

Notes:

- To free up memory, you can delete systems that you will not be monitoring. Refer to "Deleting Systems" on Page 57.
- Data used for the preprogrammed information was supplied courtesy of <http://www.racescanner.eu>, the Internet's premier scanning resource.



Preprogrammed Systems

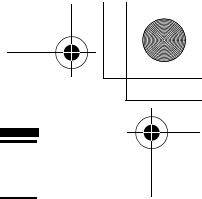




Declaration of Conformity








We:
Uniden Corporation
2-12-7 Hatchobori
Chuo-Ku, Tokyo 104-8512
Japan






 
 
declare, under our sole responsibility, that this equipment
"Uniden Bearcat model USC230" is in compliance with
the essential requirements and other relevant provisions
of the EMC, R&TTE and LVD Council Directives of the
EU.














Declaration of Conformity

 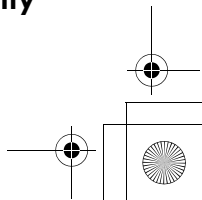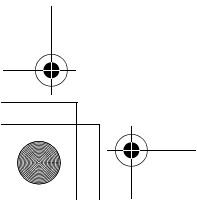

   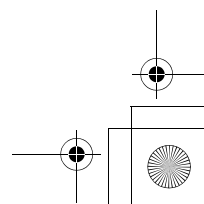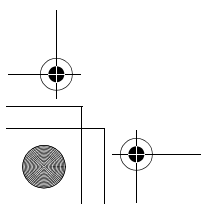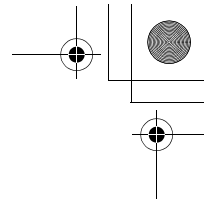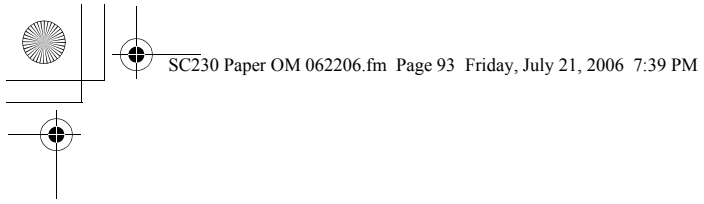

   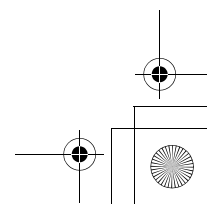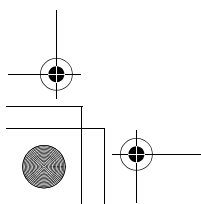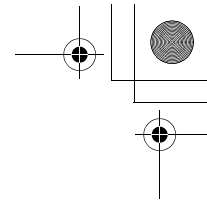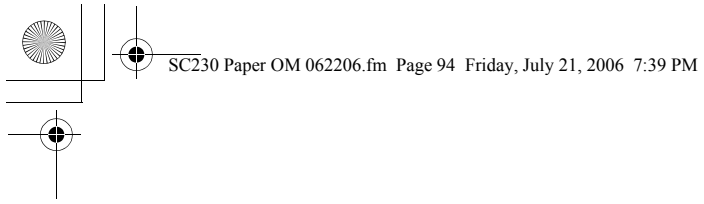

     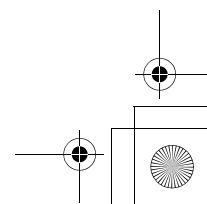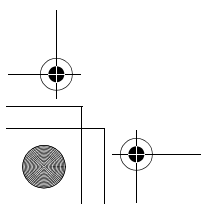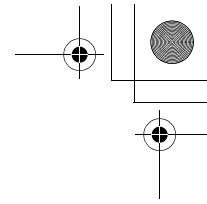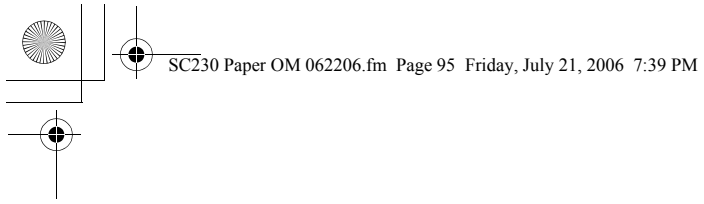 
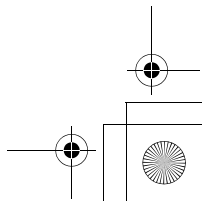
 
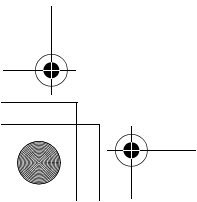


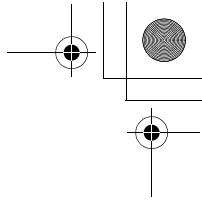

Uniden®

© 2006 Uniden Corporation.
UBZZ01346ZZ(0)

All rights reserved.
Printed in P.R.C. 



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>