

Uniden®

 
BTSC1700 Bluetooth® Car Kit

***For more exciting new products please
visit our website:***

*Australia: www.uniden.com.au
New Zealand: www.uniden.co.nz*


OWNER'S MANUAL

What's In The Box?



1. Carkit
2. Visor Clip
3. Car charger
4. Owner's Manual
5. AC Adaptor

 
Getting to Know the BTSC1700

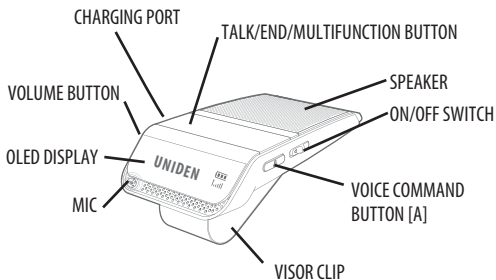

Charge the Battery

Connect an adapter to the charging port of the BTSC1700 and plug it into automobile (or any standard 12V~24V) or home power outlet. When charging is completed, charging indication OLED will be turned off.

 [NOTE] Please use supplied power adaptor only.

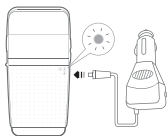

■ Low Battery Alarm

When the battery is low, the BTSC1700 will sound a beep alarm every 30sec. Once you hear the alert, please charge immediately. It will turn off in about 10 minutes if not recharged.

 
■ OLED Display




[NOTE] OLED screen will be turned off 30sec. after your last action. You can turn on OLED screen by touching any button.

Using Your BTSC1700

Turning ON/OFF

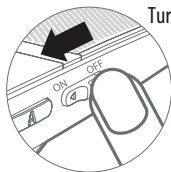

Turning ON

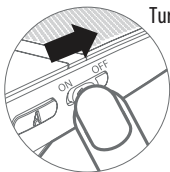 

Turning OFF

Using the Voice Command Mode

Voice commands listed in the table are available when Voice Command mode is activated.

Voice Command mode is activated automatically on an incoming call. To activate Voice Command in standby mode: Press the Voice Command button. Voice commands can be made after "Say Command" is announced.

[NOTE] Voice Command mode is cancelled when the Voice Command button is pressed again or when the BTSC1700 is turned off.



Voice Command	Explanation
"PAIRING MODE"	Device will go to pairing mode
"ANSWER"	Answer the incoming call.
"CHECK"	Check received E-mail & SMS .
"IGNORE"	Reject calls, check E-mail & SMS as you receive them.
"CHECK message"	Check the last received text message. The BTSC1700 will read it out.
"CHECK E-mail"	Check the last received E-mail. The BTSC1700 will read out the sender & title only.
"CHECK schedule"	Check today's schedule (updated from your Google Calendar™)
"CHECK weather"	Check today's weather.
"What can I say?"	Check list of available commands.

■ "CHECK" Commands are only available if you install the "Uniden BTSC1700" application on your mobile phone and set up details. For details refer to the Uniden BTSC1700 Android™ Application section on page 8.

Pair The BTSC1700 To Your Mobile Phone

■ Full Automatic Pairing

1. Set your mobile phone to Bluetooth discoverable mode (visibility on).
2. Turn the BTSC1700 on. When turned on for the first time it will go to pairing mode.
3. Place your mobile phone near to (within 10cm) the BTSC1700 for optimal result.
4. When the connection confirmation message appears on your mobile phone, confirm it. PIN number "0000" (4 zeros).

[NOTE] Please make sure that your mobile phone supports Bluetooth version 2.1 or higher version. This feature is only available when you pair for the first time. If not, please reset your unit (see page 11) and try again.

■ Voice Pairing

1. Turn on the BTSC1700 and press the voice command button.
2. After "Say Command" is announced please say "PAIRING MODE".
3. Set your mobile phone to search for Bluetooth devices.
 - For the most mobile phones, you can find Bluetooth mode by selecting Setting/Tools - Connections – Bluetooth. (For further information, please refer to your mobile phone's manual)

4. When your mobile phone finds the BTSC1700, confirm it by selecting YES or OK. PIN number "0000" (4 zeros)

■ **Auto Connection**

The BTSC1700 supports auto connection. And it will try to re-connect to the last connected mobile phones when you turn on the BTSC1700.

Caller Name Announce & Display

When there is an incoming call, the BTSC1700 will announce & display the caller's name.

[NOTE] For this function, you should download phonebook data from your phones to the BTSC1700. If you do not download phonebook data, the BTSC1700 will announce & display caller's number only.

Phonebook Download

 
You can manually download phonebook. Please press volume up (+) button for 3 seconds. Then the BTSC1700 will start to download phone book data from your mobile phone automatically.

It will take more than 1min. or more based on your phone book data size.

[NOTE] To cancel phonebook download, press Volume down (-) button for 3 seconds.

Uniden Btsc1700 Android™ Application

You can check E-mail, SMS, today's schedule & weather with this free application. Go to the Android™ market and search "Uniden BTSC1700". Download and install it on your mobile phone and activate. Once you install it, please go to the setting menu and check the services you desire.

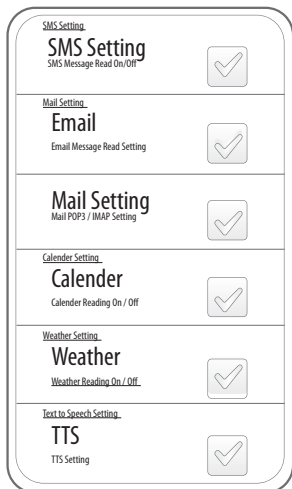

This service is powered by Google TTS. Currently available languages are; UK/US English, French, Spanish, Germany and Italian.

[NOTE] To use the TTS (Text to Speech) function, please activate the TTS option on your mobile phone's Voice or TTS setting menu.

Making and Receiving Calls

Making A Call

1. Last call-Redialing
Press the Multi-Function button.
2. Voice Dialing
Press the Multi-Function button for 1 second until you hear a beep sound, then voice dialing is activated on the BTSC1700. If you want to cancel voice dialing, press the Multi-Function button for 1 second during the voice dial Mode.

[NOTE] Please make sure that your phone supports the voice dialing feature. (See your phone's manual for detailed instructions)

Receiving A Call

When you receive phone calls, the BTSC1700 will announce "PLEASE SAY ANSWER or IGNORE". Say "ANSWER" to take the call. You can take the call at any time by pushing the multifunction button.

Rejecting A Call

When you receive phone calls, the BTSC1700 will announce "PLEASE SAY ANSWER or IGNORE". Say "IGNORE" to reject the call. Or press the Multi-Function button for over 1 second.

Ending A Call

Press the Multi-Function button during the call or just press the “End” button on the phone.

Transferring A Call

To transfer a call from the BTSC1700 to your mobile phone and vice versa, press the Multi-Function button on the BTSC1700 during the call for 1 second until you hear a beep.

Adjusting The Volume

You can adjust the volume by pressing the volume up (+) or down (-) button during the call.

Mic Mute

If you press the Volume down (-) for 1 sec., the microphone will be muted and you will hear a beep every 10 seconds during the mute mode.

[NOTE] The MIC mute mode can be deactivated by pressing Volume down (-) for 1 sec. again.

Call Waiting

To activate call waiting function, you must subscribe to call waiting through your service provider, and your phone must support the hands-free profile.

1. To put your current call on hold and switch between the two calls, press and hold volume up (+) for about 3 seconds. When you release the button, you'll be connected to the waiting call.
2. To hang up your current call and switch to the waiting call, press and hold volume down (-) for about 3 seconds. When you release the button, you'll be connected to the waiting call.

[RECOMMENDED] Press the "SEND" button of your mobile phone to activate the call waiting function.

[NOTE] Some features may not be compatible with certain mobile.

Inverting The OLED Display

To reverse the OLED display, please press both Multi-Function button and Volume up (+) button for 3 seconds.

Resetting The BTSC1700

Press and hold Multi-Function button and volume down(-) button simultaneously for 3 seconds until you hear 2 rings. Then all information in the BTSC1700 will be deleted.

[NOTE] Resetting is only possible when in standby mode after

disconnecting with your mobile phone.

Multipoint: Using The BTSC1700 With Two Phones

[NOTE] Some mobile phones are not available for Multipoint.

1. Multi-point Connect

- Set the handsfree unit into pairing mode first. After then search BTSC1700 from each mobile phones at the same time.
- Please connect first mobile phone. Once the connection is completed, please connect the second mobile phones.

[NOTE] Some mobile phones need to perform the connection process at the same time.

2. Making a call [via the second mobile phone]

- Press the Multi-Function button twice shortly for last call-redialing from the second mobile phone.
- Press the Multi-Function button for about 3 seconds to activate the voice dialing of the second mobile phone.

[NOTE] Making a call via the first mobile phones, please follow the same instruction as described on "MAKING A CALL".

3. Receiving a call

Please use the general rule as you receive calls

[NOTE] Each mobile phone plays different ring tones.

GPS Guide

If your mobile phone has GPS navigation guide then you can listen to the guide through the BTSC1700. To activate this feature, please make sure your mobile phone supports the A2DP profile.

Specifications

Model Name	BTSC1700
Bluetooth Core Spec	Bluetooth Specification 3.0
Profile	HSP, HFP, A2DP, PBAP, SPP
Carrier Frequency	2402 MHz to 2480 MHz
Audio Output	2W (4Ω)
Modulation Method	GFSK, 1Mbps, 0.5BT Gaussian
Maximum Data Rate	Asynchronous: 2178.1 kbps / 177.1 kbps Synchronous: 1306.9 kbps / 1306.9 kbps
Bluetooth Class	Class 2
Hopping	1600 hops/sec, 1MHz Channel Space
Transmit Power	0 dBm
Coverage Range	10 Meters
Receiver Sensitivity	-80 dBm / 0.1 % BER
Continuous Talk Time	Max. 15 Hours
Standby Time	400 Hours
Charging Voltage	DC 5.0 V
Charging Time	3 Hours
Operating Temperature	-20° to +70°C
Storage Temperature	-40° to +90°C
Battery	Lithium Polymer 3.7V 700mAH

SAFETY AND GENERAL INFORMATION

1. Please read this manual carefully and follow the instructions.
2. To avoid any damage or malfunction of the unit, do not drop it from a high place.
3. Keep unit away from humidity, water and any other liquid. If the unit is exposed to water, moisture and other liquid directly, then do not operate it to avoid any electrical shock, explosion or damage to the unit.
4. Do not place or keep the unit near heat sources such as direct sunlight, radiators, stoves or other apparatus which produce heat. It may cause explosion, degrade performance and reduce battery life.
5. Do not modify, repair or disassemble the unit (especially battery: it may cause an explosion).
6. Do not place heavy objects on the unit.
7. Use only the supplied approved car and AC charger.
8. Replacement or service must be done at a qualified service center or manufacturer.
9. Unplug this unit when unused for long period of time or during lightening storms.

[CAUTIONS] ELECTRIC SHOCK HAZARD The battery used in this device may present a risk of fire or chemical burn if mis-treated.

Two Year Limited Warranty

UNIDEN BTSC1700 Bluetooth Wireless Speaker

IMPORTANT: Evidence of the original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498
Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty its **BTSC1700** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 2 years after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

Parts Covered: This warranty covers for two (2) years, the Product and included accessories.

Statement of Remedy: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

Procedure for obtaining performance or warranty: in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Auckland 2013
Fax (09) 274 4253
www.uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited

Printed in PRC

load from www.Somanuals.com. All Manuals Search And Down

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>