

# AVEX

## R6 Remote Control Owner's Manual



## **Congratulations!**

Congratulations on purchasing Universal Remote Control's AVEX™ R6 Pre-Programmed and Learning remote control. You now have the power to control your entire home entertainment system with one easy-to-use remote. The AVEX R6 can be used with thousands of audio/video components because of the extensive library of codes that have already been programmed into the remote. So... get ready to sit back, relax, and simplify your home entertainment experience.

This Owner's Manual is designed to assist you in programming your AVEX R6 remote to work with your components by guiding you through an easy step-by-step process. Everything you need to know about programming the AVEX R6 is contained in this Manual. AVEX R6 Owner's Manual © 2007 Universal Remote Control, Inc.

This document is protected by the copyright laws of the United States and internationally by the Berne Convention. No part of this manual may be reproduced in any form without the express written consent of Universal Remote Control, Inc. Although reasonable care has been taken to assure the accuracy of the information herein contained, Universal Remote Control, Inc. is not responsible for operational, technical or editorial errors or omissions. The specifications and information in this manual may be subject to change without notice. MacroPower, SimpleSound and AVEX are trademarks of Universal Remote Control, Inc. Entertainment Made Simple® is a registered trademark of Universal Remote Control, Inc. All other brand or product names are trademarks or registered trademarks of their respective owners.



**500 Mamaroneck Avenue, Harrison, NY 10528**  
**Phone: (914) 835-4484 Fax: (914) 835-4532**

# Table of Contents

## Getting Started - Overview

- Control up to 6 Components .....5
- Activating Component Buttons .....5
- Learning Capability .....5
- Battery Installation .....6
- Low Battery Warning .....6
- Couch Mode .....6

## Special Advanced Features

- MacroPower™ & Other Macros .....7
- 'My Favorites' - Favorite Channels .....7
- SimpleSound™ & Other 'Punch Throughs' .....7

## Keypad Layout & Button Functions ...8

### Programming AVEX R6 Using

#### Pre-Programmed Codes .....9

- Quick Set-Up Method .....9
- Three-Digit Code Entry Method .....10
- Auto-Search Method .....12

### Programming AVEX R6 Using the Learning Method .....14

### Finding a Component's Set-Up Code Number .....16

### Programming Special Advanced Features

- Programming Multi-Commands to  
Macro Buttons .....17
- MacroPower™ Total System On/Off .....17
- 'My Favorites' – Favorite Channels.....20
- SimpleSound™ Total System Volume  
Control.....21
- Channel Control 'Punch Through' .....23
- Transport Control 'Punch Through' .....24
- OSD (On-Screen Display) Control  
'Punch Through' .....25

### Erasing Commands-Overview .....26

- Erasing a Single Learned Command .....26
- Erasing All Learned Commands from  
One Component.....27
- Erasing MacroPower & Other Macro  
Commands .....28
- Erasing SimpleSound & Other 'Punch  
Through' Commands .....29
- Factory Reset .....30

**Pre-Programmed Code Tables .....31**

- CABLE/SAT.....32
- TV .....33-34
- DVR/VCR .....35-36
- DVD .....37
- AUDIO.....38
- AUX .....39

**FAQs .....40**

**Warranty .....41**

**Specifications .....41**

# Getting Started - Overview

## Control up to 6 Components

The AVEX R6 remote control is designed to control up to six different Audio/Video components and operate virtually all brands of AUDIO, TV, DVD, VCR/DVR, SAT/CABLE and AUX (Light, Music Server, etc.) components.

## Component Buttons

Once you have programmed the AVEX R6 for all of your components, all you need to do is press a component button and all the buttons on the AVEX R6 will work with that component. For example, when you press the TV component button, all the buttons on your AVEX R6 will operate your TV. If you press the DVD component button, all the buttons on the AVEX R6 will operate your DVD.

Each time you press any of the buttons on the remote, the LED light in the component button will light up to indicate which component you are controlling.




## Learning Capability

The AVEX R6 has the ability to 'learn' functions from the original remote controls of other manufacturers, even if they are not in the Pre-programmed database.

## Battery Installation

Press the tab and remove the cover of the battery compartment located in the back of your remote. Insert the two AAA batteries (included in the package) making sure to match the positive (+) and negative (-) symbols as shown in the diagram. Place the cover back over the battery compartment.

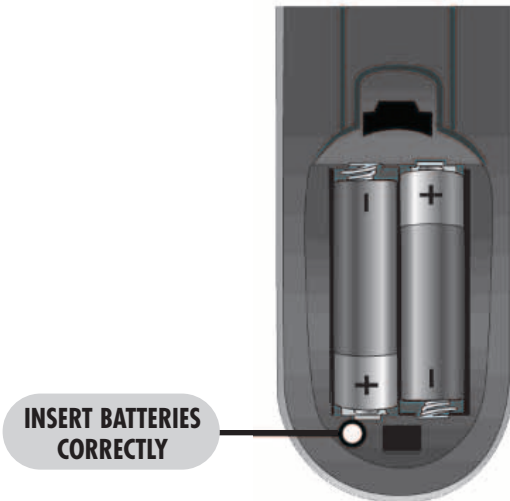

## Low Battery Warning

When the batteries are low and need to be replaced the component LED will quickly blink three times when you press the Power [ON] button.

## Couch Mode

The AVEX R6 is designed to automatically turn itself off if a button is pressed for more than 30 seconds. This prevents battery power from being depleted should the remote accidentally slip between the couch cushions.

## Special Advanced Features

The AVEX R6 also offers the following special advanced features that can offer you many time-saving conveniences:

### **MacroPower™ & Other Macro Buttons**

MacroPower is a unique feature that enables you to turn all your components ON or OFF, all at the same time, simply with the press of one button. The AVEX R6 has six Macro buttons that are designed to store up to 20 commands in each button. Pressing any one of the Macro buttons will send out the series of commands that are stored in that button.

### **'My Favorites' (Favorite Channels)**


This is one of the most desirable features of the AVEX R6 remote control. Once it's set up, you can select one of four favorite channels with the press of one button – without the need to type in a channel number. So, whether it's CNN or the Food Network, your favorite viewing spot is just one click away.

### **SimpleSound™ & Other 'Punch Throughs'**

SimpleSound Volume Control is a dynamic feature that gives you total volume control over all the components in your system, even those that do not have their own built-in volume control, such as TIVO, DVD and VCR... saving you the hassle and inconvenience of constantly needing to switch between component modes on the remote. As an example, in order to increase the volume while watching a DVD, you would typically have to pick up the TV remote control to increase the volume. With the AVEX R6, you do not even have to press the TV component button. Once you program SimpleSound in your DVD mode, you will automatically have TV volume control in DVD mode.

SimpleSound is what is called a 'Punch Through' feature and is not limited to volume control. It can also be applied to Channel Control, Transport Control, and OSD Control.

# Keypad Layout & Button Functions

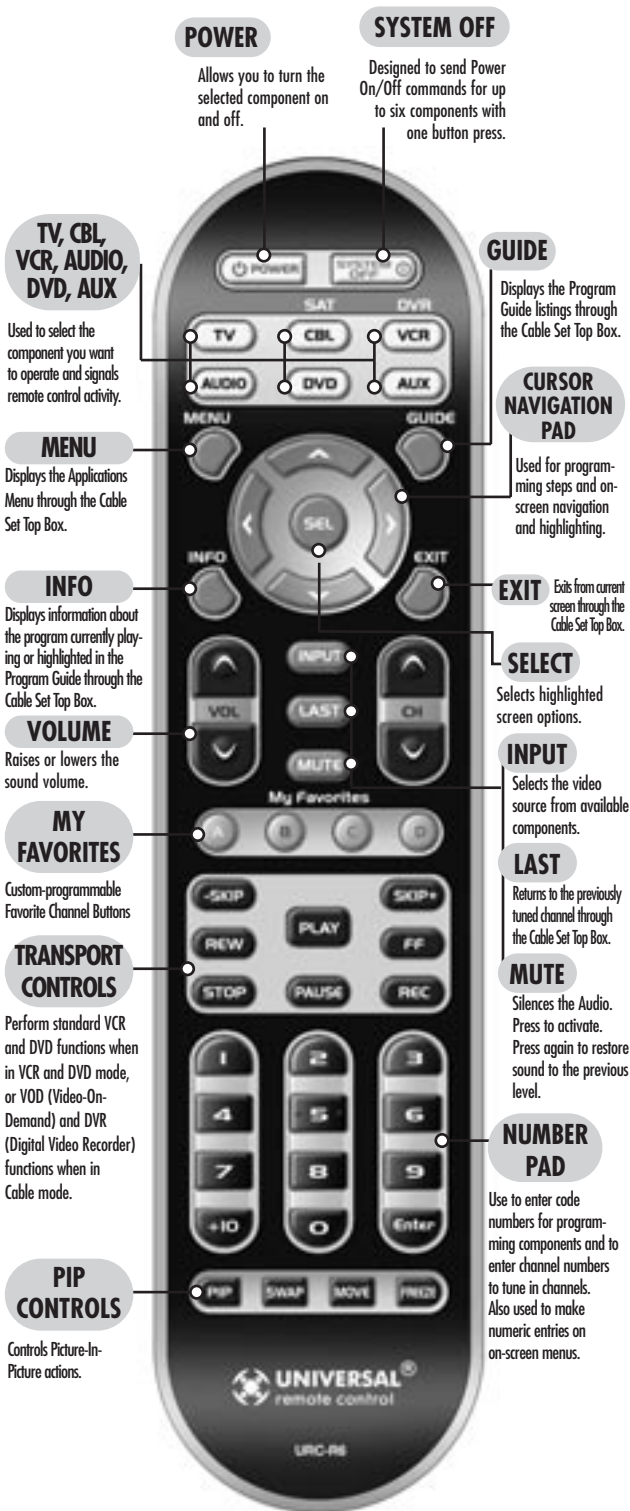

**POWER**

Allows you to turn the selected component on and off.

**SYSTEM OFF**

Designed to send Power On/Off commands for up to six components with one button press.

**TV, CBL, VCR, AUDIO, DVD, AUX**

Used to select the component you want to operate and signals remote control activity.

**GUIDE**

Displays the Program Guide listings through the Cable Set Top Box.

**MENU**

Displays the Applications Menu through the Cable Set Top Box.

**CURSOR NAVIGATION PAD**

Used for programming steps and on-screen navigation and highlighting.

**INFO**

Displays information about the program currently playing or highlighted in the Program Guide through the Cable Set Top Box.

**EXIT**

Exits from current screen through the Cable Set Top Box.

**VOLUME**

Raises or lowers the sound volume.

**SELECT**

Selects highlighted screen options.

**MY FAVORITES**

Custom-programmable Favorite Channel Buttons

**INPUT**

Selects the video source from available components.

**TRANSPORT CONTROLS**

Perform standard VCR and DVD functions when in VCR and DVD mode, or VOD (Video-On-Demand) and DVR (Digital Video Recorder) functions when in Cable mode.

**LAST**

Returns to the previously tuned channel through the Cable Set Top Box.

**PIP CONTROLS**

Controls Picture-In-Picture actions.

**MUTE**

Silences the Audio. Press to activate. Press again to restore sound to the previous level.

**NUMBER PAD**

Use to enter code numbers for programming components and to enter channel numbers to tune in channels. Also used to make numeric entries on on-screen menus.



## Programming AVEX R6 using Pre-Programmed Codes

There are three ways you can program your AVEX R6 using the component brand codes that are pre-programmed into the remote.

- Quick Set-Up Method
- Three-Digit Code Entry Method
- Auto-Search Method

The Quick Set-Up Method is a unique new feature that enables the fastest and easiest set-up by using one-digit codes for up to 10 major brands for each component. The Three-Digit Code Entry Method allows you to set-up the AVEX R6 using 3-digit codes for component brand names. It is also a fast and easy way to program the remote. The Auto-Search Method scans through all the brands in the remote control, one at a time. It should be used when either the Quick Set-Up or Three-Digit Code Entry Methods do not work.

\* \* \*


### Quick Set-Up Method

**STEP 1:** Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

**STEP 2:** Point the AVEX R6 toward the component that you want to program (in this case the TV set) and press and hold the component button (in this case the TV button). **While holding down the component button**, begin to press numeric keys, one number at a time, starting from 1, continuing to 2, 3 ... 0 until component (in this case the TV) turns off.

**STEP 3:** Release the component button to save the code. The component LED light will blink three times to confirm that the code has been stored.

Repeat the above three steps for other components.

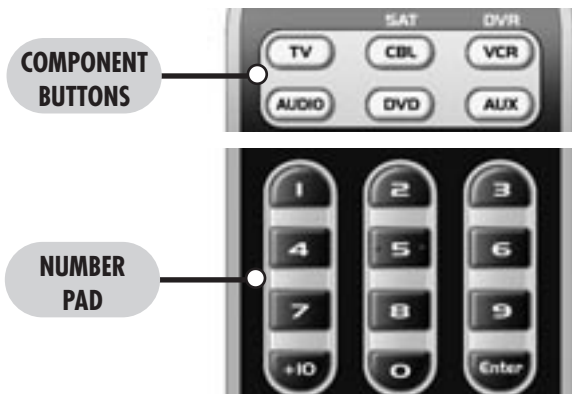

## Three-Digit Code Set-Up Method


**STEP 1:** Find the 3-digit code numbers assigned to your brand from the lists in the back of this manual. The codes are listed by component category (i.e., TV, VCR, DVD, etc.), then by brand name. For instance, if you would like to locate a code for a Sony television, first locate the TV category and then look for the Sony brand.

**STEP 2:** Once you have located the 3-digit codes for each of the components that you wish to operate with your AVEX R6, write them ALL down on a piece of paper. It's important that you write down all the codes listed for your brand because only one code is going to work with your component.


**STEP 3:** Manually or using your old remote, turn on the component you want to program—for example, to program your TV turn on your TV set.

**STEP 4:** On the AVEX R6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component LED light turns on. This signals that you are in programming mode.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

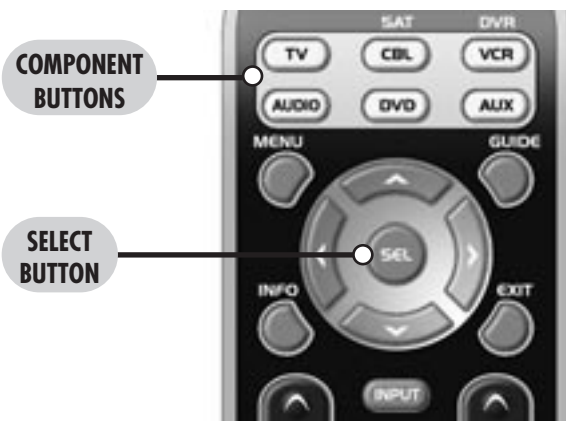

**STEP 5:** Point the AVEX R6 toward the component (in this example the TV) and punch in the first 3-digit code that you wrote down for that specific component. Use the Number buttons 0~9 on the remote to punch in the code. The TV LED light will blink each time a number is pressed.

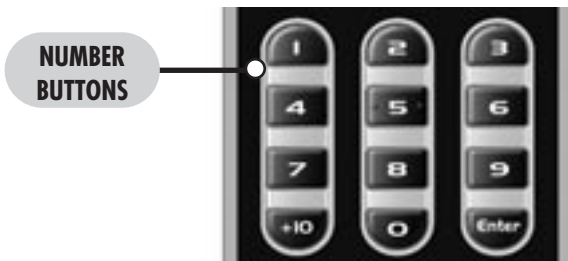

If the 3-digit code number you just punched in is the correct number, the component you are trying to program will turn off. If it did not turn off, enter the next code number from your list until it does turn off.

**STEP 6:** Once you've entered the code number and the component has turned off, press the POWER button on the AVEX R6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for VCR and DVD) to make sure they all work. For example, perhaps your Sony TV turned off with code number 147, but the volume controls did not work properly. In this case, try the next code number listed for that component. Repeat Step 5 using the next code number until you find a perfect match.

**STEP 7:** Once you've entered a correct code you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

Program the remaining components by repeating steps 3 through 7.

**IMPORTANT:** If you have tried all the set-up codes in the list and the component still did not turn off after Step 5, either the Auto-Search Method (page 12) or the Learning Method (page 14) will help you program.

## Auto-Search Method

The Auto-Search Method is a way you can scan through all of the codes in the table to find the right code for your component.

**STEP 1:** Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

**STEP 2:** On the AVEX R6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.



**STEP 3:** Point the AVEX R6 remote control toward the component and press the UP ▲ arrow (or DOWN ▼ arrow) button once. Each time the UP or DOWN arrow button is pressed, the code will count up (or down) one code number and send a Power OFF signal. When the correct code is sent out, the component will turn off.

**STEP 4:** Once you have found the right code number and the component has turned off, press the POWER button on the AVEX R6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for VCR and DVD) to make sure they all work. If any of the buttons do not work properly, you need to find a new code. Continue pressing the UP (or DOWN) arrow button until you find a new code that turns off the component and makes the VOLUME or PLAY buttons respond correctly.

**STEP 5:** Once you have found the right code, you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

**NOTE:** Use this method for those components you cannot program with either the Quick Set-Up or 3-digit Code Entry Methods.

**IMPORTANT:** If you cannot find the right code after 5 minutes of trying the Auto-Search Method, try the Learning Method (page 14).

**PLEASE DO NOT RETURN  
THIS PRODUCT TO THE STORE**

PLEASE CONTACT OUR TECHNICAL  
SUPPORT CENTER.

IF YOU NEED ASSISTANCE E-MAIL  
[techsupport@UniversalRemote.com](mailto:techsupport@UniversalRemote.com)  
or dial 1-800-901-0800  
(9:00AM-6:00PM EST)

## Programming AVEX R6 using the Learning Method

**STEP 1:** Line up the AVEX R6 to the remote control you want to 'learn' from, head-to-head as shown below. Make sure the heads are one to two inches apart.



**STEP 2:** On the AVEX R6, press the Component button that you want to program (in this case the button that says TV) and the ENTER [ENT] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 3:** Press any button on the AVEX R6 that you want to teach a command to. For example, if you want to teach the MUTE button on the AVEX R6 the TV Mute command from the other remote, first press the MUTE button on the AVEX R6 and the TV component button LED light will blink once indicating that the AVEX R6 is ready to learn the command.

**STEP 4:** Press and hold the MUTE button on the other remote until the component button LED on the AVEX R6 blinks twice. Now you can continue learning all other buttons from your old remote by pressing the next button on the AVEX R6 and repeating this step.

**Note:** The component LED will blink five times if there was an error in the learning process. In this case, please repeat Steps 3 and 4.

**STEP 5:** Once the AVEX R6 has learned all the buttons in the selected component mode, press and hold the Component button and ENTER [ENT] buttons at the same time to save the learned functions. The component LED light will blink three times to confirm the programming. Now test all the buttons to make sure they learned correctly.

Repeat Steps 1-5 to program any other component modes.

**If the Learning Method does not work, here are a few suggestions:**

- If you have a Plasma TV, move to another room
- Avoid programming under fluorescent light or direct sunlight
- Put new batteries in the old remote
- Gradually vary the distance between the two remote controls
- Tap the button on your old remote instead of pressing and holding it during the learning process

**Here are some additional facts regarding the Learning process:**


- Learned functions override any existing pre-programmed functions on the remote control
- Learned functions are automatically erased when a new function is learned on the same button
- Learned functions are retained even after a different set-up code number is programmed into the remote control
- To return to an original pre-programmed function, a learned function must be erased

## Finding a Component's Set-up Code Number

If you used the Auto-Search or Learning Methods to program a component, you may not know the code number you programmed. Here is a way for you to identify what that code number is, so you can make a note in the back of this Manual for future reference.

**STEP 1:** Press the component button you would like to verify and the SELECT [SEL] button at the same time for 2 seconds until the selected component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

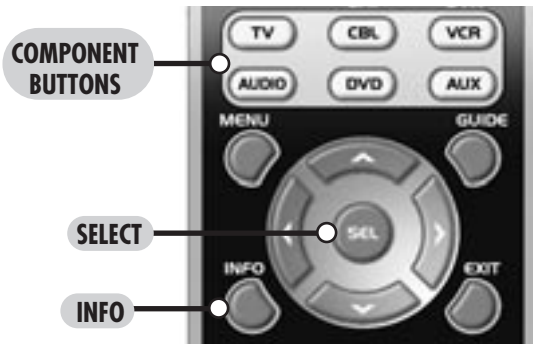

**STEP 2:** Press the INFO button and count the number of times the Component LED light blinks. This number indicates the first digit of the code. Next it will pause for about one second and begin blinking again to indicate the number of the second digit. Then once again it will pause, then blink, to indicate the number of the third digit.

**Example:** One blink, pause, eight blinks, pause, three blinks indicates code number 183.

Note that ten (10) blinks represent the number 0.



## Programming Special Advanced Features

### Programming Multi-Commands to Macro Buttons

The AVEX R6 has six Macro buttons (POWER, SYSTEM OFF, A, B, C, D) that are designed to store up to 20 commands in each button. Pressing any one of the Macro buttons will send out the series of commands that are stored in that particular button.

### MacroPower™ Total System On/Off

MacroPower makes several devices work together by pressing one button. Imagine the convenience of turning on your TV, your DVD player and your Surround Sound receiver by pressing a single button on your AVEX R6. What could normally take three remotes and three button pushes, the AVEX R6 can accomplish with the press of one button. We call that MacroPower. Any of the Power On or the System Off buttons can be programmed for MacroPower control. To set it up, follow these easy steps:

**STEP 1:** To program MacroPower commands for the Power ON button, press the POWER button and the MUTE button at the same time for 2 seconds until one of the component button LED lights turns on.



**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 2:** Press the component button you want to turn on and then the POWER button; repeat for all other components in the order you want them to turn on. The component LED lights will blink once each time you press the POWER button.



**STEP 3:** Once you've entered all the Power On commands, press the CHANNEL UP ▲ button to save your MacroPower commands. The component LED lights will blink three times to confirm that the programming has been successfully saved.



**SUGGESTION:** Most of the components have the same signal to turn the power On and Off. You may want to program MacroPower only in the POWER button and save the System Off button to turn components On or Off individually.

**Note:** If you want to program MacroPower for the SYSTEM OFF button, repeat the same steps used for Power ON programming.

## **Notes regarding programming multi-commands to Macro buttons:**

- You can program up to 20 commands on each Macro button.
- You can program delays in between commands by pressing the PAUSE button. Each press adds a one-half second delay.
- Also, if you add the delay time as the first step of Macro commands, the remote will not send the Macro unless the button is held for two seconds. (This is the Press & Hold Function).
- You can also program macro commands in 'layers' by pressing the STOP button in between commands. (For example, if you press CBL, 009, STOP, 035, STOP, 365, STOP and the CH+ button in Step 2) the remote will send out 009 at the first press of the 'A' button, and then send out 035 at the second press, etc..
- You cannot program the CH+ or PAUSE buttons as macro commands.


## Programming 'My Favorites' - Favorite Channel Buttons

In Cable mode, the A, B, C, D buttons are also designed to serve as dedicated Favorite Channel buttons. Each button will access one of your favorite channels with just one button press. Here's how to program Favorite Channels:

**STEP 1:** Press the CBL button to select the Cable mode.

**STEP 2:** Press the 'A', 'B', 'C' or 'D' button and the MUTE button at the same time for 2 seconds until the CBL component LED turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

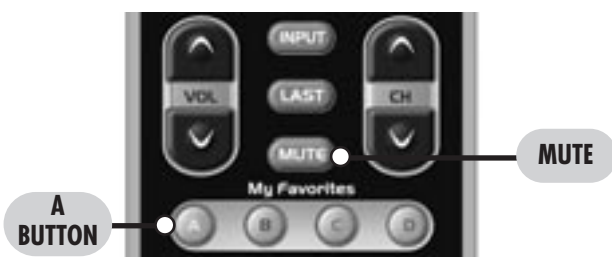

**STEP 3:** Using the Number Pad, punch in the Channel number of the Favorite Channel that you want to store in the Macro button. The Cable component LED light will blink once for each button pressed.

**STEP 4:** Press the CHANNEL UP button to store the commands entered. The CBL component LED will blink three times to confirm the programming.



## SimpleSound™ Total System Volume Control


SimpleSound is one of the most exciting features of the AVEX R6. It gives you total volume control over ALL the components in your system, even those that do not have built-in volume control, such as TIVO, DVD and VCR. SimpleSound saves you the hassle and inconvenience of constantly switching between component modes just to control volume.

First you should identify which device in your system will be used to deliver sound. In a basic system, the sound may come from your TV speaker. In a more advanced system, the sound may come from your audio components (such as a Surround Sound Receiver or Home Theatre system).

Now, let's set-up SimpleSound. Here's how:

**STEP 1:** Press and hold the button that corresponds to the Component you want to add volume control to (such as a DVD or VCR) and the SELECT (SEL) button at the same time for about three seconds until the component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

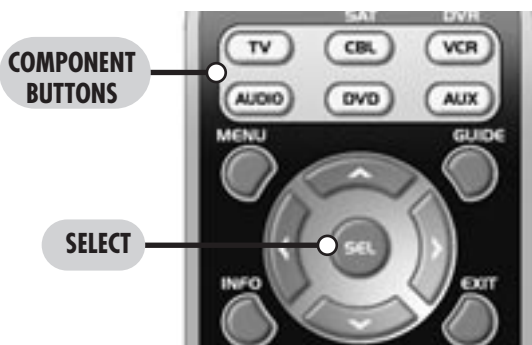

**STEP 2:** Press the VOLUME UP button and then press either the TV or AUDIO component button that you want to use for volume. The Component LED light will blink three times to confirm that it is saved. This sets up three buttons (Volume Up, Volume Down and MUTE) as a group for that component.



Repeat Steps 1-2 for all other components.

**Note:** SimpleSound is what's technically referred to as a "Punch Through" feature and is not limited to volume control. It can also be applied to other groups of buttons. If you find yourself switching to a particular component mode frequently to access a particular control, consider using Punch Through.


## Channel Control 'Punch Through'

This 'punch through' enables you to program the AVEX R6 so that either the Cable or TV Channel Controls (CHANNEL UP, DOWN, LAST, CHANNEL NUMBERS 0-9, +10 and ENTER) will also operate in other component modes on the remote control.

**STEP 1:** Press and hold the component button you want to add channel control to, such as DVD or VCR, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 2:** Press the CHANNEL UP button. The component LED light will blink once.

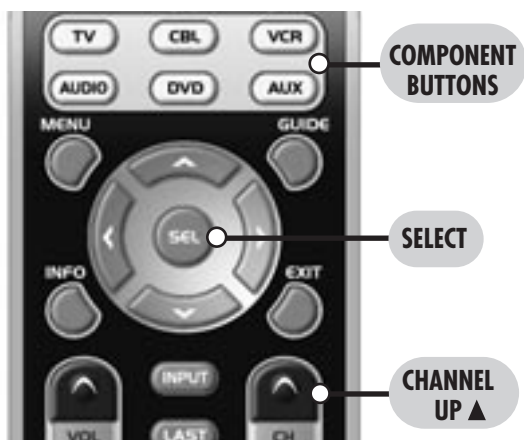

**STEP 3:** Press either the TV or CBL button that you want to use as the source of channel control. The component LED will blink three times to confirm it is saved.

## Transport Control 'Punch Through'

This 'punch through' enables you to program the AVEX R6 so that VCR or DVD Transport Controls (PLAY, STOP, FF, REW, PAUSE, SKIP and RECORD) will also operate in other component modes on the remote control.

**STEP 1:** Press and hold the component button you want to add Transport Control to, such as CBL or TV, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 2:** Press the PLAY button. The component LED light will blink once.



**STEP 3:** Press either the DVD or VCR button that you want to use as the source of Transport Control. The component LED will blink three times to confirm it is saved.



## OSD (On-Screen Display) Control 'Punch Through'

This 'punch through' enables you to program the AVEX R6 so that CBL or DVD OSD Controls (MENU, GUIDE, INFO, EXIT, SEL and 4 Cursor Controls) will also operate in other component modes on the remote control.

**STEP 1:** Press and hold the component button you want to add OSD Control to, such as TV or VCR, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 2:** Press the MENU button. The component LED will blink once.



**STEP 3:** Press either the CBL or DVD button that you want to use as the source of OSD Control. The component LED will blink three times to confirm it is saved.


## Erasing Commands -- Overview

You can erase a single learned command, all learned commands in each component mode, SimpleSound programming, MacroPower commands, or re-set the remote to original factory default settings.

### Erasing a Single Learned Command from One Component

**STEP 1:** Press the component button where the learned command is stored and the ENTER buttons at the same time for two seconds until the component LED light turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

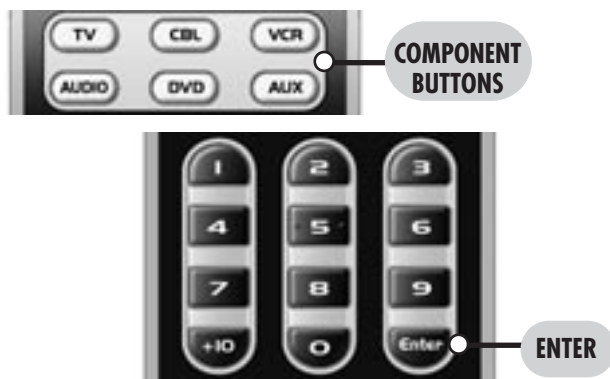

**STEP 2:** Press and hold the button you want to erase for two seconds. The component LED light will blink twice to confirm the erasure.

**STEP 3:** Repeat Step 2 to erase any other buttons in the selected component mode.

**STEP 4:** To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.


## Erasing All Learned Commands from One Component

This function allows you to erase all the learned commands from one component. For example, if you want to erase all learned commands on the TV component button because you bought a new TV, the process is very simple.

**STEP 1:** Press the component button where all the learned commands are stored and the ENTER button at the same time for 2 seconds until the component LED turns on.

**IMPORTANT:** You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

**STEP 2:** Press and hold both the component button you want to erase and the PAUSE button at the same time for two seconds, until the component LED light blinks twice to confirm the erasure.

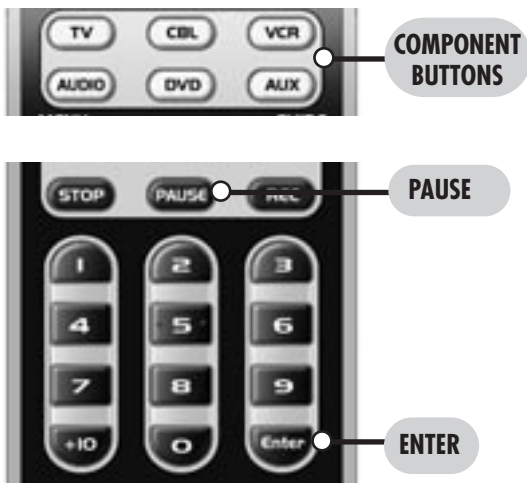


**STEP 3:** To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.

## Erasing MacroPower & Other Macro Commands

**STEP 1:** To erase MacroPower commands on the POWER ON or SYSTEM OFF button, press and hold either the POWER ON or SYSTEM OFF button and the MUTE button simultaneously for two seconds until the current status component LED turns on.

**IMPORTANT:** If you don't proceed to the next step within 30 seconds, the LED will turn off and exit set-up mode and you will need to start over.)

**STEP 2:** Press the CHANNEL UP button to erase and exit Erase mode. The component LED light will blink three times to confirm the erasure.

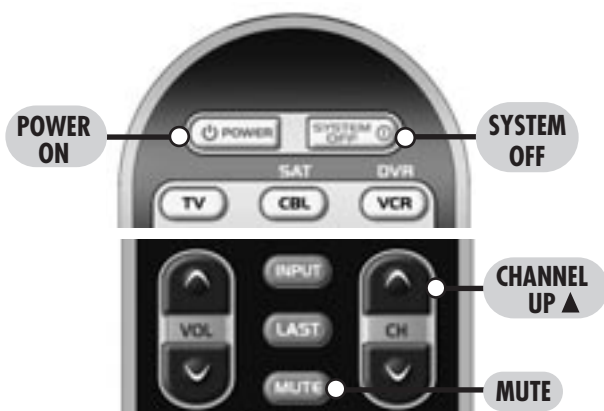


**NOTE:** To erase other Macros, simply press the appropriate button in Step 1 in combination with the MUTE button.

## Erasing SimpleSound & Other 'Punch Through' Commands

**STEP 1:** Press and hold the Component button you want to erase volume control from, such as DVD or VCR and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

**STEP 2:** Press the VOLUME UP button and the same component button from Step 1. The component LED light will blink three times to confirm the erasure.

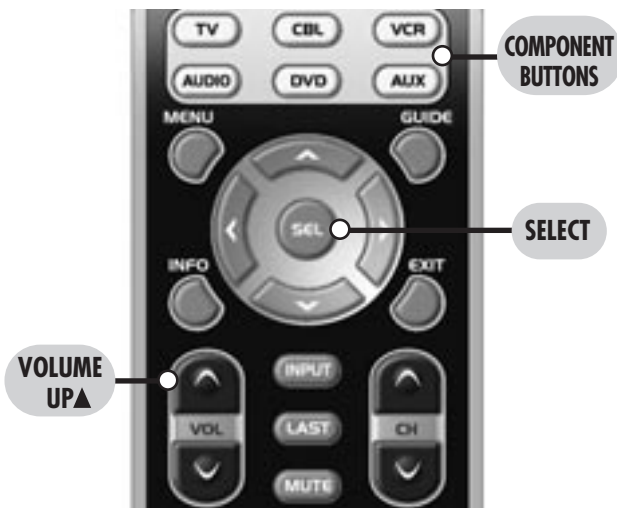

Repeat Steps 1–2 to erase SimpleSound commands from other components.

**NOTE:** To erase other 'punch through' commands, simply press the following buttons in place of VOLUME UP in Step 2:

- For Channel Control, press: CHANNEL UP
- For Transport Control, press: PLAY
- For OSD Control, press: MENU

## Factory Reset

You can reset your AVEX R6 remote to the original factory default settings.

Press and hold both the TV and RECORD buttons for about five seconds until the DVR/VCR component LED light blinks five times. All programming and set-up codes that you have entered into the remote will be erased and the AVEX R6 will return to the original factory default settings.

### Warning

This procedure will erase all programming and set-up codes that you have entered into the remote.



## Pre-Programmed Code Tables

The AVEX R6 Pre-Programmed code library is classified by category (TV, VCR, DVD, etc.).

Within each category, the code numbers are listed in rows by brand (Sony, Panasonic, B & K, etc.). Some brands have more than one three-digit code.

Circle the correct row and refer to it while you perform setup operations.

<b>CABLE/SAT</b>	Cable Set top boxes and satellite receivers	32
<b>TV</b>	TVs, Plasmas, Projectors and Monitors	33-34
<b>DVR/VCR</b>	VCRs, DVRs & Combo Units	35-36
<b>DVD</b>	DVD Players and Recorders	37
<b>AUDIO</b>	Amps, Preamps and A/V Receivers	38
<b>AUX</b>	iPod, Media PC, Gaming System, Lighting Controls	39

# CABLE/SAT

Brand Code Numbers

## CABLE Boxes

ABC	004 042
ADELPHIA	043 110
ADVANCED NEWHOUSE	043
ALTRIO	043
AMERICAST	099
ARMSTONG	110
AT&T BROADBAND	110
ATLANTIC BROADBAND	043 110
BELL SOUTH	099
BLUE RIDGE	043 110
BRESNAN	110
BRIGHT HOUSE	043 110
BUCKEYE COMM	110
CABLEVISION	043 110 108
CHARTER	043 110
COGECO	110
COMCAST	043 110
COMSAT	110
COX DIGITAL	043 110
DIRECTOR	110
GENERAL INSTRUMENT	110 004
GNC	099
INSIGHT	110
JERROLD	110 004
MASSILLON	110
MEDIACOM	110
MOTOROLA	110 148 111
MOXI	111
NCTC	110
OAK	031
PACE	043 110
PANASONIC	044 047
PHILIPS	085
PIONEER	043 034 105
RCA	047
RCN	110
RODGERS	043
SCIENTIFIC ATLANTA	001 042
SEREN	043
SERVICE ELECTRIC	110
SHAW	110
SIGECOM	043
SONY	108
SPRUCER	047
STARCOM	004
SUSQUEHANNA	043 110
TIME WARNER	043 110
TORX	004
UNITED CABLE	004
VIDEOTRON	043
WIDE OPEN WEST	043 099

## PANASONIC

142

PHILIPS	156 114
PROSCAN	116
RADIOSHACK	148
RCA	116
SAMSUNG	163 169 175
SONY	115
STAR CHOICE	148
TOSHIBA	114
VOOM	148

## SATELLITE Receivers

CABLEVISION	148
DIRECTV	173
DISH	122
ECHOSTAR	122
EXPRESSVU	122
GE	116
GENERAL INSTRUMENT	148
GOI	122
HITACHI	114
HTS	122
HUGHES	114
JVC	122
LG	170
MITSUBISHI	114
NEXT LEVEL	148



# TV

## Brand Code Numbers

ABEX	025	HARVARD	043
ADMIRAL	072 251 333	HAVERMY	081
ADVENT	247	HELLO KITTY	076
ADVENTURA	002	HIMITSU	043
AIKO	103	HISENSE	419
ALERON	028	HITACHI	011 166 363 009 010 012 023 075 158 072
AKAI	116 146 248 281 404 405	HP	378 316 327
A MARK	112	INFINITY	164
AMERICA ACTION	043	INFOCUS	333 330
AMPRO	073	INTEQ	073
AMSTRAD	052	INSIGNIA	350 399 400 052 164 403
ANAM	043 054 056 080 112	JANEIL	002
AOC	116 363 112 058	JBL	164
APEX DIGITAL	006	JCB	001
AUDIOVOX	076	JCPENNEY	363 024 116 008 009 030 065 258 333
BELCOR	116	JENSEN	013
BELL&HOWELL	333 072	JVC	038 034 001 083 199 210
BRADFORD	043	KAWASHO	116 001
BROKSONIC	238	KEC	043
BROCKWOOD	116	KENWOOD	116 001
CANDLE	116 002 003 363	KLOSS	002 059
CAPEHART	058	KTV	043 116
CELEBRITY	001	KURAZAI	072
CENTURION	116	LG	363 113 116 102 363 106 112
CETRONIC	043	LODGENET	072
CITIZEN	116 002 003 363 043 258 103	LOEWE	164
CLARION	043	LOGIK	072
CLASSIC	043	LUXMAN	363
CLP CLASSIC	333	LXI	166 007 138 052 251 333 164
COLORTYME	116	MAGNAVOX	164 059 116 003 060 061 363 022 333 094 226 390
CONCIERGE	073	MAJESTIC	333 072
CONCERTO	363	MARANTZ	116 164
CONTEC	043 050 051	MATSUI	164
CORNEA	116	MATSUSHITA	080
CRAIG	043 054	MAXENT	242
CROSLEY	164	MEGATRON	116 011
CROWN	043	MEMOREX	007 072 363
CURTIS MATHES	116 258 363	MGA	116 363 024 028 042
CXC	043	MIDLAND	333 073
DAEWOO	363 016 043 044 076 103 114 125	MINTEK	282 362
DAYTRON	363	MINUTZ	008
DELL	320 164 363	MITSUBISHI	124 109 024 363 028 040 042 146
DIMENSIA	333	MONTGOMERY WARD	333 072
DUKANE	011 025	MOTOROLA	081
DUMONT	116 073	MTC	116 363 258
DURABRAND	096	MULTITECH	043
DWIN	257	NAD	138 025
DYNASTY	043	NEC	272 132 134 116 040 016 024 056 019 262
EIKI	187	NET TV	242
ELECTROBAND	001	NIKEI	043
ELECTROHOME	024 076	NIKKO	116
ELEKTRA	072	NTC	103
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096 153	NUVISION	351
ENVISION	116	OLEVIA	432
ESA	323	ONKING	043
FISHER	007 057	ONWA	043
FUJITSU	246 198	OPTIMUS	025
FUNAI	028 043 052	OPTONICA	019 251
FUTURETECH	043	OPTOMA	265
GATEWAY	242 268	ORION	096
GE	073 116 008 009 034 056 074 155 333 363	PANASONIC	080 034 056 164 208
GEM	391	PHILCO	116 003 059 060 164 363 024 056
GIBRALTAR	116 073	PHILIPS	164 005 093 038 116 003 363 059 206
GOLDSTAR	113 116 102 004 106 112	PILOT	116
GRUNPY	028 043		
HALL MARK	363		
HARLEY DAVIDSON	028		

# TV

## Brand Code Numbers

PIONEER	234 025 018 023 116 272 393	YUPITERU	043
POLAROID	388	ZENITH	363 073 072 095 103
PORTLAND	363	ZONDA	112
PRISM	034		
PROSCAN	333		
PROTON	363 112 058 171 172		
PROTRON	392 398		
PULSAR	116 073		
QUASAR	034 056		
RADIO SHACK	019 363 043		
RCA	333 065 116 363 024 056 152 023 074		
REALISTIC	007 019 043 047		
RUNCO	072 182 073 395 416		
SAMPO	116 058 363 242		
SAMSUNG	258 050 089 105 363 333 228 229		
SAMSUX	116		
SANSEI	076		
SANSUI	096		
SANYO	166 007 020 053 057 082 187		
SCEPTRE	276		
SCOTCH	116		
SCOTT	028 043 363 048		
SEARS	138 030 363 007 028 057 094 333 082 166		
SELECO	205 011		
SHARP	251 019 014 028 029 363 022 175		
SHENG CHIA	081		
SHOGUN	116		
SIGNATURE	072		
SIMPSON	003		
SONY	001		
SOUNDESIGN	028 363 003 043		
SPECTRICON	112		
SQUAREVIEW	052		
STARLITE	043		
SSS	363 043		
SUPRA	116		
SUPRE MACY	002		
SUPREME	001		
SVA	328		
SYLVANIA	116 003 052 059 060 164 044 333		
SYNTAX OLEVIA	333 363 432		
TANDY	251		
TATUNG	056		
TECHNICS	034 080		
TECHNOL ACE	028		
TECHWOOD	363		
TEKNIKA	002 003 363 024 028 043 072 258		
TELERENT	072		
TERA	172		
TMK	363		
TNCI	073		
TOSHIBA	138 030 007 040 258 325		
TVS	096		
UNIVERSAL	008 009		
VICTOR	038		
VIDEO CONCEPTS	146		
VIDIKRON	174 164 188		
VIDTECH	363		
VIEWSONIC	242 389		
VIKING	002		
VIZIO	386 387		
WARDS	363 008 009 019 028 060 061 072 074 164 034		
WAYCON	015		
WESTINGHOUSE	076 276		
YAMAHA	116 363		
YORK	363		

**DVR/VCR**

Brand Code Numbers

**VCRs**

ADMIRAL	025 053
ADVENTURA	034
AIKO	117
AIWA	034 161
AKAI	016 146 043 124 125
AMERICA ACTION	117
AMERICAN HIGH	031
AMPRO	072
ANAM	145
ASHA	040
AUDIO DYNAMICS	012 023 039 043
AUDIOVOX	101
BEAUMARK	040
BROOKSONIC	035 037 129
CALIX	101
CANON	028 145
CAPEHART	108
CCE	024 117
CITIZEN	101 117
COLT	024
CRAIG	003 102 135
CURTIS MATHES	145
CYBERNEX	040
DAEWOO	111 116 117 005 010 108 110 112
DAYTRON	108
DBX	012 023 039 043
DYNATECH	034 053
ELECTROHOME	059
ELECTROPHONIC	101
EMERSON	006 029 035 017 025 027 145 034 036 037 101 129 131 153 162 116
FISHER	003 010 008 009
FUJI	031
FUNAI	034
GARRARD	034
GE	145 072 147 144
GO VIDEO	132 136 155 102 115
GOLDSTAR	101 114 013 012 123
GRADIENTE	034
HARLEY DAVIDSON	034
HARMAN KARDON	012
HARWOOD	024
HITACHI	026 150 034 043 160 013
HQ	034
INSTANTREPLAY	145
JCL	145
JCPENNEY	012 013 015 102 101
JENSEN	043
JVC	048 043 130 150 012 145
KEC	101
KENWOOD	048 034
KLH	024
KODAK	145 101
LG	101 114 013 012 123
LLOYD	034
LOGIK	024
LXI	034 003 009 017
MAGIN	102
MAGNAVOX	067 145 034 164
MARANTZ	067 012 145
MARTA	101
MATSUI	027 030
MATSUSHITA	145
MEI	145
MEMOREX	101 003 010 145 034 053 072 102 139
MGN TECHNOLOGY	040
MINOLTA	013
MITSUBISHI	059 061 151 013 051
MOTOROLA	145 053
MTC	034 102
MULTITECH	024 034
NEC	012 023 039 043 048
NIKKO	101
NOBLEX	040
NORDMENDE	043
OLYMPUS	031
OPTIMUS	101
OPTONICA	053
ORION	025
PANASONIC	070 145 163 167
PENTAX	013 145
PHILCO	145 034 067
PHILIPS	145 067 034 101 071
PILOT	101
PIONEER	021 013 048
PORTLAND	108
PROFITRONIC	040
PROTEC	024
PULSAR	072
QUARTZ	002
RADIO SHACK	123
RADIX	101
RANDEX	101
RCA	144 147 145 013 034 102
REALISTIC	003 008 010 145 034 102 053 101
RICO	058
RUNCO	148
SAMSUNG	102 113 115 112 144 147 125
SANKY	053
SANSUI	022 043 048 135
SANYO	003 010 102
SCOTT	017 037 112 129 131
SEARS	003 008 010 013 101 009 017 073 112
SHARP	149 145 165
SHINTOM	024
SHOGUN	040
SIGNATURE	034
SINGER	024
SONY	056 057 058 003 145 149 154
SOUNDESIGN	034
STS	013
SYLVANIA	145 034 059 067
SYMPHONIC	034
TANDY	010 034
TATUNG	039 043
TEAC	034 039 043
TECHNICS	145 070
TEKNIKA	145 019 034 101
THOMAS	034
TMK	006
TOSHIBA	112 131 008 059 013
TOTEVISION	102 101
UNITECH	102
VECTOR RESEARCH	012
VICTOR	048
VIDEO CONCEPTS	012 034
VIDEOSONIC	102
VILLAIN	034
WARDS	003 013 017 024 145 034 102 053 131
WESTINGHOUSE	024 025
XR-1000	024 145 034
YAMAHA	012 034 039 043
ZENITH	072 048 101 034 058

# DVR/VCR

Brand Code Numbers

## TV/VCR Combos

AMERICA ACTION	117
DAEWOO	005 117
EMERSON	153
FUNAI	034
GOLDSTAR	101 123
HARLEY DAVIDSON	034
HITACHI	034
JCPENNEY	101
LG	101 123
LLOYD	034
MAGNAVOX	034 067
MEMOREX	101
PANASONIC	070 167
PHILIPS	034 067 145
RADIO SHACK	123
RCA	034 144
SAMSUNG	102
SEARS	101
SONY	057 154 058
SYLVANIA	067
SYMPHONIC	034
THOMAS	034
ZENITH	034

## DVR Receivers

HUGHES	001
HUMAX	001
PHILIPS	001
REPLAY NETWORKS	775
SONY	804 805
TIVO	001
TOSHIBA	001

**DVD**

## Brand Code Numbers

AIWA	146
AKAI	281
ALLEGRO	091
APEX DIGITAL	087 111 115
BLAUPUNKT	111
BROKSONIC	130
CINEVISION	091
COBY	260
CYBERHOME	271
DENON	138 173
DURABRAND	091
DVD 2000	017
EMERSON	091 143
ENTERPRISE	074
FISHER	147
FUNAI	143
GOLDSTAR	091
GO VIDEO	137 091 220 221 222
GREENHILL	111
HARMAN KARDON	084 140
HITACHI	101
HITEKER	087
ILO	268
INITIAL	111
JBL	084
JVC	012
KENWOOD	151
KISS	279
KLH	135
KRELL	104
LITEON	264 265
LEXICON	148
LG	091 057
MAGNAVOX	001 096
MARANTZ	001 095
MALATA	267
MERIDIAN	153
MINTEK	111 282
MITSUBISHI	017
MYRYAD	102 134
NAD	088
NAKAMICHI	103
NESEA	111
ONKYO	076 035 180
OPTIMUS	023
OPPO	266
ORION	130
PANASONIC	138 144 150 285
PHILIPS	001 095
PHILIPS MAGNAVOX	035 001
PIONEER	023 131
POLAROID	233
POLK AUDIO	035 001
RIO	091
RJTECH	269
SAMSUNG	165 170 137 159 275
SANSUI	154
SANYO	147
SEARS	130
SENSORY SCIENCE	222
SHARP	094
SHINSONIC	033
SONIC BLUE	091
SONY	002 033 145 191 286
SYLVANIA	143
SYMPHONIC	143
TATUNG	102
TEAC	023 270
TECHNICS	138

TECHWOOD	088
THETA DIGITAL	023
TOSHIBA	035 130 141 164 188 273
URBAN CONCEPTS	035
VENTURER	149
YAMAHA	138 089 001 197
ZENITH	057 091

**DVD Recorders**

GO VIDEO	220 221 222
CYBERHOME	271
ILO	268
KISS	279
LITEON	265
PANASONIC	138
SENSORY SCIENCE	222
SONY	191
TOSHIBA	188

**TV/DVD Combos**

AKAI	281
AIWA	146
FUNAI	143
MINTEK	282
SAMSUNG	165
SYLVANIA	143
SYMPHONIC	143
TOSHIBA	130

**TV/DVD/VCR Combos**

MAGNAVOX	143
PANASONIC	144
SYLVANIA	143
TOSHIBA	164

**DVD/VCR Combos**

GO VIDEO	137
PANASONIC	150
PHILIPS	001 (VCR Functions for VCR 067)
SAMSUNG	137 159
SANSUI	154
SONY	145
TOSHIBA	141
ZENITH	091 (VCR Functions for VCR101)

# AUDIO

## Brand Code Numbers

ADCOM	082 092 225 161 269 356
AIWA	170 018 104 202 203 213 211 188
AKAI	189
ANTHEM	335 337
ARCAM	141 077
ATLANTIC TECHNOLOGY	342
AUDIO FILE	071
B & K	096 097
BOSE	070 170 224 347 409 460
BOSTON ACOUSTICS	447
CARVER	006 028 061 071 201 214 226 185 013 077 284
CITATION	148
CLARION	026
DENON	001 109 215 230 234 330
ELAN	057 290
ENLIGHTENED AUDIO	099 098
ESCIENT	451
FISHER	214 182
FLEXTRONICS	378
FOSGATE AUDIONICS	148 342
GOLDSTAR	008
HARMAN KARDON	148 233 077 154 118 318
HITACHI	020
INSIGNIA	589
INTEGRA	275 017 046 108 080 209
JAMO	398
JCPENNEY	216
JVC	163 191 114 279 291
KENWOOD	026 066 145 192 182 005 280 374
KLH	331
KOSS	216 573
KRELL	072 384
LEXICON	120 235 236 237 357 360
LINN	124 377
LUXMAN	009 139 052 165 115 004
MAGNAVOX	086 164 152 208
MARANTZ	006 028 031 040 063 185 186 265 289 492
MCINTOSH	238 286
MERIDIAN	100 012 013
MITSUBISHI	242 204
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NIRO	343
NILES	403
ONKYO	275 017 046 108 080 209
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292
PARASOUND	129 130 132 261 294 295 333 334
PHILIPS	249 250 063
PIONEER	014 039 044 069 168 116 035 078 198 480
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 073 075 095
ROTEL	074 083 085
SAMSUNG	016
SANSUI	040 048 110 063 065 228
SANYO	214
SCOTT	019
SHARP	026 094 175
SHERWOOD	024 102 106 447
SONY	002 018 247 248 166 101 184 218 271

SOUNDESIGN	036
SUNFIRE	344 345 182
TEAC	005 019 049 040 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
YAMAHA	026 253 169 067 173 205 264 232 089 274
ZENITH	143 210

### SATELLITE Radios

DELPHI	515
POLKAUDIO	515
SIRIUS	555
XM SATELLITE RADIO	515

# AUX

Brand Code Numbers

## iPod Controls

APPLE / iPod	901 912
BOSE	909
GRIFFIN	471
KENSINGTON	906

## MEDIA PC Controls

DELL	001
GATEWAY	001
HP	001
KEYSPAN	797
SONY	001
TOSHIBA	001
WINBOOK	001

## GAMING SYSTEM Controls

MICROSOFT / XBOX	908 607
SONY/PS2	914

## LIGHTING Controls

LITE-TOUCH	708 757
LUTRON	658 659 577
X-10	683 593
XANTECH	688 689

## Frequently Asked Questions

### **If the batteries run out, will I lose my settings?**

No. The AVEX R6 stores all of your settings in non-volatile FLASH memory. You could remove the batteries for months, replace them at your convenience, and the AVEX R6 would still remember your settings.

### **What is MacroPower?**

MacroPower is a very useful way to make a lot of things happen with one button push. For example, in most home theaters, to watch television, the user must turn on the TV, then turn on the Cable Box or the Satellite Receiver, then turn on the Surround Sound system for sound. Instead of pressing all of those buttons one at a time, MacroPower enables you to turn on all of these components, in the sequence you want, with one button push. For more information on why and how you should program MacroPower commands, refer to page 17 in this Manual.

### **What if my remote control no longer works from a distance?**

Replace the batteries with new Alkaline batteries.

### **Who can I contact for more answers?**

The Universal Remote Control technical support and customer service staff are ready to answer any questions you might have.

**E-Mail us at [techsupport@universalremote.com](mailto:techsupport@universalremote.com)**

**Visit our website [www.universalremote.com](http://www.universalremote.com)**

**Call us at (914)-835-4484 Monday - Friday,  
9AM to 6PM (EST) USA Limited Warranty**



## USA Limited Warranty

UNIVERSAL REMOTE CONTROL, INC. warrants this product against defects in material or workmanship for a period of one (1) year and as set forth below. Universal Remote Control will, at its sole option, repair the product using new or comparable rebuilt parts, or exchange the product for a comparable new or rebuilt product.

### **This warranty does apply to the following:**

- Units purchased from unauthorized resellers.
- Units purchased second-hand (used).
- Units installed or deployed for rental or commercial use.
- Damage caused by misuse, neglect, or acts of nature.
- Products that have been modified or incorporated into other products.
- Products purchased more than 12 months ago.

## Specifications

### **Learning Capability**

IR frequencies (15kHz to 100kHz)

### **Macro Capability**

6 Macros of up to 20 steps each  
IR Range (Line of Sight via Infrared) 30-50 feet,  
depending on the environment

### **Weight**

6.9 oz. (with batteries)

### **Size**

2 1/8" x 1 1/8" x 8 3/4"

### **Batteries**

Two AAA Alkaline batteries included

## Information To The User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

## Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note : The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **NOTE**



*500 Mamaroneck Avenue, Harrison, NY 10528*  
*Phone: (914) 835-4484 Fax: (914) 835-4532*  
[www.universalremote.com](http://www.universalremote.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>