

Operating Manual for 2 in 1 Cable TV Remote Control

UR-S86TVE



Universal Remote Control, Inc.

www.universallremote.com


OCE-0003E Rev 02(05/14/02)

Instructions

This remote control is preprogrammed to operate CABLE Box. Please program it for your TV by following the instructions shown below.

Batteries

The remote control uses AAA batteries. Please be sure to match the batteries with the (+) and (-) markings inside the battery compartment during installation.

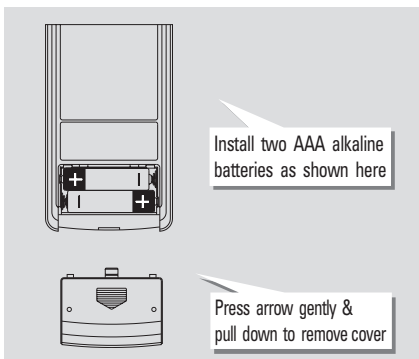

Programming your remote control

Setup for your cable box

No setup is required. The remote control is preprogrammed to operate your cable box.

Setup for your TV

Find your TV brand and its three-digit code on the back of this manual. If the TV brand is not listed, please use the **Searching Method** in **STEP3**.

STEP1 Turn on your TV manually.

***Tip:** If you have RCA TV, don't turn on the TV.

STEP2 Press [TV] and [MUTE] buttons simultaneously until the red light is on.

STEP3 Point the remote control toward the TV and enter the three-digit code from the code table. If there is more than one code number assigned to your TV brand, try one code number at a time until the TV turns off right after you entered the number.

Searching Method

Press [CH +] button and hold until the TV turns off. As soon as the TV turns off, release [CH+] button.

***Tip:** You can confirm the power off and on by pressing [MUTE] button.

STEP4 Press [TV] button to store the three-digit code.

***Tip:** Red light will blink twice.

Three-digit code :

Set-up for your VOLUME control

The remote control is preprogrammed to control VOLUME and MUTE functions through your TV. To switch VOLUME and MUTE functions to your Cable Box:

STEP1 Press [POWER] and [MUTE] buttons simultaneously until red light is on.

STEP2 Press [VOLUME +] button.

STEP3 Press [POWER] button.

To return to the TV's VOLUME, press [TV] button.

***Tip:** Red light will blink twice.

Set-up for advanced functions

A. To turn on your TV and Cable at the same time with [POWER] button:

STEP1 Press [POWER] and [0] buttons simultaneously until the red light is on.

STEP2 Press [CH +] button.

***Tip:** Red light will blink twice.

The [POWER] button sends out the TV and CABLE power commands if you press the [POWER] button.

To return to the original function, press the [CH-] button in the **STEP2**.

B. Recalling the TV Three-digit code:

STEP1 Press [TV] and [MUTE] buttons simultaneously until the red light is on.

STEP2 Press [VOLUME -] button.

The red light will blink a number of times indicating the number of each digit of the code. Each digit is separated by one second interval of red light being off.

***Tip:** One blink, three blinks and 10 blinks, indicates the code number 130.

Helpful hints

Set-up for your Cable Box

The remote control is preprogrammed to control your cable box. If it does not work properly, please set-up the right code by using the three-digit code or searching method.

If you have a TV with a remote control, we recommend that you plug its power cord directly into a wall outlet if available (your cable installer may select an alternate setup)

Operation

If red light does not blink when you press keys the operation is intermittent:

Make sure the batteries are inserted correctly. Replace old batteries with two new AAA batteries. Please do not mix old batteries with new ones.

Three-digit Code Table

CABLE

| Remote | Converter | Converter Model | Code No |
|-----------|--------------------|-----------------|---------|
| UR-S86TVE | Scientific Atlanta | 8600 | 003 |

TV

| BRAND NAME | CODE NUMBER (3 DIGIT) LIST |
|---------------|--|
| A MARK | 112 143 |
| ADMIRAL | 072 081 160 161 |
| AIWA | 234 |
| AKAI | 070 146 004 |
| AMPRO | 073 167 241 |
| ANAM | 043 054 055 056 080 112 131 232 |
| AOC | 058 070 004 112 222 |
| AUDIOVOX | 076 103 |
| CANDLE | 070 002 003 004 |
| CANON | 232 |
| CAPEHART | 058 |
| CETRONIC | 043 |
| CITIZEN | 070 002 003 004 101 103 143 |
| CLASSIC | 043 |
| CONCERTO | 004 |
| CONTEC | 043 051 207 230 |
| CORONADO | 143 |
| CRAIG | 043 054 028 235 |
| CROWN | 043 143 |
| CURTIS MATHES | 070 004 101 143 232 |
| CXC | 043 |
| DAEWOO | 076 103 055 004 127 143 016 043 044 125 120 214 215 229 231 243 |
| DAYTRON | 004 143 |
| DWIN | 161 |
| DYNASTY | 043 |
| DYNATECH | 062 209 234 |
| ELECTROHOME | 024 076 143 |
| EMERSON | 028 043 048 155 005 076 096 004 051 143 151 153 154 216 217 230 232 234 242 246 |

| BRAND NAME | CODE NUMBER (3 DIGIT) LIST |
|---------------|--|
| ENVISION | 070 |
| FISHER | 007 057 |
| FUNAI | 028 043 234 |
| FUTURETECH | 043 |
| GE | 160 161 070 073 130 144 004 008 009 034 056 074 091 155 223 224 232 241 |
| GOLDSTAR | 004 106 119 110 112 113 127 143 242 244 |
| GO VIDEO | 235 |
| HALL MARK | 004 |
| HARMAN KARDON | 211 |
| HITACHI | 163 004 007 009 011 072 010 012 023 075 143 158 208 234 |
| INFINITY | 164 |
| INKEL | 129 |
| INSTANTREPLAY | 232 |
| JBL | 164 209 |
| JCL | 232 |
| JCP | 070 |
| JCPENNY | 004 008 024 030 065 101 143 160 156 235 242 |
| JENSEN | 013 |
| JVC | 038 001 034 083 232 238 |
| KENWOOD | 001 070 234 |
| KLOSS | 002 059 |
| KMC | 219 |
| KTV | 070 043 143 154 |
| LG | 004 106 119 110 112 113 127 143 242 244 |
| LLOYD | 234 |
| LODGENET | 072 |
| LOGIK | 072 |
| LUXMAN | 004 |
| LXI | 007 015 052 081 160 164 234 |
| MAGNAVOX | 070 003 004 022 059 060 061 063 064 127 164 094 160 056 232 234 239 |
| MAGIN | 235 |
| MARANTZ | 164 070 232 |
| MARTA | 242 |
| MATSUI | 164 |
| MEMOREX | 004 007 072 232 234 241 242 |

| BRAND NAME | CODE NUMBER (3 DIGIT) LIST |
|-------------|--|
| MEI | 232 |
| METZ | 088 |
| MGA | 024 070 004 042 |
| MINERVA | 088 |
| MITSUBISHI | 109 024 042 004 040 146 028 124 226 247 |
| MTC | 070 004 062 101 209 229 234 235 |
| MULTITECH | 234 |
| NAD | 015 025 |
| NEC | 070 130 134 040 056 007 019 024 004 213 |
| NIKEI | 043 |
| ONKING | 043 |
| ONWA | 043 |
| OPTONICA | 019 081 |
| ORION | 096 201 202 203 204 205 |
| PANASONIC | 034 056 080 164 206 232 240 |
| PENNEY | 065 160 004 008 070 143 030 221 |
| PENTAX | 232 |
| PHILCO | 070 003 004 024 056 059 060 063 064 127 143 164 232 234 |
| PHILIPS | 164 005 038 093 127 070 003 004 059 232 234 242 |
| PILOT | 242 |
| PIONEER | 025 023 135 176 004 018 070 |
| PORTLAND | 004 143 |
| PROSCAN | 144 160 161 167 |
| PROTON | 004 058 143 171 173 193 131 |
| QUASAR | 034 056 232 240 |
| RADIO SHACK | 004 019 127 143 043 244 |
| RCA | 160 161 144 156 065 070 004 023 024 056 074 152 221 232 234 235 |
| REALISTIC | 007 019 232 234 235 242 |
| RICO | 237 |
| RUNCO | 072 169 073 130 179 180 181 |
| SAMPO | 070 004 058 218 220 |
| SAMSUNG | 004 101 127 133 143 160 089 105 070 233 235 |
| SANYO | 007 053 057 082 020 212 |
| SCOTT | 004 005 028 043 048 143 |
| SEARS | 004 007 015 028 030 057 082 094 143 160 242 |

| BRAND NAME | CODE NUMBER (3 DIGIT) LIST |
|-----------------------|--|
| SELECO | 189 |
| SHARP | 081 014 019 028 004 022 081 143 175 029 232 245 |
| SIGNATURE | 072 234 |
| SONY | 001 085 126 139 232 236 237 |
| SOUNDESIGN | 003 004 028 043 234 |
| SPECTRICON | 112 |
| SSS | 004 043 |
| SUPRE MACY | 002 |
| SYLVANIA | 070 003 059 060 063 064 127 160 164 044 056 210 232 234 |
| SYMPHONICS | 052 234 |
| TANDY | 081 234 |
| TATUNG | 056 062 209 |
| TEAC | 234 |
| TECHNICS | 034 080 232 240 |
| TECHWOOD | 004 |
| TEKNIKA | 002 003 004 024 028 043 072 101 143 103 227 232 234 242 |
| TELERENT | 072 |
| TERA | 172 |
| TMK | 004 |
| TOSHIBA | 015 030 007 040 062 101 |
| TOTEVISION | 143 235 242 |
| UNIVERSAL | 008 009 |
| UNITECH | 235 |
| VIDEO CONCEPTS | 146 234 |
| VIDEOSONIC | 235 |
| VIDIKRON | 174 188 |
| VIDTECH | 004 |
| WESTINGHOUSE WARDS | 076 004 064 164 008 009 019 028 060 061 063 072 074 143 070 224 225 232 234 235 |
| YAMAHA | 004 070 234 |
| YORK | 004 |
| YUPITERU | 043 |
| ZENITH | 073 072 095 103 234 237 241 242 |
| ZONDA | 112 |

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>