

Operating Instructions For 3 Function Cable Remote Control

UR3-SR



1 Introduction

The remote control is designed to operate three devices, CBL(S/A Explorer and other Cable boxes), TV, and VCR/DVD equipments.

2 Replacing Batteries


Before you program or operate the remote control, you must install two new AAA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

Install two
AAA alkaline batteries
as shown here

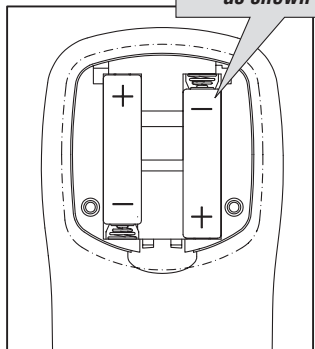

4 Operations


Default State:

Device Default: Cable mode with S/A Explorer.
Volume Default: Vol +/- & Mute from TV mode.

VOD button:

This button sends out CH 999 with default and a customer can program any commands, up to 10 commands. Please refer to section E for details.

3 Button Functions

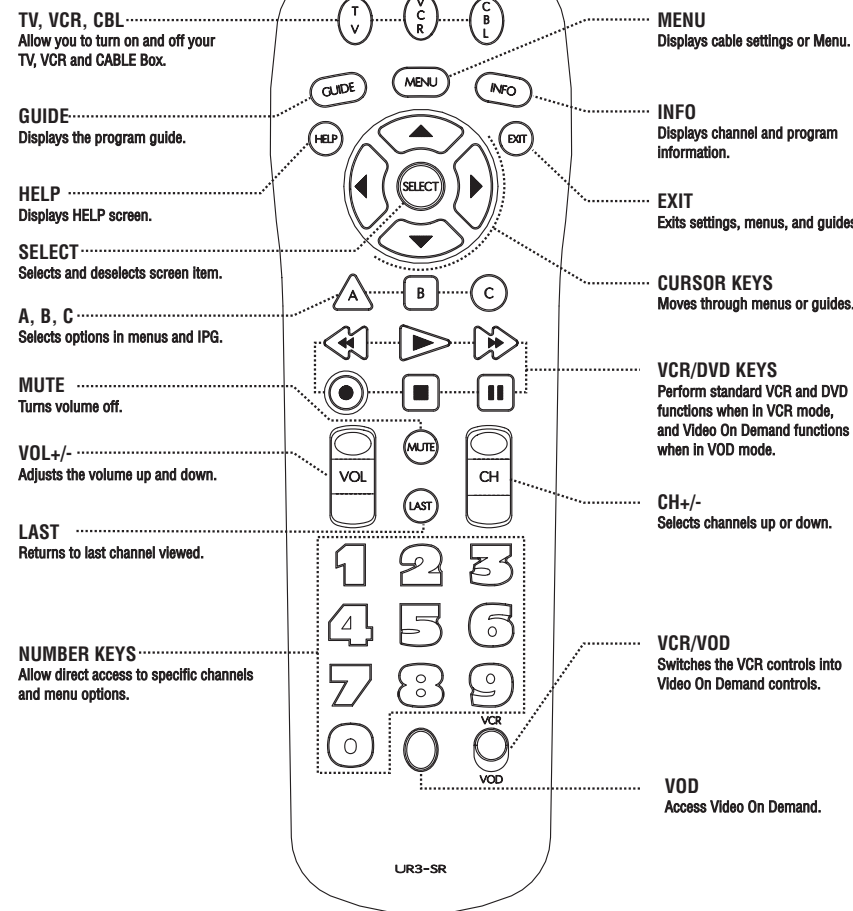

5 Programming the Remote Control.

A. Three Digit Code Method.

The remote control can be programmed by pressing in a three digit code number that corresponds to particular manufacturers and brands of Audio/Video equipment. The three digit code numbers are listed in the code table of the instruction manual.

STEP1 Turn on the equipment you wish to program. (CBL, TV, VCR or DVD)

STEP2 Press the [DEVICE] button (CBL, TV or VCR) to be programmed and the [SELECT] button simultaneously for 3 second. The device LED will turn on indicating that it is ready to be programmed.

***Tip:** The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP3 Point the remote control toward the equipment and enter the three digit code number assigned to your brand from the code tables.

***Tip:** The equipment will turn off when the correct three digit code number has been entered. You can verify that you have selected the correct code by pressing the [MUTE] button, the equipment should turn On and Off.

***Note:** If there is more than one three digit number listed for your brand, try one code number at a time until your equipment turns off.

STEP4 Store the three digit code number by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

***Note:** Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three digit code number from the same brand list.

B. Auto Search Method.

If none of the three digit code numbers assigned to your brand turns off your equipment or the code table does not list your brand, you can use the **Auto Search Method** to find the correct three digit code number for your equipment by the following steps:

STEP1 Turn on the equipment you wish to program. (CBL, TV, VCR or DVD)

STEP2 Press the [DEVICE] button (CBL, TV or VCR) to be programmed and the [SELECT] button simultaneously for 3 second. The device LED will turn on indicating that it is ready to be programmed.

***Tip:** The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP3 Press the [CH+] or [CH-] button one step at a time. The remote will emit a series of Power ON/OFF code signals. Release the [CH+] or [CH-] button as soon as the equipment turns off.

***Tip:** You can verify that you selected the correct code by pressing the [MUTE] button. The equipment should turn On and Off.

STEP4 Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

C. To Find the Three Digit Code Number That was Stored in the Device.

STEP1 Press the [DEVICE] button (CBL, TV or VCR) you wish to verify and the [SELECT] button simultaneously for 3 second.

***Tip:** The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP2 Press the [INFO] button.

The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a 1 second interval of the LED being off.

Example: One blink, three blinks and eight blinks with an interval of 1 second LED being off, indicates the code number 138.

Note: Ten blinks is equal to the number 0.

D. Programming a second TV to VCR Mode.

STEP1 Press the [DEVICE] button [VCR] to be programmed and the [SELECT] button simultaneously for 3 seconds.

***Tip:** The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP2 Press the [TV] button to pick up the TV code table.

STEP3 Point the remote control toward the equipment and enter the three digit code number assigned to your TV brand from the code tables.

STEP4 Store the three digit code number by pressing the [DEVICE] button (VCR) once again. The device LED will blink twice to confirm that the code has been stored.

E. Programming For Advanced Function.

In the CABLE device mode, the A,B,C and VOD buttons can be programmed to act as a macro button to send out up to 10 commands with one button press.

STEP1 Press the [CBL] button to select the CABLE mode.

STEP2 Press the [VOD] button and the [SELECT] button simultaneously for 3 second. The CBL device LED will turn on for 20 seconds.

STEP3 Press up to 10 buttons you wish to store. The CBL device LED will blink once for each command entered.

Universal Remote Control, Inc.

www.universalremote.com

OCE-0009A Rev 01(11/21/02)

STEP4 Press the [CH+] button to store the functions that are selected. The CBL device LED will blink twice to confirm the storage of functions.

To erase the Macro programming and return to the original function:

STEP1 Press the [CBL] button to select the CABLE mode.

STEP2 Press [VOD] button and the [SELECT] button simultaneously for 3 second. The CBL device LED will turn on for 20 seconds.

STEP3 Press the [CH+] button to erase the functions stored in the button. The CBL device LED will blink twice to confirm that the memory button has been erased.

F. Volume Punch Through.

The user can program the volume controls (Volume UP, Down and MUTE) to operate from one mode to any other modes. The default volume control settings on the remote control is TV volume control.

STEP1 Press the [CBL] button you wish to punch through to and the [SELECT] button simultaneously for 3 second.

**Tip:* The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP2 Press the [VOL +] button. The device LED will blink.

STEP3 Press the [DEVICE] button (CBL, TV or VCR) you wish to punch through from. The CBL device LED will blink twice to confirm the programming.

Example: If you wish to have the CABLE volume operate, select the [CBL] button in Step 3.

G. Channel Punch Through:

The user can program the Channels (CH UP, Down, Numeric buttons and LAST) to operate from one mode to any other modes. The default channel control settings on the remote control is CABLE channel control.

STEP1 Press the [CBL] button you wish to punch through to and the [SELECT] button simultaneously for 3 second.

**Tip:* The LED will light on for 20 seconds. The next step must be entered while LED is on.

STEP2 Press the [VOL -] button. The device LED will blink.

STEP3 Press the [DEVICE] button (CBL, TV or VCR) you wish to punch through from. The CBL device LED will blink twice to confirm the programming.

Example: If you wish to have the TV channel, select the [TV] button in Step 3.

H. LOW BATTERY WARNING.

When the battery is low (2.3V-2.0V) and needs to be replaced with fresh batteries, device LED will blink 2 times in sequence whenever a [DEVICE] button is pressed to turn on equipment.

I. FACTORY RESET FUNCTION.

Press [CBL] device button and the [REC] button simultaneously for 5 seconds. The three devices LED will blink 3 times sequentially.

J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

6 Set-up Code Tables

CABLE TV

MAKER(BRAND) NAME	CONVERTER	CODE No
MOTOROLA GENERAL INSTRUMENT JERROLD	DCT Series	002
	CF12200	002
	CF12000	012
	DRZ	024
	DL4, DP(V), DQ(N)(V), DPBB	025
	DRX	027
	Some Model	048
	CR6000	042
	CR6600, 6800, CR83	043
	CRX5000	044
HAMLIN	IM781R	046
	IM781	047
NSC	SIGMAONE, P1, P2, P3, SIGMA 2000	037
	RYC56, RKDM	038
OAK	SIGMA 2001, 2002	039
	SIGMA 450, 500, 550	040
PACE	DI4000 Series	004
	140, 145, 170, 175	030
PANASONIC	110, 120, 130, 150, 160	031
	VOYAGER Series	001
PIONEER	BA9000	01
	BA4100, 4200, 4500	028
REGENCY	BA-V1000	029
	ALL MODELS	045
SCIENTIFIC ATLANTA	EXPLORER Series	001
	8600X	011
SONY	8600	021
	8540, 8570, 8590	022
TOSCOM	8500	023
	DHG-M55CV	003
ZENITH	5507	035
	5503A	036
	MN2500	032
	PM	033
	Z-TAC	034

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 096 160 161
AIKO	103
AKAI	004 070 146
ALARON	028
AMARK	112 143
AMERICA ACTION	043

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AMPRO	073 167
ANAM	043 054 055 056 080 112 131
AOC	004 058 070 112
AUDIOVOX	043 076 103
BAYSONIC	043
BELL&HOWELL	072
BRADFORD	043
BROKONIC	096
CAIRN	206
CANDLE	002 003 004 070
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CINERAL	103 120
CITIZEN	002 003 004 070 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051 227 250
CORONADO	143
CRAIG	028 043 054
CROSLEY	164
CROWN	043 143
CURTIS MATHES	004 011 070 072 081 101 120 143 164
CVC	043
DAEWOO	004 016 043 044 055 076 103 120 125 127 143 234 235 249
DAYTRON	004 143
DENON	011
DUMONT	004 073
DWIN	161
DYNASTY	043
DYNATECH	062 229
ELECTROBAND	001
ELECTROHOME	024 076 143
EMERSON	004 005 028 043 048 051 076 096 143 151 153 154 155 236 237 250
ENVISION	070
FISHER	007 057
FUJITSU	028 198 210 211
FUNAI	028 043 052
FUTURETECH	043
GE	004 008 009 034 056 070 073 074 081 091 120 130 144 155 160 161
GIBRALTER	004 073
GOLDSTAR / LG	004 106 110 112 113 119 127 143
GRUNPY	028 043
HALL MARK	004
HARLEY DAVIDSON	028
HARMAN KARDON	164 231
HARWARD	043
HITACHI	004 007 009 010 011 012 023 072 075 143 158 163 228
HITACHI	164
INFINITY	129
INKEI	073
INTEQ	073
JBL	164 229
JCB	001
JCPENNEY	004 008 024 030 065 070 101 143 156 160
JENSEN	013
JVC	001 034 038 083 199 208
KENWOOD	001 070
KLOSS	002 059
KTV	070 043 143 154
LOGENET	072
LOEWE	209 211
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164
MAGNAVOX	003 004 022 028 056 059 060 061 063 064 070 094 127 160 164
MAJESTIC	072
MARANTZ	070 164
MATSUI	164
MATSUSHITA	080
MEGATRON	004
MEMOREX	004 007 028 072 096
MEZ	080
MGA	004 024 042 070
MIDLAND	073
MINERVA	088
MINUTZ	008
MITSUBISHI	109 024 042 004 040 146 028 124 214 246 081
MOTOROLA	081
MTC	070 004 062 101 229 249
MULTITECH	043
NAD	015 025
NEC	070 130 134 040 056 007 019 024 004 233
NIKEI	043
NIKKO	103
NTC	103
ONKING	043
ONWA	043
OPTIMUS	080
OPTONICA	019 081
ORION	096 201 202 203 204 205 028 096

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
PANASONIC	034 056 080 164 212 216 226
PHILCO	070 003 004 024 056 059 060 063 064 127 143 164
PHILIPS	164 005 038 093 127 070 003 004 059 213
PIONEER	023 025 135 176 004 018 070
PORTLAND	004 143 103
PRISM	034
PROSCAN	144 160 161 167
PROTON	004 058 143 171 173 193 131
QUASAR	034 056
RADIO SHACK	004 019 127 143 043
RCA	160 161 144 156 065 070 004 023 024 056 074 152 081
REALISTIC	007 019
RUNCO	072 169 073 130 179 180 181 073
SAMPO	070 004 058 207
SAKSUNG	004 101 127 133 143 160 089 105 070 215
SANSEI	120
SANSUI	096
SANYO	007 053 057 082 020 232
SCOTCH	004
SCOTT	004 005 028 043 048 143
SEARS	004 007 015 028 030 057 082 094 143 160 052 164
SELECO	189 200
SEMIVOX	043
SEMP	015
SHARP	081 014 019 028 004 022 081 143 175 029
SIGNATURE	072
SONY	001 085 126 139
SOUNDESIGN	003 004 028 043
SPECTRCON	112
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SYLVANIA	070 003 059 060 063 064 127 160 164 044 056 230
SYMPHONIC	052
TANDY	081
TATUNG	056 062 229
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103 247 103 164
TELERENT	072
TERA	172
TMK	004
TNCO	073
TOSHIBA	015 030 007 040 062 101
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDEORON	174 188 164
VIDTECH	004
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 143 070
WESTING HOUSE	076
YAMAHA	004 070
YORK	004
YUPIITERU	043
ZENITH	072 073 095 103 011 096
ZONDA	112

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	025 053
AIKO	117
AKAI	034 101
AKAI	016 043 046 124 125 142 146
AMERICA ACTION	117
AMERICAN HIGH	072
JAMPRO	072
JANAM	031
JASHA	040
AUDIO DYNAMICS	012 023 039 043
AUDIOVOX	101
BEAUMARK	040
BROKSONIC	035 037 044 129 152 231 025
CALLX	101
CANON	028 031
CAPEHART	108
CCE	024 117
CINERAL	117
CITIZEN	101 117
COLT	024
CRAIG	003 040 135 024 101
CURTIS MATHES	031 041 156
CYBERNEX	040
DAEWOO	117 119 005 116 007 010 065 108 110 112
DAYTRON	108
DBX	012 023 039 043
DIMENSIA	156
DYNATECH	034 053
ELECTROHOME	059 101

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ELECTROPHONIC	101
EMERSON	006 029 035 025 027 034 036 037 046 101 129 131 138 017 031 044 152 153 157 231 117
FISHER	003 008 009 010
FUJI	031
FUNAI	034
GARRARD	034
GE	031 072 144 147 063 151 107 109 156 126 232 233 040 053
GO VIDEO	040 132 136
GOLDSTAR / LG	101 123 012 013 114
HARLEY DIVISION	034
HARMAN KARDON	012 045
HARWOOD	024
HITACHI	013 026 034 063 137 150 156
HQ	034
HUGHES	013
INSTANTREPLAY	031
JCL	031
JCPENNEY	012 013 040 101 156 066 234 031
JENSEN	043
JVC	048 050 043 130 060 012 031 150 055 158
KEC	101 117
KENWOOD	014 034 047 048 023
KH	031 101
KODAK	031 101
LLOYD	034
LOGIK	074
LXI	034 003 009 017 101
MAGIN	040
MAGNASONIC	117
MAGNAVOX	067 031 034 041 068 154 160 064
MARANTZ	067 069 031 067 012 023
MARTA	101
MATSUI	027 030
MATSUSHITA	031
MEI	031
MEMOREX	102 101 003 010 014 031 034 053 072 139 134 234 025 040
MGA	045 046 059
MGM TECHNOLOGY	040
MINOLTA	013 156
MITSUBISHI	059 061 046 051 142 013 045 162 232 053
MOTOROLA	031 053
MTC	034 040
MULTITECH	024 034
NEC	012 023 043 048 039
NIKKO	101
NORLEX	040
NORDMENDE	043
OLYMPUS	031
OPTIMUS	053 101
OPTONICA	053 054
ORION	231 025
PANASONIC	070 133 031 066 160 161 234
PENTAX	013 031 063 156A
PHILCO	031 034 067 025
PHILIPS	031 067 034 101 054 071
PILOT	101
PIONEER	021 013 048
PORTLAND	108
PROFITRONIC	040
PROTEC	024
QUARTZ	002 014
QUASAR	070 133 161 031 066 160 234
RADIO SHACK	123 034
RADIX	101
RANDEX	101
RCA	107 109 144 147 151 013 041 034 040 156 031 140 232 233 053
REALISTIC	003 008 010 014 031 034 040 053 054 101
RICO	058 078
SALORA	014
SAMSUNG	102 040 032 104 107 109 112 113 115 120 122 125 159
SANRY	053
SANSUI	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>