 


2011 **VERSA**

QUICK REFERENCE GUIDE



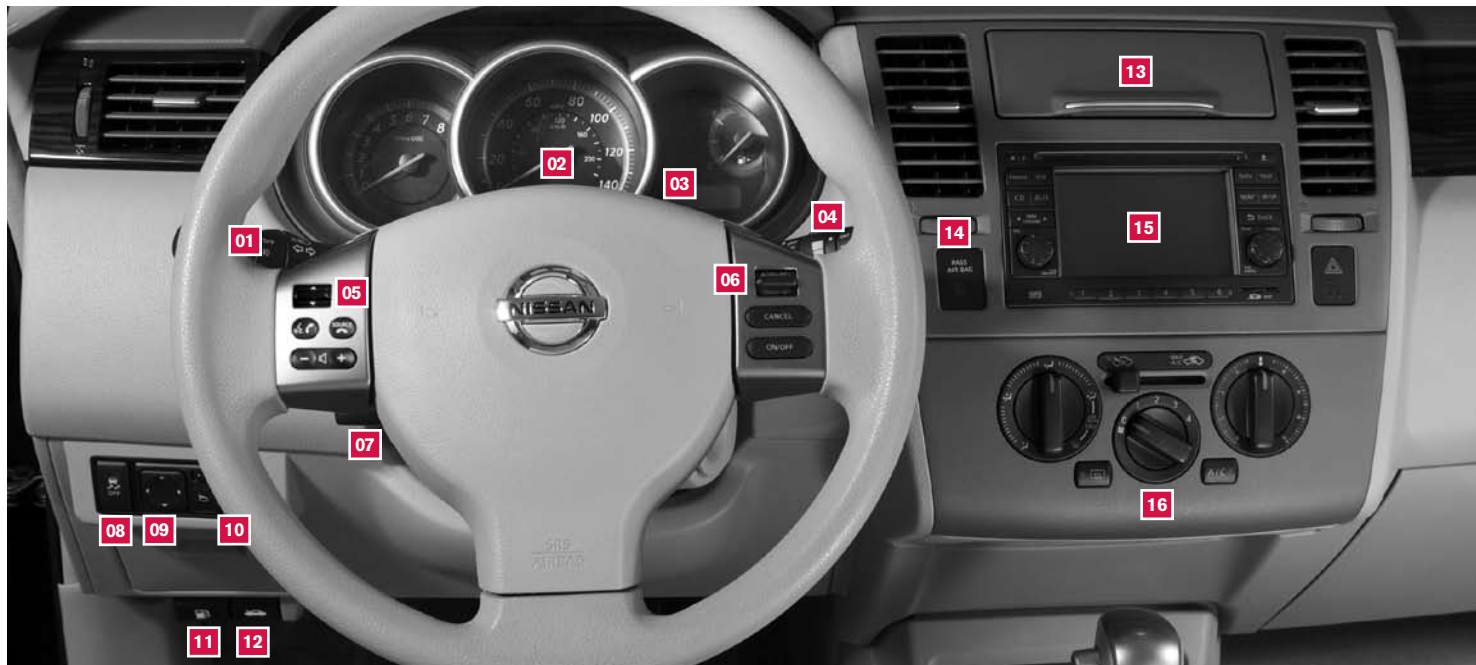

- 01** HEADLIGHT AND TURN SIGNAL CONTROL
- 02** LOW TIRE PRESSURE WARNING LIGHT
- 03** TWIN TRIP ODOMETER*
- 04** WINDSHIELD WIPER/WASHER SWITCH

- 05** STEERING WHEEL SWITCHES FOR AUDIO/BLUETOOTH*
- 06** CRUISE CONTROL
- 07** STEERING WHEEL TILT ADJUSTMENT*
- 08** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*

- 09** OUTSIDE MIRROR CONTROL SWITCH
- 10** INSTRUMENT BRIGHTNESS CONTROL (behind steering wheel)*
- 11** FUEL-FILLER DOOR RELEASE
- 12** HOOD RELEASE*

- 13** IPOD® / USB PORT
- 14** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 15** AUDIO AND NAVIGATION SYSTEM
- 16** CLIMATE CONTROL SYSTEM

*See your Owner's Manual for more information.

NEW SYSTEM FEATURES

USB/iPod® Interface (if so equipped) 2
 Navigation System (if so equipped) 2

ESSENTIAL INFORMATION

Loose Fuel Cap (if so equipped) 3
 Tire Pressure Monitoring System (TPMS) 3
 ABS Self-Test (if so equipped) 3

FIRST DRIVE FEATURES

NISSAN Intelligent Key™ System (if so equipped) 4
 Seat Adjustments 4
 Outside Mirror Control Switch (if so equipped) 4
 Starting the Engine 5
 Headlight Control Switch 5
 Windshield Wiper Switch 6
 Climate Controls 6
 FM/AM/XM® Radio with CD Player (if so equipped) 7
 Parking Brake 7
 Rear Hatch/Trunk Lid Release 8
 Fuel-Filler Door 8

SYSTEM GUIDE

Cruise Control (if so equipped) 9
 Bluetooth® Hands-free Phone System (if so equipped) 9



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional Information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at www.nissanusa.com.



This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

new system features

USB/IPOD® INTERFACE (if so equipped)

- When a compatible USB memory device or iPod® is plugged into the USB jack **01**, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the **"Display screen, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.



 
NAVIGATION SYSTEM (if so equipped)

- Your Navigation system can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- Your vehicle's position is constantly tracked. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner's Manual.

LOOSE FUEL CAP (if so equipped)

- The LOOSE FUEL CAP indicator displays in the odometer **01** when the fuel-filler cap is not tightened correctly after the vehicle has been refueled.
- To install the cap properly, push and turn the cap clockwise until ratcheting clicks are heard. Then press the loose fuel cap reset button **02** to turn the indicator light off.
- If the cap is not properly tightened the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

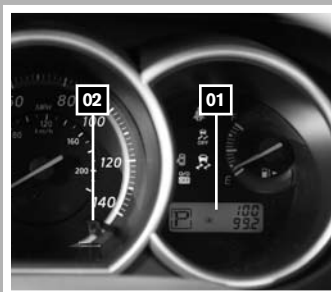

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- The TPMS monitors tire pressure. If the TPMS is not functioning properly, the low tire pressure warning light will flash for approximately 1 minute and the light will remain on after 1 minute. Have the system checked by a NISSAN dealer.
- If the low tire pressure warning light illuminates but does not blink, check the tire pressure in all four tires. Adjust the tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver’s door opening.
- After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16MPH (25km/h) to activate the TPMS and turn off the low tire pressure warning light.
- The low tire pressure warning light may come on in very low temperatures. When the tires heat up, the light will go out.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

ABS SELF-TEST (if so equipped)

- This vehicle has a built-in diagnostic feature that tests the system each time you start the engine and move the vehicle at a low speed in forward or reverse.
- When the self-test occurs, you may hear a “clunk” noise and/or feel a pulsation in the brake pedal. This is normal and does not indicate a malfunction.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

NISSAN INTELLIGENT KEY™ SYSTEM (if so equipped)

The NISSAN Intelligent Key™ system allows you to lock or unlock your vehicle, open your trunk or rear hatch and start the engine.

- To lock or unlock a door, push any door handle request switch **01** once.
- Push any door handle request switch **01** within 1 minute of unlocking the door and all other doors will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



 
SEAT ADJUSTMENTS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Pull up on the lever **02** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

SEAT LIFTER (if so equipped for driver’s seat)

- Pull up or push down on the adjusting lever **03** repeatedly to adjust the seat height.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

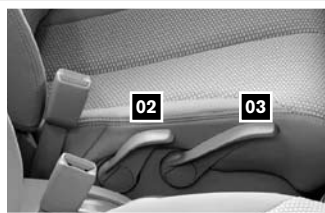

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- Move the switch **01** right or left to select the right or left mirror.
- Move the control switch **02** up, down, right or left to adjust the mirror angle.

 
For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



STARTING THE ENGINE

AUTOMATIC TRANSMISSION (if so equipped)
(NISSAN Intelligent Key™ models only)

- Depress the brake pedal.
- Push the ignition switch in.
- Confirm the Intelligent Key system warning light is illuminated green.
- Turn the ignition switch to start the engine.

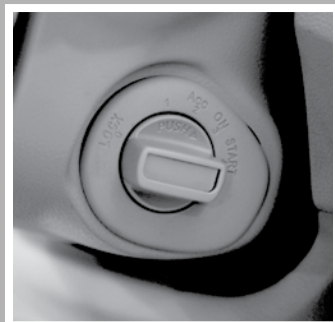

MANUAL TRANSMISSION (if so equipped)
(NISSAN Intelligent Key™ models only)

- Depress the brake pedal.
- Move the shift lever to N (Neutral).
- Depress the clutch pedal to the floor while pushing the ignition switch in.
- Confirm the Intelligent Key system warning light is illuminated green.
- Turn the ignition switch to start the engine.

 
TURNING THE ENGINE OFF

- For automatic transmission, move the shift lever to the P (PARK) position, apply the parking brake and turn the ignition switch to the LOCK position.
- For manual transmission, apply the foot brake, place the vehicle in 1st gear, apply the parking brake and turn the ignition switch to the LOCK position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.

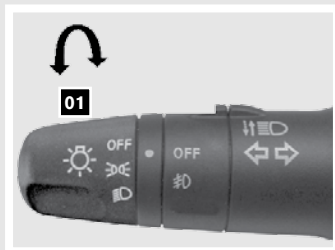


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.


first drive features

WINDSHIELD WIPER SWITCH

 - Move the lever to the following positions to operate the windshield wipers:
 - 01** Intermittent (**INT**) – Front wipers operate intermittently.
 - 02** Low (**LO**) – Front wipers operate at a continuous low-speed.
 - 03** High (**HI**) – Front wipers operate at a continuous high-speed.
 - 04** Rear Wiper (**REAR**) (if so equipped) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.

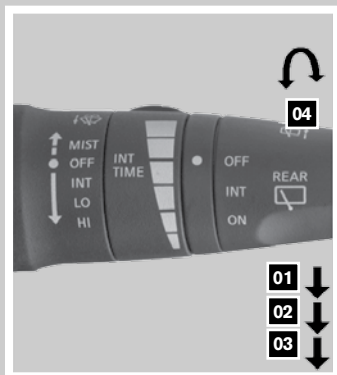

 For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

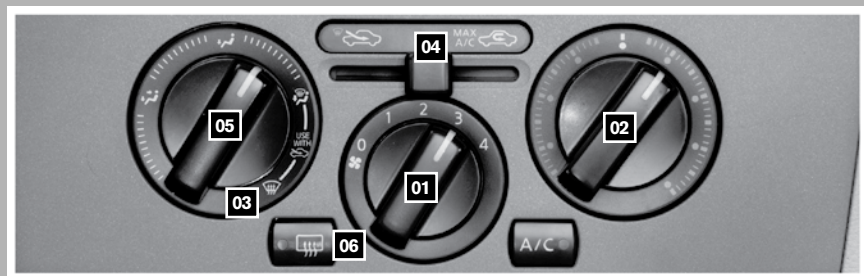

CLIMATE CONTROLS

01 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial to the left (slow) or right (fast) to control fan speed.

02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial to select the desired temperature. Turn the control dial to the left for cold air or right for hot air.

03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Move the air intake lever **04** to the left position for fresh air.
- Turn the air flow control dial **05** to the front window defroster mode .

06 REAR WINDOW DEFROSTER

- Push the rear window defroster switch to turn the system on or off.

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.



FM/AM/XM[®]* RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON•OFF CONTROL KNOB

- Push the **VOL/ON•OFF** control knob to turn the system on or off.
- Turn the **VOL/ON•OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL KNOB

- To manually tune the radio, turn the **TUNE/SCROLL** knob left or right.

 
*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

PARKING BRAKE

- To apply, pull the parking brake lever **01** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Push the button **02** and lower the lever completely.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

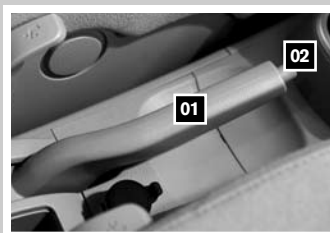

first drive features

REAR HATCH / TRUNK LID RELEASE

Unlock the rear hatch/trunk by pressing the **1** button on the keyfob once and then perform one of the following operations:



 
 
OPENING THE REAR HATCH (if so equipped)

- Push the Rear Hatch Request Switch **01** .
- Push the Release Switch **02** under the rear hatch handle.
- Pull up and out on the handle to open the rear hatch.

OPENING THE TRUNK (if so equipped)

- Push the Trunk Request Switch **03** .
- Push the Release Switch **04** under the trunk handle.
- Pull up and out on the handle to open the trunk.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

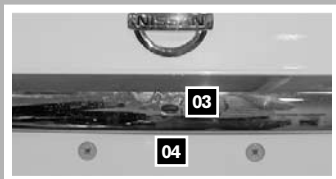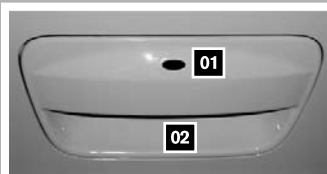

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **01** .
- The fuel-filler door is located on the right, rear side of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Display screen, heater, air conditioner, audio and phone systems (section 4)”** of your Owner’s Manual or please visit www.nissanusa.com/bluetooth.





Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2010 Nissan North America, Inc.
QR1E 0C11U0
Printing: May 2010 (10)



Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>