 


## VIEWING JPG FILES

This unit can play JPG files recorded on a CD-R or CD-ROM disc (CD-RW is not recommended).

### Viewing JPG Files

- Slide the open knob rightwards to open the disc door.
- Hold a JPG file disc by its edges and gently push it onto the spindle with the label side facing up until you hear a "click".
- Close the disc door. The JPG files on the disc will be displayed automatically or a folder list appears.
- Press the **STOP** button to display a folder list. Press the  $\Delta$  or  $\nabla$  button to highlight a JPG file to play. Press the **PLAY** button to start playback.

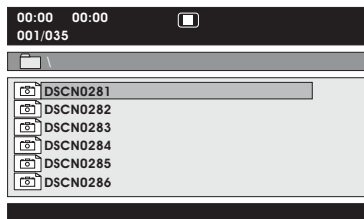

 
### Notes:

- You can press the **PAUSE** button to freeze the picture. Press the **PLAY** button to resume picture slide show.
- You can press the **STOP** button to quit playback.
- You can press and hold the **PREV** or **NEXT** button to change the picture.
- You can press the Cursor buttons ( $\Delta$ ,  $\nabla$ ,  $\leftarrow$ ,  $\rightarrow$ ) to rotate direction of the picture by 90°.
- Some discs may not permit this operation.

## CUSTOMIZING THE FUNCTION SETTINGS

### Language Setup

- Press the **SETUP** button in stop mode.
- Press the  $\nabla$  button to select Language Setup Page.
- Press the  $\Delta$  /  $\nabla$  button to select the option (OSD Language, Audio, Subtitle or Disc Menu), then press the  $\rightarrow$  button.
- Press the  $\Delta$  /  $\nabla$  button to select your preferred language, then press the **PLAY** button to confirm.
- Repeat steps 3 and 4 to adjust other options. Press the  $\leftarrow$  button to return to the previous menu.
- Press the **SETUP** button to exit the menu.

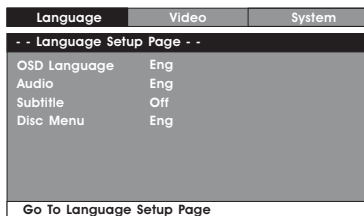


### Notes:

- Some DVDs may not play in the audio language selected. A prior language may be programmed on the disc.
- Some DVDs may be set to display subtitles in a language other than the one you selected. A prior subtitle language may be programmed on the disc.
- Some DVDs allow you to change subtitle selections using the disc menu only. If this is the case, press the **MENU** button and choose the appropriate subtitle language from the selection on the disc menu.
- Some DVDs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.


### Video Setup

 - Press the **SETUP** button in stop mode.
- Press the  $\leftarrow$  /  $\rightarrow$  button to select Video Setup Page.
- Press the  $\Delta$  /  $\nabla$  button to select the option (Brightness or Contrast), then press the  $\rightarrow$  button.
- Press the  $\leftarrow$  /  $\rightarrow$  button to adjust the setting, then press the **PLAY** button to confirm.
- Repeat steps 3 and 4 to adjust other options. Press the  $\leftarrow$  button to return to the previous menu.
- Press the **SETUP** button to exit the menu.

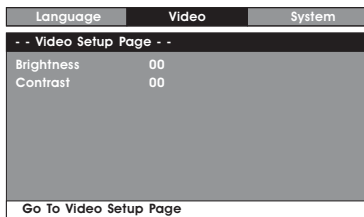

### System Setup

 - Press the **SETUP** button in stop mode.
- Press the  $\leftarrow$  /  $\rightarrow$  button to select System Page.
- Press the  $\Delta$  /  $\nabla$  button to select the option (TV Display or Default), then press the  $\rightarrow$  button.
- Press the  $\Delta$  /  $\nabla$  button to adjust the settings, then press the **PLAY** button to confirm.
- Repeat steps 3 and 4 to adjust other options. Press the  $\leftarrow$  button to return to the previous menu.
- Press the **SETUP** button to exit the menu.

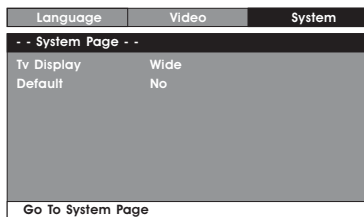

## TV Display

### Pan Scan

- When wide-screen video is played, this mode clips the right and left sides of the image so that it can be viewed on a conventional screen.
- Some wide-screen DVDs that do not permit Pan Scan mode playback are automatically played in letterbox mode (black bands that appear at the top and bottom of the screen).

Cut off when a wide-screen video image is played.



Pan Scan



Letter Box



Wide Screen

### Letter Box

- When wide-screen video is played in this mode on a conventional screen, black bands appear at the top and bottom of the screen.

### Wide Screen

- This is the correct mode for playing wide-screen videos on the unit screen or other external wide-screens.

### Notes:

- The displayable picture size is preset on the DVD. Therefore the playback picture of some DVDs may not conform to the picture size selected.
- When you play DVDs recorded in the 4:3 aspect ratio, the playback picture will always appear in the 4:3 aspect ratio regardless of the TV display setting.
- Select Wide Screen to conform the LCD screen on the unit. Always be sure that your TV display conforms to the actual TV in use if you connect the unit to a TV.

### Default

It takes 3-5 seconds to reset the DVD settings to the factory default.

## MAINTENANCE

### Cleaning the Disc

A defective or soiled disc inserted into the unit can cause sound to drop out during playback. Handle the disc by holding its inner and outer edges.

- Do NOT touch the surface of the unlabeled side of the disc.
- Do NOT stick paper or tape on the surface.
- Do NOT expose the disc to direct sunlight or excessive heat.
- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- NEVER use solvents such as benzine or alcohol to clean the disc.
- Do NOT use irregular shaped discs (example: heart shaped, octagonal, etc.). They may cause malfunctions.



### Cleaning the Unit

- Be sure to turn the unit off and disconnect the AC power adapter before maintaining the unit.
- Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth that has been dipped in a weak soap-and-water solution and wrung out thoroughly, then wipe with a dry cloth.
- Do NOT use alcohol, benzine, thinner, cleaning fluid or other chemicals. Do NOT use compressed air to remove dust.

### Important Note

Before transporting the unit, remove the disc from the disc compartment.

## TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE (AND REMEDY)
No power.	<ul style="list-style-type: none"> <li>Ensure the AC power adapter is connected.</li> <li>The unit is not turned on.</li> </ul>
No sound or only a very low-level sound is heard.	<ul style="list-style-type: none"> <li>Make sure that you select ON mode.</li> <li>The system is in pause mode. Press the <b>PLAY</b> button to return to normal play mode.</li> <li>The unit is in fast-forward or fast-reverse mode. Press the <b>PLAY</b> button to return to normal play mode.</li> <li>Make sure the AUDIO/VIDEO output connections are correct.</li> <li>The DTS DVD disc cannot be decoded to have speaker output.</li> <li>The unit is too hot; shut off the unit for 30 minutes to cool it down.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The region number of the disc doesn't match the region number of this unit. </li> </ul>
The picture is not clear.	<ul style="list-style-type: none"> <li>Clean the disc.</li> <li>The disc is scratched.</li> <li>Please adjust the LCD's brightness and contrast using the <b>SETUP</b> button on the panel.</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.</li> <li>Clean the disc.</li> </ul>
The disc does not play.	<ul style="list-style-type: none"> <li>There is no disc inside. ("No Disc" appears on the screen).</li> <li>Insert the disc correctly with the playback side facing down.</li> <li>Clean the disc.</li> <li>The unit and disc region number are incompatible.</li> <li>Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.</li> </ul>

## LIMITED WARRANTY

**VENTURER ELECTRONICS ("VENTURER")** makes the following limited warranty. This limited warranty extends to the original consumer purchaser and is limited to non-commercial use of the product.

### Ninety (90) Day Parts & Labor Warranty

**VENTURER** products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of ninety (90) days from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at **VENTURER's** sole discretion.

During a period of ninety (90) days from the effective warranty date, Venturer will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1-866-444-6478 or 1-800-252-6123, during the hours listed in the box below.** The determination of service will be made by **VENTURER** Customer Support. **PLEASE DO NOT RETURN YOUR UNIT TO VENTURER WITHOUT PRIOR AUTHORIZATION.** New or remanufactured replacements for defective parts or products will be used for repairs by Venturer at its designated Service Center for ninety (90) days from the effective warranty date. Such replacement parts or products are warranted for an additional ninety (90) days from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

### Packaging and Shipping Instruction

When you send the product to the Venturer service facility you must use the original carton box and packing material or an equivalent as designated by **VENTURER.**

## LIMITED WARRANTY

### Your Responsibility

- You must retain the original sales receipt to provide proof of purchase.
- These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of **VENTURER,** or to products or parts thereof which have had the serial number removed or changed.

### Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-866-444-6478, 1-800-252-6123 or www.venturer.com.**

**Hours: Monday-Thursday: 9-7, Friday: 9-5, Saturday: 9-12 EST.**

### Important:

You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall **VENTURER** be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **VENTURER** arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety (90) days from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at **www.venturer.com**

**Important:** Also keep your "Bill of Sale" as proof of purchase.

 
Serial no..... Invoice no.....  
Date purchased ..... Dealer name .....

FOR SERVICE AND REPAIR, PLEASE VISIT **www.venturer.com**

*Specifications and external appearance are subject to change without notice.*

## 7" PORTABLE DVD PLAYER

**VENTURER**  
PVD730

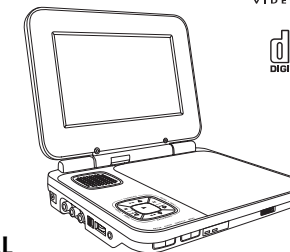

**OWNER'S MANUAL**

## SAFETY PRECAUTIONS



The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner's manual.

\* SEE BOTTOM OF UNIT FOR GRAPHIC SYMBOLS \*



This product contains a low power laser device.

**THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.**



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

**CAUTION:** USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**CAUTION:** DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

**CAUTION**  
**INVISIBLE LASER RADIATION**  
**WHEN OPEN.**  
**AVOID EXPOSURE TO BEAM.**

### On Placement

- Do not use the unit in places that are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting.
- To avoid magnetized, do not place the unit near speaker or magnet.
- Do not use this unit in direct sunlight or leave the unit in a closed automobile (or yacht, etc) where it would be exposed to high temperatures above 104°F (40°C).
- No naked flame sources such as lighted candles should be placed on the AC power adapter and main unit.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

### On Safety

- When connecting or disconnecting the AC power adapter, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power adapter.

### On Condensation

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

### Ventilation Warning

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not operate the unit in a confined space, such as a bookcase or built-in cabinet, allow about 4 inch (10cm) of free space all around the unit for adequate ventilation.

### Rating Plate Location

- The rating plate is located on the bottom of unit.

### FCC Statements

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**WARNING:** Should any trouble occur, disconnect the AC power adapter and refer servicing to a qualified technician.

### Notes on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission.

Apparatus Claims of U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132 and 5,583,936 licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>