

FULL ONE YEAR WARRANTY

This VILLAWARE product is protected against defects in materials and workmanship for one year from the date of original purchase. If the product proves to be defective in materials or workmanship during this period, it will be repaired free of charge.

This warranty does not apply to damage resulting from misuse, accidents or alterations to the product, or to damages incurred in transit. This warranty does not apply to cords or plugs.

All returns must be carefully packed and made transportation prepaid with a description of the claimed defect.

VillaWare®

VillaWare Manufacturing Co.
18901 Euclid Ave. No. 1
Cleveland, Ohio 44117

Disney kitchen products from VillaWare...

Mickey Waffler 4-at-a-time
Mickey Waffler Round
Mickey Sandwich Maker
Mickey Cookie Baker
Pooh & Tigger Waffler

Other fine VillaWare® products...

Belgian & Classic Waffle Makers
Pizzelle Bakers
Classic Griddle
Grand Wrap Flatbread Maker

Classic Crepe Maker
VillaWare® Food Strainer
Imperia® & Al Dente™ Pasta Machines
Power Grind™ Electric Meat & Grinder
Meat Grinders & Sausage Makers
Cookie Presses
Ravioli Makers
Poco™ Grater
Italian-Style Gadgets & Utensils

*...and hundreds more Classic Italian
Kitchenware products from VillaWare®*

For additional information on the VillaWare® product line, see
your dealer or write to the address listed above.

© VillaWare® Manufacturing Co., Cleveland, Ohio. Made in China. All rights reserved.
Visit the Disney Website at www.disneyhome.com.

© Disney Based on the "Winnie the Pooh" works by A. A. Milne & E. H. Shepard.

Disney

POOH & PALS "RISE 'N' SHINE" TOASTER



No. 5555-14



VillaWare®

IMPORTANT SAFEGUARDS

When using electrical appliances, follow basic safety precautions, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock, and injury to persons, **DO NOT IMMERSE CORD, PLUG, OR TOASTER in water or other liquid.**
4. Close supervision is necessary when appliances are used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, or before cleaning.
6. Do not carry or suspend the toaster by the power cord.
7. To disconnect, make sure bread lifter is in up position, then remove plug from wall outlet.
8. To cancel the toasting mid-cycle, switch off the power on/off and mid-cycle cancel switch.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner.
10. Do not attempt any internal servicing on this appliance, but return to VillaWare Manufacturing Company for examination, repair or adjustment.
11. The use of accessory attachments not recommended by VillaWare may cause injuries.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. Do not place on or near hot gas or electric burner, or in a heated oven.
15. Failure to clean crumb tray may result in a fire hazard.
16. Be sure that the crumb tray is closed before starting to use the toaster.
17. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
18. Do not place any object over the opening of the toaster when it is in use.
19. Do not cover the toaster when it is in use.
20. A fire may occur if toaster is covered by or touching flammable material, including curtains, draperies, walls, etc. when in operation.
21. Do not attempt to dislodge food when toaster is plugged in.
22. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
23. Do not leave toaster unattended.
24. Do not use toaster for other than intended use.
25. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, REPAIR SHOULD ONLY BE DONE BY VILLAWARE MFG. CO. DO NOT REMOVE THE BASE PANELS, OR OPEN THE APPLIANCE. NO USER SERVICEABLE PARTS ARE INSIDE.**
26. No preheating is required.
27. This appliance is for **HOUSEHOLD USE ONLY.**

SAVE THESE INSTRUCTIONS

WARNING

- Do not operate while unattended. Contents could jam, causing fire.
- For pastry items, always use the defrost setting; frostings and fillings can ignite.
- Food items with frostings or runny fillings could drip into toaster well and cause damage or result in fire. If frosting or filling does drip into toaster well, follow "Care and Cleaning" instructions before using toaster again.
- Children should be closely supervised.
- Do not "play" with the pop-up melody by repeatedly pushing the mid-cycle cancel button. This could interfere with normal re-charge time, and cause melody sound to temporarily distort. If melody should sound distorted or fading, simply allow toaster to go through a normal toasting cycle. Circuit will properly re-charge and melody will return to normal function.
- Immediately unplug toaster if fire or smoke is observed.
- Please read and save this Instruction Booklet.

SAVE THESE INSTRUCTIONS

SPECIAL CORD SET INSTRUCTIONS

A short electrical cord is provided to reduce the hazards resulting from entanglement or in tripping over a longer cord. Longer extension cords are available from a variety of retail stores and may be used if care is exercised in their use. If a long extension cord is used, the marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance.

Care should be taken not to allow cords to hang over the edge of a counter or tabletop where it can be pulled on by children or animals or tripped over. If your appliance has a grounded 3-prong plug, you must use the compatible 3-wire extension cord.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FEATURES OF YOUR POOH TOASTER

- Extra-wide toasting slots accommodate most any bread or bagel thickness.
- Self-adjusting mechanism inside of slots, automatically centers to any bread thickness for even browning on both sides.
- Mid-cycle cancel switch. If you want your toast to pop up earlier, just touch the button.
- Electronic browning control dial with 5 settings.
- Electronic solenoid switch automatically pops up the lift control when the cycle is complete.
- Crumb tray easily slides out for cleaning.
- Professional stainless steel exterior

HOW TO USE YOUR POOH TOASTER

For best results, follow these instructions.

When your toaster is new you may notice a slight smoking or odor. This is normal with many heating appliances and will not recur. This does not affect the safety of your appliance.

1. Plug in the toaster.
2. Select your toasting level 1-5 with the control dial. The higher the number, the browner the toast will be. Toasting is affected by the temperature of the bread, refrigerated or room temperature, the moisture content, the freshness and thickness of slice.
3. Place the bread in the slots and press down on the lift control. This lift control will automatically pop up when your toasting cycle is complete. If you wish to stop the toasting in mid-cycle, just push the cancel button and the lift control will pop up.

NOTE: Do not force the lift control up by hand, as this can damage the toaster. Instead, always push the cancel button to get toaster to pop up before automatic cycle has completed.

Sometimes when toasting 2 batches of toast, one right after another, the lift control may not lock down immediately and you may hear a buzzing sound. This means that the thermostat has not reset itself. Wait a few seconds and try again.

4. If your bread gets stuck during toasting switch off, unplug and allow to cool down before attempting to remove it. **DO NOT** insert knives, forks, etc. into the toaster as there is risk of electrical shock and damage to the heating elements and toaster mechanism.
5. Once the bread has been toasted, the bread will pop up automatically. At this point the heating elements will automatically turn off.

GUIDE FOR VARIOUS CONTROL SETTINGS

<i>For</i>	<i>Use Control Dial Setting</i>
<u>Regular bread</u>	<u>Setting 3 (plus or minus 1 setting)</u>
<u>English muffins</u>	<u>Setting 3 (plus or minus 1 setting)</u>
<u>Bagels</u>	<u>Setting 3 (plus or minus 1 setting)</u>
<u>Pop Tarts</u>	<u>Defrost setting</u>
<u>Frozen waffles</u>	<u>Defrost setting, 1 to 2 cycles</u>
<u>Toaster pastry</u>	<u>Defrost setting, 1 to 2 cycles</u>

THANK YOU
for
purchasing your
POOH TOASTER!

CLEANING YOUR POOH TOASTER

1. Unplug the toaster and allow to cool down.
2. Slide out crumb tray, discard crumbs and wipe tray with clean cloth. If the toaster is used daily, the crumb tray should be cleaned approximately weekly.
3. Wipe outside of toaster with a clean damp cloth. Do not use any abrasive scouring pad or steel wool as this will damage the housing finishes. Do not use abrasive cleaners that will scratch the surface of the toaster. A little metal polish suitable for stainless steel may be occasionally used.
4. Do not immerse toaster in water or any liquid. Do not place in dishwasher.

 VillaWare®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>