

Vinotemp®

**Six Bottle
Wine Cellar**

VT-6V

VT-6H

Instruction Manual

Read and save these instructions.

Warning!

This unit is not to be placed in the garage or any other area of extreme temperature fluctuation.

Unit is designed only to sit on top of the counter with no obstruction and not close to any source of fire, heat or water.

Unit cannot be connected to an extension cord.

Failure to follow any of these guidelines will void all warranties. Furthermore Vinotemp International assumes no liability for any damage incurred due to mis-use of the product.

Purchaser understands and acknowledges that the goods sold here are wine cellars, which house wines. Purchaser assumes all risk of using these units, including risk of spoilage, humidity variations, temperature variations, leaks, fire, water damage, mold, mildew, dryness and similar perils that might occur.

Please Review Terms And Conditions On www.vinotemp.com
For more Information and Service please email us at info@vinotemp.com.

Safety Precautions

Please read this instruction manual carefully before installing and operating the appliance. This ensures the best results and maximum safety for the user.

The safety precautions described herein are intended to ensure the unit is operated in a safe and correct manner to avoid injury to the user and others.

Please keep this manual in a safe place for future reference.

WARNING: RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS.

Warnings

- ◆ Do not disconnect plug from outlet with a wet hand. An electric shock may occur.
- ◆ Keep the unit away from moisture and do not clean it with water. An electric shock or short circuit may occur.
- ◆ Periodically clear dust from the plug. Excessive dust may cause a fire hazard.
- ◆ Any modification, disassembly or repair to the unit may cause fire, electric shock or damage. If repair is necessary, please contact qualified service personnel.

Attention

- ◆ Do not pull on the cord to disconnect the unit from a wall outlet. Hold the plug when disconnecting. Pulling the power cord may cause an electric shock.
- ◆ Please disconnect the plug from the wall outlet when the unit is not in use. Constant connection to the power source may cause the isolator to age and may lead to electric shock or fire.

Diagram of Operation Panel



VT-6H



VT-6V

Operation

1. Connect the adapter to the appliance, then plug the unit into wall outlet.
2. Place the appropriate rack into the appliance.
3. To turn the unit on, press the POWER button. A blue light illuminates the power button.
4. To increase the temperature to the desired level, press the (+) button.
5. To decrease the temperature to the desired level, press the (-) button.
6. To view the items inside, press the LIGHT button.

Note:

- ◆ If there are no items inside cellar, it will take approximately 2 1/2 to 3 hours to reach the desired temperature level.
- ◆ Ensure that the door is closed when turning the unit on.
- ◆ Ensure that the appliance is not placed too close to a wall.

Temperature Recommendations

The recommended storage temperature is:

Red wine: 57°F- 64°F

White wine: 48°F- 54°F

Storage

The appliance is designed to fit six standard unopened bottles of wine. Bottles of different sizes or opened bottles may need to be positioned at different angles and therefore the unit may not be able to hold six bottles.

Cleaning and Maintenance

- ◆ Make sure to disconnect plug from the outlet before maintenance to avoid the risk of electric shock.
- ◆ Do not clean the appliance directly with water, otherwise there is a risk of electric shock or short circuit.
- ◆ Dust, or anything else blocking the vent, reduces the cooling effect. Vacuum the vent if necessary.
- ◆ Unplug and thoroughly dry the unit before storage.
- ◆ If necessary, wipe the case with a wet cloth and a neutral cleanser.
- ◆ Do not wipe the unit with alcohol or abrasive detergents. They can cause the color of the unit to fade.
- ◆ Because this is an electrical appliance, do not immerse the unit in water.

Troubleshooting Guide

Please review the following chart before sending the unit in for repair:

| Symptom | Cause | Remedy |
|---|---|--|
| Cooling function does not work. | Loose contact between plug and unit socket. | Plug firmly into unit socket and wall outlet. |
| | Unit is exposed to direct sunlight. | Place the unit in a shady, cool place with good airflow. |
| | The unit is too close to the wall or an object. | Move the unit away from the wall or other objects. |
| There is a strange noise or vibration during operation. | Unit is malfunctioning. | To prevent breakdown, turn the unit off immediately and unplug it from wall outlet. Contact a local repair center. |
| There is a burning smell or the case is deformed. | Unit is overheating. | To prevent breakdown, turn the unit off immediately and unplug it from wall outlet. Contact a local repair center. |

Specifications

Power: AC 120/12V 50Hz/60Hz Watt Usage: 60 Watts

Internal Volume: 18 Liters(VT-6V), 19 Liters(VT-6H)

Temperature in Case: 44°F- 68°F

Ambient Temperature: This appliance works best at normal room temperature (75.2°F- 77°F).

LIMITED WARRANTY

The limited warranty is for twelve months on cooling system from the date of sale.

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to removable parts, unauthorized repair or any other cause beyond the control of the Seller.

Vinotemp[®]

P.O.Box 6107, COMPTON, CA, 90224
Tel:(310)886-3332 Fax:(310)886-3310
Web:www.vinotemp.com
E-mail:info@vinotemp.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>